
Besavior P5Mate Manual

1. Introduction

Besavior P5mate uses USB wired mode to connect to PS5 console, please turn on the USB connection function of PS5 console before use:



Besavior P5mate buttons and ports have the following functions:

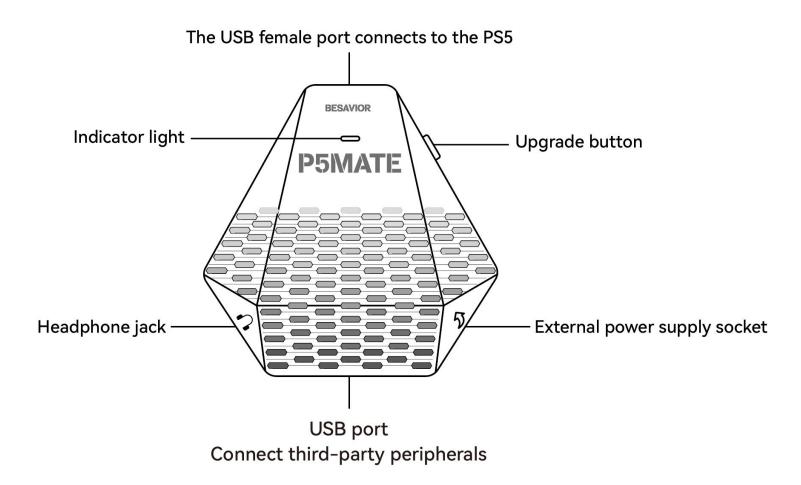





TYPE-C data Cable*1

Dual head USB cable*1


2. How to use

Follow these steps:

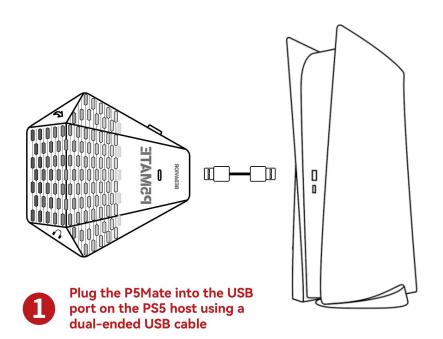


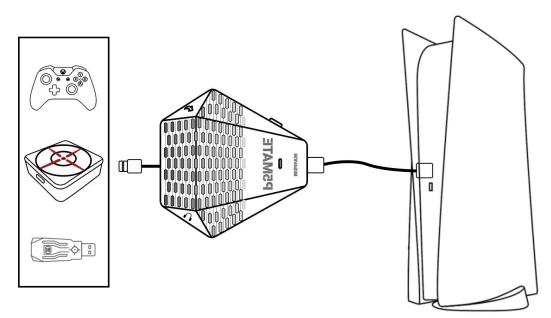

2 Insert the third-party USB peripheral into the USB port at the bottom of the P5Mate.

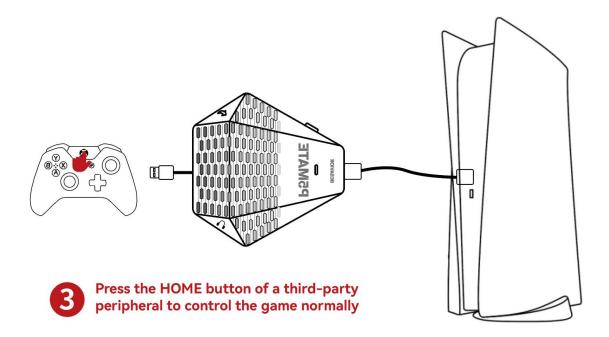

Note: In the normal working condition of P5MATE, the upgrade button press is equal to the touchpad press

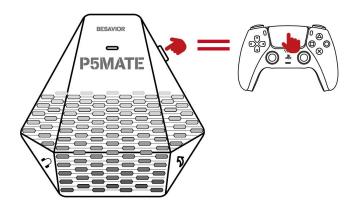


3. How to upgrade


- 1. Download the <u>latest upgrade software and firmware</u> from the forum of the official website and decompress them to the computer disk.
- 2. Hold down the Besavior P5Mate upgrade button () and insert the Besavior P5Mate into the USB port of your WINDOWES PC
- 3. Open the index.html in the upgrade file with your **Microsoft Edge** browser and follow these steps

Besavior P5Mate Update



BesaviorP5Mate/index.html

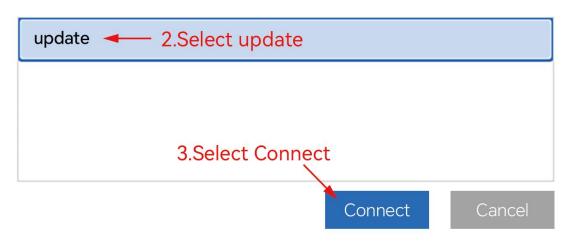

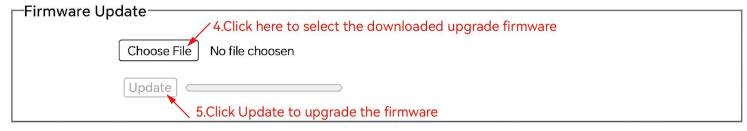

Besavior P5Mate Update

Connect Besavior P5Mate Device				
		correspond	ling version number is o	displayed
Version:	Stdfc_H0000202402121945 🗡			

Go to www.Beloader.com for more video tutorials