
Remote Control Button Guide

Only controls used by **RemoteControl.java** and **RockinBot.java** are shown.

Gamepad 1 Controls

Each information block connects related functions to the exact controls marked by red dots.

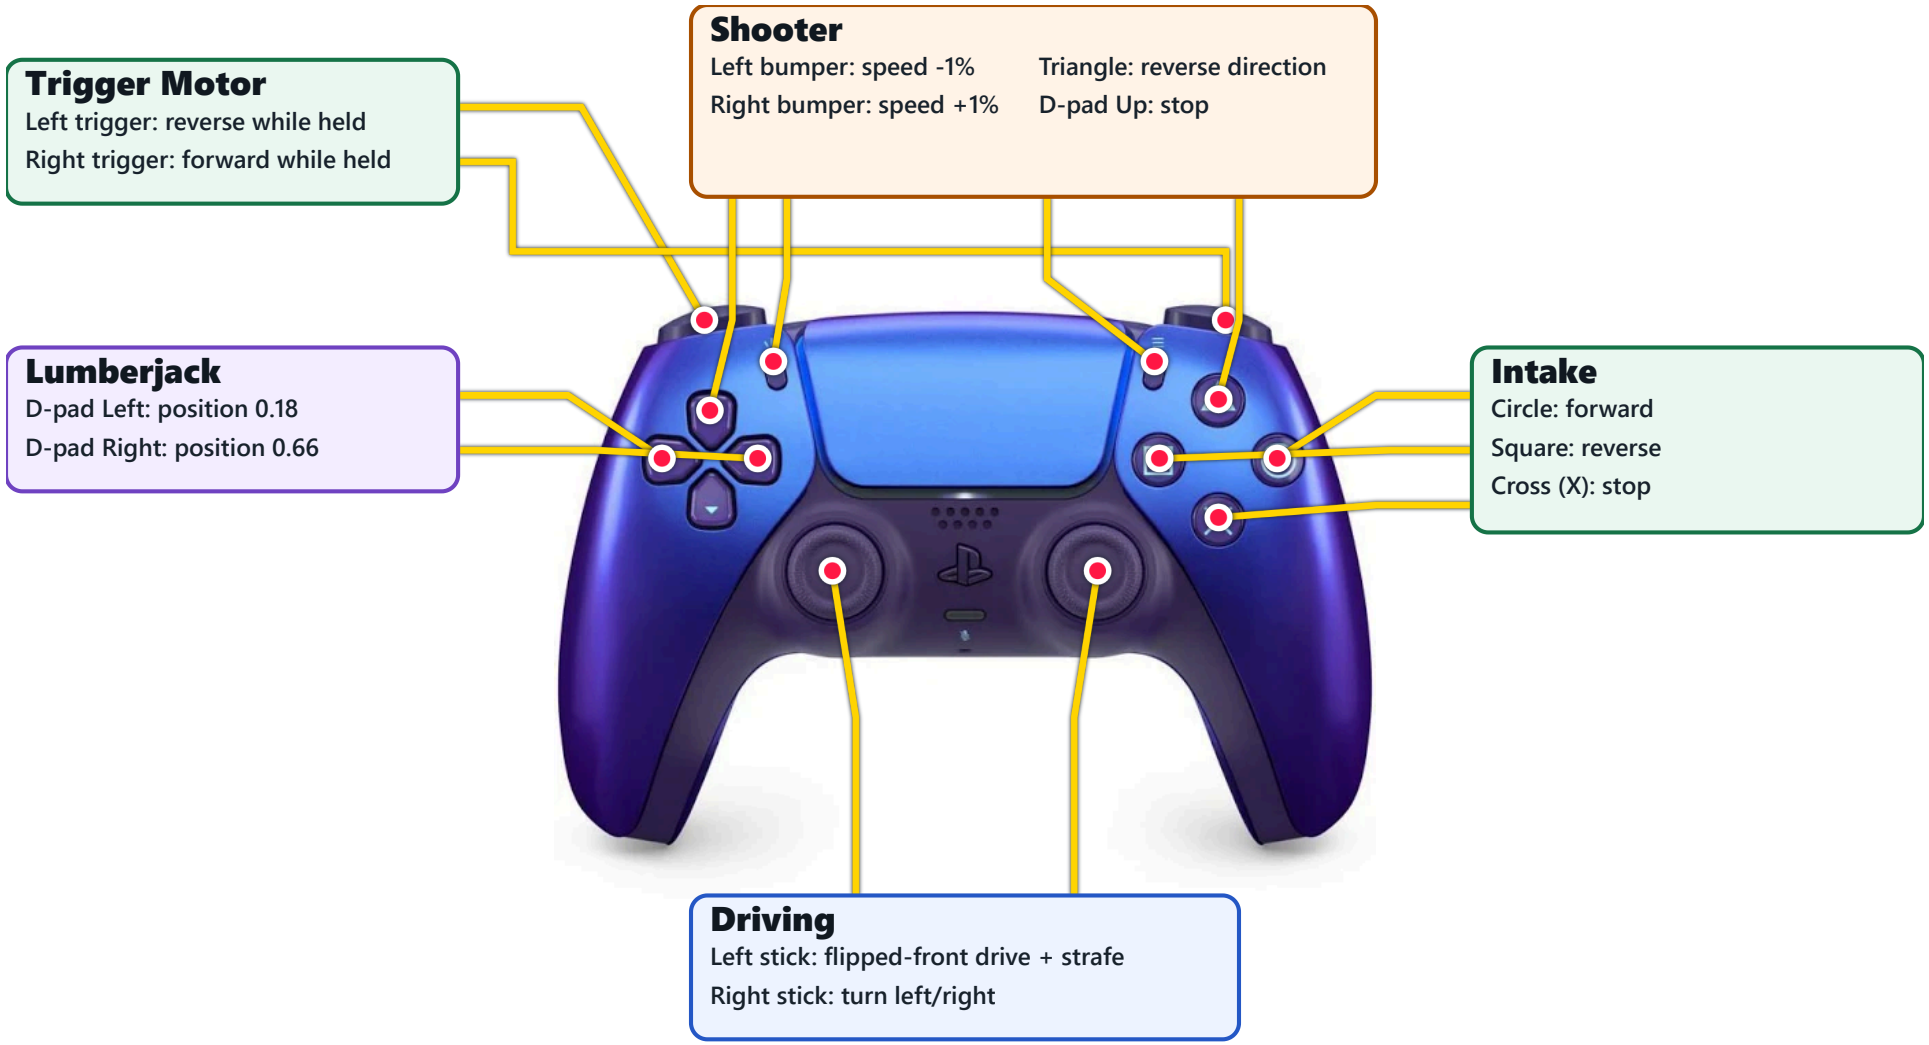

Starting Settings

Shooter power: 76%

Shooter P value: 60

Intake: Reverse at full power

Trigger motor: Stopped

Gamepad 2 left bumper: Decrease shooter P by 2

Gamepad 2 right bumper: Increase shooter P by 2

Important Control Details

Bumpers, Triangle, and D-pad: Each action occurs once per press, not continuously while held.

Triggers: The trigger motor runs only while a trigger is held and stops when both are released. If both are held, reverse wins.

Drive orientation: The intake side is the back of the robot; the opposite side is the front.

Lumberjack: The servo releases and can move freely after Remote Control stops.

No park mode: The wheel controls always use their normal full range.