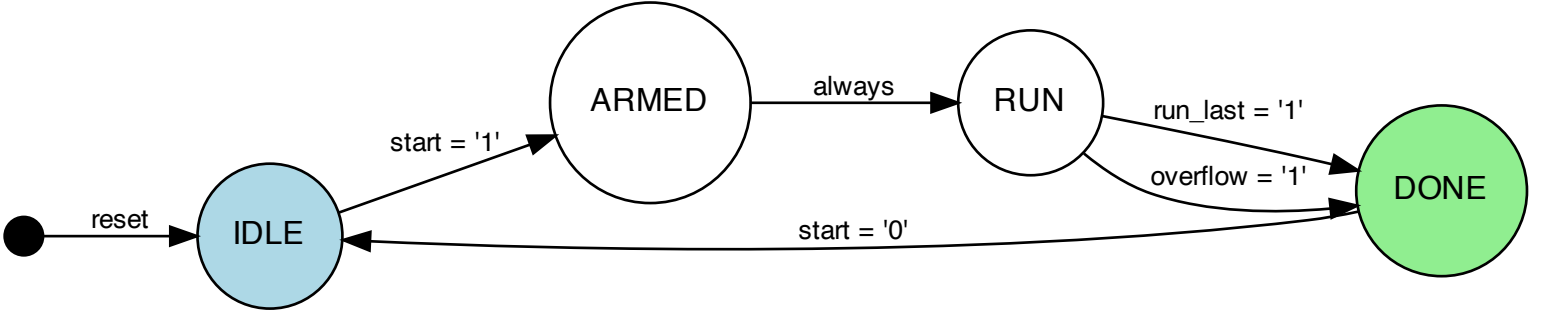
reset
IDLE
start = '1'
ARMED
always
RUN
run_last = '1'
overflow = '1'
DONE
start = '0'