QUICK START

# RecLink

RecLink links your flight controller to your action camera. The camera records when you arm, and its status appears on your OSD. This page takes you from the box to your first recording.

**PRE-RELEASE FIRMWARE**

Firmware 0.2.0 has been bench-tested only and is **not flight tested**. Do every step below with the **propellers removed**, and check that everything works before you fly.

### YOU NEED


- The RecLink board, or an ESP32-C3 SuperMini / ESP32-S3 dev board
- A flight controller with **Betaflight 2025.12 or newer** and a free UART
- A GoPro (HERO 9 or newer) or, experimentally, a DJI Osmo, charged, with an SD card
- A phone or laptop, and for a dev board a computer with Chrome or Edge and a USB cable

### TIME NEEDED

About 15 minutes, once. After that, RecLink starts by itself every time you power the quad.

BEFORE STEP 1

## Install the firmware

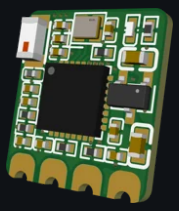


If you have the **RecLink board**, you can skip this part, but make sure its firmware is up to date: update it over Wi-Fi from the web installer (System tab → Firmware update).

A **SuperMini** or **S3** board must be flashed once, from the web installer. Follow the steps below.

1. On a computer, open **https://fpvitt.github.io/RecLink/flash/** in **Chrome or Edge** and pick your board (SuperMini or S3).
2. Plug the board in by USB, choose **USB**, press the flash button and pick the serial port. If the port is not found, hold **BOOT** while plugging it in.
3. When it finishes, unplug and replug the board. It is ready: carry on with step 1.

STEP 1

# Wire it

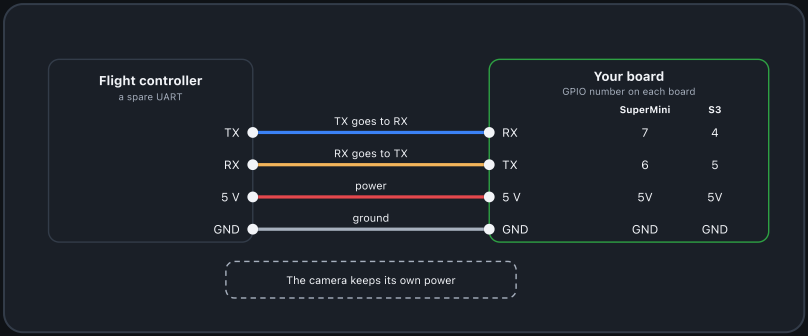



- Connect the four wires as drawn. **TX goes to RX, and RX goes to TX.**
- SuperMini: FC TX to **GPIO7**, FC RX from **GPIO6**. S3: FC TX to **GPIO4**, FC RX from **GPIO5**. Power from the FC 5 V and GND (full table in the User guide).
- If the board resets by itself, add a **220 µF** capacitor across its 5 V pads.
- Mount it near the camera, away from carbon fibre.
- Wires crossed by mistake? Fix it later in the configurator (Network → Swap TX/RX pins). No soldering.

STEP 2

# Set up Betaflight

**USE THE LATEST BETAFLIGHT CONFIGURATOR**

You need **Betaflight firmware 2025.12.0 or newer** on the flight controller, and the **latest Betaflight Configurator** on your computer. The screenshots in this guide were taken with Configurator **2026.6.2**. Use the web app at `app.betaflight.com` (in Chrome or Edge) or install the newest desktop version. An older Configurator may not offer the Custom message elements.

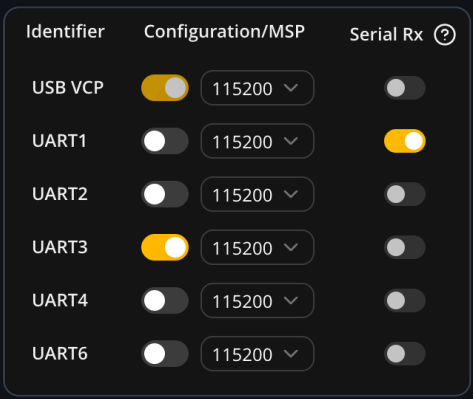



Betaflight Configurator → Ports.

- Switch MSP on for the UART you wired.
- Leave the speed at 115200.

1. Check your Betaflight is **2025.12.0 or newer**. Older versions cannot show RecLink's text. Then open **Betaflight Configurator** and go to the **Ports** tab. On the UART you wired, switch **MSP** on. Leave the speed at **115200**. Save.

Then press **Save and Reboot** at the bottom right.

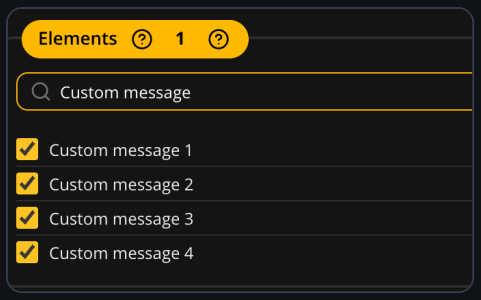


OSD tab → Elements: Custom message 1 to 4 ticked.

- Tick Custom message 1, 2, 3 and 4.





Receiver tab: the bar of your switch moves when you flip it.

- AUX 2 moves to 2000 when the switch is flipped.

2 Go to the **OSD** tab. Tick **Custom message 1, 2, 3 and 4** and drag them to a free spot on the screen. Save.

Drag the four messages in the preview to a free spot, one under the other. Do not forget to **Save**.

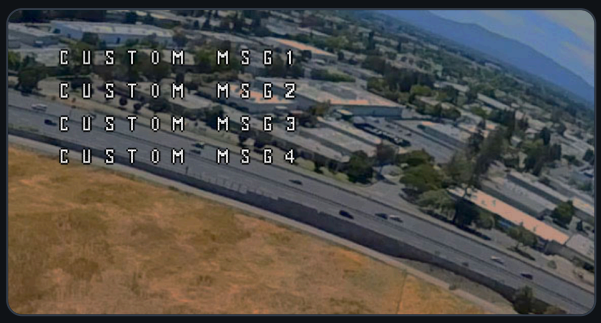



OSD tab: the four Custom messages in the preview.

3 On your radio, pick a spare switch if you want to start and stop recording by hand. In Betaflight's **Receiver** tab, flip it and check that an **AUX** bar moves. This is optional.

STEP 3

# Open the configurator

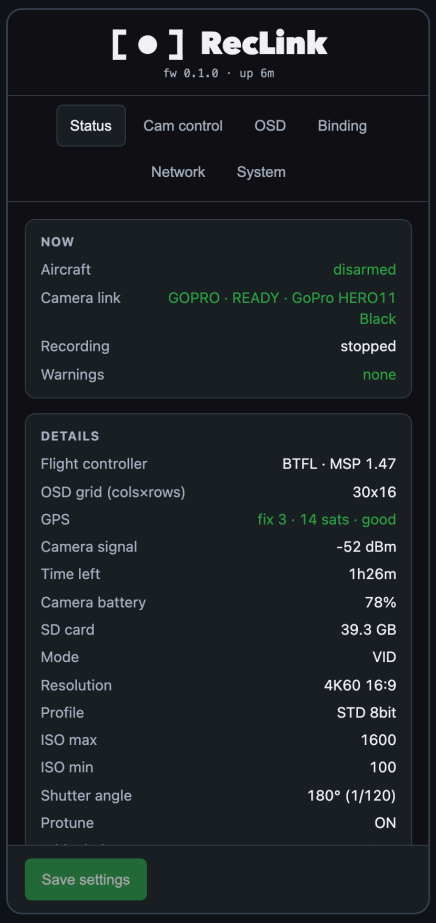


The configurator on your phone.

1. Power the quad (propellers off). Wait a few seconds. The RecLink LED blinks twice every second when its Wi-Fi is on.
2. On your phone, join the Wi-Fi network `RECLINK-XXXX`. Password: `reclinkfpv`.
3. Open `http://10.0.0.1` in your browser. If the phone says there is no internet, stay connected.

**NO WI-FI NETWORK?**

The Wi-Fi only runs while the aircraft is **disarmed**. Check that, or hold the board's button for 3 seconds to open it.

**REMEMBER TO SAVE**

After you change anything, press **Save settings** at the bottom of the page.

STEP 4

# Pair your camera




Pairing a GoPro.

### GOPRO

1. In the configurator open **Binding** and press **Pair GoPro**.
2. On the camera: swipe down, **Preferences → Connections → Connect Device → The Remote**.
3. When the camera is pairing, press **Scan now** and tap your camera in the list.

### DJI OSMO

1. Press **Pair DJI**, then put the camera in pairing mode and **accept the prompt** on its screen.

Pair once. After that RecLink reconnects by itself, and picks the strongest one if you have several (up to four).

STEP 5

# Make it record

Choose **when** the camera records. There are two common ways. Pick one.

**Record when you arm.** Nothing to change. This is the default: the camera starts when you arm and stops when you disarm.




Cam control → Recording, radio switch mode.

- The recording mode.
- Switch or Button.
- The AUX channel.
- Detects the channel.
- Live position of the control.
- On above this value.

**Record from a radio switch.** You choose when to film with a switch on your transmitter.

1. Open **Cam control**. Under **Start / stop recording** choose **From a radio switch**.
2. Press **Set AUX**, then flip your switch within 15 seconds. RecLink picks the channel that moved and fills in the **AUX channel** box. The flight controller must be connected.
3. Leave **Trigger type** on **Switch**: switch on means record, switch off means stop. For a spring-loaded button choose **Button**: each press starts or stops.
4. Flip the switch and watch the bar. The amber line must cross the **On above** value (default **1700 µs**) when the switch is on, and stay below it when off.
5. Press **Save settings**. Flip the switch: the camera starts, and the Status tab shows **REC**.

Which switch position counts as on depends on the threshold. A 3-position switch usually works with its top position as on.

## COMBINE ARM AND SWITCH

| | |
|---|---|
| **Armed OR switch on** | Records when armed or when the switch is on. While armed, switching off cuts the clip. |
| **Armed AND switch on** | Records only when both are true. Releasing either stops the clip. |

STEP 6

# See it on your OSD




OSD tab: what your goggles show.

RecLink writes four lines of text into the OSD elements you placed in step 2.

| | |
|---|---|
| `REC 12:34` | Recording, and for how long |
| `###–78%` | Camera battery |
| `4K60 WIDE` | Resolution, frame rate and lens |
| `SD 1H` | Recording time left on the card |
| `CAM LOST` | The camera is not connected |

You can change the lines on the OSD tab. Pick OSD type **Digital** for DJI-style goggles, **Analog** for an analog OSD.

STEP 7

# Check it on the bench

Propellers off. Run through this list before your first flight.

| | DO THIS | YOU SHOULD SEE |
|---|---|---|
| ☐ | Power the quad. | The Wi-Fi appears. The OSD shows camera info, not **CAM LOST**. |
| ☐ | Binding tab → **3 s test recording**. | The camera records for 3 seconds. |
| ☐ | **Arm** the quad. | The Wi-Fi switches off. The camera starts recording. |
| ☐ | **Disarm**. | The camera stops. |
| ☐ | Using a switch? Flip it on, then off. | The camera starts, then stops. The OSD shows **REC** while it records. |
| ☐ | Check battery and SD card. | Enough for the flight. |

## The LED

| LED | MEANING |
|---|---|
| 2 short blinks every second | Wi-Fi is on, you can configure |
| 1 short blink every 3 seconds | All good, camera connected |
| Solid | Camera is recording |
| Slow fade in and out | Looking for the camera |
| Fast blinking | Camera link lost |
| 2 short blinks every 2 seconds | No link to the flight controller |

## The button

| | |
|---|---|
| Quick press | The LED blinks for 3 seconds, so you can find the board |
| Hold 3 seconds | Turns the Wi-Fi on or off |
| Hold 10 seconds | Factory reset. Erases settings and camera pairings. Not while armed |

## If something is wrong

| PROBLEM | TRY THIS |
|---|---|
| No RecLink Wi-Fi | Disarm the quad. Hold the button for 3 seconds. |
| The page will not open | Type `http://10.0.0.1`. Stay on the Wi-Fi even without internet. |
| Nothing on the OSD | Check Betaflight is 2025.12 or newer, MSP is on for that UART, and Custom message 1–4 are placed. Check the wires: TX to RX, RX to TX. |
| CAM LOST | Turn the camera on and wait. If it was never paired, do step 4. |
| Camera not found when pairing | Put the camera in pairing mode first, then press **Scan now**. Disconnect it from other devices. |
| My changes are gone | Press **Save settings** after every change. |

WANT MORE?

Zones (camera settings from a switch), highlight tags, clock sync and every advanced option are in the full **RecLink User Guide**.