



DPUSCNXLaunch

This DPU initializes the database SCNX on a computer. However, the database is not updated during simulation. The DPUSCNXLaunch is only designed for use on the operator computer and should be executed if the DPUSCNX is not required. It's main purpose is to provide the setup points of a map for selection in the launch step of the simulation (see "Functional principle").

1. Parameters:

Map Name of the map that will be used in the simulation. De-fault: "Map1"


2. Dependencies to other DPUs:

No dependencies to other DPUs. DPUSCNXLaunch should only be executed on the operator computer if DPUSCNX doesn't run on this computer. A very high *Index* should be defined for DPUSCNXLaunch. If in a certain configuration DPUSCNX is added at a later time point (defined with a lower *Index* parameter) DPUSCNXLaunch is deactivated automatically.

3. Example:

```
DPUSCNXLaunch scn
{
    Computer = { Operator };
    Index = 1000;
    Map = „MyMap“;
};
```

The setup point can now be chosen by the launch data „SCN_SetupPoint“:

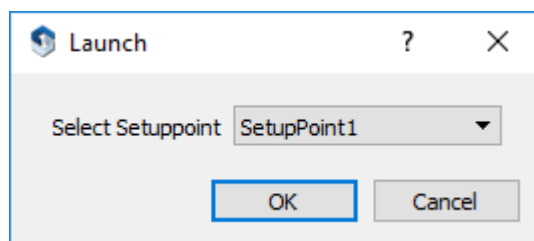

Therefore, the following line has to be added to the system configuration:

```
SILAB System
{
    LaunchData1 = ("Select Setuppoint", SCN_SetupPoint,
```



SILAB DRIVING SIMULATION

version Version 7.1 documentation

```
LD_COMBO_DEFAULT, "SetupPoint1");  
};
```