

Installing the CS548, CS448 and CS328A

Summary

Install the Cleverscope application and support drivers on your system by following these instructions.

IMPORTANT: do **not** plug in your Cleverscope until after you have installed the application and support drivers.

We highly recommend that you request free online training by contacting us at support@cleverscope.com

Register for Extended Warranty

The standard Cleverscope Warranty is defined in <https://cleverscope.com/warranty/>.

To register your unit to increase your warranty duration, please email your company name and address, your name and email address and unit serial number to register@cleverscope.com, with register in the subject.

Should you register a CS3XX we offer a lifetime warranty, according to the standard warranty terms.

Should you register a CS4XX or CS5XX we offer a five year warranty from the date of purchase, again according to the standard warranty terms.


Installation Steps

These are the steps to install the CS548, CS448 or CS328A on your system. You can install the CS548 and CS448 on Windows 64bit 7.1, 8, 8.1 and 10. The CS548 and CS448 are not supported under Windows XP or Vista. App version 5.0.0 up supports the CS548, CS448 and CS328A. Newer versions are required to support some of the later accessories and operations. We recommend updating the application regularly.

The CS328A is supported for all operating systems from Windows XP on. To install on 32bit systems or OS before Windows 7 go to the website to download the appropriate version.


You will need to have administrator rights on the PC to install this software. DO NOT run setup in the zip file.

1. Insert the install USB stick, open the USB Stick and transfer the files to a folder on your main drive. Inside the folder find and run **setup.exe**. You should see this:

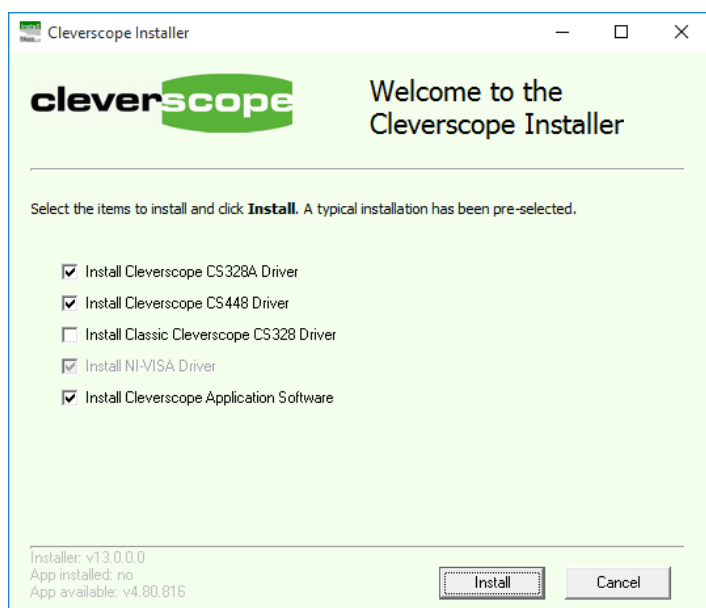


Select the drivers that match your acquisition unit. You can select all of them if you want. Click *Install*. The installer automatically installs the NI Visa runtime driver. Do **NOT** uninstall this manually.

2. This dialog will appear for each driver:

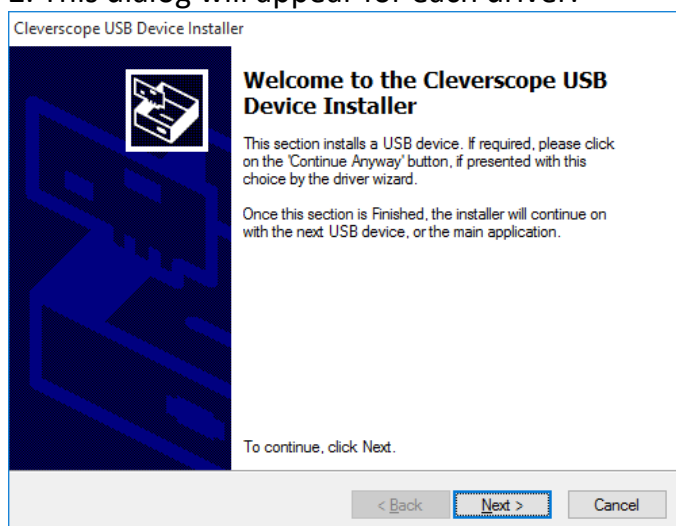


Click *Next*

3. You will get a security warning for each driver. Please click 'Always trust software from Cleverscope, and click *Install*:

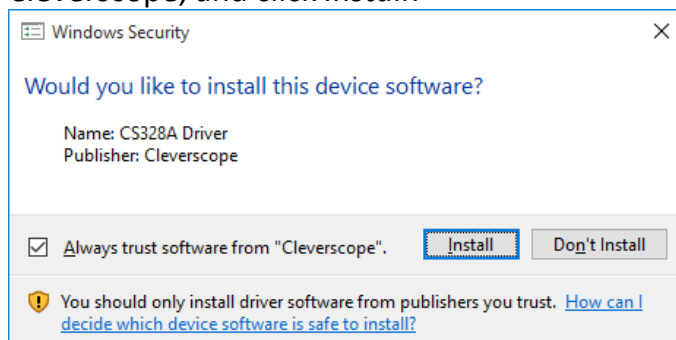


4. Do this for each driver - there may be three: CS328A, CS448/CS548 and NI-Visa. Please tick the 'Always trust.. ' option for each one. Click *Finish* for each driver, as the driver installer finishes.

5. After the drivers are installed, the Cleverscope4 application will install:

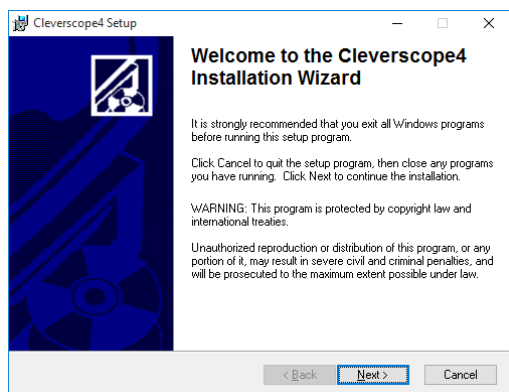

Click *Next*, and you are given a choice of installation location. We recommend leaving it as the default.


6. On completion of the installation you should see this dialog:

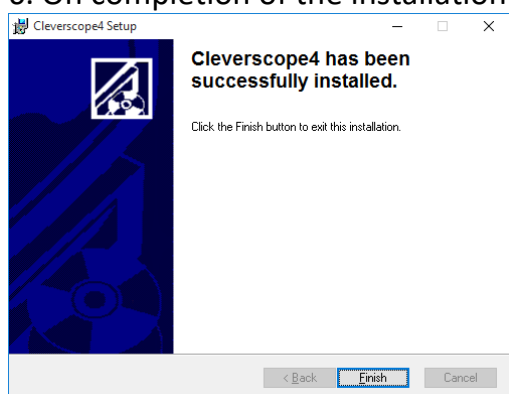

Click *Finish* to complete the installation. Well done!

7. Connect the CS448 or CS548 to power, without plugging in the USB cable. For the CS548 click the power button on the lower right hand side. First the Red LED will come on during the system test. This should go out, and the green LED will flash until the digitizer and I/O system are activated and calibrated. When the green LED stops flashing, and is on solid green, the system is ready.

If you are using the CS328A, the green LED will come on, and the red LED will flash once and go out - indicating successful self test. If the red LED stays on, and nothing is plugged into the front panel, please let us know - this is a self test failure.

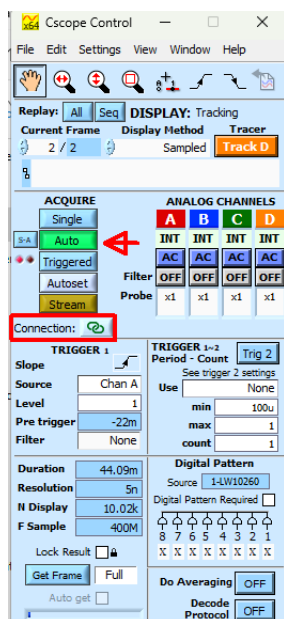


8. Plug the USB 3.0 cable into the PC and the CS548 or CS448 (or the USB 2.0 cable for the CS328A). This will activate the driver. For older Win 7 versions you may be asked to restart the operating system. Do this if required.

9. Choose Windows Start/All Programs/Cleverscope4 x64/Cleverscope4 x64. You may also see Cleverscope4 in the quick start list. For Windows 8 and 8.1 you should find Cleverscope4 in the recently installed list, otherwise you will need to search for it.

After starting Cleverscope4 x64, the connection goes green if a scope is connected. Click on the Auto button (arrowed, which highlights in green) to start triggering.

The system may give you a warning that it requires Ethernet access. The Cleverscope app can communicate with Cleverscopes over a network.

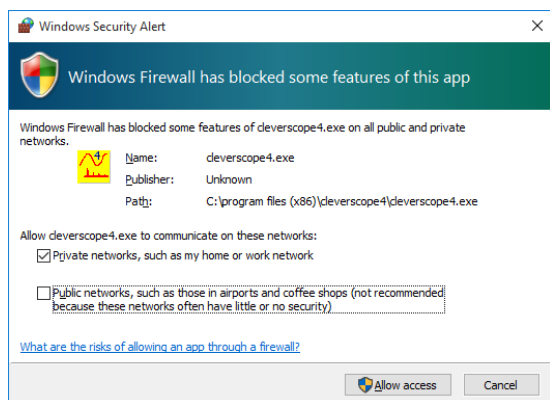

Access is required to communicate with Ethernet scopes, and to check versions on the Cleverscope website.

Now Open the manual using Help | Help/Show Documents and choose the manual. It is still the CS328A manual, and it will be updated someday, but operation is similar. Follow section 3. Getting started.

We have guided video tours of the existing CS328A app here: <https://cleverscope.com/tours/>
Choose the 'Start Using Cleverscope' tour.

Support

Should you have a question please email the question to support@cleverscope.com or use our forum. We also offer on-line sessions to help you use your Cleverscope.

Evaluation

If you have received an evaluation unit, we would like to make the very best use of your time. Please contact us at support@cleverscope.com to arrange a Teamviewer training session. It is a condition of your evaluation that you do this.

Accessories

With the **CS320A** you will receive -

- Two x1/x10 Probes
- 9V Power supply
- IEEE power lead
- Either USB or ethernet connecting cable
- Installation Instructions
- CS302 software on USB stick

The **CS328A** also includes the CS1004/5 Digital probes

With the **CS548** you receive an accessory box with

- One off for each installed channel -
 - x1/x10 Probe
 - Either x100 Probe or x200 Probe
 - Common Mode Choke
- CS1301-1 and CS1301-2 Digital Pods (1-4 and 5-8)
- 19V Power supply
- Country appropriate IEEE Power lead
- USB C Male to USB 3 Male Lead
- SMA Male to BNC Female
- SFP module - Copper or Fibre
- Installation Instructions
- CS302 software on USB stick