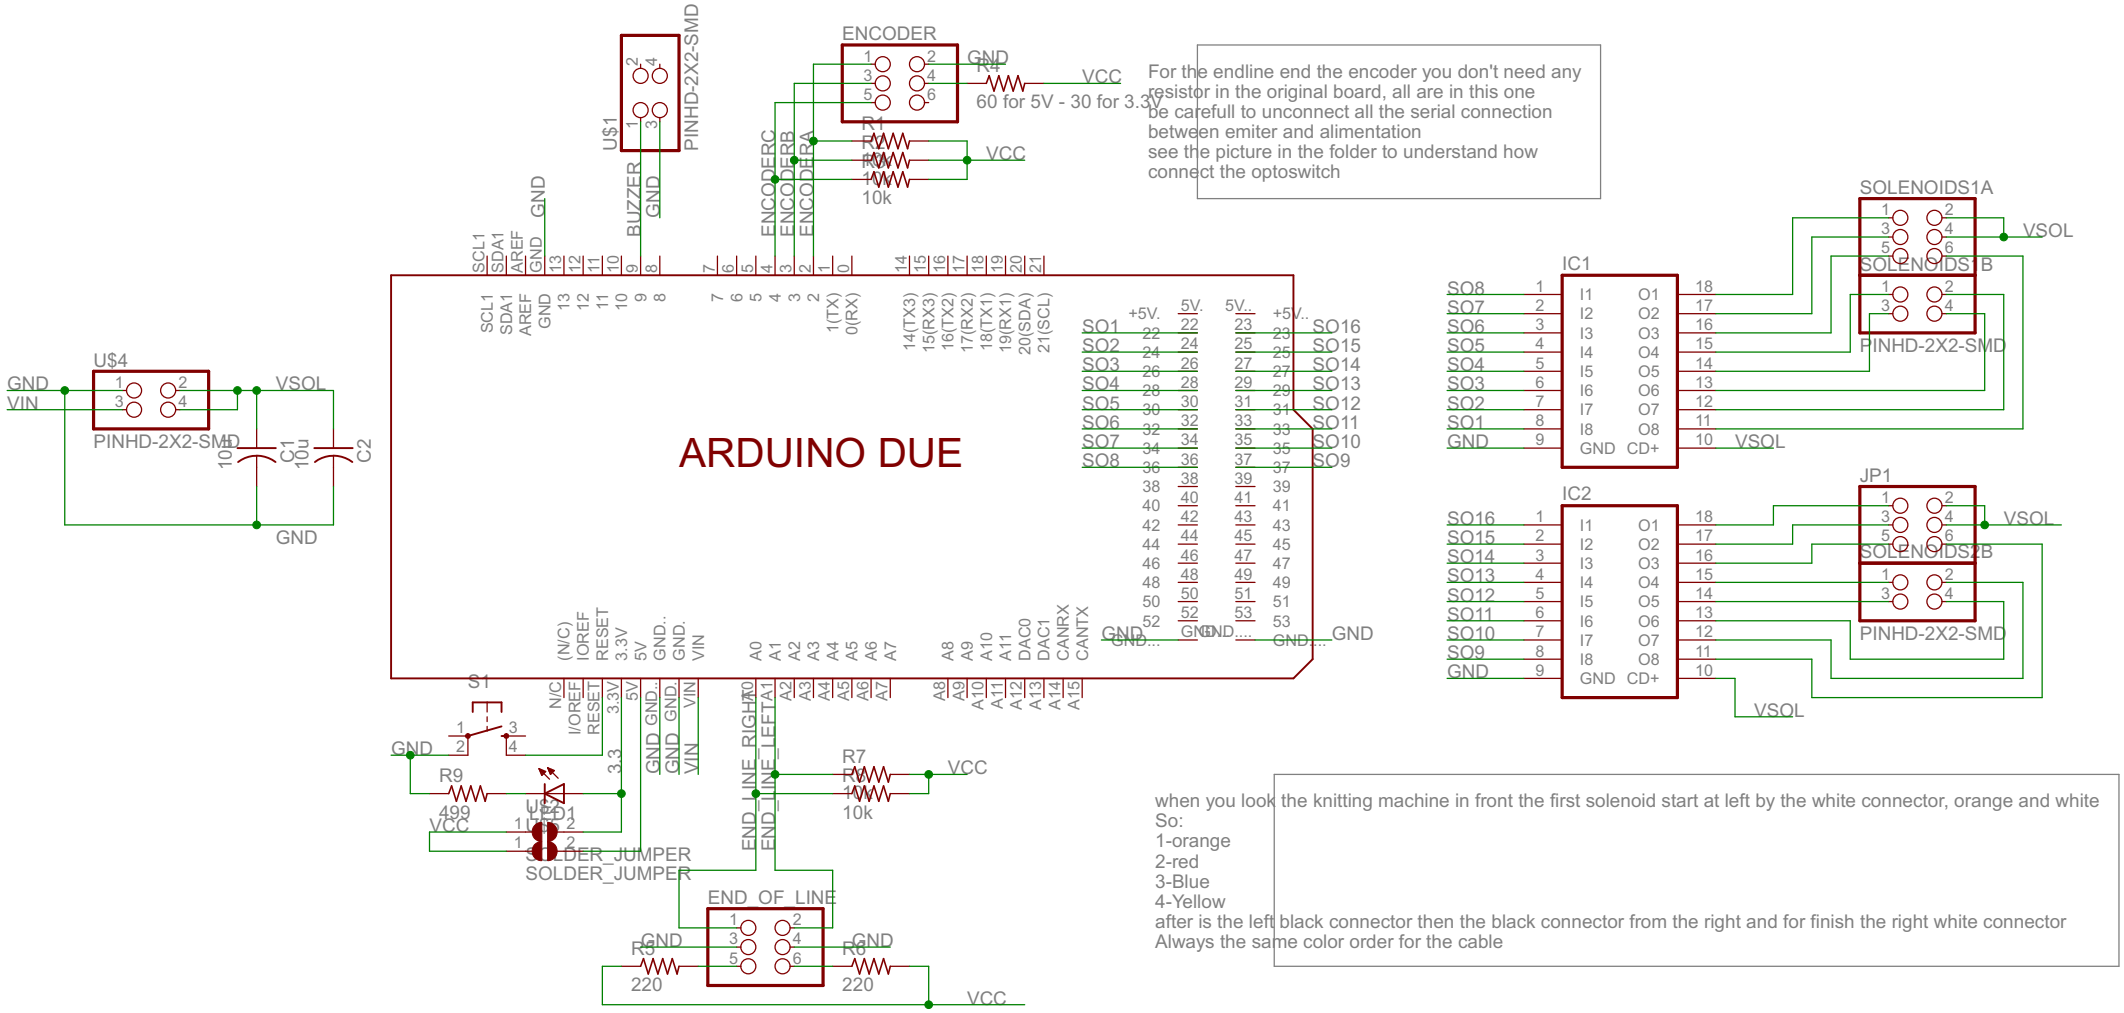

For the endline end the encoder you don't need any resistor in the original board, all are in this one
be carefull to unconnect all the serial connection between emiter and alimentation
see the picture in the folder to understand how connect the optoswitch

when you look the knitting machine in front the first solenoid start at left by the white connector, orange and white
So:
1-orange
2-red
3-Blue
4-Yellow
after is the left black connector then the black connector from the right and for finish the right white connector
Always the same color order for the cable