

Barcode Label Scale

C-L1 User Manual

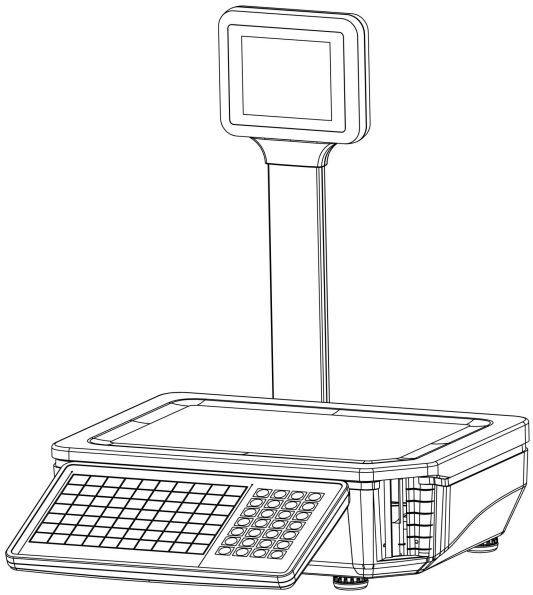

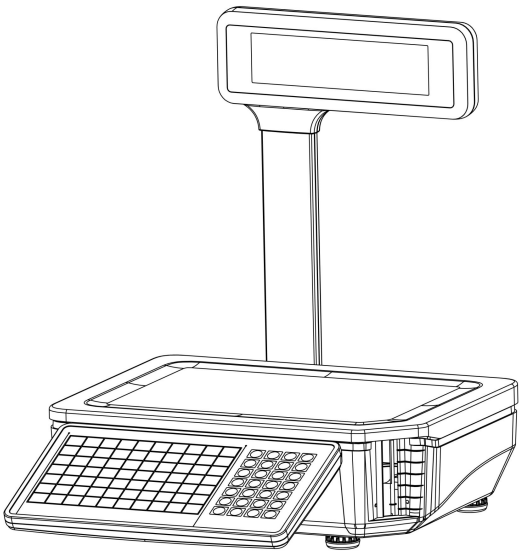

Manufacturer: Xiamen Hanin Co.,Ltd.

Address: No.96, Rongyuan Road, Tong'an District, Xiamen, Fujian, China 361100

E-mail: support@hprt.com

Web: www.hprt.com

Contents

Statement 1
Important Statement 1
Important Safety Instructions 2
1. Product Review 3
1.1 Features 3
1.2 Model Number Definition 3
1.3 Specifications 4
1.4 Appearance and Parts 4
1.5 Leveling the Weighing Body 6
1.6 Interfaces 6
2. Installation and Power On/Off 7
2.1 Display Screen Installation 7
2.1.1 Square Screen Version 7
2.1.2 Long Screen Version 8
2.2 Rewind Label Paper Installation 9
2.3 Non-rewind Label Paper Installation 11
2.4 Power On/Off 13
3. System Setting Instruction 14
3.1 System Function Setting Overview 14
3.1.1 System Setting Guide --- Keyboard Instruction 14
3.1.2 Enter System Function Menu 15
3.1.3 Finish Setting 15
3.2 Details for System Function Setting 16
3.2.1 Firmware Configuration 16
3.2.2 Parameter Configuration 20
3.2.3 Network Setting 22
4. Sales Operating Instructions 24
4.1 Zero Operation 24
4.2 Tare Operation 24
4.3 Sales Operation 24
4.3.1 Priced by Weight 25
4.3.2 Priced by Count 25
4.3.3 Discount Sales 25
4.3.4 Price Change 26
4.4 Rapid Copy 26
4.5 Rapid Packing 27
5. Trouble Shooting 28
5.1 Display Failure and Trouble Shooting 28
5.2 Weighing Failure and Trouble Shooting 28
5.3 Print Failure and Trouble Shooting 29
6. Maintenance for Scale 30
6.1 Maintenance for Weighing Body 30
6.2 Clear the Printer 30
6.2.1 Clear the Print Head 30
6.2.2 Clear the Sensor, Platen and Paper Path 30
Appendix I Barcode Encoding Rule Table 31

Statement

This manual content may be altered without permission, and Xiamen Hanin Co.,Ltd. reserves the rights to make changes without notice in technology, spare parts, hardware and software of the products. If more information is needed about the products, please contact Xiamen Hanin Co.,Ltd. Without any written permission from the company, any section of this manual is prohibited to be copied or transferred in any form.

Important Statement

Please go to the local inspection agency for scale calibration before use, otherwise you will be fined.

Copyright
This manual is printed in 2024, the copyright belongs to Xiamen Hanin Co.,Ltd.
Printed in China.
1.0 Version.

Note
Due to continuous update of product, please take in kind of real machine, such as accessories, programs etc.

Important Safety Instructions

Carefully read the installation and operating instructions provided with the scale before starting up your scale.

1) Place the scale on a flat and stable surface.
2) Leave enough space around scale for operation and maintenance.
3) Do not place the scale on or near a heat source.
4) Do not use the scale near water. Never spill liquid into the scale.
5) Do not expose the scale to high temperatures, direct sunlight or dust.
6) Protect the scale from shock, impact and vibration.
7) Be certain the power supply is within the voltage rating and frequency listed for the scale.
8) Switch off the scale power supply when won't use it for a long time.
9) Do not place the power cord where it can be stepped on. If the power cord becomes damaged or frayed, replace it immediately.
10) To ensure the print quality and reliability, you are suggested to use the recommended paper or the same quality paper.
11) Please switch off the power supply when connect/disconnect all the ports or it will cause damage to the scale control circuit.
12) Never carry out maintenance or repair work yourself. Always contact a qualified service technician.
13) When the scale is running, please do not turn off the power, otherwise it will cause damage to the scale and data loss.
14) Keep this User Manual in a place which is easily accessible at all times.

1. Product Review

1.1 Features

- With aerospace material and die-cast aluminum housing, which is waterproof, insect-proof and rust-proof. The fan-free completely closed design prevents oil pollution from invading, which is quite applicable to the harsh environment.
- Totally 7×10 hot keys can be used.
- Equipped with 56-mm label printer; print speed is 125mm/s; thermal label paper, linerless paper and thermal receipt paper of 9-level print density are printable, meanwhile support linerless label print with cutter, which is able to print nutrition information and 2D code.
- Easy paper loading design makes it easy to replace paper in the narrow space.
- Double-sided dot matrix LCD with white back light
- Square screen or long screen for option

1.2 Model Number Definition

The model number of C-L1 is specified as below:
C-L1 + Capacity + Display Screen + Communication Interface + Additional Function
E.g. The capacity is 6kg, display screen is long screen, communication interface is WiFi, then the model number will be C-L106CW.


C-L1 Model Number Definition							
Capacity		**Display Screen**		**Communication Interface**		**Additional Function**	
XX	**Definition**	**X**	**Definition**	**X**	**Definition**	**X**	**Definition**
06	6kg	N	Without holder	W	WiFi	Q	Cutter
15	15kg	C	Long screen	E	Ethernet		
30	30kg	F	Square screen				

1.3 Specifications


Items	Specifications
Maximum Capacity	6/15kg, 15/30kg
Minimum Number of Division	2/5g, 5/10g
Display Screen	Dual screen dot matrix LCD, white backlight
Keyboard	With Myra Film key, hot keys 10*7 and function keys 4*7
Printer Structure	Easy paper loading design (remove the weighing pan to install the paper) Waterproof and insect-proof design Sunken weighing pan design Maximum print speed 125mm/s
Data Storage	10000 SKU
Communication Interface	Ethernet, RS232, USB Host, Drawer, optional WiFi communication
Dimensions(L×W×H)	509x400x512mm
Optional	WiFi

1.4 Appearance and Parts


Square screen version:

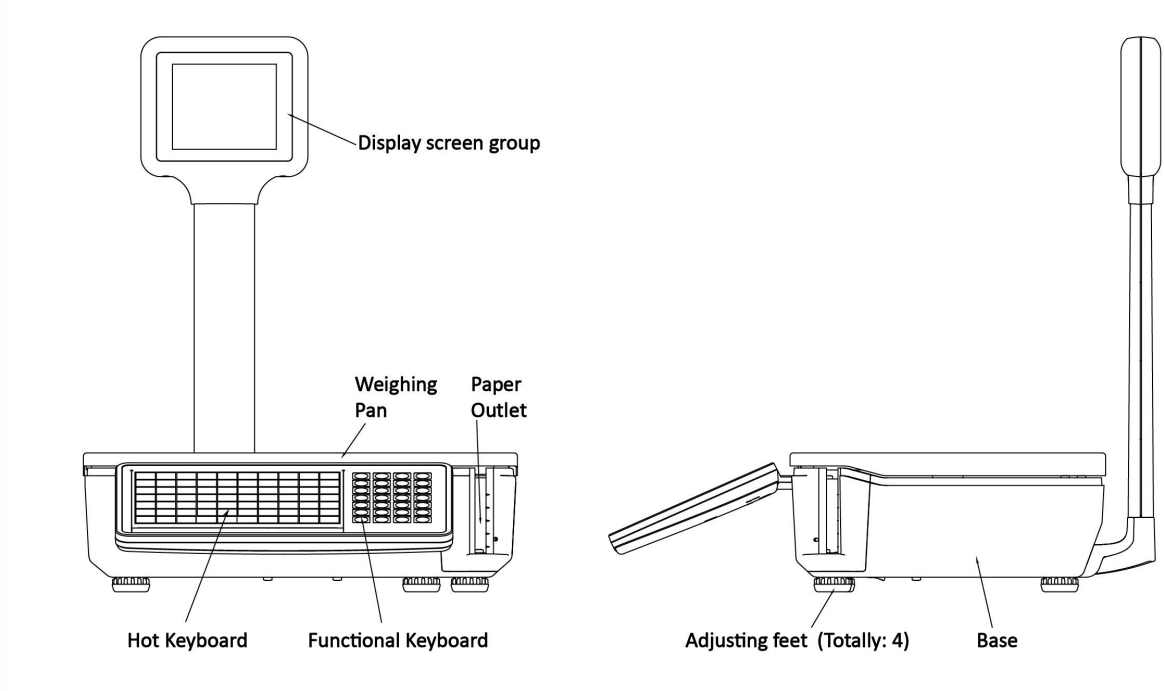

Long screen version:

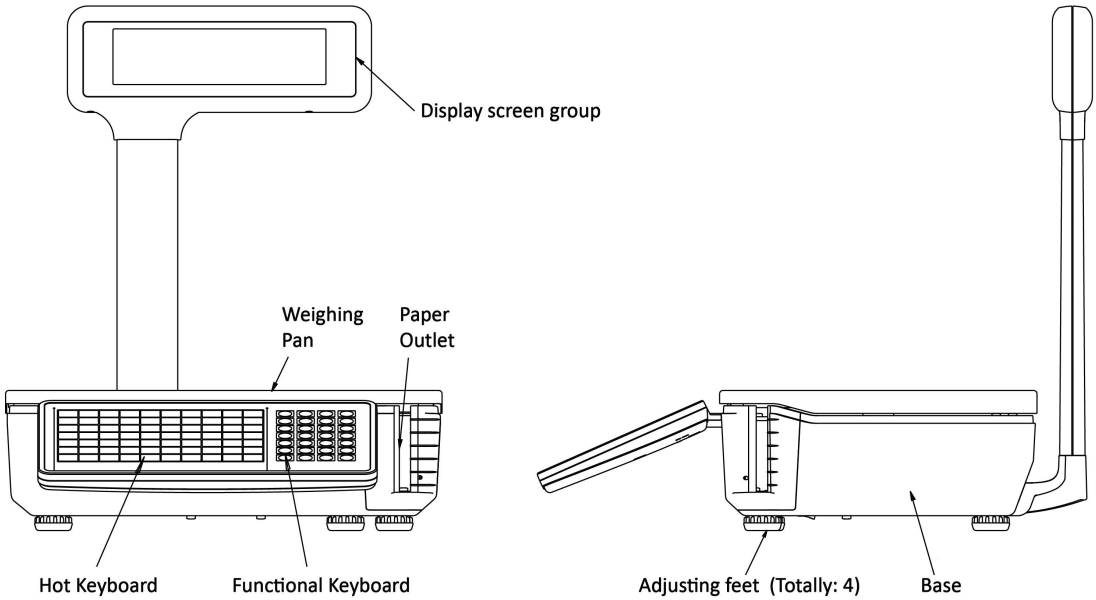

Base Appearance:

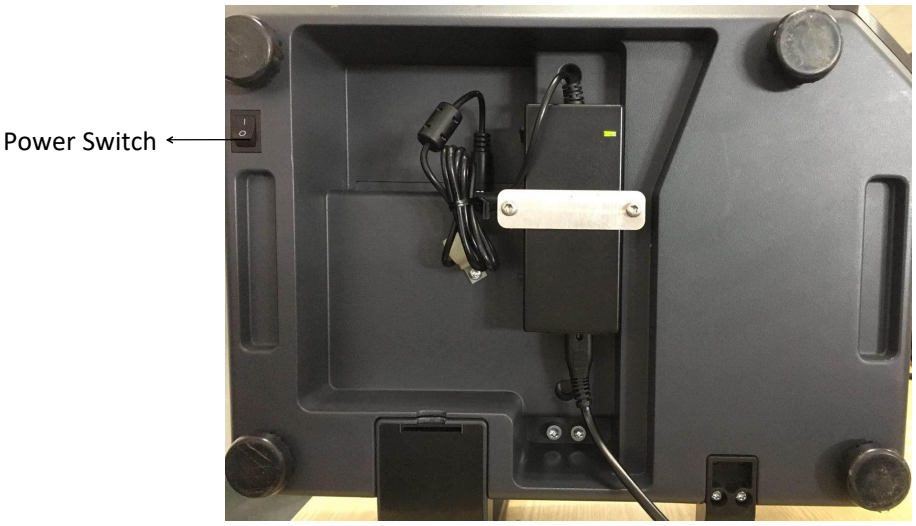


1.5 Leveling the Weighing Body

In order to make up the slight slant or unevenness of the location where to use the scale, we can level the weighing body.


Operating steps:

1. Remove the cover and find the leveling gauge bubble (in the middle).
2. Make the bubble stay in the middle by leveling the adjusting feet on the bottom of the weighing body. The position of bubble is shown as below.

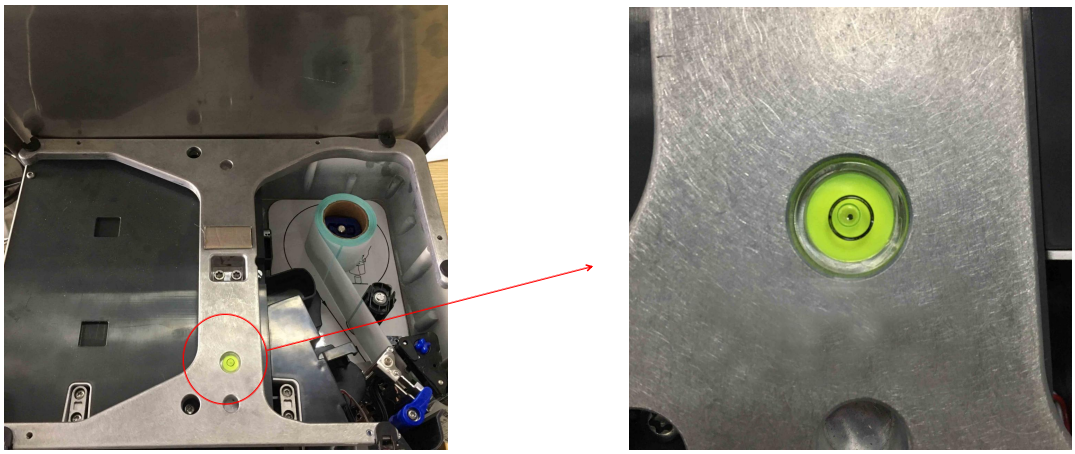

[Note]: It requires to level the weighing body each time when using at different locations.

1.6 Interfaces

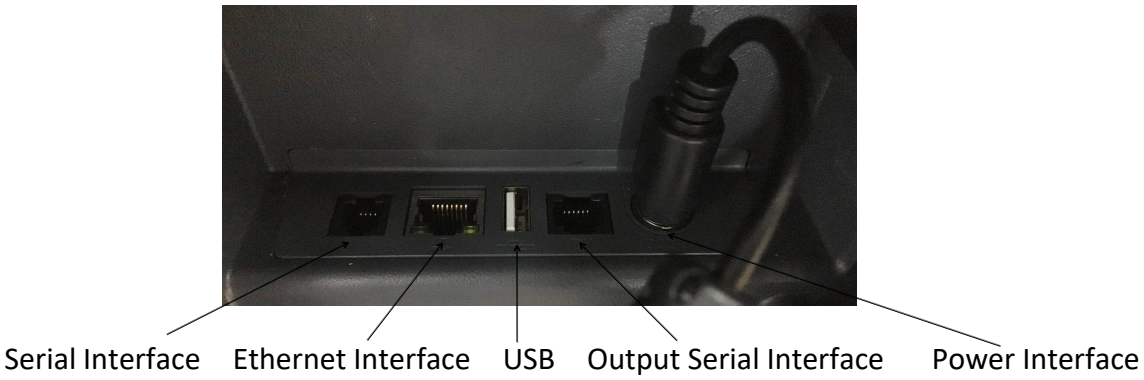


2. Installation and Power On/Off


2.1 Display Screen Installation

2.1.1 Square Screen Version

The installation steps for the square screen is as below:

1. Connect the wires.
2. Plug the display holder into its base.
3. Arrange the wires to one side and avoid the middle area.
4. Assemble the cover of display holder base to the position as the figure shown.

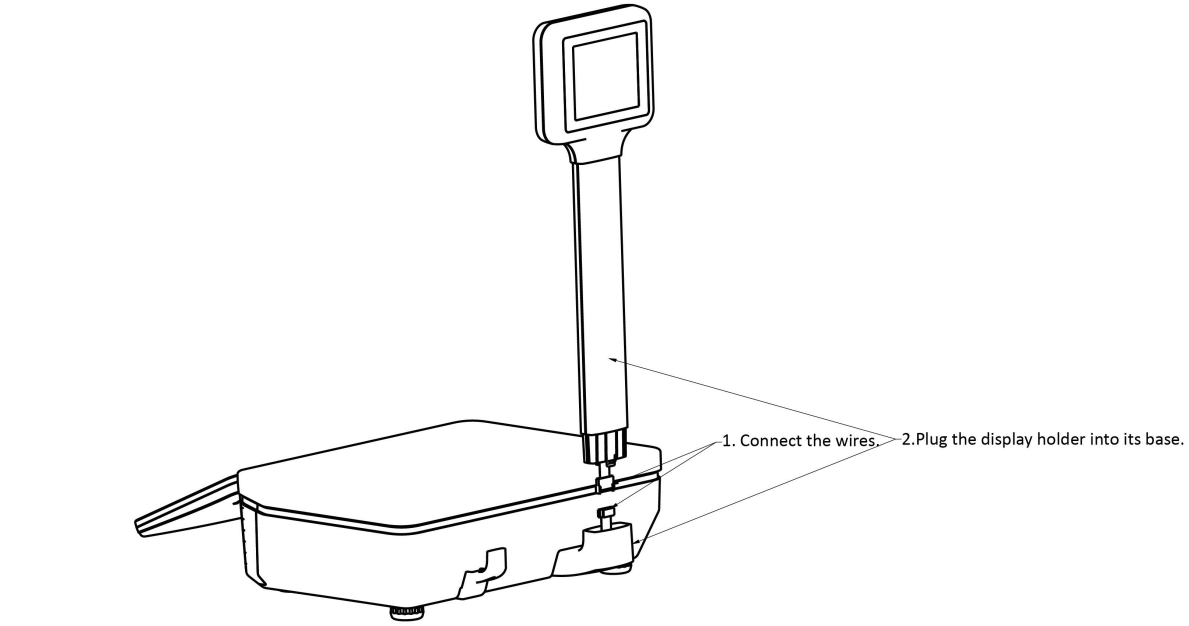


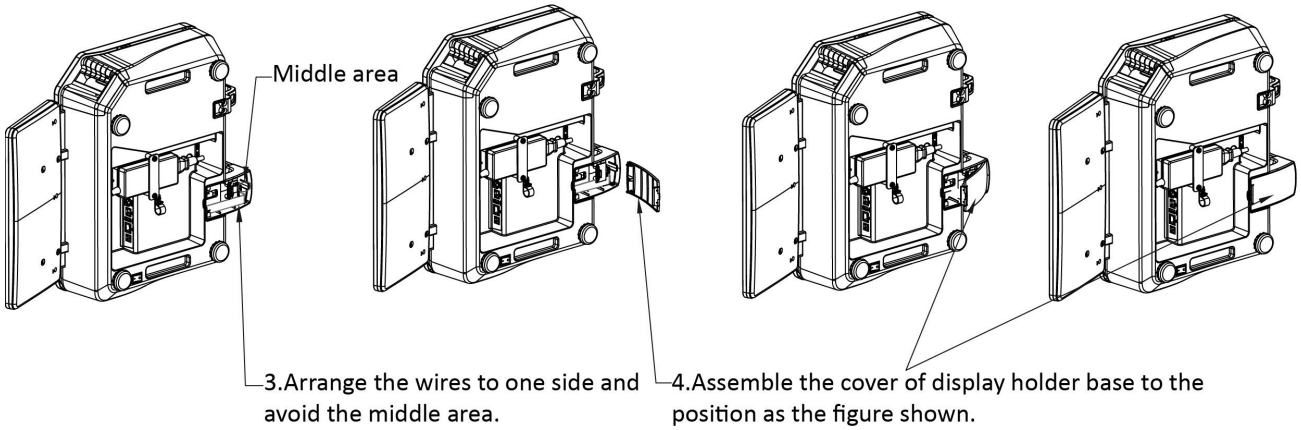

2.1.2 Long Screen Version


The installation steps for the long screen is as below:

1. Connect the wires.
2. Plug the display holder into its base.
3. Arrange the wires to one side and avoid the middle area.
4. Assemble the cover of display holder base to the position as below figure shown.

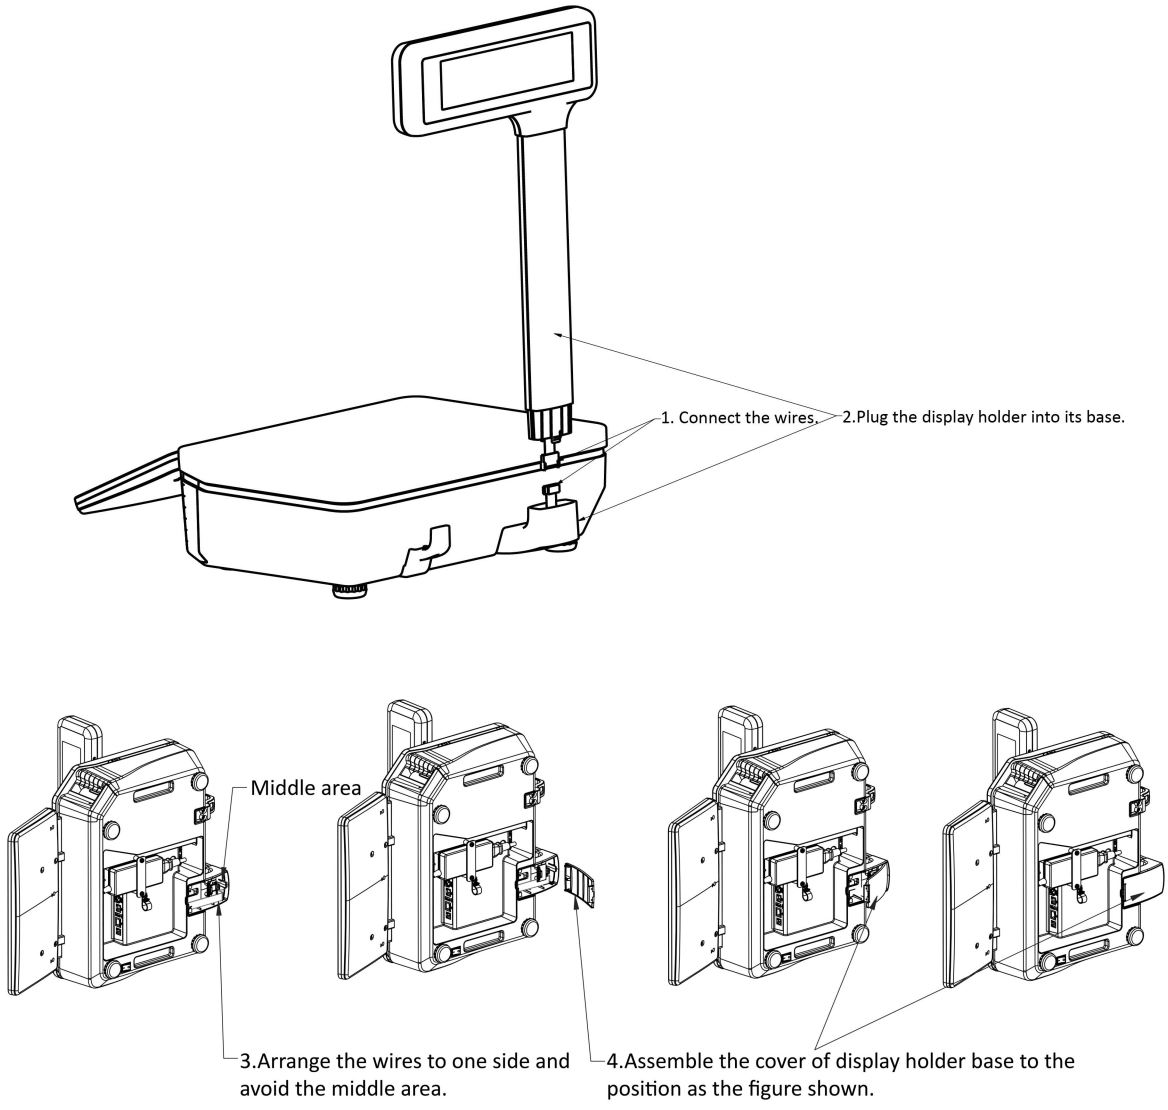


2.2 Rewind Label Paper Installation


1. Remove the cover of scale and release the cover-opening lever of print module.

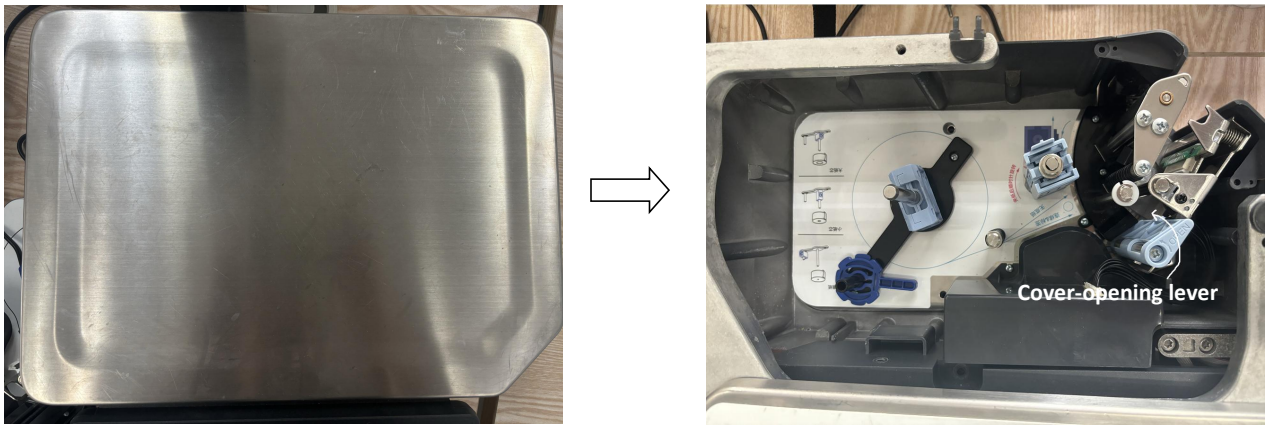


2. Tear off the first 4 sheets of label from the end of the label paper roll, place the paper roll into the paper roll shaft, then make the paper bypass the space between print head and platen holder according to the installation path guide. Fix it to the paper rewind shaft and rotate the paper rewind shaft to tighten the label paper.

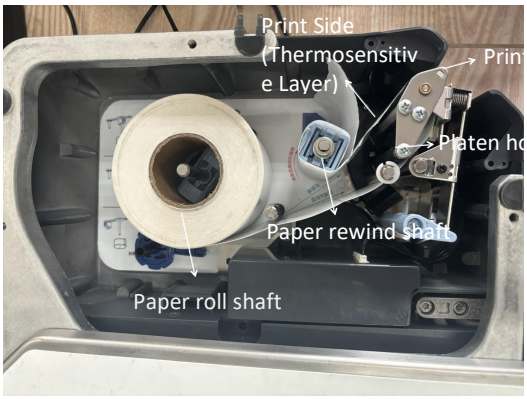

3. Close the cover-opening lever, and the paper roll will be fixed automatically.

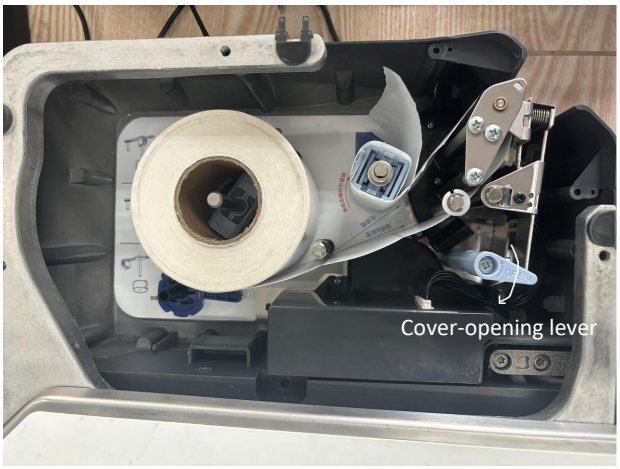

4. Adjust the paper limiter up and down to make it match with the paper width.

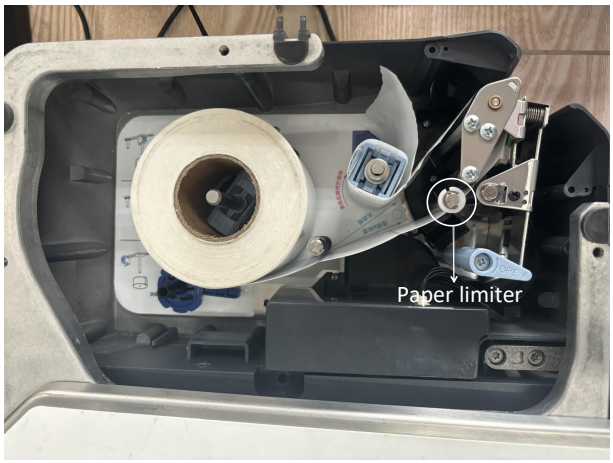



5. After finishing the installation, close the cover.




2.3 Non-rewind Label Paper Installation


1. Remove the cover of scale and release the cover-opening lever of print module.

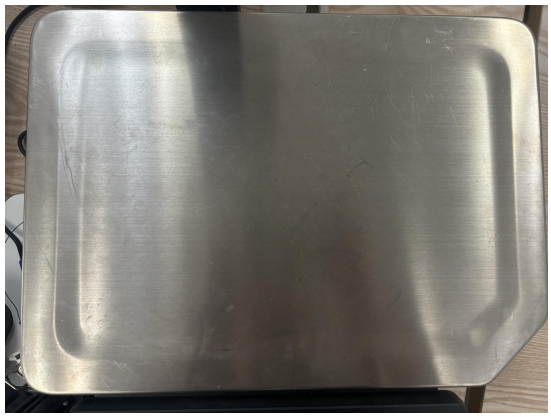

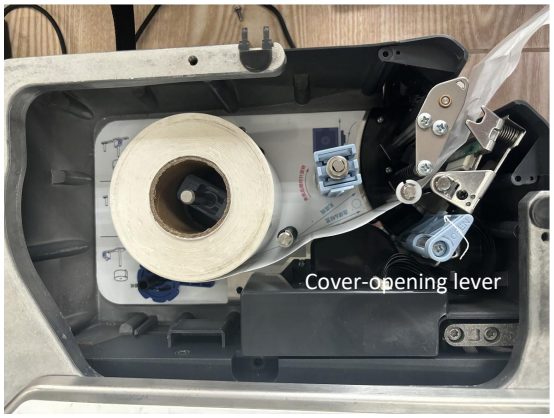


2. Press the paper roll into the paper roll holder, and make it bypass the space between print head and platen holder according to the paper installation path guide, leave extra paper outside.

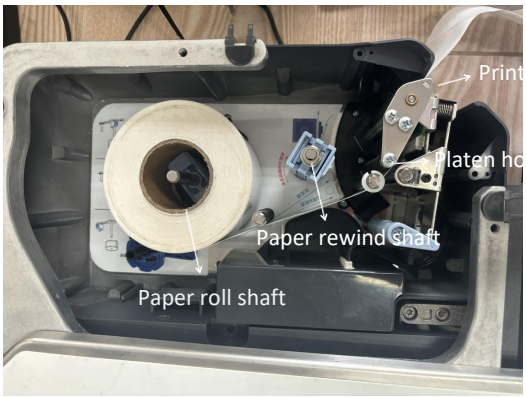


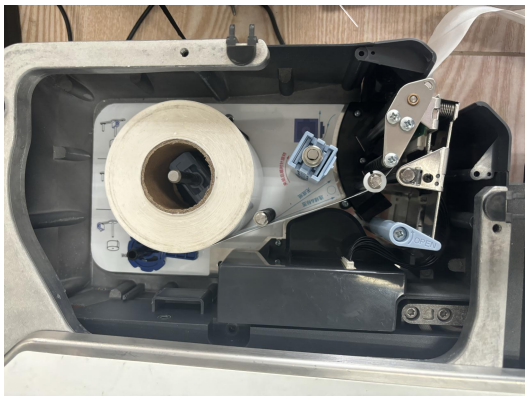

3. Close the cover-opening lever, and the paper roll will be fixed automatically.

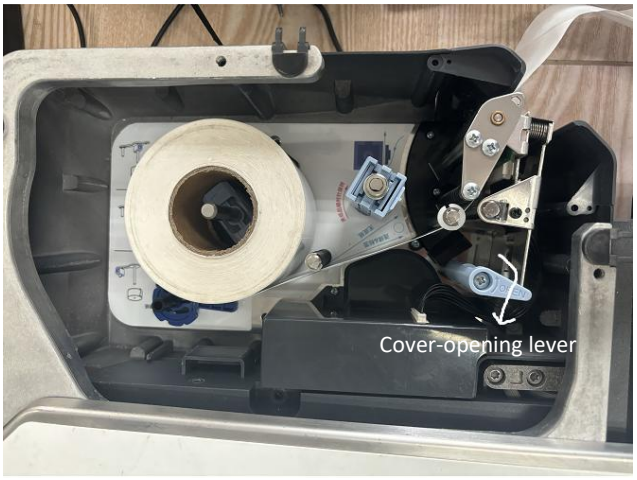

4. Adjust the paper limiter up and down to make it match with the paper width.

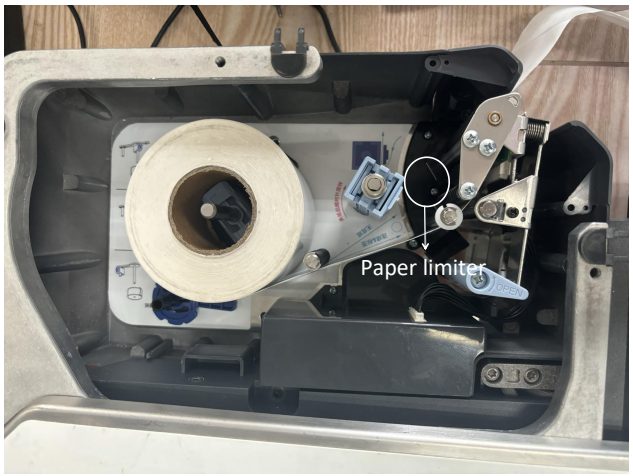

5. After finishing the installation, close the cover.



2.4 Power On/Off

1. Hard Start:

After connecting the power supply, turn the power switch "  "(On/Off) on the left bottom of the scale to "  "(On), then the printer will print out a blank page (when the paper roll has been installed), which indicates the printer has been connected. Later it will enter the sales mode.

2. Soft Power On/Off

Soft power on/off indicates restart of the system program.

Power off: press the power button "  "and hold it for 2 seconds, after one sound of "di", the printer will shut down

Power on: press the power button "  " again, the printer will start

[Note]: Disconnecting the power supply is hard power off, so it is recommended not to plug out the power cord in department store, supermarket or when downloading the data, instead, use the power button to power on/off.

3. System Setting Instruction

3.1 System Function Setting Overview

3.1.1 System Setting Guide --- Keyboard Instruction

The keyboard consists of **Function Keyboard** (on the right-hand keypad) and **Hot Keyboard** (on the left-hand keypad).

1. The following **Function Keys** will be used in setting (see Figure 1):

【MENU】--------Long press it to enter the function menu
【COPY】---------Press it to select the number of copies of last label
【PLU】----------Press it to input LF Code of the item and process the sales
【↑】-------------Select upward
【↓】-------------Select downward
【FIX】---------Press it when continuously packaging the same item
Press it again to cancel this function
【FEED】---------Short press it to pre-feed paper
Long press it to process the label paper alignment
【←】-------------Backspace
【UNIT】---------Short press it to priced by count
Long press it to show the weight unit on the screen
【ENTER】--------Confirm selection/save/input
【PRICE】---------Long press and short press it to achieve price change function
【DISC】----------Long press and short press it to achieve the function of discount and temporary price reduction
【CLEAR】--------Return to the last option

[Note]: When you need to resize the number during number setting, press "↑" to decrease it and "↓" to increase it.



Figure 1 Function Keyboard

2. The following hot keys will be also used in setting (see Figure 2):

【Esc】----------In system mode, this key indicates “return” function, it is similar to “CLEAR” key
【Shift】--------In input mode, press this key to switch Capital/Lower Case/Pinyin, input the letters or Chinese characters as need
【Enter】-------In system mode, this key indicates “confirm” function
【Space】------In input mode, this key indicates “space” function
【←】-----------In system mode, this key is same to Function Key “AUTO/↑”
【→】-----------In system mode, this key is same to Function Key “PWD/↓”

Esc	@	#	$	%	&	*	(	)	
Q	W	E	R	T	Y	U	I	O	P
	A	S	D	F	G	H	J	K	L
Shift		Z	X	C	V	B	N	M	Enter
!	.	'	"	Space	,	、	/	−	+
								←	→

Figure 2 Hot Keyboard

[Note]: All the “long press” action below indicates press the relevant Function Key for 2 seconds and then enter the required menu after one sound of lasting “di”.

3.1.2 Enter System Function Menu

1. Long press【MENU】to enter the system configuration → Firmware Configuration
2. Long press【MENU】to enter the system configuration → Parameter Configuration
3. Long press【MENU】to enter the system configuration → Network Configuration

3.1.3 Finish Setting

After finishing all the settings, press 【CLEAR】to return to the main screen.

3.2 Details for System Function Setting

3.2.1 Firmware Configuration

Menu	Optional Value	Default Value	Configuration Note
LCD Contrast	0~29	20	Set the contrast of two LCDs at the same time
Standby Mode	5~60 (Unit: min)	30	There are two options for this function: 1.Turn off the power through the power key on the keyboard; 2.Turn off the backlight
Paper Type	Label paper/receipt paper/non-rewind label paper/linerless blackmark paper/print label in receipt paper	Label paper	Select the required paper type according to the actual sales
Slight adjustment for paper outlet position	0~18	9	This function can avoid the error of the paper outlet position, which can be adjusted slightly
Print demo page or not	Yes/No	No	When selected “Yes” , the print content of the demo page is all the pixels, which can be used to check if the print effect is normal
Select the default label	1~30	1	If the format of the label is not set in advance, the system will select the default label format to print when selling this product

3.2.1.1 LCD Contrast Setting

LCD Contrast Setting:

The default value is 20. As the display will be affected by the field light, this function can be used to increase or decrease the font density of LCD according to actual conditions.

Operating Steps:

1. Enter the menu of LCD Contrast: long press "MENU" key → System Configuration → Press "ENTER" key → Firmware Configuration → Press "ENTER" key → LCD Contrast
2. Press "ENTER" key to enter the adjustment of LCD Contrast: "↑" decrease, "↓" increase. When the number increases or decreases, the font density of LCD will become dark or light accordingly. Select the best effect and then press "ENTER" key to save it.
3. Press "CLEAR" key to return to the main screen.

3.2.1.2 Slight Adjustment for Paper Outlet Position

Slight Adjustment for Paper Outlet Position:

The system default value for the paper outlet position is 9, and normally there is no need to change it.

When the following conditions occurred, this function would be used:

(1) The label paper on the paper outlet is too little to tear off;

(2) The label paper on the paper outlet is so much that it would directly drop.

Operating Steps:

1. Enter the menu of "Slight adjustment for paper outlet position": long press "MENU" key → System Configuration → Press "ENTER" key → Firmware Configuration → Press "ENTER" key → Press "↑/↓" key to select the menu → Slight adjustment for paper outlet position

2. Press "ENTER" key to enter "Slight adjustment for paper outlet position": "↑" decrease, "↓" increase.

   If the above condition (1) occurred, please increase the proper number;

   If the above condition (2) occurred, please decrease the proper number;

   Then press "ENTER" key to save it.

3. Press "CLEAR" key to return to the main screen.

3.2.1.3 Select the default label

The system sets the default label value to 1, which does not need to be changed in general. When the number of labels to be printed is more than 1, you can use this function to set the number of labels to be printed each time.

Operating Steps:

1. Enter the menu of "Select the default label": long press "MENU" key → System Configuration → Press "ENTER" key → Firmware Configuration → Press "ENTER" key → Press "↑/↓" key to select the menu → Select the default label
2. Press "ENTER" key to enter "Select default label":

Input the number on the Function Keyboard, for example, if you need to print two labels each time, input "2" directly, or press "↑" "↓"to change the number.

3. Press "CLEAR" key to return to the main screen.

3.2.1.4 Whether to print test page

Operating Steps:

1. Enter the menu of "Whether to print test page": long press "MENU" key → System Configuration → Press "ENTER" key → Firmware Configuration → Press "ENTER" key → Press "↑/↓" key to select the menu → Whether to print test page
2. Press "ENTER" key to enter "Whether to print test page", press "↑/↓" to choose "Yes" or "No".
3. Press "ENTER" key to save it.
4. Press "CLEAR" key to return to the main screen.

3.2.1.5 Standby Mode

Enter the menu of “Soft power off setting”: long press “MENU” key → System Configuration → Press “ENTER” key → Firmware Configuration → Press “ENTER” key → Press “↑/↓” key to select the menu → Standby mode → Press “↑/↓” key to select the menu → Soft power off → Press “ENTER” → finish when hearing two sounds of “di”

Soft power on/off indicates restart of the system program.

Power off: press the power button “  ”and hold it for 2 seconds

Power on: press the power button “  ” again, the printer will start after one sound of “di”

[Note]: Disconnecting the power supply is hard power off, so it is recommended not to plug out the power cord in department store, supermarket or when downloading the data, instead, use the power button to power on/off.

3.2.1.6 Enter Standby Time

After setting the standby mode, the default standby time is 30min, if longer time is needed, enter the menu of standby time to set it.

Operating steps:

1. Enter the menu of “Enter standby time”: long press “MENU” key → System Configuration → Press “ENTER” key → Firmware Configuration → Press “ENTER” key → Press “↑/↓” key to select the menu → Enter standby time
2. Press “ENTER” key to enter “Enter standby time”:

Press “↑” to reduce, “↓” to increase, the minimum value is 5min

Lastly press “ENTER” to save it.

3. Press “CLEAR” key to return to the main screen.

3.2.2 Parameter Configuration

Menu	Optional Value	Default Value	Configuration Note
Weight Unit	1. kg 2. g 3. 500g	kg	Only set the weight unit on the LCD. E.g. if the weight unit of apple is set as “g” in PLU data, the weight unit on the printed label is also “g” when selling the apples.
Use the original price for the barcode price	Yes/No	No	Print the label when selling the product with discount or price reduction, whether to use the original price for the barcode price on the label
Zero Print	Yes/Auto print/No	No	When selecting “Auto Print” or “Yes”, the weight of weighing pan is zero, the label can be also printed
Manual Tare	Yes/No	Yes	Can manually input the tare value and then process weighing
Preset Tare	Yes/No	Yes	Open “Preset Tare”, the tare value can be preset in PLU data
Successive Tare	Yes/No	Yes	After once setting of tare, it can be set again in the condition of tare
Allow to input the price when unit price is zero	Yes/No	Yes	If “No” is selected, when the unit price of the product is zero, it is not allowed to input the price

3.2.2.1 Weight Unit Setting on LCD

Method One: quick setting steps

1. Long press the price unit;
2. Press "↑/↓" key to select the required price unit: kg, g, 500g;
3. Press "ENTER" key to save it.

Method Two: system setting steps

1. Long press "MENU" key → System Configuration → Press "ENTER" key → Press "↑/↓" key to select the menu → Parameter Setting → Press "ENTER" key → Press "↑/↓" key to select the menu → Weight Unit

1. Press "ENTER" key to enter "Weight Unit", press "↑/↓" key to select the required price unit: Kg, g, 500g

2. Press "ENTER" key to save it.

3.2.2.2 Non-rewind Label Paper Setting

Operating Steps:

1. Enter the menu of "Paper Type": long press "MENU" key → System Configuration → Press "ENTER" key → Firmware Configuration → Press "ENTER" key → Press "↑/↓" key to select the menu → Paper Type
2. Press "ENTER" key to enter "Paper Type", press "↑/↓" key to select "non-rewind label paper", press "ENTER" key to save it.
3. Press "CLEAR" key to return to the main screen.

3.2.3 Network Setting

3.2.3.1 Wire Communication Mode

[Note]: If the wire communication mode is selected, please plug the network cable into the Ethernet interface before power on.

Operating Steps:

1. Enter "Wire Communication" menu: long press "MENU" key to enter the system configuration → Press "ENTER" key → Press "↑/↓" key to select the menu → Network Configuration → Press "↑/↓" key to select the menu → Network Communication Mode → Press "ENTER" key → Press "↑/↓" key to select the menu → Wire Communication

2. After pressing "ENTER" key, there is a sound of lasting "di", the LCD will be black, and the system will automatically assign the IP address and enter the restart status. Wait until the system completes self-start and enters the initial sales interface. If the system does not restart in one minute, please press the power switch "  " to start / shut down. If hearing a sound of lasting "di" when self-start or start, the LCD will show the IP Address, which indicates the wire communication connection is normal.

- **Modify the local IP address:**

  When setting to use the wire communication mode for the first time, the system will assign a IP address by default. Now it needs to manually modify the IP address to realize the communication.

  [Note]: The modified IP address is the fixed address until the next manual setting for it.

  IP address setting rules:

  (1) All the modified IP addresses of the barcode label scale must be in the same network segment with the PC IP address, i.e. the first 9 digits of the IP address are the same.

  (2) The IP address of a barcode label scale cannot be the same to the IP address of other machines, which ensures its uniqueness so as to realize the communication of the barcode label scale with PC data.

  E.g.The IP address of PC is 192.168.001.200, that of the barcode label scale will be 192.168.001.223.

  Operating Steps:

  (1) Enter "Local IP Address" in the menu of "Network Configuration" to modify IP;
  (2) Input "192168001223" on the number keyboard;
  (3) Press "ENTER" key and there will be a sound of lasting "di", which indicates the success of IP address modification.

3.2.3.2 Wireless Communication Mode

[Note]:

1. If the wireless communication mode is selected, please unplug the network cable before starting the scale.
2. If the original network is not cleared, it requires to long press the function key, press "↑/↓" key to select the menu to enter network configuration, then press "↑/↓" key to select the menu "Clear network configuration".

Operating Steps:

1. Enter "Wireless Communication" menu: long press "MENU" key to enter the system configuration → Press "ENTER" key → Press "↑/↓" key to select the menu → Network Configuration → Press "↑/↓" key to select the menu → Network Communication Mode → Press "ENTER" key → Press "↑/↓" key to select the menu → Wireless Communication → Press "ENTER" key to enter WIFI setting

2. Set up "WIFI Account", "WIFI Code" and "Local IP Address": WIFI Setting → WIFI Account → Press "ENTER" key and input the name of "WIFI Account" to connect on the hot keyboard, after finishing input, press "ENTER" key again; enter "WIFI Code" setting, input WIFI code, then press "ENTER" key; enter "Local IP Address", press "ENTER" Key, input the IP address, it will be connected automatically. After consecutively pressing the "CLEAR" key, quit the homepage, and long press the "COPY"key. If connected, "communication succeeded"will be shown; if not connected, "communication failed" will be shown.

4. Sales Operating Instructions

4.1 Zero Operation

1. When there is no item on the weighing pan after starting the scale, the weight will be not Zero, please press “ZERO” key to set initial zero, if failed, please turn on the power switch again.
2. In the following sales process, please confirm whether the triangle mark of the zero weight column is lit before weighing. If not, it indicates the scale is not in the zero weight status, and please set it zero and then weigh.

4.2 Tare Operation

This operation is only applicable to the items which need to be packed when weighing, e.g. apple, pear, egg, bean, etc.

For example, now a box of pear is sold, the hot key is “06”, here is the operating steps:

1. Tare for unseparated package and item:
(1) The weight of package box is 500g, input “500” on the keyboard;
(2) Press “TARE” key;
(3) Place a box of pear on the weighing pan;
(4) Press the hot key of pear “06”;
(5) Press “PRINT” key to print the label;
(6) Press “TARE” key to cancel this function.

2. Tare for separated package and item:
(1) Place the package box on the weighing pan;
(2) Press “TARE” key;
(3) Place the pear on the weighing pan;
(4) Press the hot key of pear “06”;
(5) Press “PRINT” key to print the label;
(6) Press “TARE” key to cancel this function.

4.3 Sales Operation

[Note]: In the “Auto Print” status, the triangle mark of “Auto” on the LCD will light up. As long as the weight is stable, the system will print the label. Press “AUTO” key to switch the status. The following sales operation all belong to the auto print status, if the triangle mark does not light up, please press “PRINT” key to print the label when sales.

4.3.1 Priced by Weight

Method One: Press the hot key to operate it

For example, 1kg of garlic bolt is sold, the relevant hot key is “02”, unit price is “¥1.60/kg”.
Operating steps: (1) Place the garlic bolt on the weighing pan; (2) Press the hot key “02”.

Method Two: Use LF code to operate it

For example, 1kg of garlic bolt is sold, the relevant LF code is “10001”, unit price is “¥1.60/kg”.
Operating steps: (1) Place the garlic bolt on the weighing pan; (2) Input the LF code “10001”;
(3) Press “PLU” / “PRINT” key.

4.3.2 Priced by Count

[Note]: Before operating, it requires to set the weight unit of relevant item as PCS in Label Manager Software.

Method One: Press the hot key to operate it

For example, 10 chicken drumsticks are sold, the relevant hot key is “05”, unit is PCS.
Operating steps: (1) Input the number “10” on the keyboard; (2) Short press “UNIT” key;
(3) Press the hot key “05”.

Method Two: Use LF code to operate it

For example, 10 chicken drumsticks are sold, the relevant LF code is “10002”, unit is PCS.
Operating steps: (1) Input the number “10” on the keyboard; (2) Short press “UNIT” key;
(3) Press the LF code “10002”; (4) Press “PLU” / “PRINT” key.

4.3.3 Discount Sales

There are two types of discount: one is percentage discount, the other is total price discount.

Percentage Discount:

For example, now some lettuce are sold in 20% discount, the weight is “2kg”, hot key is “03”, unit price is “¥3.00/kg”, the total price will be ¥4.80.
Operating steps: (1) Input “20” on the keyboard; (2) Short press “DISC” key;
(3) Place the lettuce; (4) Input the hot key “03”.

Total Price Discount:
For example, now some lettuce are sold, reduced price is “¥1.00”, the weight is “2kg”, hot key is “03”, unit price is “¥3.00/kg”, total price will be ¥5.00.
Operating steps: (1) Long press “DISC”key; (2) As reduced price is “¥1.00”, input “100” on the keyboard; (3) Press “ENTER”key; (4) Place the lettuce; (5) Input the hot key “03”.

4.3.4 Price Change

There are two types of price change: one is one-time price change, the other is permanent price change.

One-time Price Change:
Operating steps: (1) Short press “PRICE” key; (2) Input the LF code; (3) Press “ENTER” key; (4) Input the unit price; (5) Press “ENTER” key; (6) Place the item.

Permanent Price Change:
Operating steps: (1) Long press “PRICE” key; (2) Input the LF code; (3) Press “ENTER” key; (4) Input the unit price; (5) Press “ENTER” key; (6) Input the hot key of the item; (7) Place the item.

4.4 Rapid Copy

Operating Steps:
(1) Press “COPY” key;
(2) Input the number of copies;
(3) Press “ENTER” key.

[Note]: If you do not input the number of copies and directly input “ENTER” key, the printer will continuously print out the labels. In this case, press “CLEAR” key to stop it.

4.5 Rapid Packing

[Note]: Open “Auto Print”and “Fix”, the triangle mark on the LCD will light up accordingly.

Operating steps for rapidly packing the same item with different weights:

(1) Activate “Auto Print” and “Fix”;
(2) Place the item ①;
(3) Press the hot key of this item, the printer will automatically print the label;
(4) Take away the item ①;
(5) Place the item ②;
(6) Tear off the label to stick on the item ①, the printer will continue to print the label;
(7) Take away the item ②;
(8) Place the item ③;
(9) Tear off the label to stick on the item ②, and repeat the steps.

5. Trouble Shooting

5.1 Display Failure and Trouble Shooting

1. Failure description: Displaying more digits of number or incomplete number
Trouble shooting:
(1) Check if the signal wire of the LCD is well connected.
(2) Check if the display wire is damaged, if so, please replace it.
(3) Check if the display holder is correctly installed to eliminate the cause of squeezing signal wire.

2. Failure description: The keystroke buzzer will ring but the LCD will not be on.
Trouble shooting:
(1) When installing the display holder, the signal wire between the main board and the display board was not well plugged in.
(2) Replace a new display holder.

5.2 Weighing Failure and Trouble Shooting

1. Failure description: "-----"(No weight) is shown on the LCD after starting the scale.
Trouble shooting:
(1) Make sure there is no item on the weighing pan, or else the weight will not be shown when the item is taken away. Please turn off the power switch to restart.
(2) Process the weighing test and weight calibration.
(3) The sensor is broken due to overweight. Please replace the sensor.

2. Failure description: The weight is inaccurate.
Trouble shooting:
(1) Please set it Zero before weighing.
(2) Process the weight calibration again.
(3) Check if the weighing body is on the flat surface.
(4) The sensor is broken due to overweight. Please replace the sensor.

3. Failure description: The weighing data of the four corners on the weighing pan is different.
Trouble shooting:
(1) Check if the sensor holder of the weighing pan is supported by any object.
(2) Check if the weighing body is on the flat surface, if not, please adjust it.

5.3 Print Failure and Trouble Shooting

1. Failure description: The paper cannot be out of the printer.
Trouble shooting:
(1) The cover-opening lever of the printer is not closed.
(2) Some objects interfere the paper presentation sensor, please take them off or clear the object which may affect the sensor.
(3) The wire of the paper-out sensor is broken, please replace it.

2. Failure description: Print is not clear that the barcode cannot be scanned.
Trouble shooting:
(1) Check if the label paper is qualified, if not, please use qualified label paper to print.
(2) Check if the print head is damaged by hard object and if the entire column of print content disappears.
(3) Check if the print head is attached by paper, if so, please remove it and clear the print head by the alcohol cotton swab.
(4) The unstable supply voltage leads to print blur.

3. Failure description: The printer continuously prints out blank labels.
Trouble shooting:
(1) Release the cover-opening lever of the printer and close it again, to check if the paper alignment is normal.
(2) Re-install the paper roll and close the cover-opening lever, to check if the printer is normal.

4. Failure description: The print position is offset.
Trouble shooting:
(1) Reinstall the paper roll.
(2) Reset the label format.

6. Maintenance for Scale

6.1 Maintenance for Weighing Body

In the supermarket environment, the scale is easy to attach dirt, water spots and sticky substance, which will affect its appearance and function. Please clear the weighing body regularly.

Note: Please turn off the power before clearing the weighing body.

1. Keep the surface of the weighing body clean and use a soft wet cloth to clean it, including the weighing pan, the body surroundings and the LCD.
2. Use dry tissue or cloth to clean the moisture, and then turn on the power after drying out.

6.2 Clear the Printer

As dirt, foreign matter, sticky substance and other pollutants which attached in the printer will lower the print quality, please follow the notes below to clear the printer when it is polluted.

Notes:

1. Please turn off the power before clearing.
2. Please remove the paper roll if it has been installed.
3. As the print head will be heated, please turn off the power and wait for 2 to 3 minutes before clearing the printer.
4. Do not scratch the print head by hard or sharp objects in case of permanent damage.

6.2.1 Clear the Print Head

1. Remove the weighing pan and open the cover-opening lever to release the print head.
2. Clear the print head from its center to the surroundings by the alcohol swab.
3. After it is clean and dry, wait for two minutes, and then close the print head after the alcohol is volatilized.
4. Cover the weighing pan.

6.2.2 Clear the Sensor, Platen and Paper Path

1. Remove the weighing pan and use dry cotton cloth or swab to clear the dirt.
2. Attach the cotton cloth or swab with alcohol to clear sticky substances or other pollutants.
3. Do not use the printer immediately after clearing its components. Use it after one to two minutes when the printer is completely dry.

Appendix I Barcode Encoding Rule Table

No.	Dept.	Article	Total Price	Weight	Checksum
00~09: Ean13 barcode, first two digits refer to department number:					
00	DD(2)	IIIIIIIIII(10)	X	X	C
01	DD(2)	IIIIII(6)	PPPP(4)	X	C
02	DD(2)	IIIII(5)	PPPPP(5)	X	C
03	DD(2)	IIII(4)	PPPPPP(6)	X	C
04	DD(2)	III(3)	PPPPPPP(7)	X	C
05	DD(2)	IIIIII(6)	X	W.WWW(4)	C
06	DD(2)	IIIIII(6)	X	WW.WW(4)	C
07	DD(2)	IIIII(5)	X	WW.WWW(5)	C
08	DD(2)	IIIII(5)	X	WWWW.W(5)	C
09	DD(2)	IIIII(5)	X	WWWWW(5)	C
10~19: Ean13 barcode, first two digits are fixed numbers:					
10	20(2)	IIIIIIIIII(10)	X	X	C
11	21(2)	IIIIII(6)	PPPP(4)	X	C
12	22(2)	IIIII(5)	PPPPP(5)	X	C
13	23(2)	IIII(4)	PPPPPP(6)	X	C
14	24(2)	III(3)	PPPPPPP(7)	X	C
15	25(2)	IIIIII(6)	X	W.WWW(4)	C
16	26(2)	IIIIII(6)	X	WW.WW(4)	C
17	27(2)	IIIII(5)	X	WW.WWW(5)	C
18	28(2)	IIIII(5)	X	WWWW.W(5)	C
19	29(2)	IIIII(5)	X	WWWWW(5)	C
20: Do not print any barcode					
21~29: Ean13 barcode, first one digit refers to department number:					
21	D(1)	IIIIIII(7)	PPPP(4)	X	C
22	D(1)	IIIIII(6)	PPPPP(5)	X	C
23	D(1)	IIIII(5)	PPPPPP(6)	X	C
24	D(1)	IIII(4)	PPPPPPP(7)	X	C
25	D(1)	IIIIIII(7)	X	W.WWW(4)	C
26	D(1)	IIIIIII(7)	X	WW.WW(4)	C
27	D(1)	IIIIII(6)	X	WW.WWW(5)	C
28	D(1)	IIIIII(6)	X	WWWW.W(5)	C
29	D(1)	IIIIII(6)	X	WWWWW(5)	C
30~35: 18 digits barcode, first one digit refers to department number:					
30&33	D(1)	IIIIII(6)	PPPPP(5)	WW.WWW(5)	C
31&34	D(1)	IIIIII(6)	PPPPP(5)	WWWW.W(5)	C
32&35	D(1)	IIIIII(6)	PPPPP(5)	WWWWW(5)	C

No.	Dept.	Article	Unit Price	Weight	Checksum
40~45： 18 digits barcode, first one digit refers to department number:					
40&43	D(1)	IIIIII(6)	UUUUU(5)	WW． WWW(5)	C
41&44	D(1)	IIIIII(6)	UUUUU (5)	WWWW.W(5)	C
42&45	D(1)	IIIIII(6)	UUUUU (5)	WWWWW(5)	C

No.	Dept.	Article	Total Price	Weight	Checksum
46： 18 digits barcode					
46	DD(2)	IIIIII(6)	PPPPP(5)	WWWWW(5)	X
50~55: 8 digits barcode					
50	X	IIIIIII(7)	X	X	C
51	D(1)	IIIIII(6)	X	X	C
52	DD(2)	IIIII(5)	X	X	C
53	X	IIIIIIII(8)	X	X	X
54	D(1)	IIIIIII(7)	X	X	X
55	DD(2)	IIIIII(6)	X	X	X

No.	Dept.	LF Code	Batch	Discount	Weight
36-38: 18 digits barcode, first one digit refers to department number, used for fresh food batches management					
36	D(1)	LLLLLL(6)	BBBB(4)	RR(2)	WW.WWW(5)
37	D(1)	LLLLLL(6)	BBBB(4)	RR(2)	WWWW.W(5)
38	D(1)	LLLLLL(6)	BBBB(4)	RR(2)	WWWWW(5)

No.	Dept.	LF Code	Batch	Discount	Weight	Checksum
66~68： 18 digits barcode, used for fresh food batches management						
66	D(1)	LLLLL(5)	BBBB(4)	RR(2)	WW.WWW(5)	C
67	D(1)	LLLLL(5)	BBBB(4)	RR(2)	WWWW.W(5)	C
68	D(1)	LLLLL(5)	BBBB(4)	RR(2)	WWWWW(5)	C

No.	Dept.	Article	Total/Unit Price	Weight	Checksum
60~65： ISBN barcode, one of the 18 digits barcode types					
60	D(1)	IIIIII(6)	PPPPP(5)	WW.WWW(5)	C
61	D(1)	IIIIII(6)	PPPPP(5)	WWWW.W(5)	C
62	D(1)	IIIIII(6)	PPPPP(5)	WWWWW(5)	C
63	D(1)	IIIIII(6)	UUU.UU(5)	WW.WWW(5)	C
64	D(1)	IIIIII(6)	UUU.UU(5)	WWWW.W(5)	C
65	D(1)	IIIIII(6)	UUU.UU(5)	WWWWW(5)	C

No.	Dept.	Article	Amount/ Weight	Total/Unit Price	Checksum
79~85，87：18 digits barcode					
79	DD	IIIIII(6)	WW.WWW	PPPPP	X
80	D	IIIIII(6)	WW.WWW	PPPPP	C
81	D	IIIIII(6)	WWWW.W	PPPPP	C
82	D	IIIIII(6)	WWWWW	PPPPP	C
83	D	IIIIII(6)	WW.WWW	UUU.UU	C
84	D	IIIIII(6)	WWWW.W	UUU.UU	C
85	D	IIIIII(6)	WWWWW	UUU.UU	C
87	DD	IIIII(5)	WW.WWW	PPPPP	C

No.	Dept.	Article	Total Price	Amount/ Weight	Unit Price	Checksum
90~95: 18 digits barcode, first two digits refer to department number						
90	DD(2)	IIIIII(6)		WW.WWW	UU.UU(4)	C
91	DD(2)	IIIIII(6)		WWWW.W	UU.UU(4)	C
92	DD(2)	IIIIII(6)		WWWWW	UU.UU(4)	C
93	D(1)	IIIIII(6)	PPPPP(5)		UUU.UU(5)	C
94	DD(2)	IIIII(5)	PPPPP(5)	WW.WWW		C
95	DD(2)	IIIIII(6)		WWWWW	UU.UU(4)	C
No.	**Dept.**	**Article**	**Amount/ Weight**	**Total Price**	**Unit Price**	**Checksum**
96	DD(2)	IIIIII(6)	W.WWW	PPPPP(5)		**C**
No.	**Dept.**	**Article**	**Total Price**	**Amount/ Weight**	**Unit Price**	**Checksum**
97	DD(2)	IIII(4)	PPPPPP(6)	WW.WWW		**C**
No.	**Dept.**	**Article**	**Unit Price**	**Amount/ Weight**	**Total Price**	**Checksum**
98	DD(2)	IIIII(5)	UUUUU(5)	WW.WWW		**C**

Definition of letters in the table：

C: CHECKSUM D: Department Number 2: fixed number “2” I: Article Number

L: LF Code P: Price U: Unit Price R: Discount W: Weight X: NONE

- Ean13 barcode = DEPARTMENT+ ARTICLE+ [TOTAL PRICE]+ [WEIGHT]+CHECKSUM
  P.s: “[ ]” means this item does not exist in some encoding rules
- For Ean13 barcode, if the price barcode is used, the barcode type is often 2(or 22); while if the weight bar code is used, the barcode type is often 7(or 27).
- CHECKSUM is automatically calculated by the scale, and users do not need to edit this item on Synctool.
- The difference between barcode 30-32 and barcode 33-35 is that their CHECKSUM calculation method is different.
- The difference between barcode 40-45 and barcode 30-35 is that the price in barcode 30-35 is Total Price, while in barcode 40-45 it is Unit Price.
- Barcode 36-38, and barcode 66~68 are used for fresh food batches management. The batch number is filled in the article number field, and the article number is filled in the LF Code field.
- Barcode 60-65 are ISBN barcode。
- Calculation method of the check code Z for EAN13 barcode：
  (sum of even digits * 3)+ sum of odd digits + Z = multiples of 10
- Calculation method of the check code Z for 18 barcode:
  Method 1. Same as EAN13 (Barcode 30-32, 40-42)
  Method 2. (sum of odd digits * 3) + sum of even digits + Z = multiples of 10
  (Barcode： 33-35, 43-45)