# Scale Management Platform

# Operation Manual


| | |
|---|---|
| **Manufacturer: Xiamen Hanin Co.,Ltd.** | |
| ADD： | No.96, Rongyuan Road, Tong'an District, Xiamen, Fujian, China 361100 |
| Web: | https://www.hprt.com |

# Contents


Chapter 1 Label Scale Management Software ..... 1
1.1 Connecting the Computer and Scale ..... 1
1.1.1 Login ..... 1
1.1.2 Device ..... 2
1.2 Editing of Individual Product Information ..... 4
1.2.1 Function Operation ..... 4
1.2.2 Edit Single Item ..... 5
1.3 Department Setting ..... 8
1.4 Weighing Setting ..... 8
1.5 Barcode Setting ..... 9
1.6 Parameter Setting ..... 10
1.6.1 Parameter Function ..... 10
1.6.2 Parameter Details ..... 14
1.7 Upload, Download, and Delete ..... 22
1.7.1 Upload ..... 22
1.7.2 Download ..... 23
1.7.3 Download Selected ..... 24
1.7.4 Delete ..... 26
1.8 Import/Export Data ..... 27
1.8.1 Data Import ..... 27
1.8.2 Data Export ..... 28
1.9 Firmware Update ..... 29
1.9.1 Single Device Update ..... 29
1.9.2 Multi Device Update ..... 30
1.10 Font Update ..... 31
1.11 Update AD Module ..... 32
1.12 Update Printer Module ..... 33
1.13 Update Android Program ..... 34
1.14 System Download ..... 34
1.15 Logo ..... 35
1.16 ADIMG and Video ..... 36
Chapter 2 Tag Editing and Download ..... 38
2.1 Software Open Interface ..... 38
2.2 Menu File List ..... 38

2.3 Introduction to Label Editing Software ..... 38
2.4 Common Label Editing ..... 38
2.5 Cumulative Label Editing ..... 40
2.6 Label Alignment ..... 41
2.7 Type Selection of Label Components ..... 43
2.7.1 Component Selection ..... 43
2.7.2 Component Attribute Editing ..... 44
2.7.3 How to Edit Custom Text ..... 44
2.7.4 After completing the label editing, click Save or Save As. ..... 45
2.8 Download Label ..... 45
Chapter 3 Hotkey Editing and Hotkey Insert Installation ..... 47
3.1 Common Hotkey Editing ..... 47
3.1.1 Creating a Hotkey Table ..... 47
3.1.2 Rename Group and Hotkey Table ..... 49
3.1.3 Edit Hotkeys ..... 50
3.1.4 Function Key ..... 54
3.1.5 Font Setting ..... 54
3.1.6 Background Setting ..... 55
3.1.7 Hotkey Deletion ..... 56
3.2 Hotkey Display Name or Fresh Code+Name ..... 57
3.3 Download and Upload Hotkeys ..... 59
3.3.1 Download Hotkeys ..... 59
3.3.2 Upload Hotkeys ..... 60
3.4 Import and Export Hotkeys ..... 60
3.4.1 Import Hotkeys ..... 60
3.4.2 Export Hotkeys ..... 61
3.5 Printing Hotkeys ..... 62
3.6 Installation of Hotkey Inserts ..... 63
3.6.1 Cut the printed hotkey insert along the outer border. ..... 63
3.6.2 Insert the cut hotkey insert from the bottom. ..... 63
Appendix I Barcode Code Comparison Table ..... 64
APPENDIXII CODE AND GRAVITY ACCELERATION COMPARISON TABLE FOR MAJOR CITIES IN CHINA ..... 72


# Chapter 1 Label Scale Management Software

## 1.1 Connecting the Computer and Scale

Note: Set an IP address on the same network segment as the computer on the scale.


### 1.1.1 Login

Connect the scale to the computer via Ethernet cable, run the label scale management software and click "Login" to enter the main interface. The username is 'Admin' and the password is '123'.

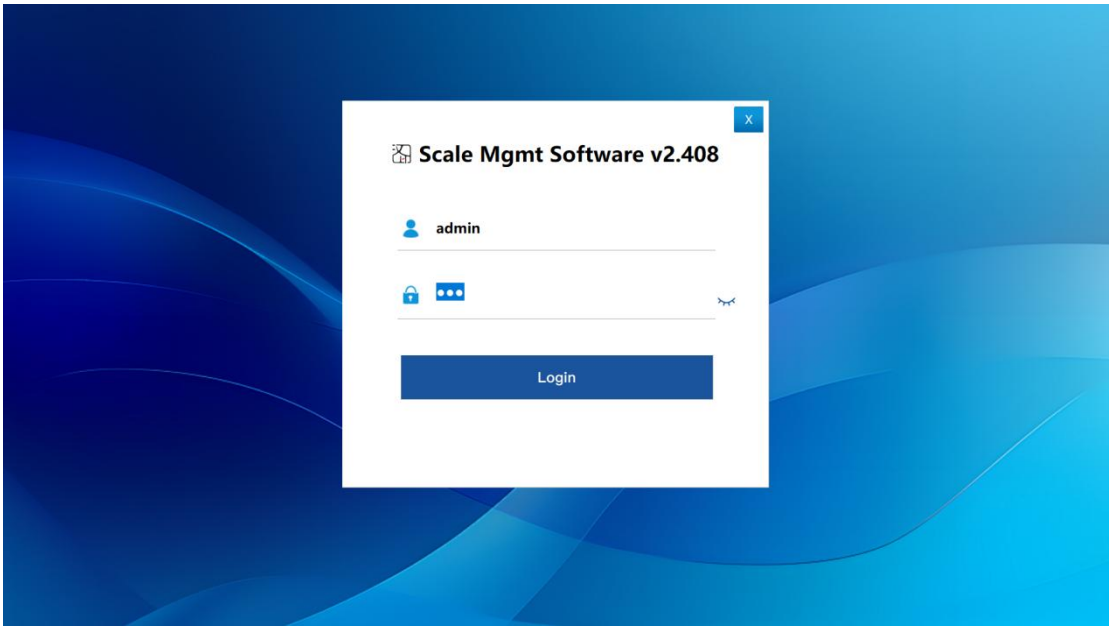


## 1.1.2 Device


Click "Device" on the main interface.

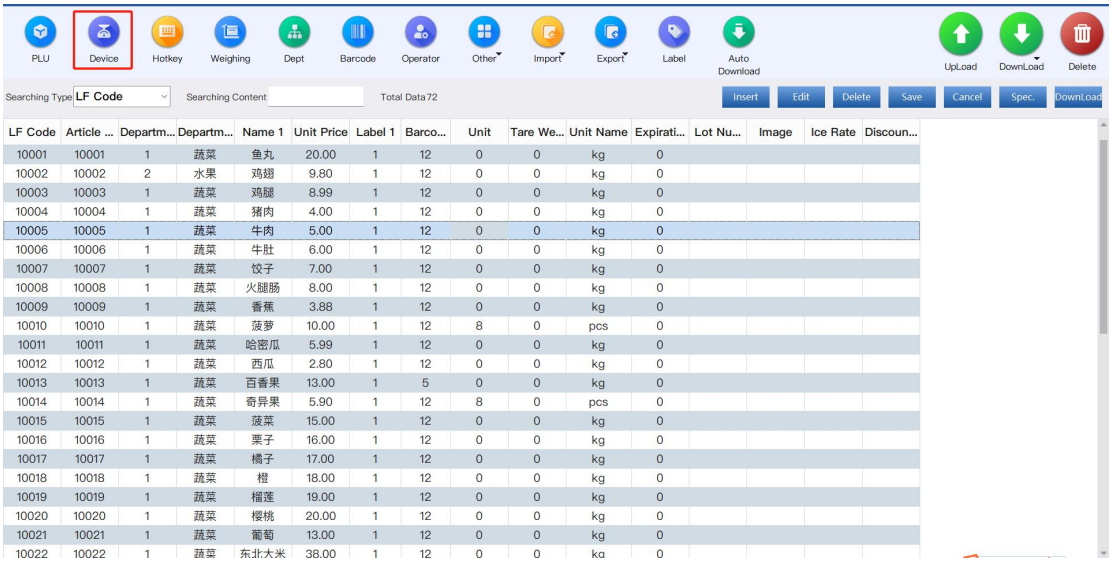



| LF Code | Article ... | Departm... | Departm... | Name 1 | Unit Price | Label 1 | Barco... | Unit | Tare We... | Unit Name | Expirati... | Lot Nu... | Image | Ice Rate | Discoun... |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 10001 | 10001 | 1 | 蔬菜 | 鱼丸 | 20.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10002 | 10002 | 2 | 水果 | 鸡翅 | 9.80 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10003 | 10003 | 1 | 蔬菜 | 鸡腿 | 8.99 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10004 | 10004 | 1 | 蔬菜 | 猪肉 | 4.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10005 | 10005 | 1 | 蔬菜 | 牛肉 | 5.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10006 | 10006 | 1 | 蔬菜 | 牛肚 | 6.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10007 | 10007 | 1 | 蔬菜 | 饺子 | 7.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10008 | 10008 | 1 | 蔬菜 | 火腿肠 | 8.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10009 | 10009 | 1 | 蔬菜 | 香蕉 | 3.88 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10010 | 10010 | 1 | 蔬菜 | 菠萝 | 10.00 | 1 | 12 | 8 | 0 | pcs | 0 | | | | |
| 10011 | 10011 | 1 | 蔬菜 | 哈密瓜 | 5.99 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10012 | 10012 | 1 | 蔬菜 | 西瓜 | 2.80 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10013 | 10013 | 1 | 蔬菜 | 百香果 | 13.00 | 1 | 5 | 0 | 0 | kg | 0 | | | | |
| 10014 | 10014 | 1 | 蔬菜 | 奇异果 | 5.90 | 1 | 12 | 8 | 0 | pcs | 0 | | | | |
| 10015 | 10015 | 1 | 蔬菜 | 菠菜 | 15.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10016 | 10016 | 1 | 蔬菜 | 栗子 | 16.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10017 | 10017 | 1 | 蔬菜 | 橘子 | 17.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10018 | 10018 | 1 | 蔬菜 | 橙 | 18.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10019 | 10019 | 1 | 蔬菜 | 榴莲 | 19.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10020 | 10020 | 1 | 蔬菜 | 樱桃 | 20.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10021 | 10021 | 1 | 蔬菜 | 葡萄 | 13.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10022 | 10022 | 1 | 蔬菜 | 东北大米 | 38.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |


1.1.3. When the device management interface appears, right-click on the blank space and select "Add" to add the device. As shown in the following figure:

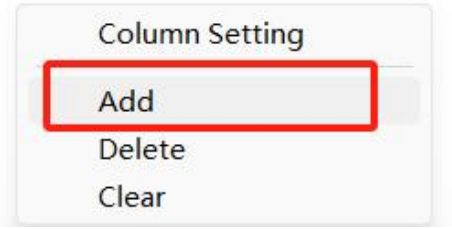

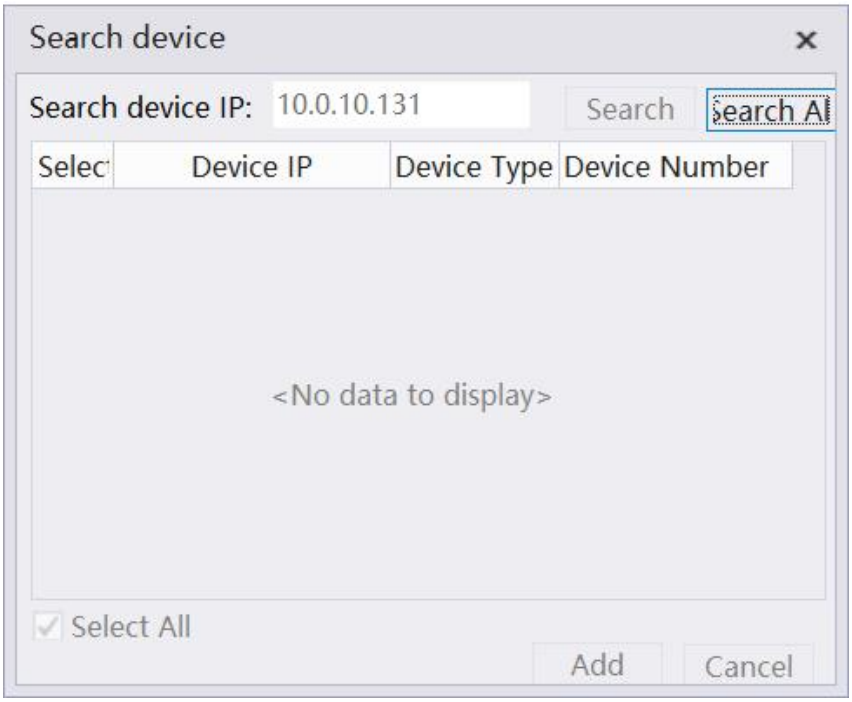For example, the IP address is: 192.168.10.131; In the pop-up dialog box, enter "192.168.10.131" in the "Search device IP" column, and then click "Search All" to search for all device addresses connected to the computer. Select the device you want to add and click "Add" to select the desired device, as shown in Figure 1. If the status bar displays "Online", it means the connection is successful; If the status bar shows "Offline", it means the network is not working, as shown in Figure 2. Devices that have successfully connected can start uploading and downloading materials.



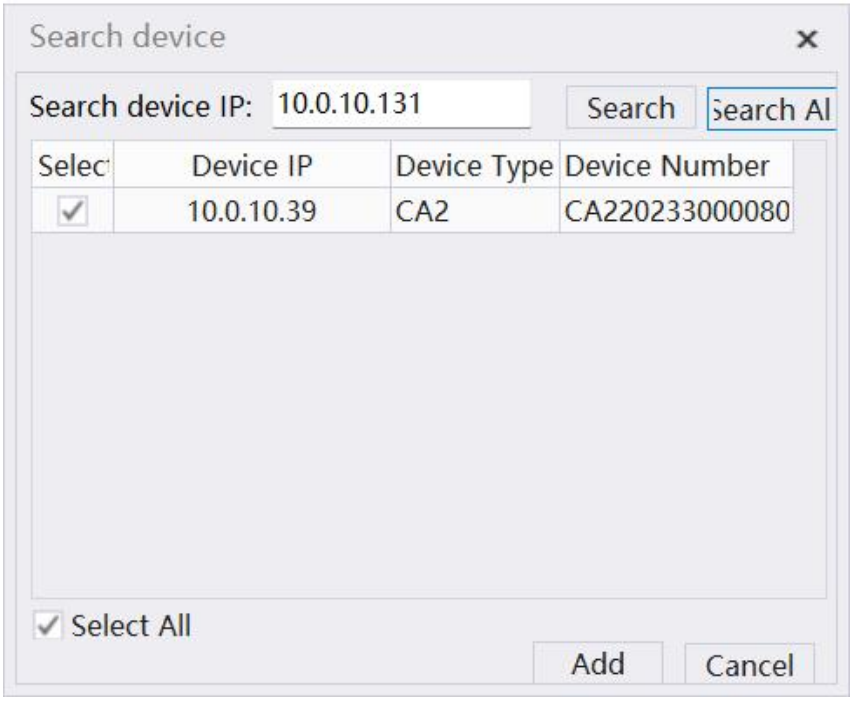


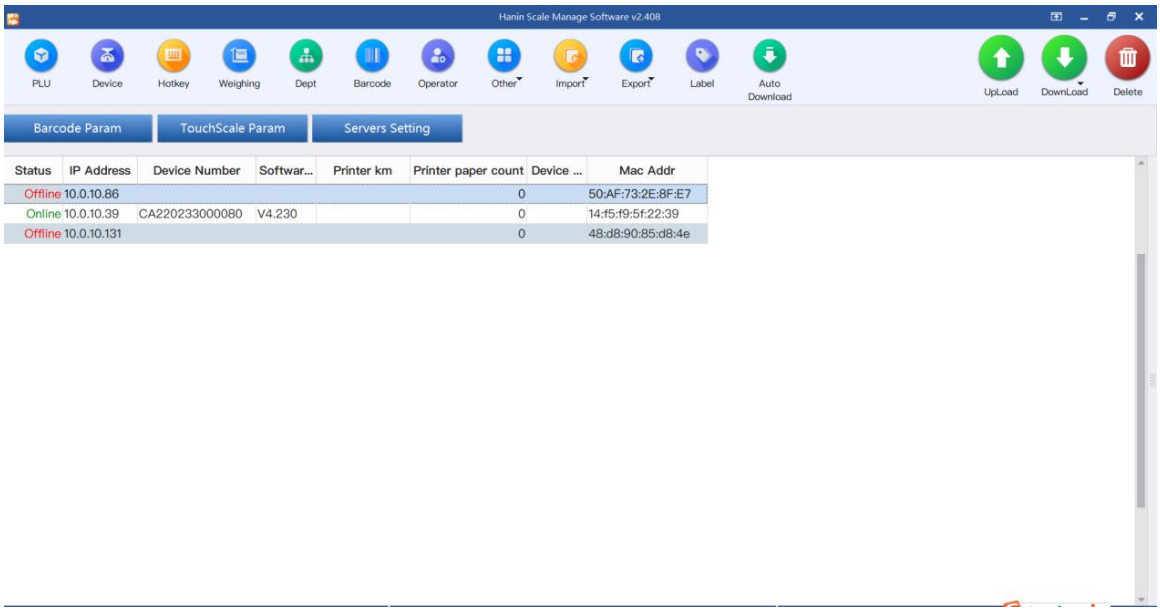
# 1.2 Editing of Individual Product Information

## 1.2.1 Function Operation

The interface after importing item information is shown in the following figure.

The item page supports main functions such as inserting, editing, deleting, saving, canceling, viewing detailed information, downloading, etc.

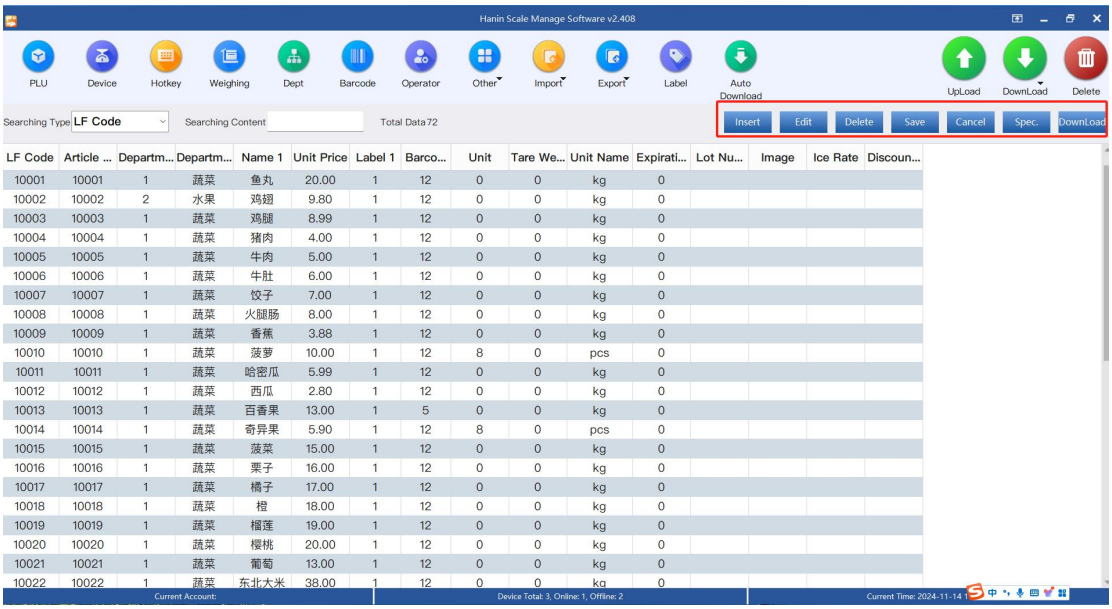



To modify the product information, right-click on the product line and in the pop-up dialog box:

- Click 'Add' to add empty items.
- Click 'Delete' to delete the selected item.
- Click 'Select All' to select all items.
- Click 'Clear' to clear item information.

If multiple items need to be modified simultaneously, you can first select the multiple items that need to be modified and click "Batch Editing";


To send the product information to the weighing device, select "Download Selected".

To delete the images of a single item, you can select "Del Select Image". To delete all, select "Del All Image".

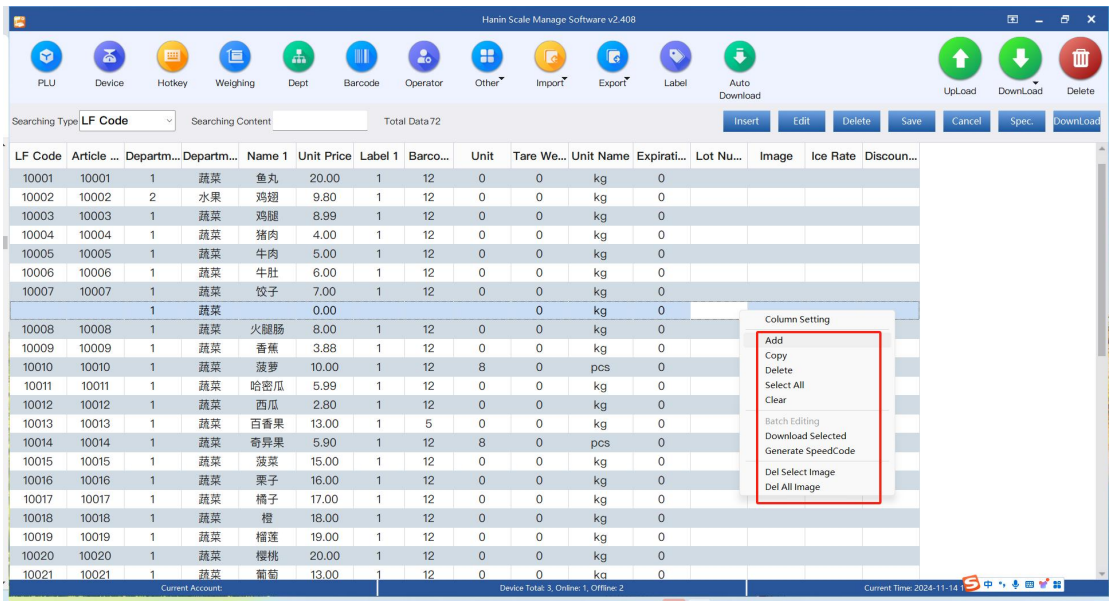



## 1.2.2 Edit Single Item


If you want to edit a certain item, the default search type is LF code. Enter the fresh food code in the searching content, for example, the fresh food code is 10011. The item list will filter out the items of 10011. Clicking on the "Spec." button in the upper right corner will expand all the information of 10011. Click "Edit" to enter the editing mode.

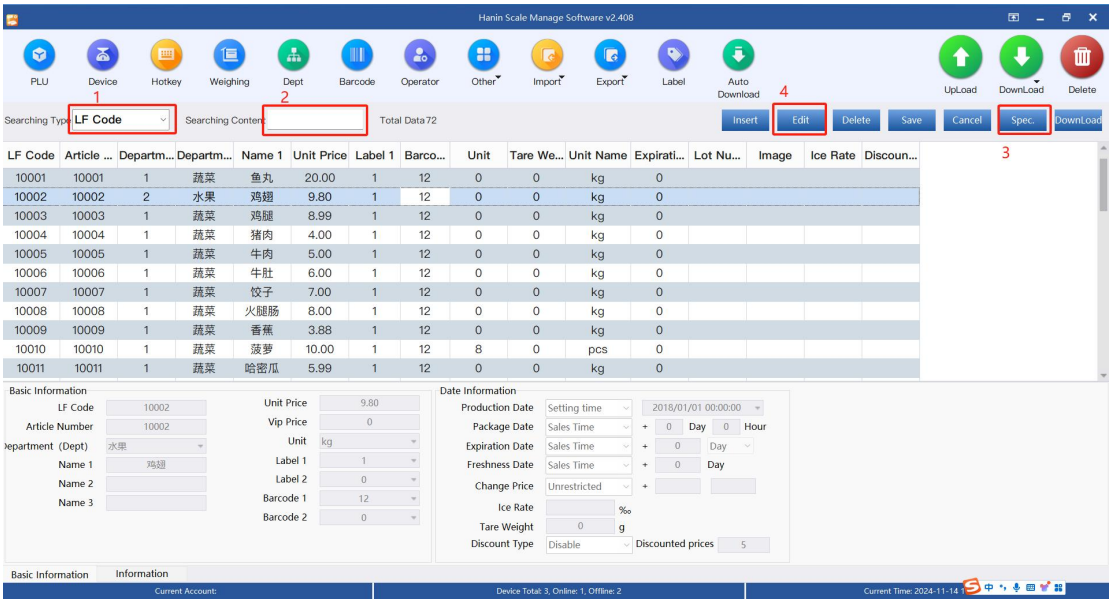


Click on the information in the bottom left corner of the item details to edit the text information of the item.

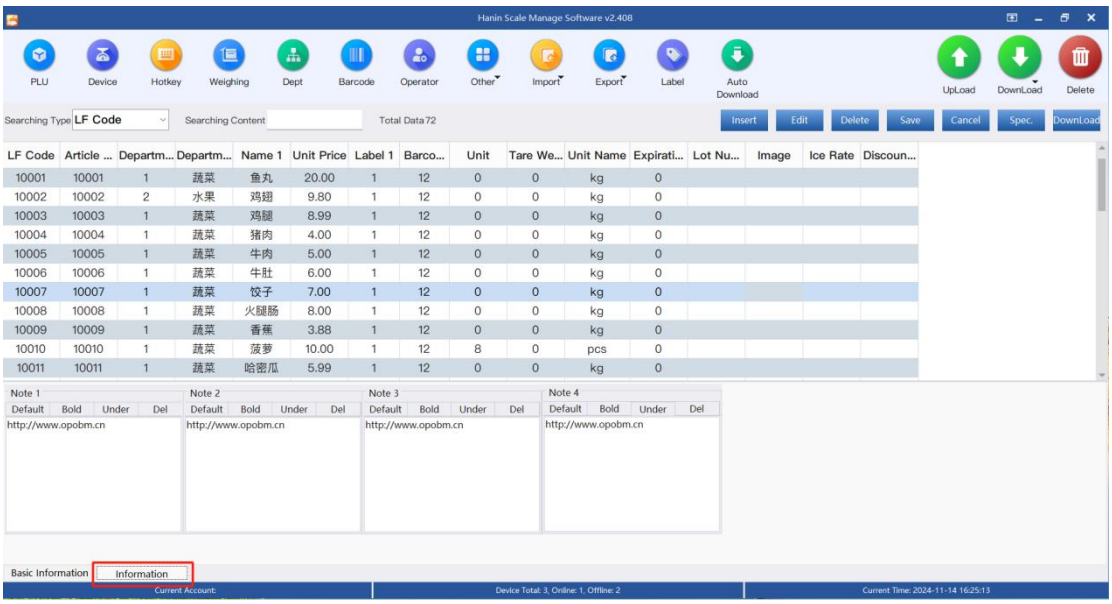



After completing the modifications, click "Save" in the upper right corner to indicate that all changes have been saved and exit the editing mode. Finally, clicking on the details information will close the item's details information.

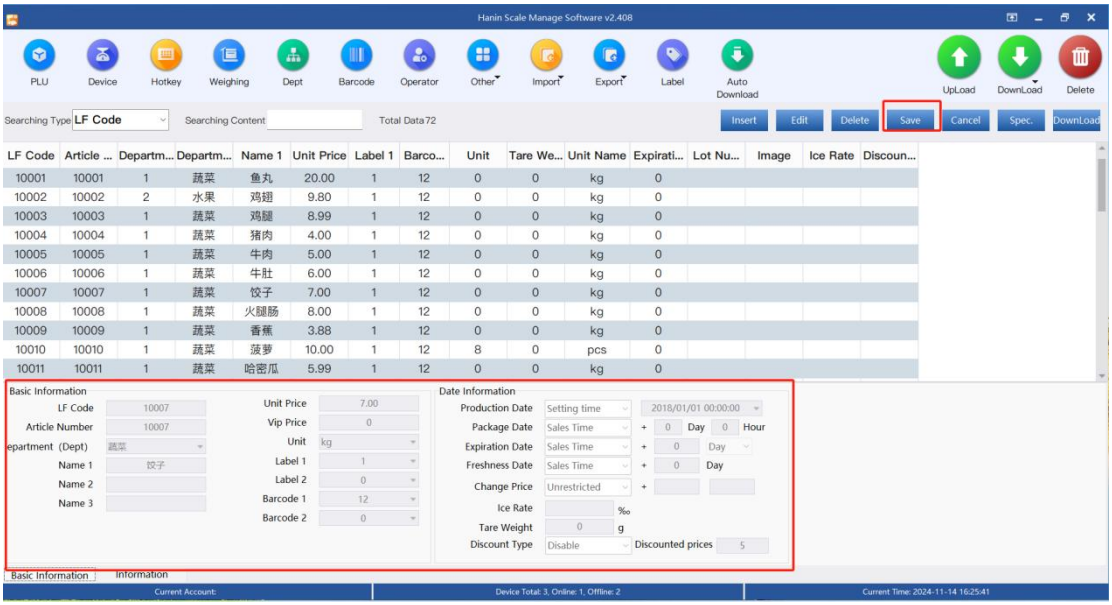


1.2.5. Column Setting. Right click on the unit price at any position on the product interface, select "Column Setting" in the pop-up dialog box to choose the desired field, and click "OK" to exit after setting up.

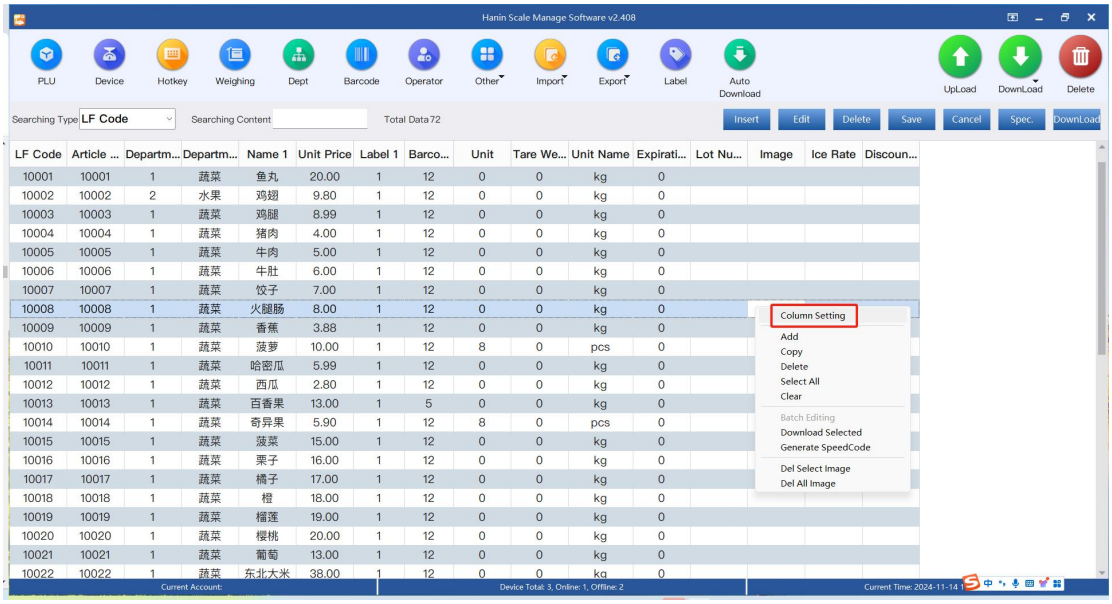

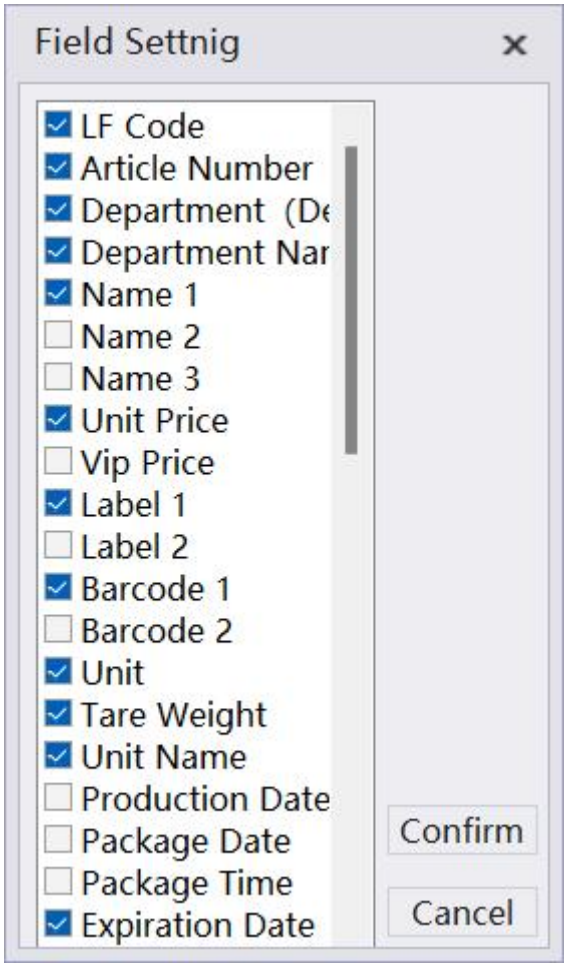
## 1.3 Department Setting

Click "Dept" in the main interface to edit, supporting custom department names.

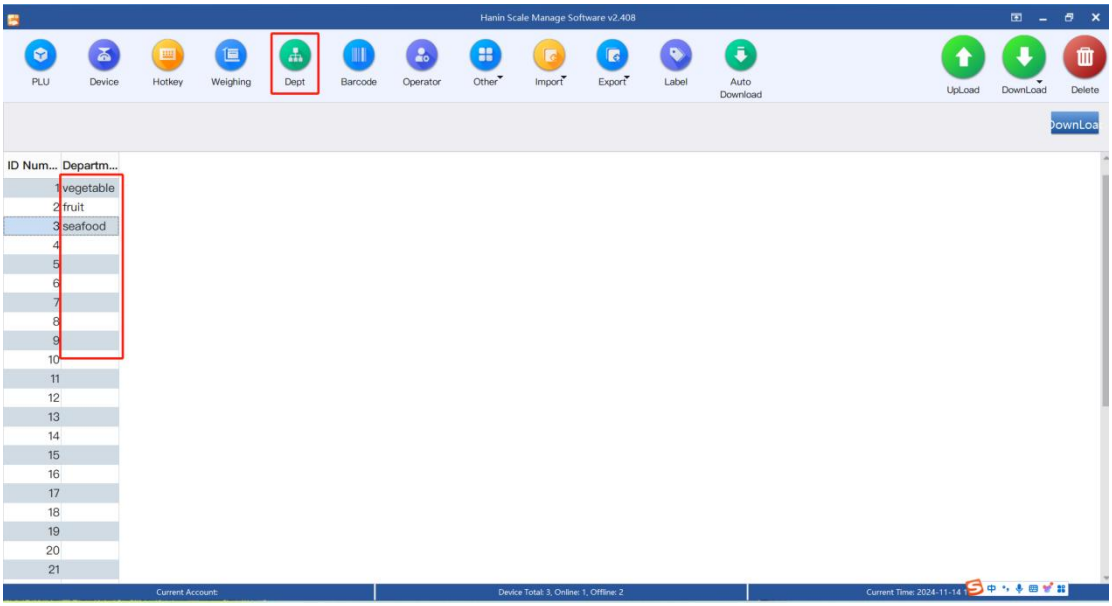


## 1.4 Weighing Setting


Click on the "Weighing" button on the main interface to enter a custom name.

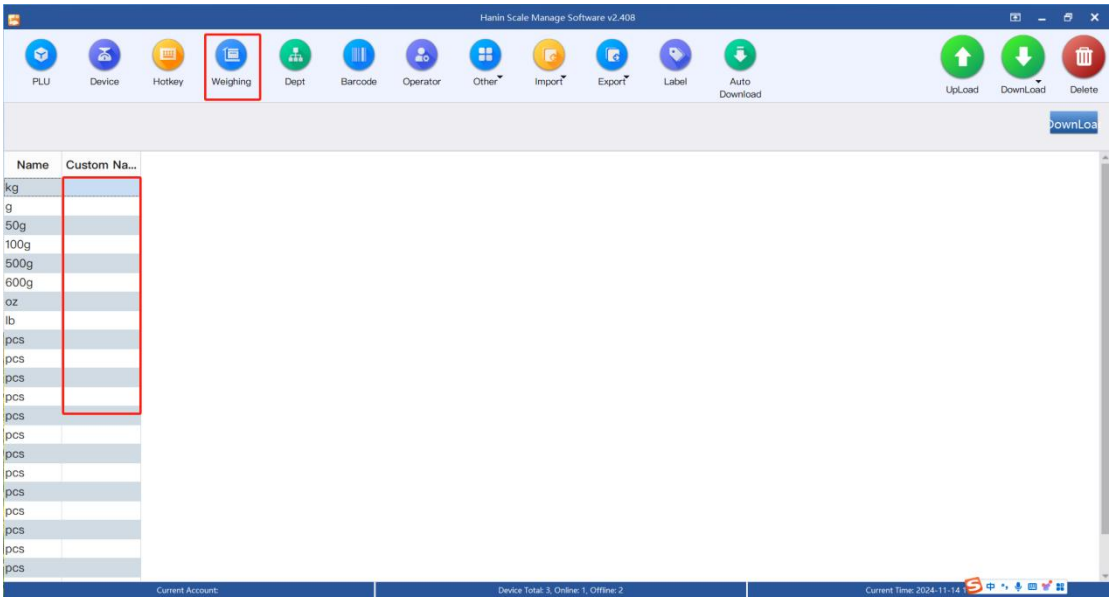

# 1.5 Barcode Setting

Barcode settings are divided into fixed rule barcode settings and custom barcode settings.


Double click on item Barcode 1 → select barcode number (1-99) [Note: Barcodes 1-99 are fixed barcodes, and the fixed barcode coding rules are shown in Appendix I Barcode Coding Comparison Table, as shown in the figure:

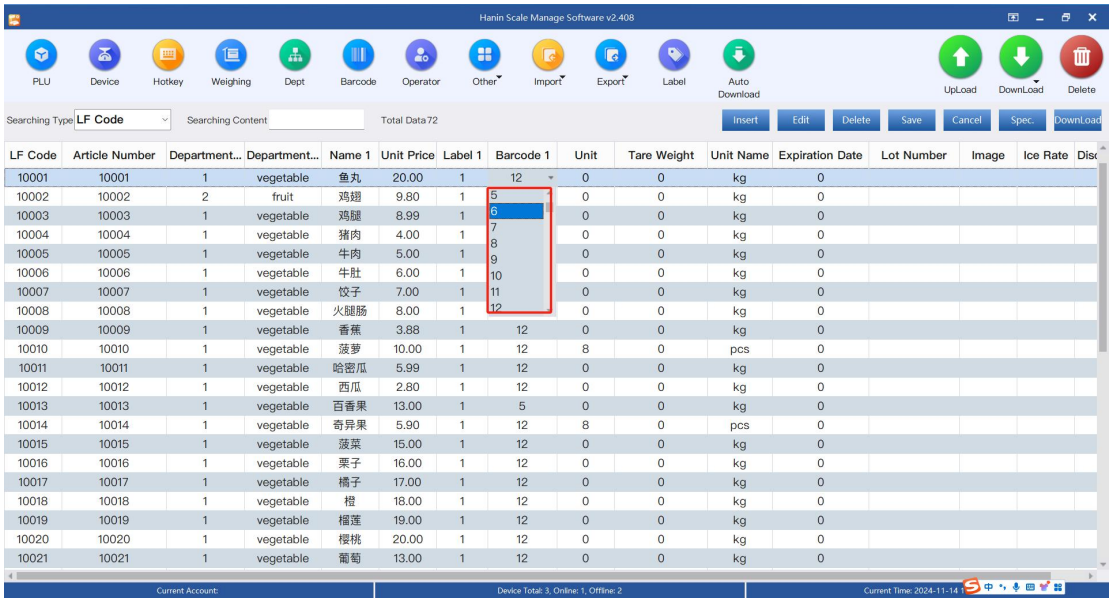


| LF Code | Article Number | Department... | Department... | Name 1 | Unit Price | Label 1 | Barcode 1 | Unit | Tare Weight | Unit Name | Expiration Date | Lot Number | Image | Ice Rate | Disc |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 10001 | 10001 | 1 | vegetable | 鱼丸 | 20.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10002 | 10002 | 2 | fruit | 鸡翅 | 9.80 | 1 | 5 | 0 | 0 | kg | 0 | | | | |
| 10003 | 10003 | 1 | vegetable | 鸡腿 | 8.99 | 1 | 6 | 0 | 0 | kg | 0 | | | | |
| 10004 | 10004 | 1 | vegetable | 猪肉 | 4.00 | 1 | 7 | 0 | 0 | kg | 0 | | | | |
| 10005 | 10005 | 1 | vegetable | 牛肉 | 5.00 | 1 | 8 | 0 | 0 | kg | 0 | | | | |
| 10006 | 10006 | 1 | vegetable | 牛肚 | 6.00 | 1 | 9 | 0 | 0 | kg | 0 | | | | |
| 10007 | 10007 | 1 | vegetable | 饺子 | 7.00 | 1 | 10 | 0 | 0 | kg | 0 | | | | |
| 10008 | 10008 | 1 | vegetable | 火腿肠 | 8.00 | 1 | 11 | 0 | 0 | kg | 0 | | | | |
| 10009 | 10009 | 1 | vegetable | 香蕉 | 3.88 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10010 | 10010 | 1 | vegetable | 菠萝 | 10.00 | 1 | 12 | 8 | 0 | pcs | 0 | | | | |
| 10011 | 10011 | 1 | vegetable | 哈密瓜 | 5.99 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10012 | 10012 | 1 | vegetable | 西瓜 | 2.80 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10013 | 10013 | 1 | vegetable | 百香果 | 13.00 | 1 | 5 | 0 | 0 | kg | 0 | | | | |
| 10014 | 10014 | 1 | vegetable | 奇异果 | 5.90 | 1 | 12 | 8 | 0 | pcs | 0 | | | | |
| 10015 | 10015 | 1 | vegetable | 菠菜 | 15.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10016 | 10016 | 1 | vegetable | 栗子 | 16.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10017 | 10017 | 1 | vegetable | 橘子 | 17.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10018 | 10018 | 1 | vegetable | 橙 | 18.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10019 | 10019 | 1 | vegetable | 榴莲 | 19.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10020 | 10020 | 1 | vegetable | 樱桃 | 20.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |
| 10021 | 10021 | 1 | vegetable | 葡萄 | 13.00 | 1 | 12 | 0 | 0 | kg | 0 | | | | |

Custom barcode settings [Note: Custom barcodes refer to barcodes after 100 as custom barcodes]

Custom barcode editing: Select a custom barcode, support custom barcode name, set custom barcode type and corresponding value, and the information after the barcode will also be displayed in real-time below the barcode, as shown in the figure:

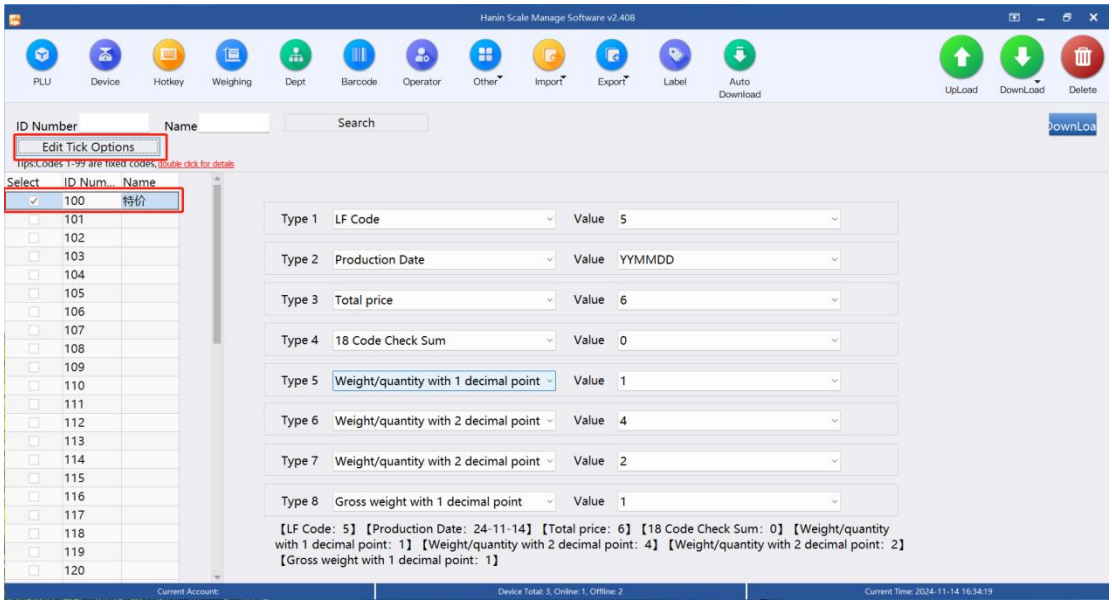



# 1.6 Parameter Setting

## 1.6.1 Parameter Function


Download: means to send the parameters from the scale management software to the scale. Click on the device - select Barcode Param or TouchScale Param (depending on the type of physical scale) - click on "Download" - enter device IP - finally click "Execute".

Note: The parameters in the operation manual are illustrated using a touch scale as an example:

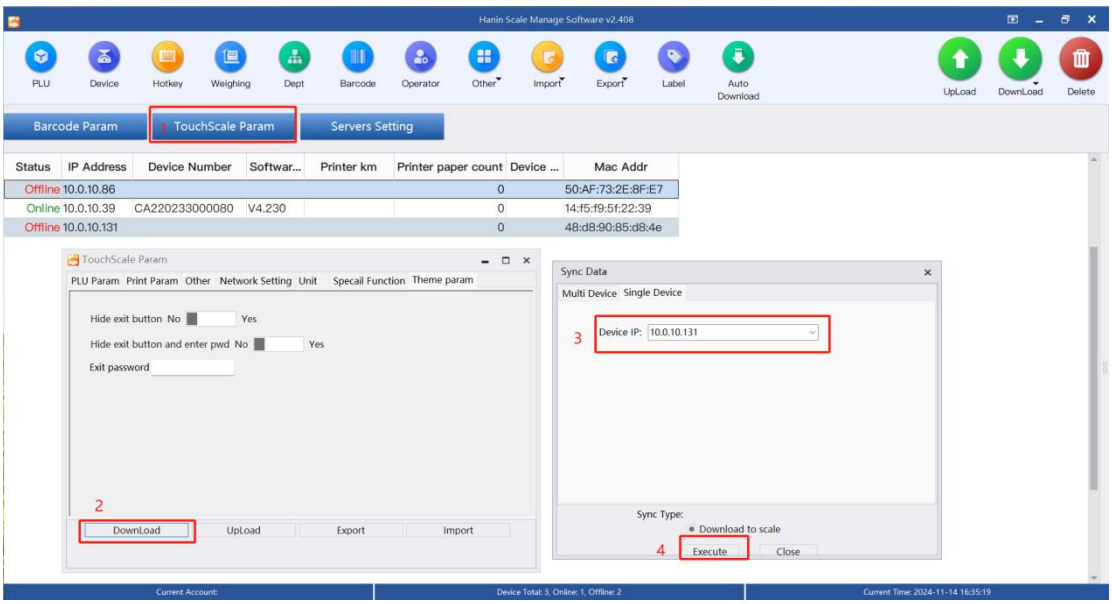



Upload: Indicates receiving parameter information from the scale.

Click on the device - select Barcode Param or TouchScale Param (depending on the type of physical scale) - click on "Upload" - enter device IP - finally click "Execute".

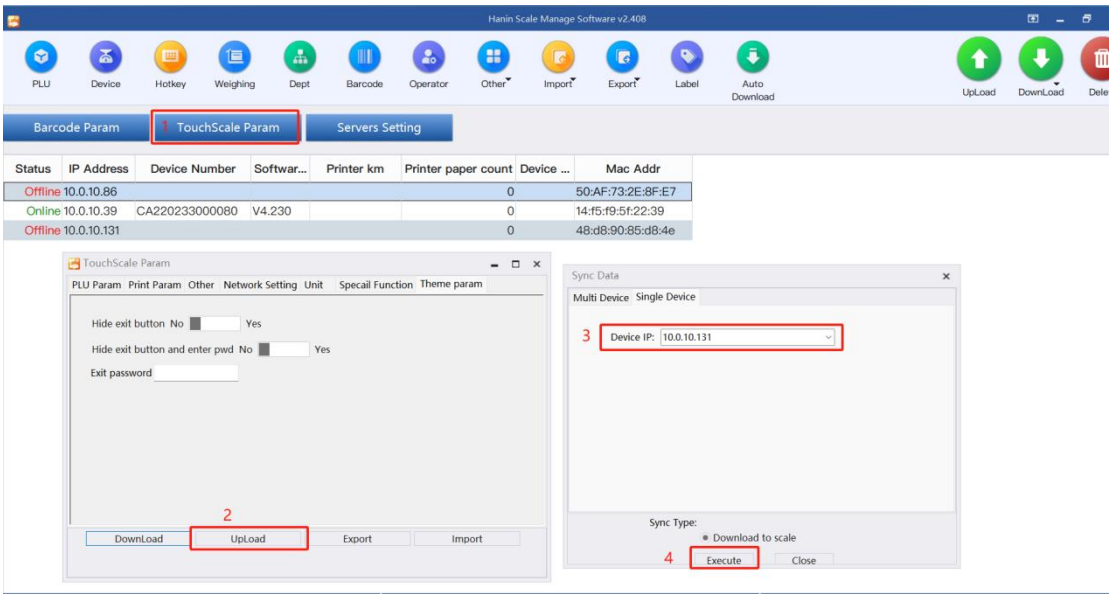


Export: Refers to exporting parameter information to the local computer as a txt file format.

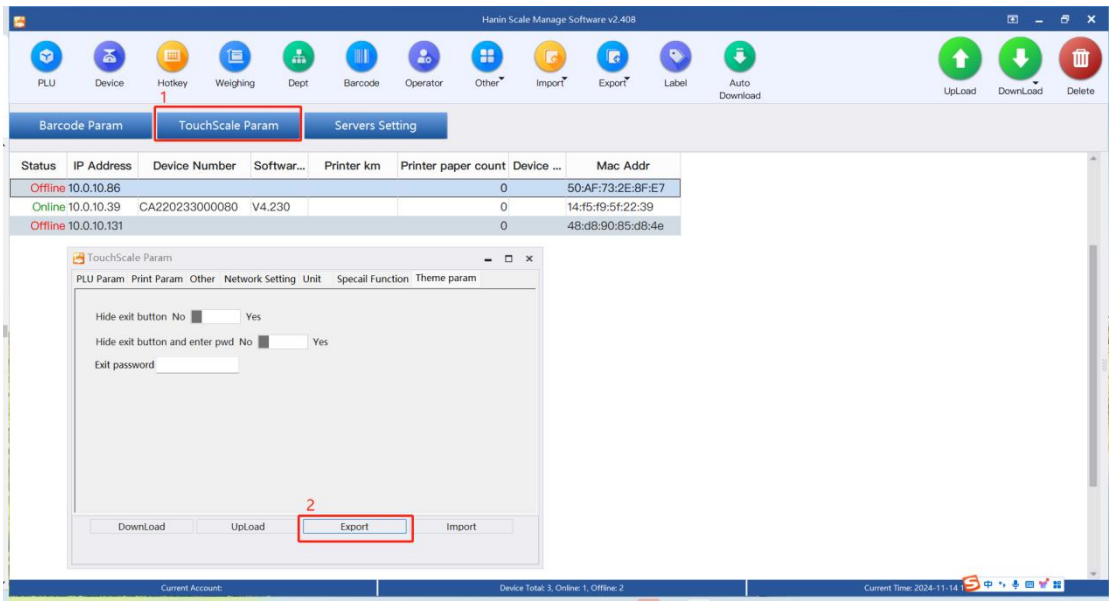




Import: Refers to importing parameter information locally into the software as a txt file format.

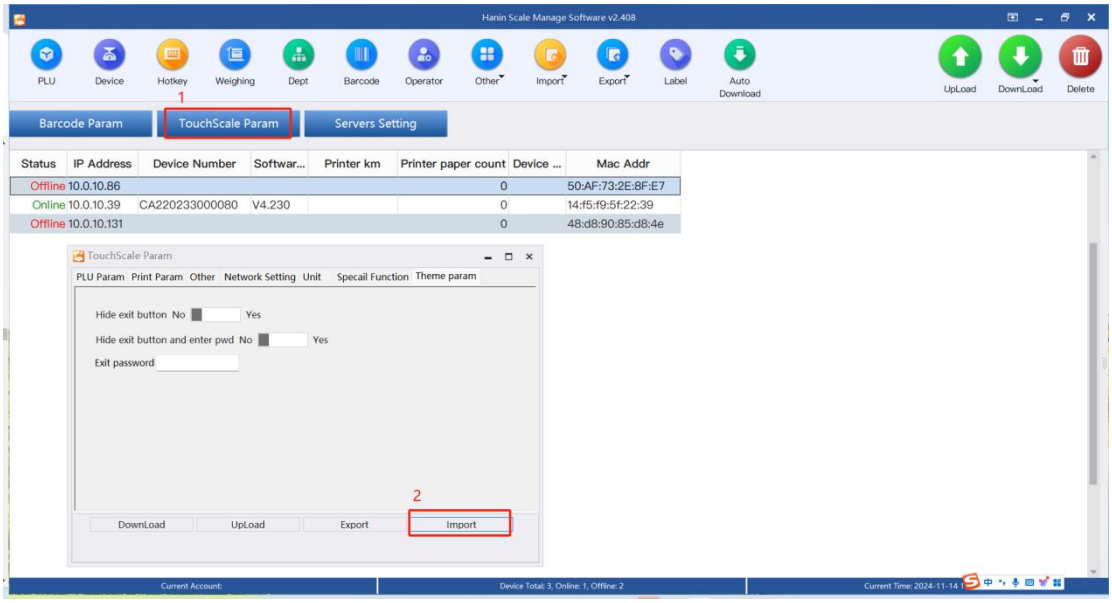


## 1.6.2 Parameter Details

The parameters are divided into PLU parameters, print parameters, others, network setting, specific function, and theme parameters.

### 1.6.2.1 PLU Param

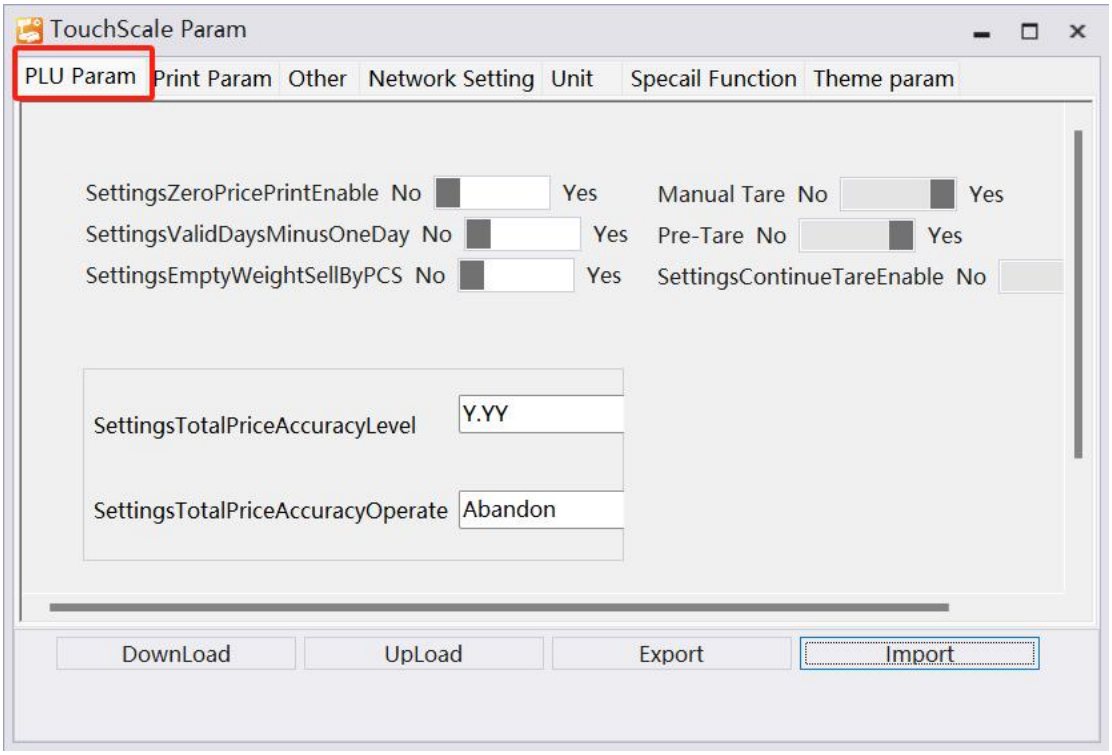


[SettingsZeroPricePrintEnable] : Indicates whether to allow sales when the unit price of the product is 0.

[SettingsValidDaysMinusOneDay] : Indicates whether the shelf life printed on the label needs to be subtracted by one day.

[SettingsEmptyWeightSellByPCS] : Indicates whether to sell per item when the weighed product is 0.


[Manual Tare]: Supports manual setting of peeling.

[Pre-Tare]: The product itself has a tare weight, which means that the tare weight needs to be subtracted during weighing. If it is not enabled, the original tare weight will be ignored.

[SettingsContinueTareEnable]: Sets the weight of peeling more than 2 times in a row during one operation of the peeling function.

[SettingsTotalPriceAccuracyLevel]: Indicates the accuracy of setting the total price of the product. [SettingsTotalPriceAccuracyOperate]: Indicates whether the total price should be rounded, erased, or rounded up after setting the precision. For example, setting the precision to Y.YY, and the total price of the weighed product is 5.67 yuan. If it is set to Round, the final total price of the product is 5.7 yuan. If it is set to Erase, the final total price of the product is 5.6 yuan.

### 1.6.2.2 Print Param

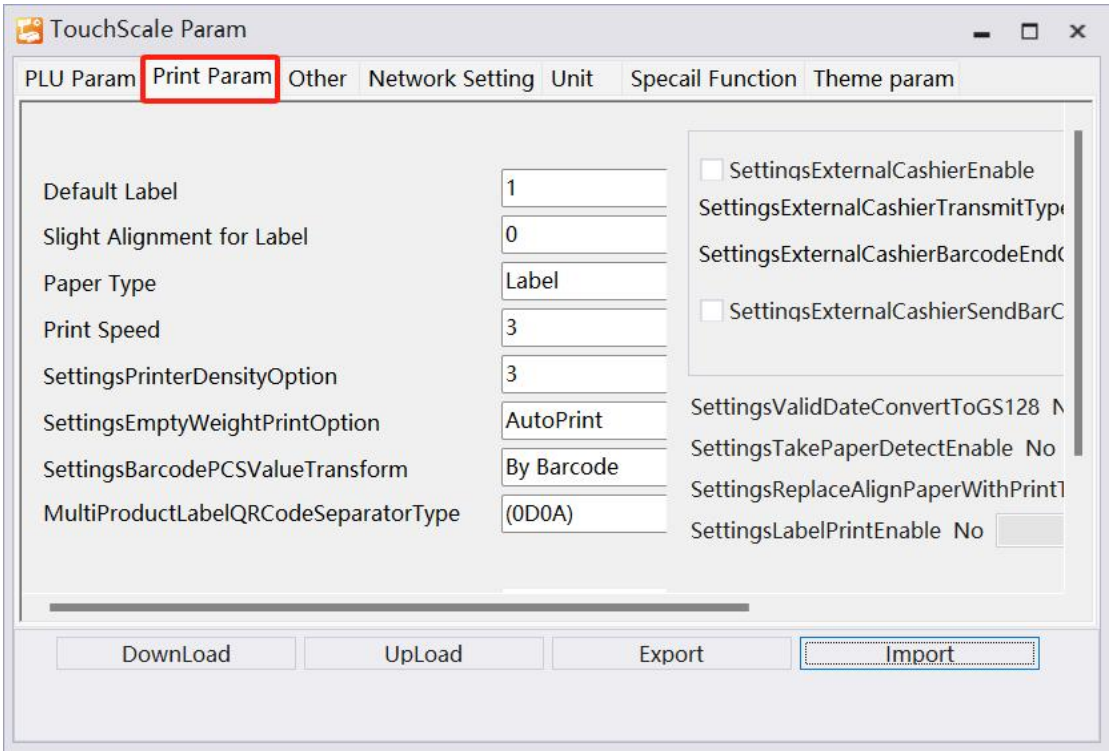


[Default Label]: When the label number of the product is 0, the label with that label number will be printed by default.

[Slight Alignment for Label]: Refers to adjusting the position of the label before and after.

[Paper Type]: There are three types of paper: label, continuous paper, and black label paper.

[Print Speed]: Set the speed for printing labels.

[SettingsPrinterDensityOption]: Set the density for printing labels.

[SettingsEmptyWeightPrintOption]: Indicates whether to print when the weight of the weighing product is less than 40g, supporting manual printing, no printing, and automatic printing.

[SettingsBarcodePCSValueTransform]: When sold per item, the multiple of the quantity in the product barcode.

[MultiProductLabelQRCodeSeparatorType]: When multiple products are printed on one barcode, the delimiter between products supports three ways: line break, space, and customization.

[SettingsValidDateConvertToGS128]: After activation, assemble the EN13 code into a 24 digit GS128 code in format.

[SettingsTakePaperDetectEnable]: If enabled, it means to check if a label has been taken during the weighing process. If not enabled, it means there is no need to check if a label has been taken.


[SettingsReplaceAlighPaperWithPrint]: Indicates whether the test label needs to be printed according to the paper alignment on the page.

[SettingsLabelPrintEnable]: Enables or disables label printer.


[SettingsExternalCashierEnable]: The printer will count every label printed, and supports setting the clearing method for the cumulative number of printed sheets.

[SettingsExternalCashierTransmitType]: When the scale is connected to the cashier, the host settings support local, serial, and network ports. The ending symbol indicates the method of separating barcodes between multiple products when the product is transferred to the cashier. Currently, it supports line breaks (0D0A), line breaks (0A), line breaks (0A), spaces (20), and custom setting of separators.


If **COM** is selected, you need to enter serial port information.

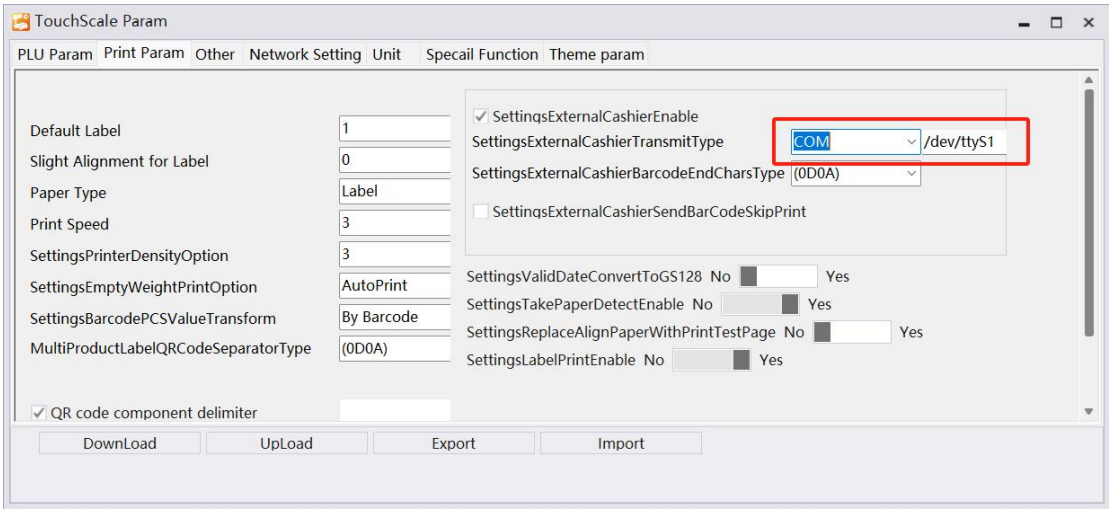


If **WAN** is selected, you need to enter the network port information.

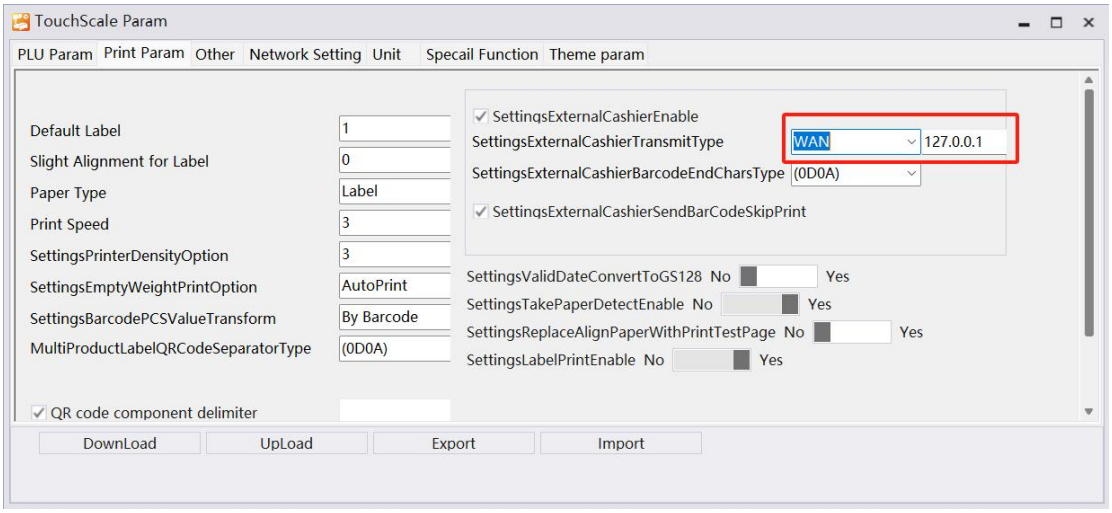


[SettingsExternalCashierBarcodeEndCharsType]: Supports selecting line breaks (0D0A), line breaks (0A), spaces (20), and customization.

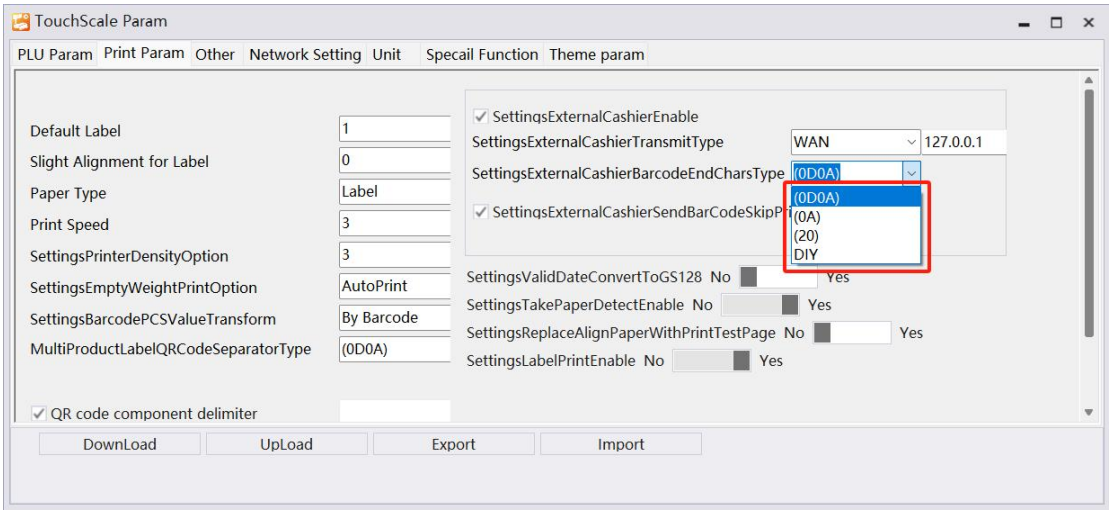


[SettingsExternalCashierSendBarCodeSkipPrint]: In the case of external receiving bank host, set whether to print the product label. (Note: If "SettingsExternalCashierEnable" is not checked, and "SettingsExternalCashierSendBarCodeSkipPrint" is checked, it is also invalid.)


## 1.6.2.3 Other

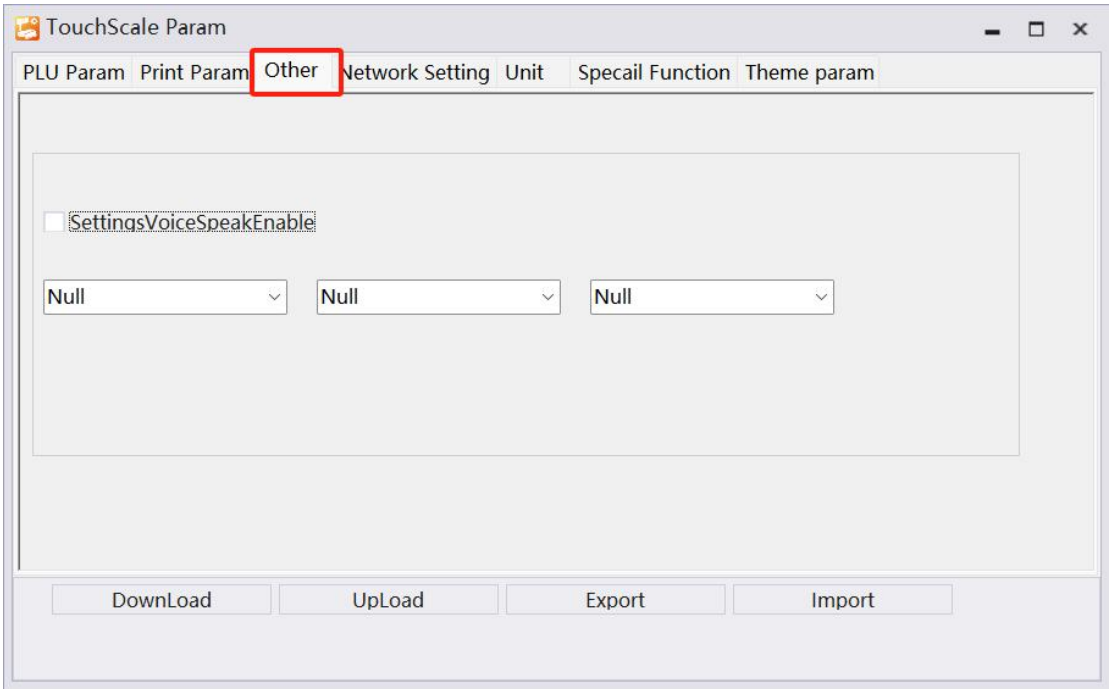


Set the content of the scale voice broadcast, combining unit price, total price, and


weight, and customize the content to be broadcast.

## 1.6.2.4 Network Setting

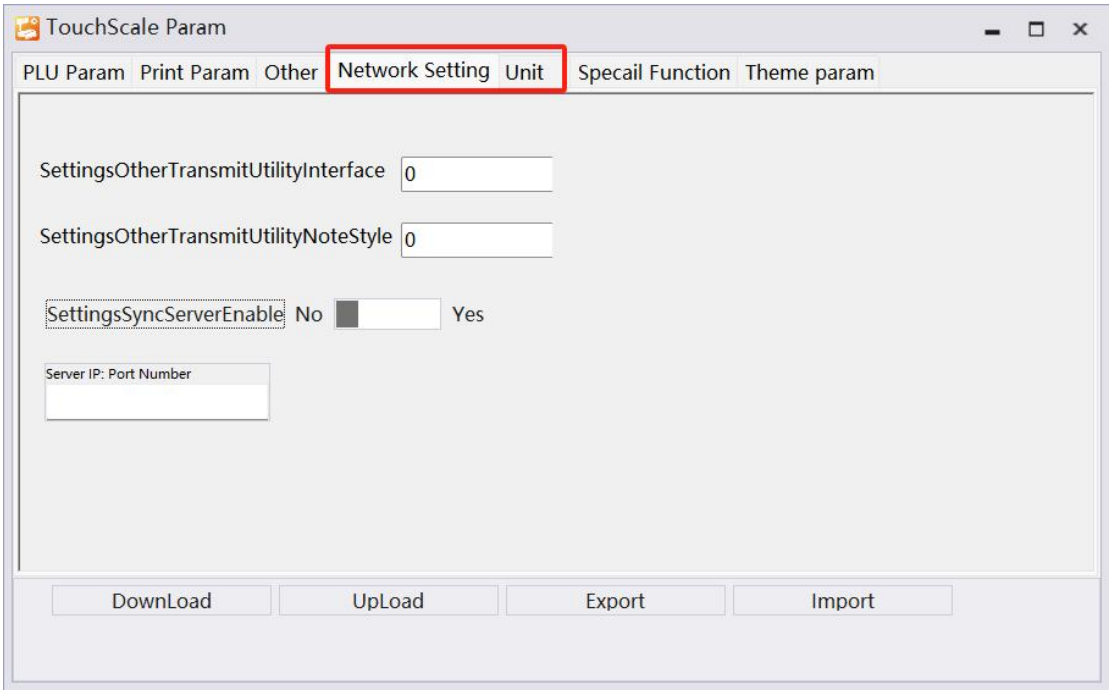


Set the format of third-party scale transfer remarks for the third-party scale transfer interface and enable the server port of the cloud scale.

## 1.6.2.5 Unit

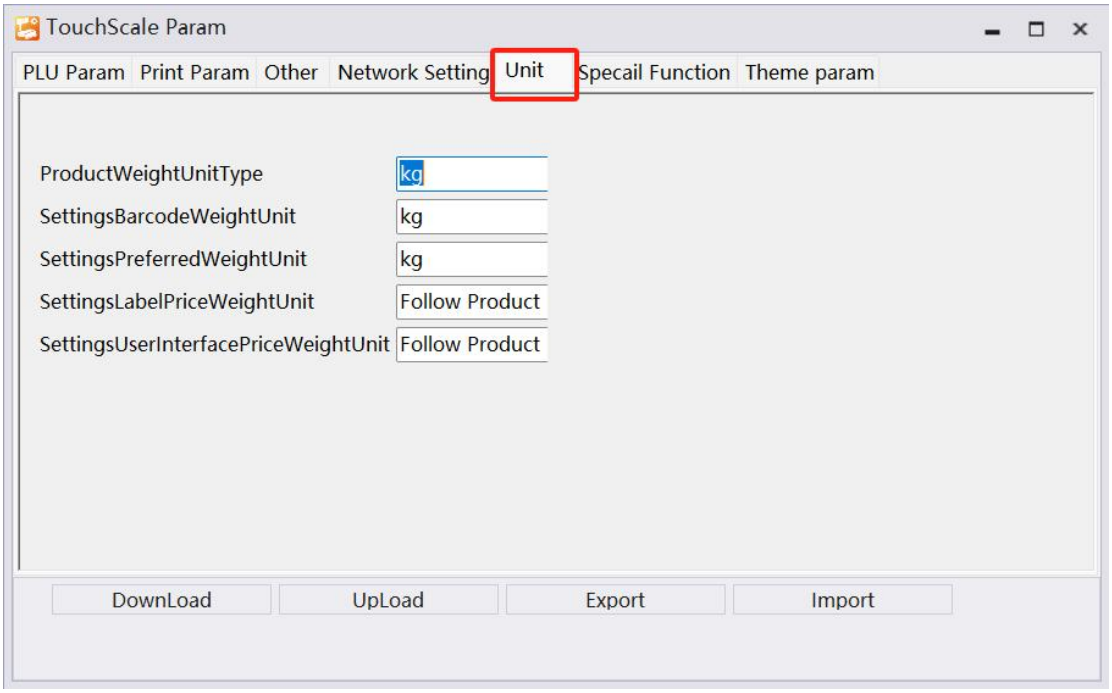

Set label weight unit, barcode weight unit, scale weight unit, label price weight unit, and user interface price weight unit.

[ProductWeightUnitType]: Refers to the weight unit displayed on the printed label, currently supporting kg; 500g； g. Kg automatic switching; z； lb.


[SettingsBarcodeWeightUnit]: Represents the weight unit on the label barcode, currently supporting kg, 500g, oz, and lb.

[SettingsPreferredWeightUnit]: Represents the weight unit of the scale, currently supporting kg, oz, and lb.

[SettingsLabelPriceWeightUnit]: represents the price weight unit of a single product on the printed label, which currently supports Follow Product, kg、500g、oz、lb、g.


[SettingsUserInterfacePriceWeightUnit]: Indicates the price weight unit to be displayed on the scale interface. Currently, it supports Follow Product, kg、500g、oz、lb、g.

## 1.6.2.6 Special Function

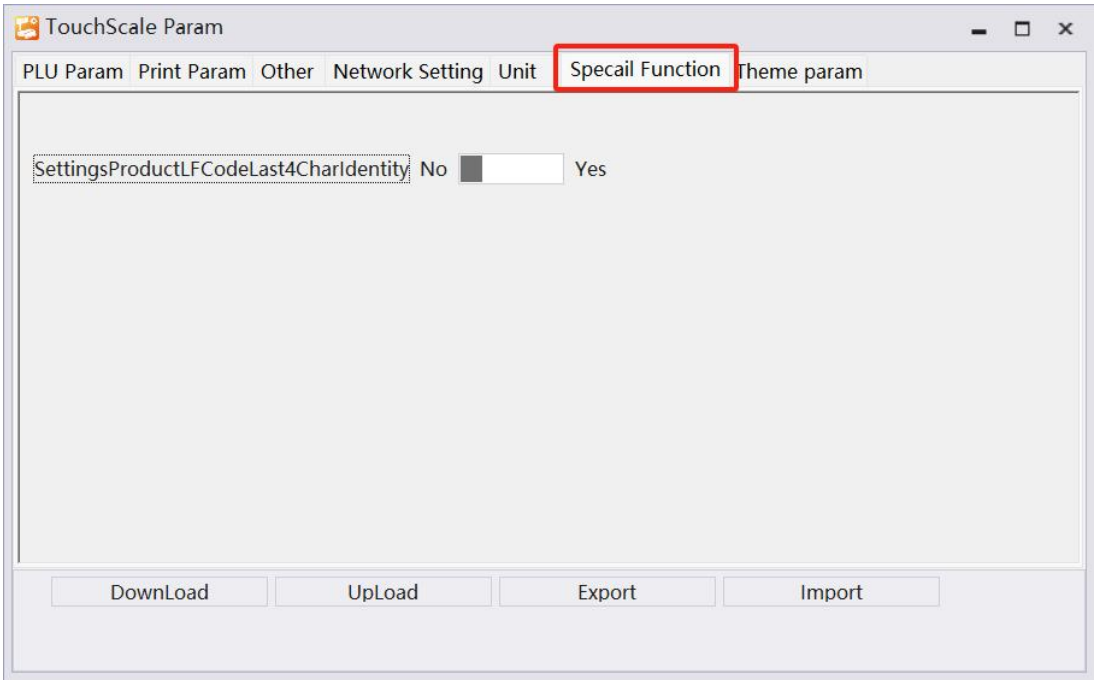

[SettingsProductLFCodeLast4CharIdentity]: For PLU codes with regular patterns, for example, starting with 80 is a discount, starting with 88 is a premium, starting with 86 is normal, and the last four digits are the same, and during recognition, all products with the same last four digits can be associated.

## 1.6.2.7 Theme Param

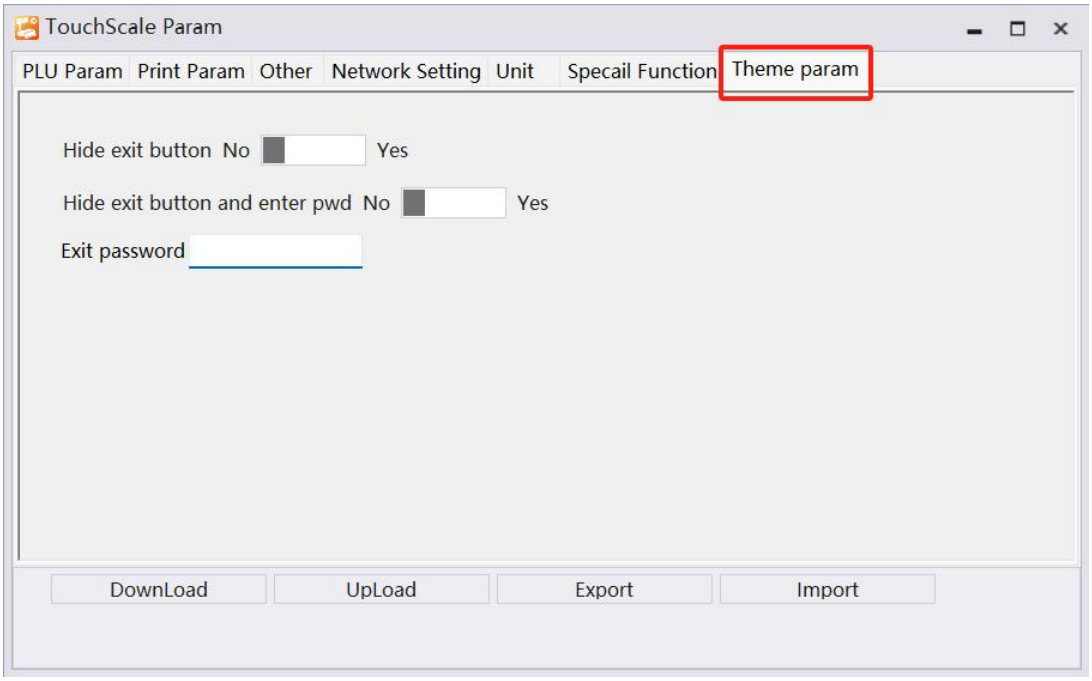


[Hide exit button] Support setting to hide the intelligent scale software in store assistant mode and self-service mode. The exit button in the upper right corner, when set to hidden, to exit the page, you need to click on the total price column 5 times in a row to exit.

[Hide exit button and enter pwd] means to hide the exit button. After clicking it continuously for 5 times, you still need to enter the password to exit.


[Exit password] Support custom setting of exit password.

# 1.7 Upload, Download, and Delete

## 1.7.1 Upload


Upload: Refers to receiving data from the scale, which means uploading the information of the electronic scale to the scale management software. Click "Upload" in the upper right corner - select the synchronization data type - input device IP - click "Execute".

[Note: If it is a smart scale, you need to first open the self-service software to synchronize data].

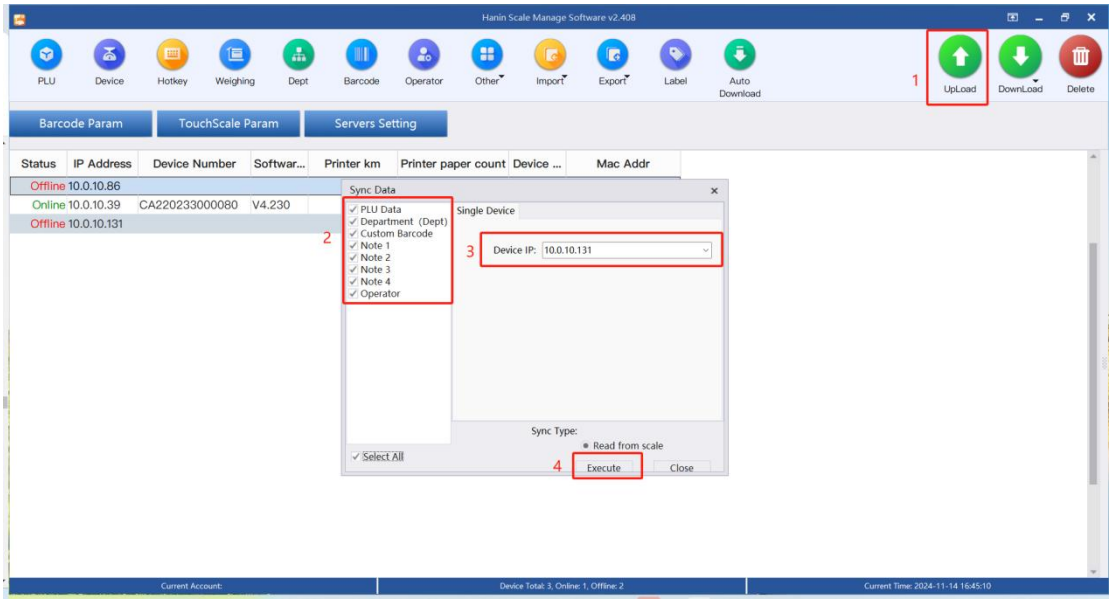


## 1.7.2 Download


Download: Download the information of the scale management software to the electronic scale, that is, download the information of the scale management software to the electronic scale. Support downloading data, downloading product libraries, updating firmware, updating character libraries, updating AD modules, updating printing modules, updating Android program, download system, icon (logo), advertisement image, and advertisement video functions.

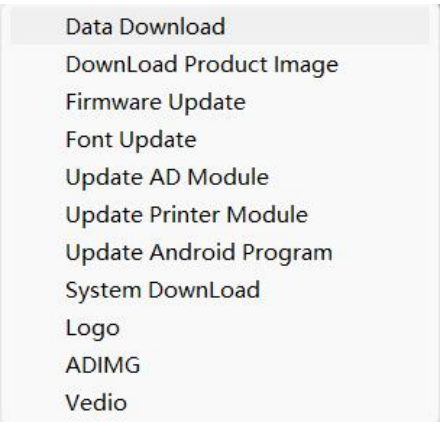


Single device: Click on the "Download" button in the upper right corner - select the synchronization data type - select "Single Device" - input device IP - click "Execute".

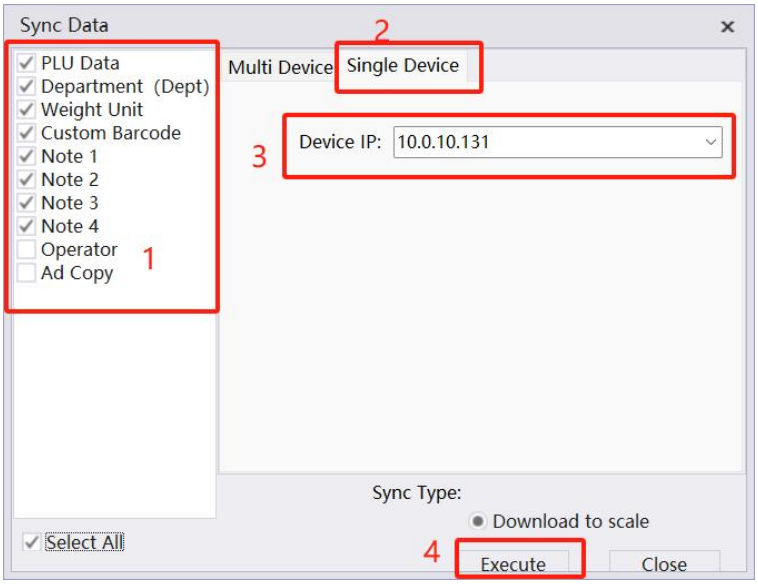


Multiple devices: Click the "Download" button in the upper right corner - select the synchronization data type - select "Multi Device" - check the devices - click "Execute".

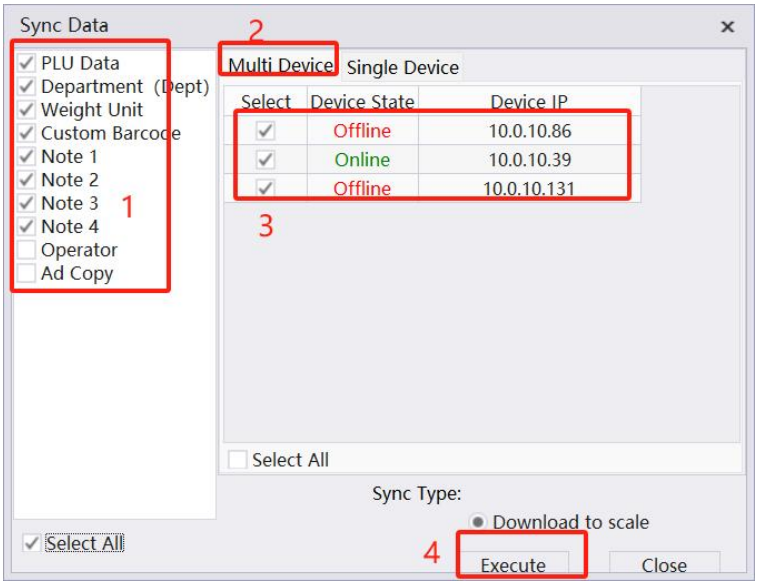



## 1.7.3 Download Selected


First, right-click on the data that needs to be synchronized -> click "Download Selected". In the pop-up dialog box, click on "Single Device", enter the device IP in "Device IP", click "Execute" to complete data synchronization. Click 'Finish' to complete the process. It supports both single device and multi device modes, as shown in the figure:

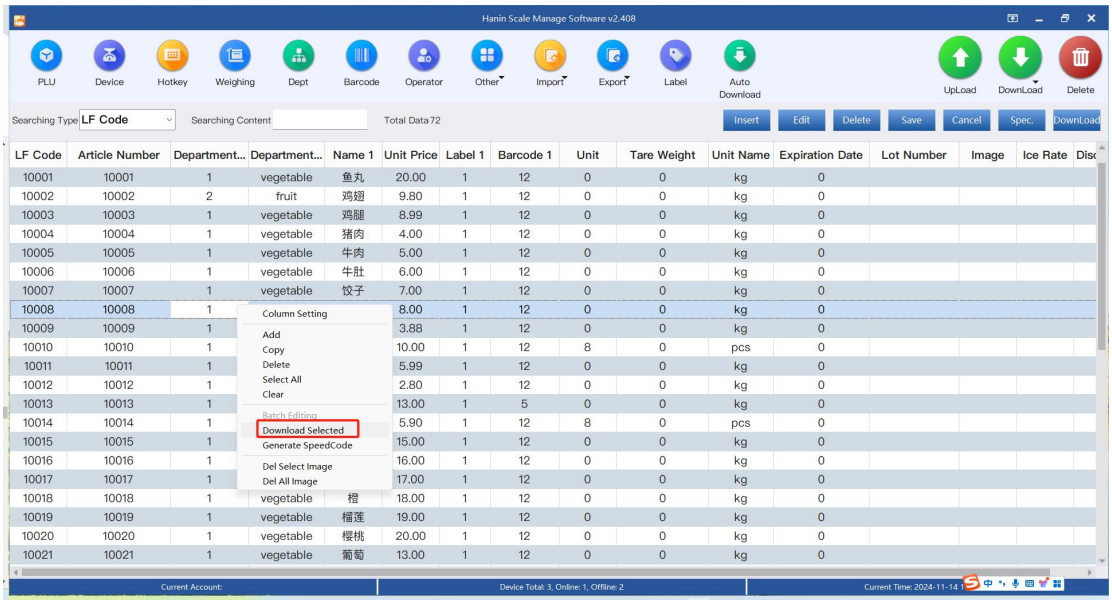

Single device:

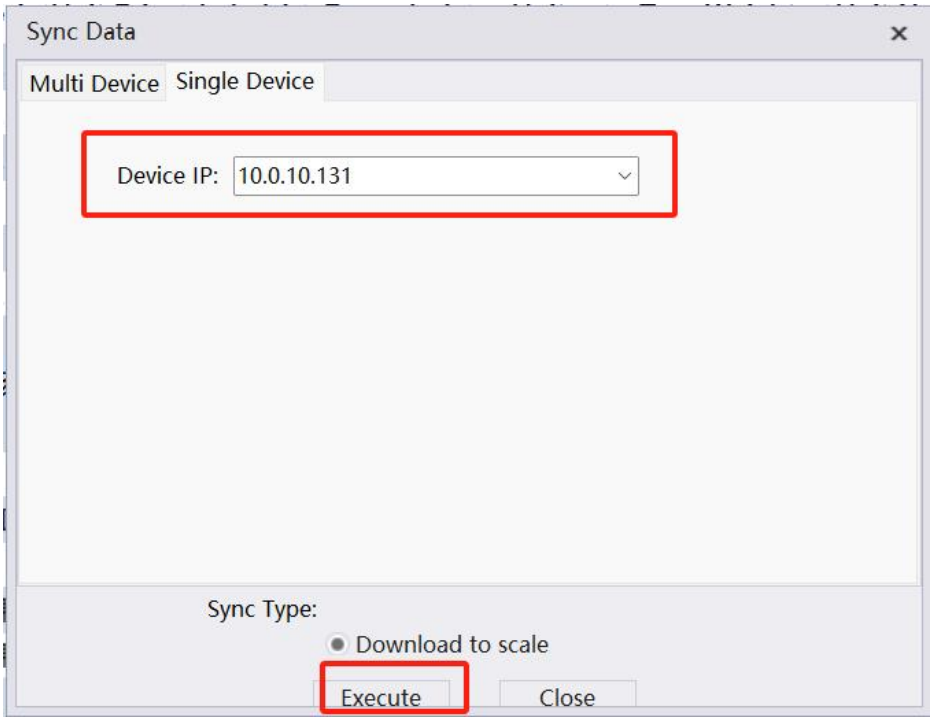


Multiple devices:

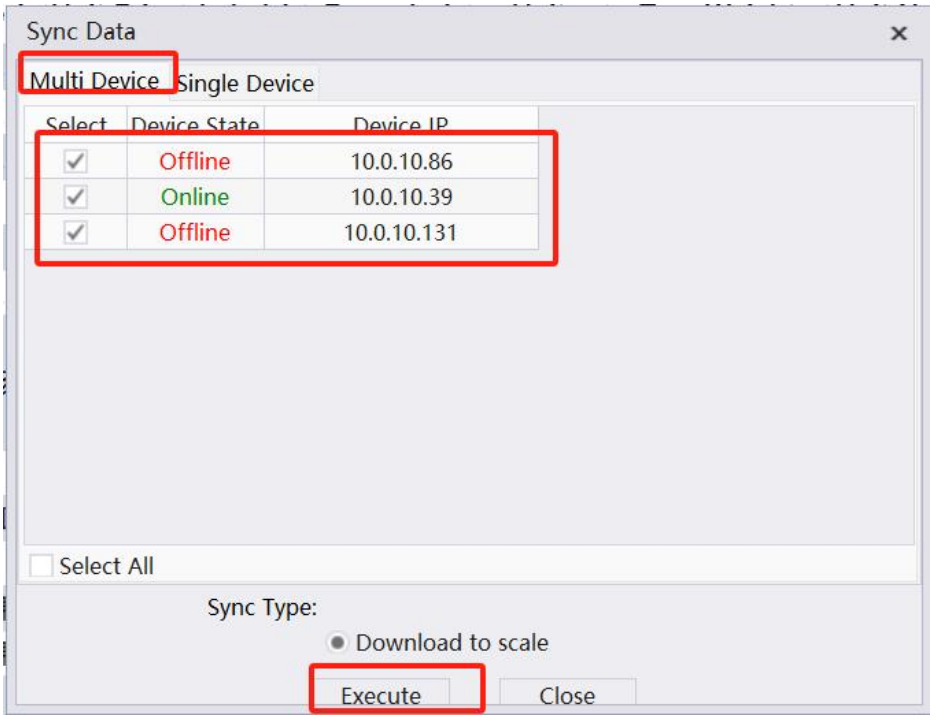


## 1.7.4 Delete


Delete: To delete data from the electronic scale, issue a delete command from the electronic scale management software to the electronic scale.

Click the "Delete" button in the upper right corner - select the data type to be deleted - choose single device or multiple devices - select "Execute". After data synchronization is completed, click 'Finish' to complete. It supports single device and multi device modes, as shown in the figure:

Single device: requires input of device IP.

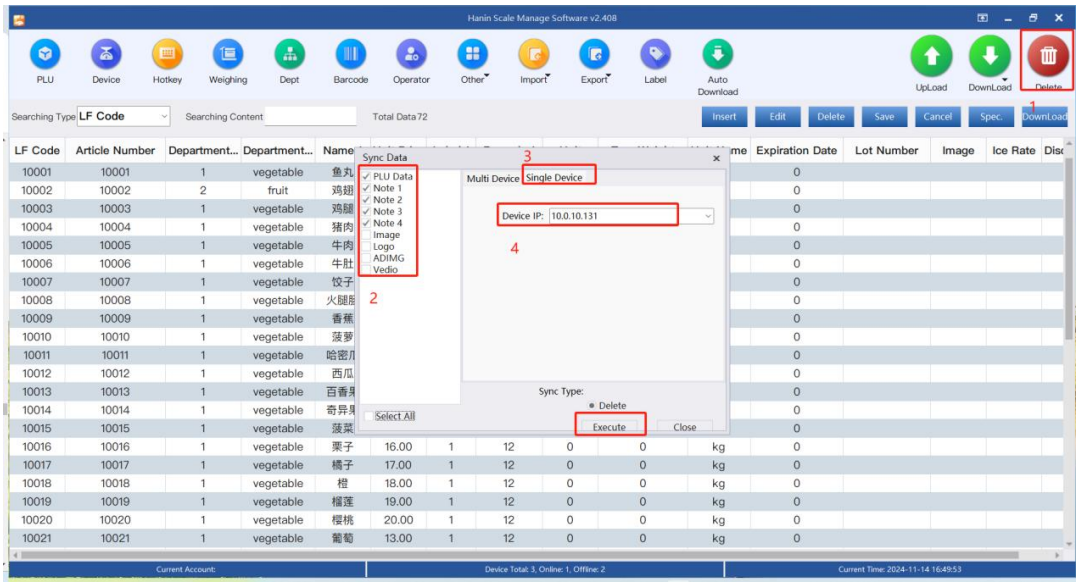



Multiple devices: devices need to be selected.

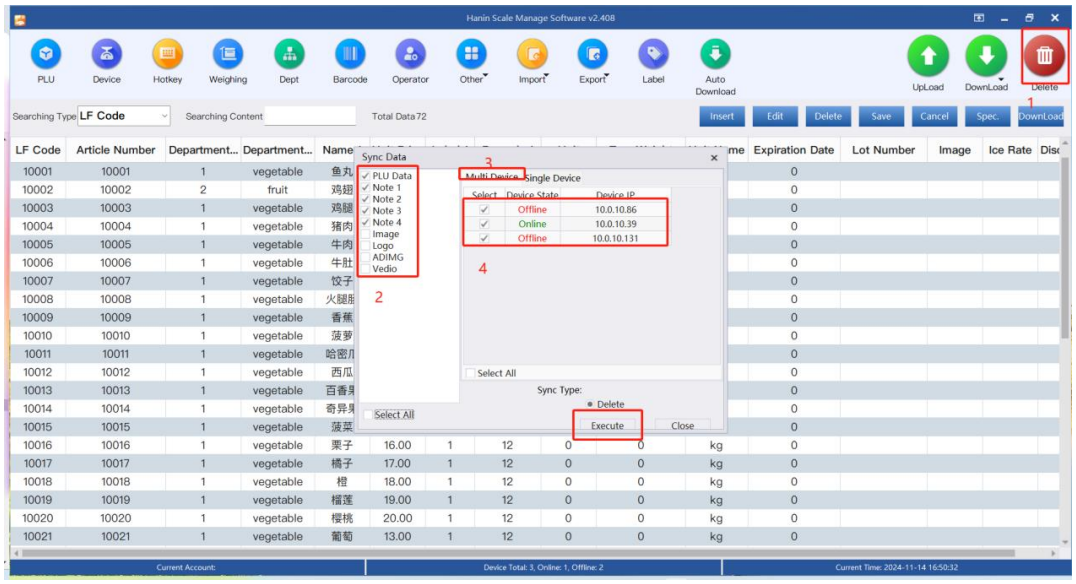


# 1.8 Import/Export Data

## 1.8.1 Data Import


To import the edited data, click "Import" ... "PLU Data", as shown in Figure 1: Select the file containing the item information to be imported, and the pre-set item information can be imported into the scale management software.

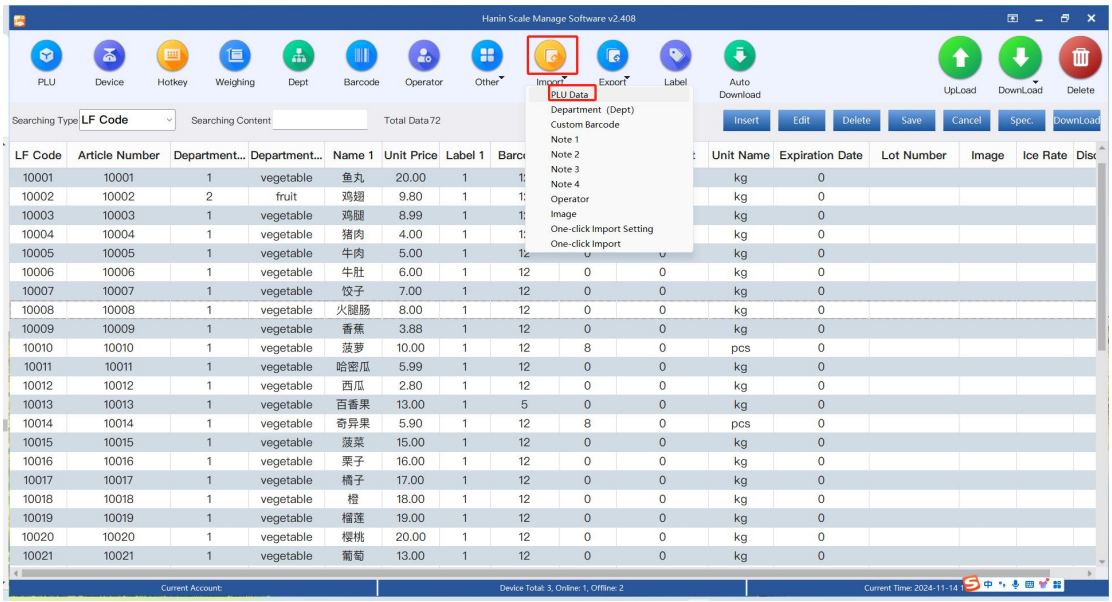

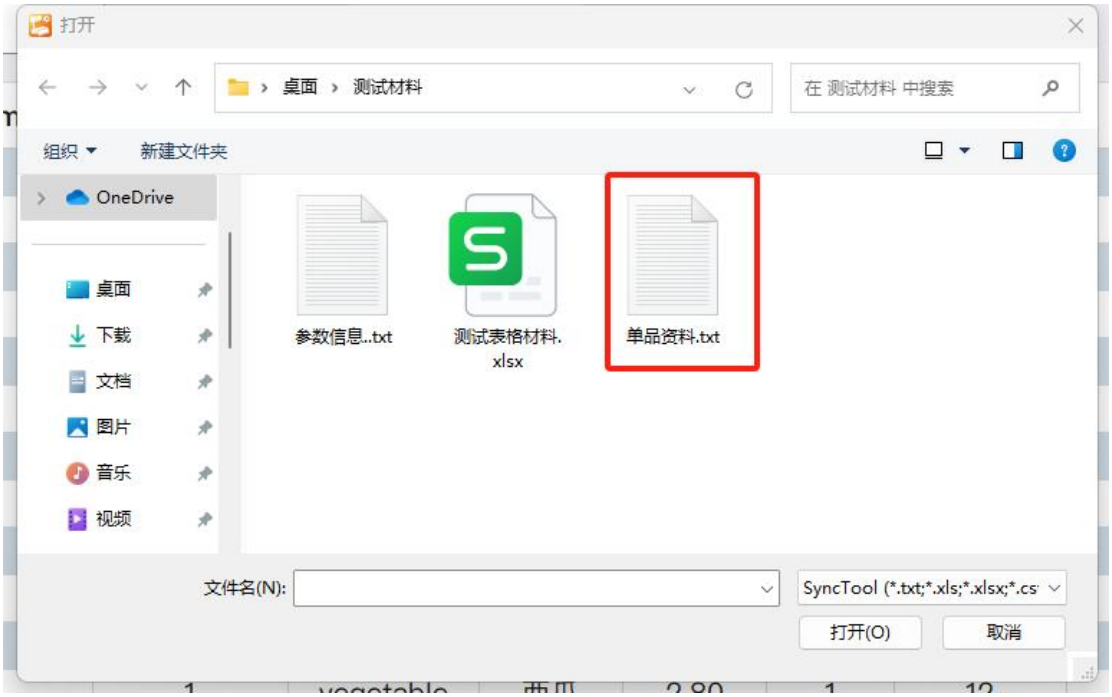
## 1.8.2 Data Export

To export the item data from the scale management software and save it, click "Export" ... "PLU Data", save the exported item information to the desired location, and click 'Finish' after importing the individual items.

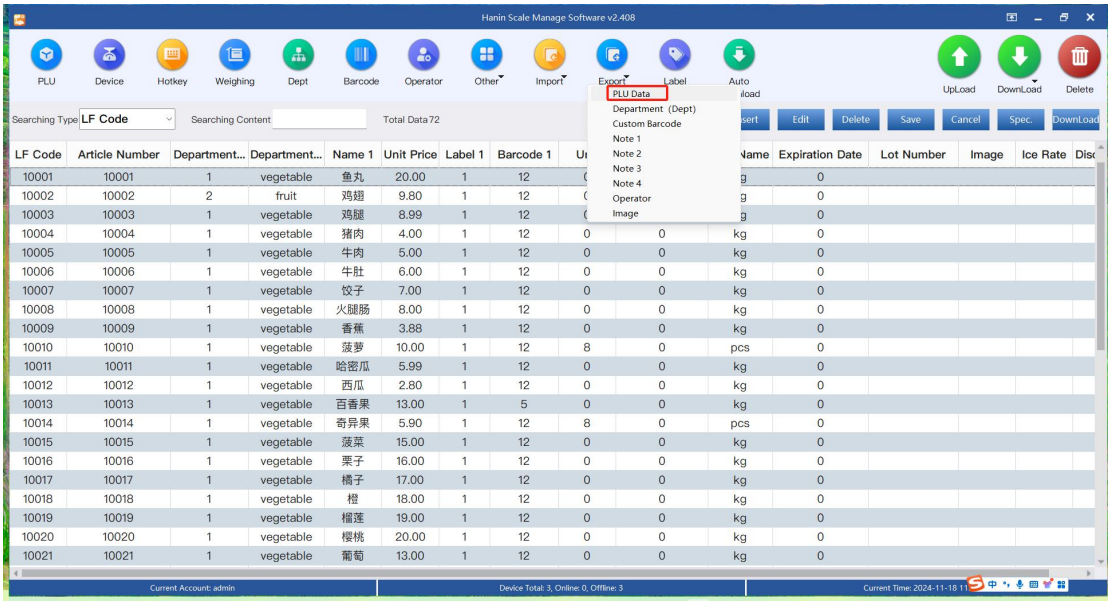



# 1.9 Firmware Update
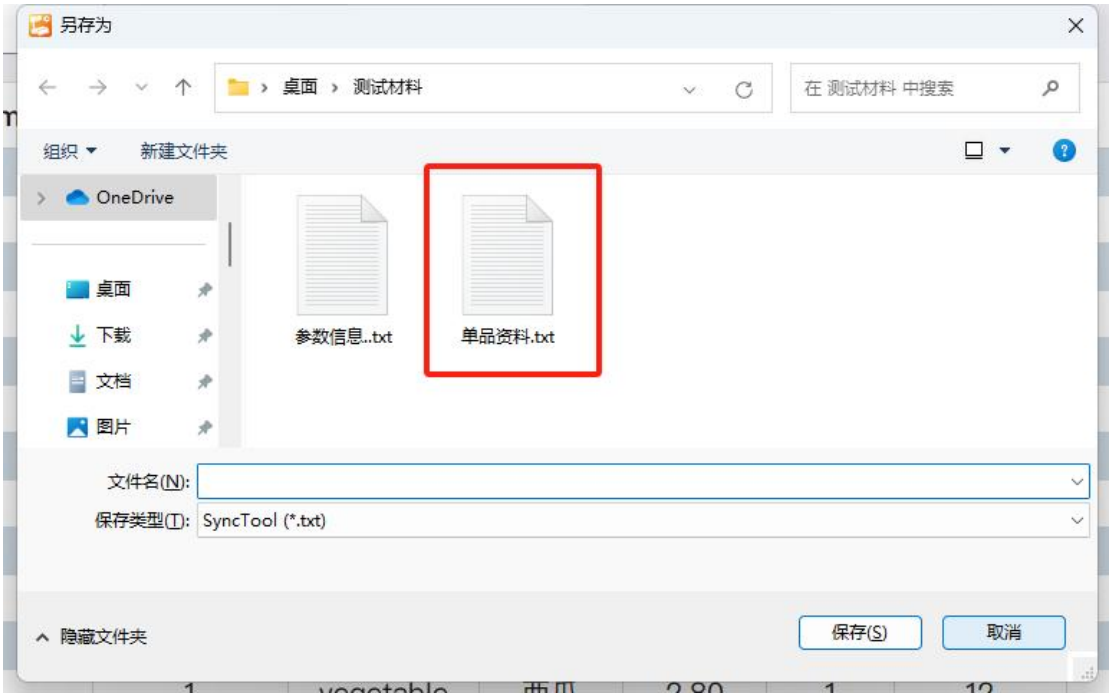
## 1.9.1 Single Device Update

Right click on "Download" on the main interface and select "Firmware Update".

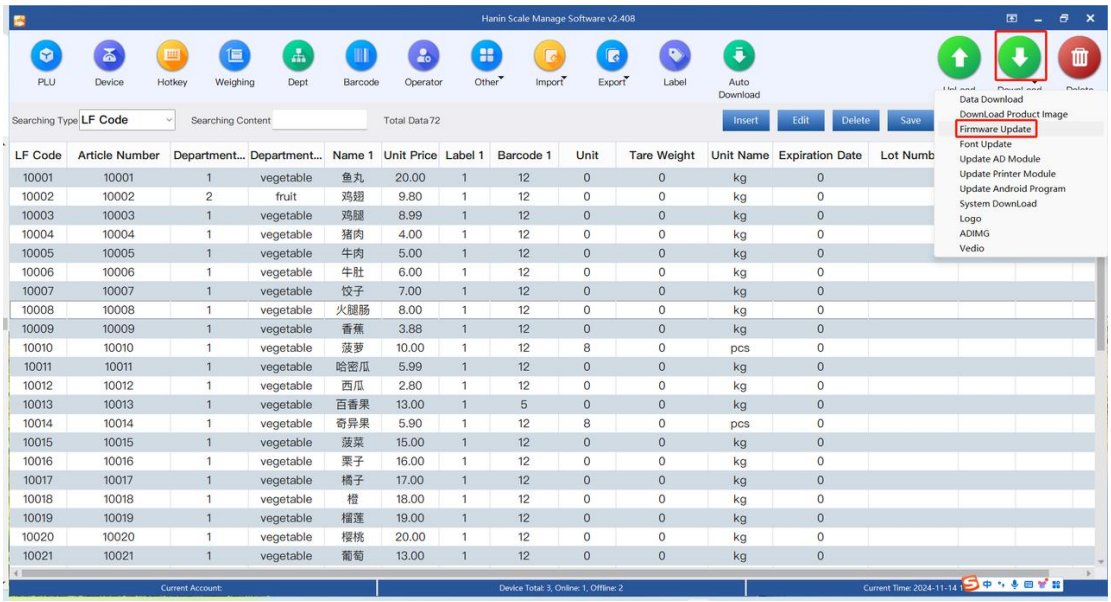


Select the firmware program to be updated, click to open. Click on "Single Device" in the dialog box that pops up after clicking to open, select the corresponding scale number in the "Device IP" and click "Execute".

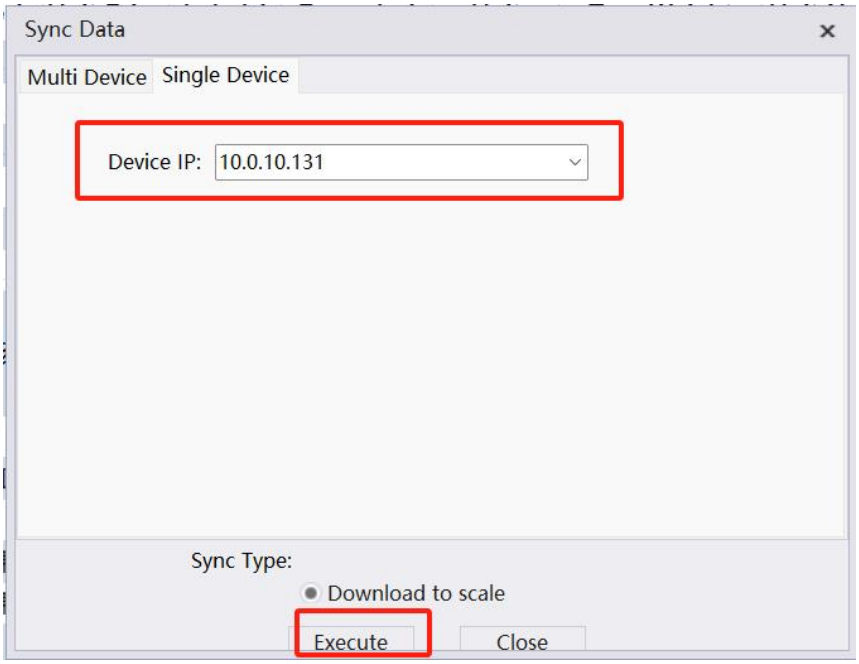


## 1.9.2 Multi Device Update

Right click on "Download" on the main interface and select "Firmware Update".





Select the firmware program to be updated, click to open; Click on "Multi Device" in the dialog box that pops up after clicking to open, check the IP address that needs to be weighed, and click "Execute".

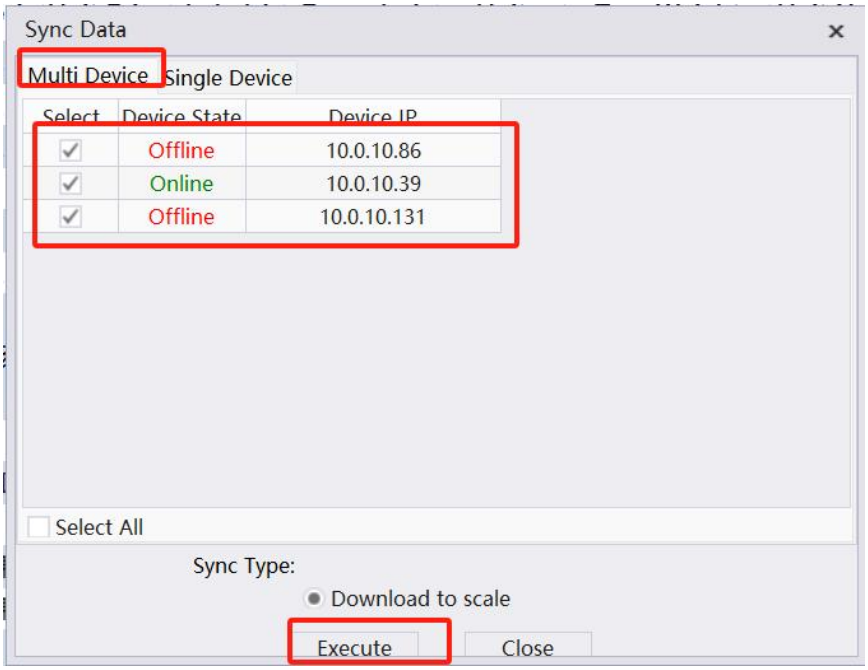


# 1.10 Font Update


Click the "Download" button in the upper right corner, select single or multiple devices, and support downloading and updating the font library to the electronic scale.

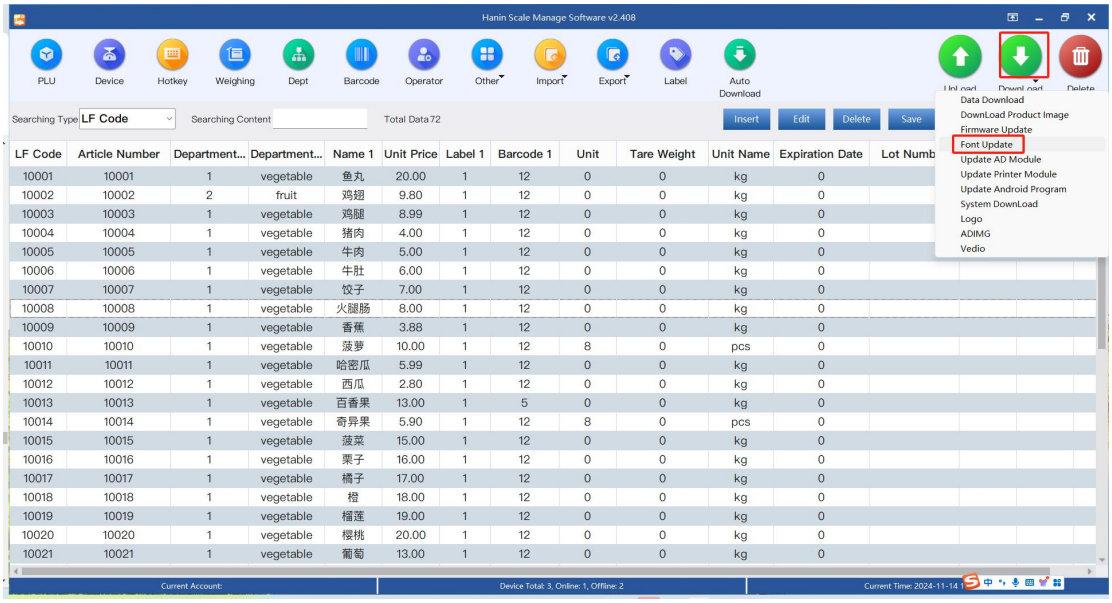


Single device:

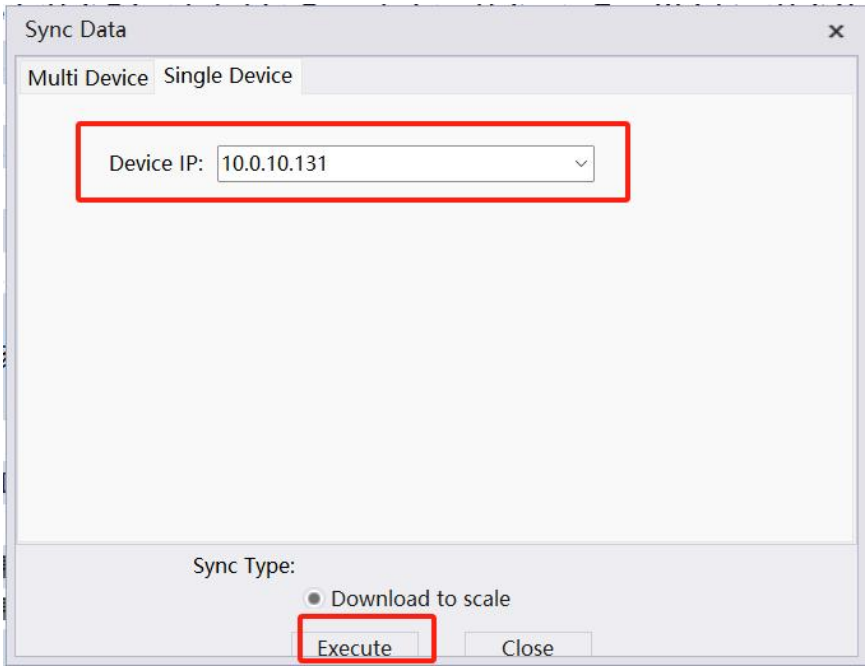



Multiple devices:

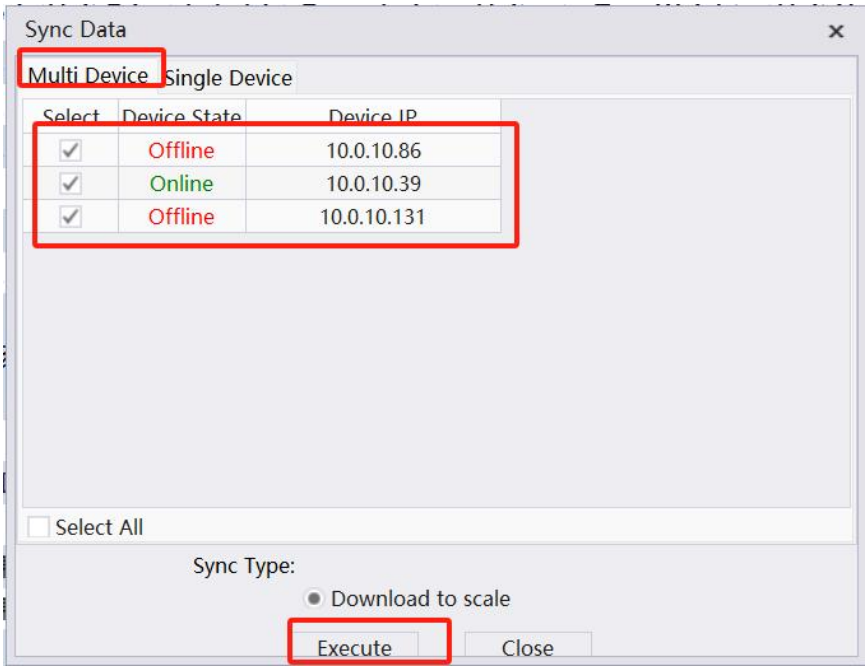


## 1.11 Update AD Module


Click the "Download" button in the upper right corner, select the file containing the AD module from your local computer, and download the update to the electronic scale.

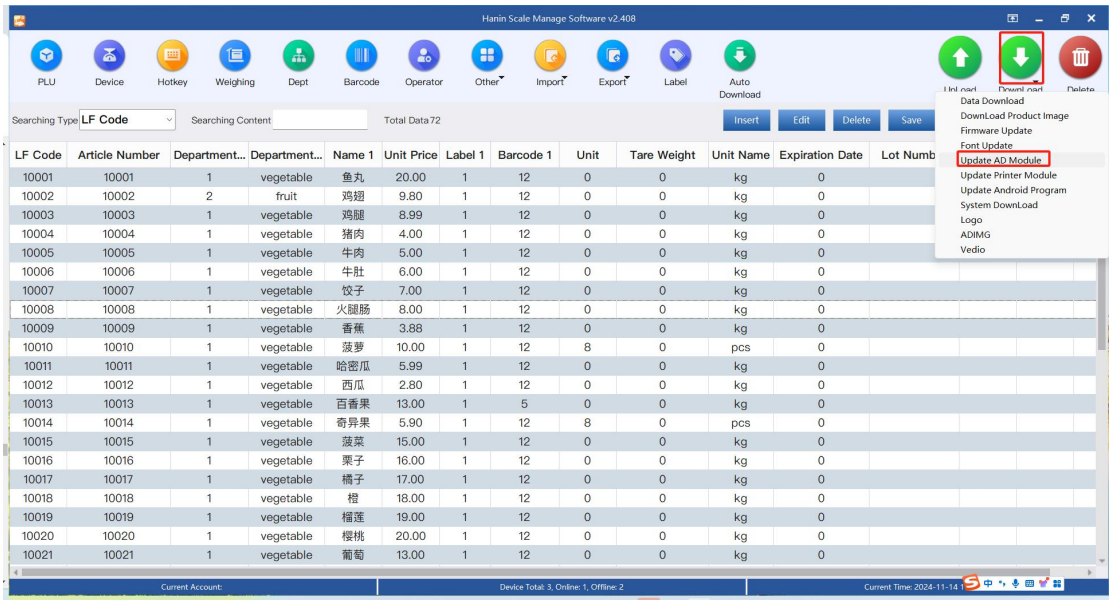


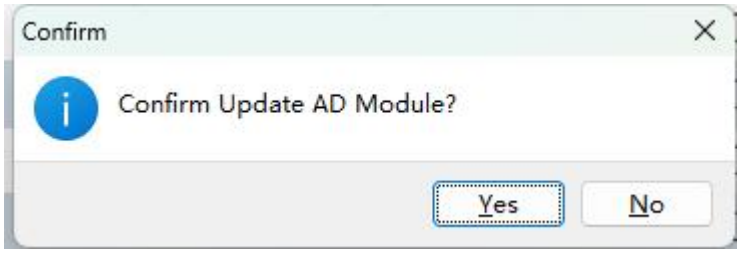


## 1.12 Update Printer Module


Click the "Download" button in the upper right corner, select the file where the printing module is located from the local computer, and download and update it to the electronic scale.

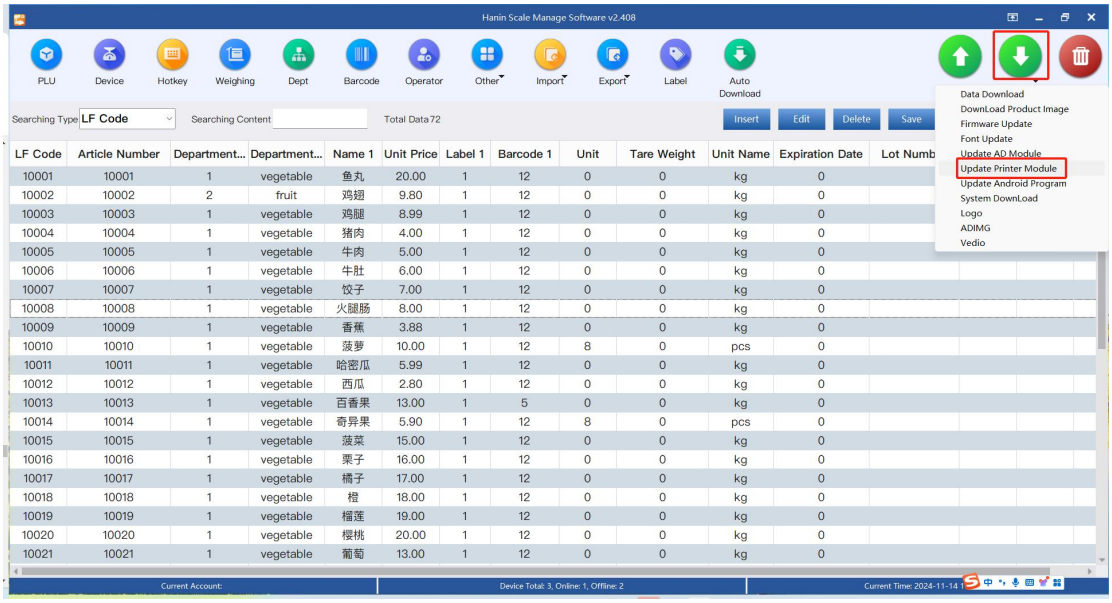

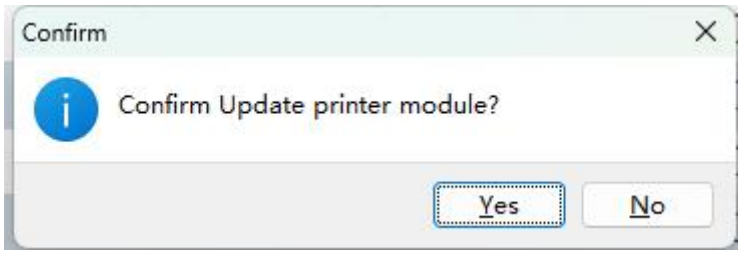
## 1.13 Update Android Program


Click the "Download" button in the upper right corner, select the file containing the Android program from your local computer, and download and update it to the electronic scale.

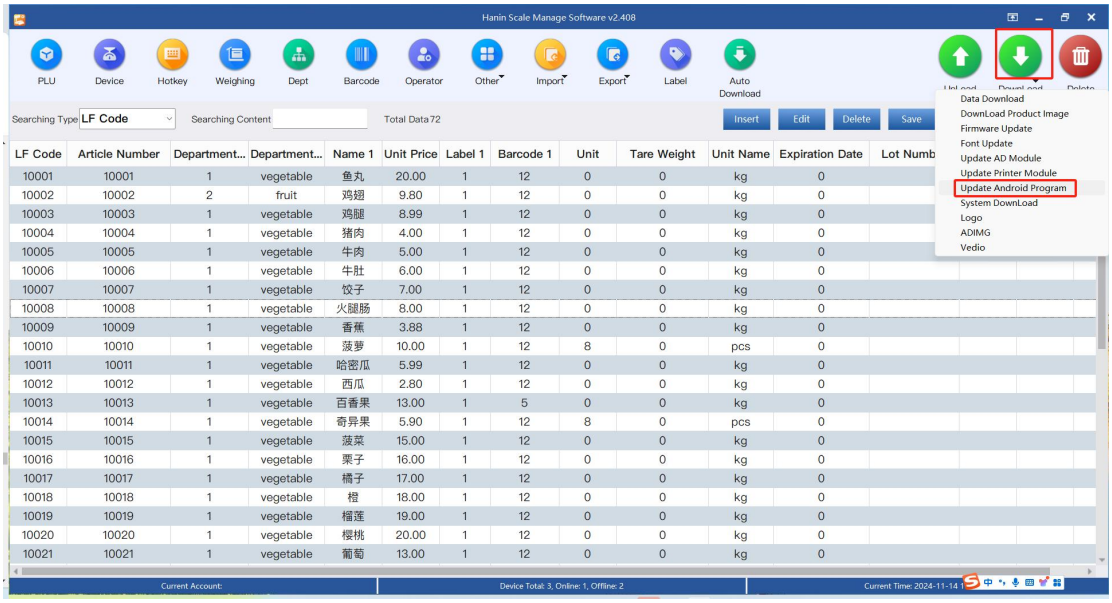


## 1.14 System Download


Click the "Download" button in the upper right corner, select system files from your local computer, and download updates to the electronic scale.

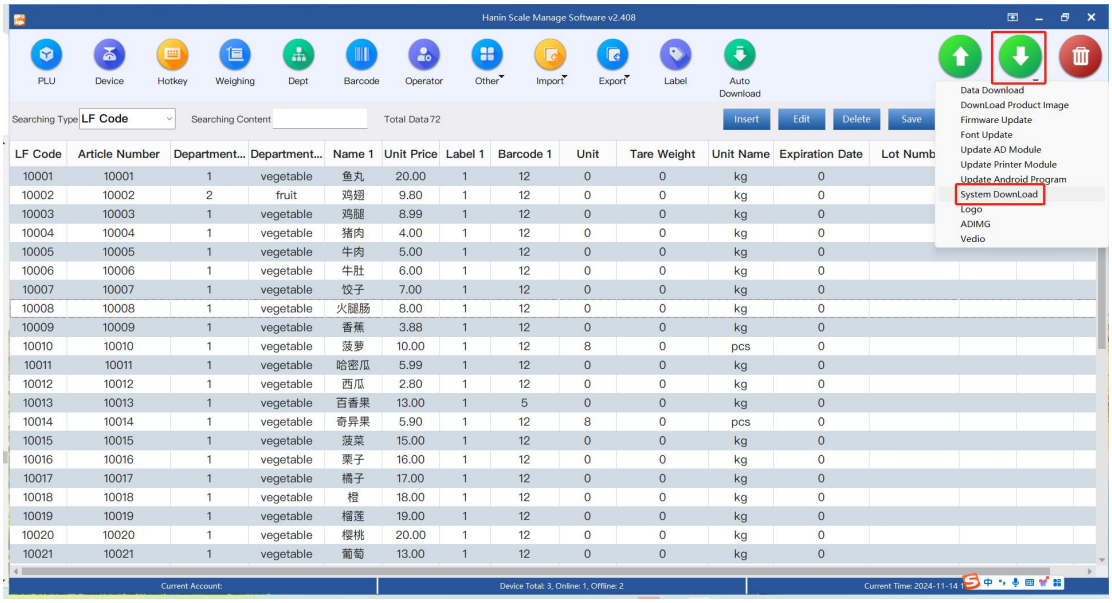

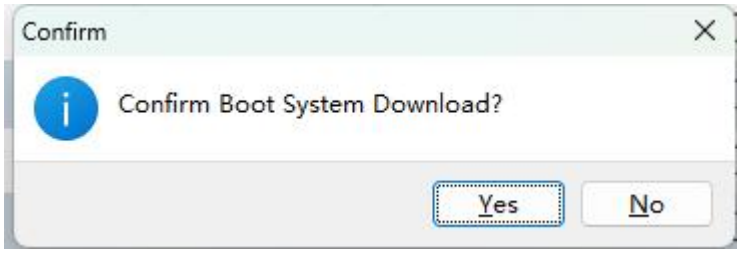



## 1.15 Logo

Icon, also known as logo, supports downloading the logo onto the electronic scale. Click the "Download" button in the upper right corner, select the icon from your local computer, and download the update to the electronic scale.

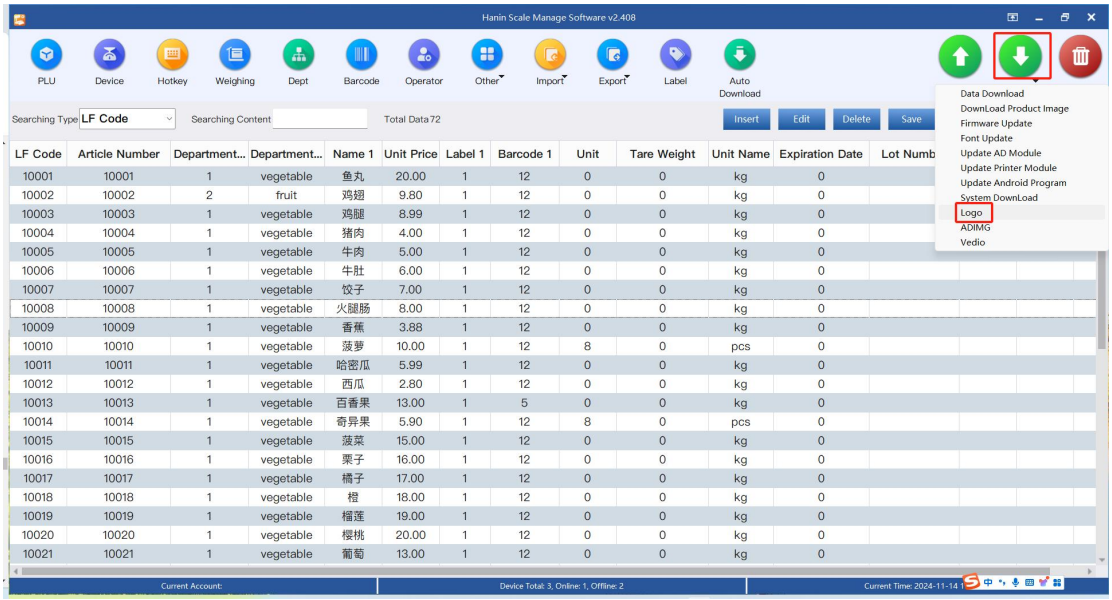


The display position of the electronic scale is shown in the following figure:

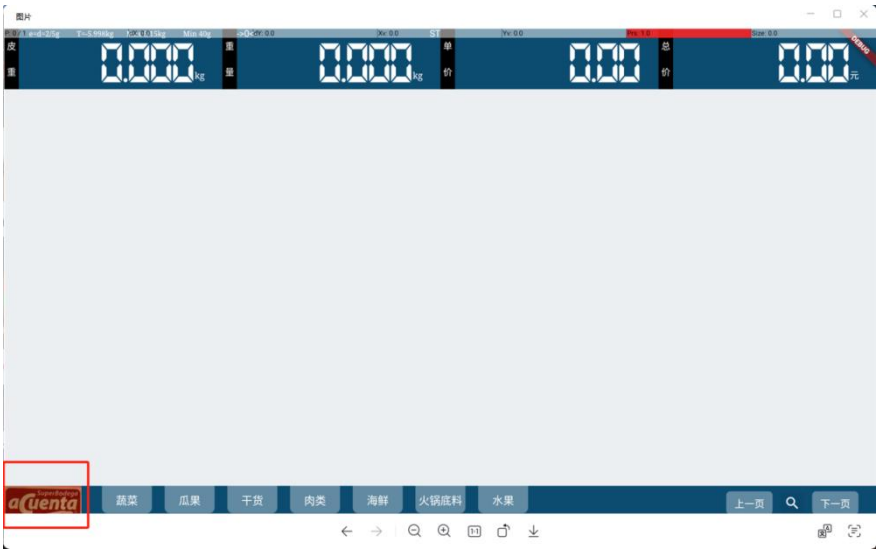


# 1.16 ADIMG and Video


Click the "Download" button in the upper right corner, select the advertisement image file or video file from the local computer, download and update it to the electronic scale, and support single device or multi device joint settings.

Note:


- The playback order of images is in the order of file arrangement.
- On the electronic scale side, in self-service mode, advertising images and videos are played on the secondary screen.
- After distributing advertising images and videos, the electronic scale will only play the images or videos after 5 minutes of non working state for 5 minutes.

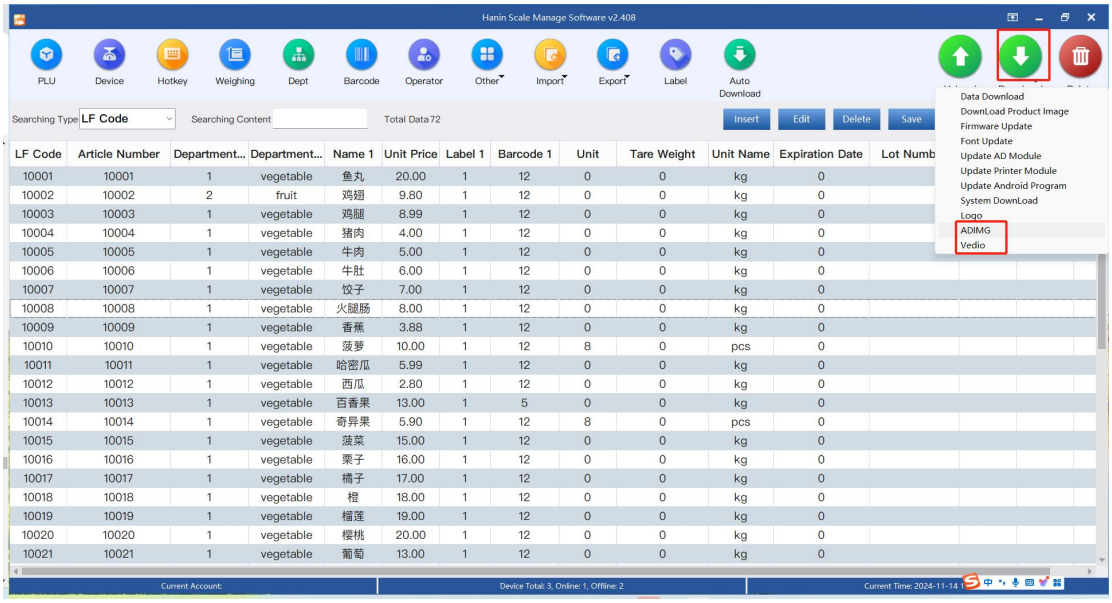

Single device: After downloading, click Finish to complete.

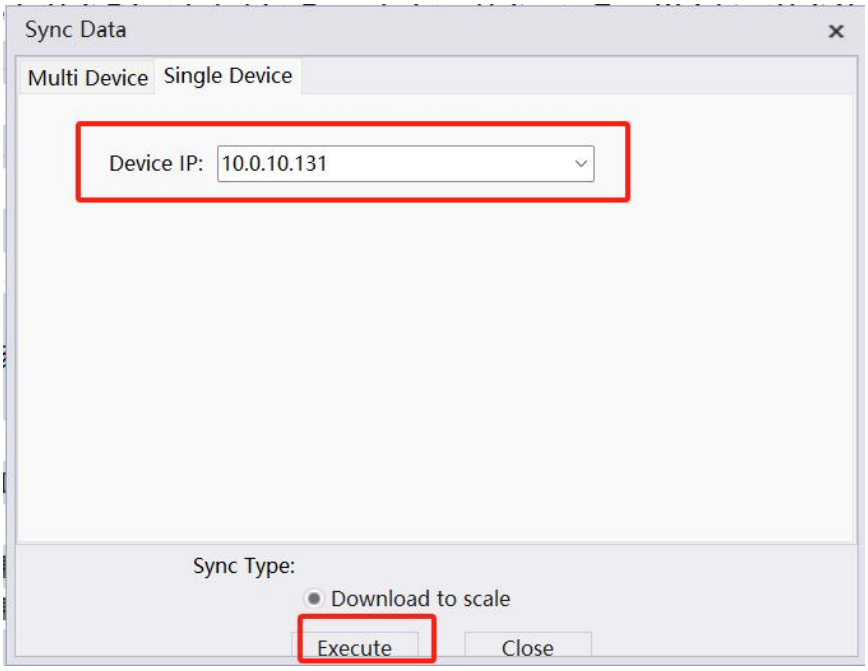



Multiple devices: After downloading, click Finish to complete.

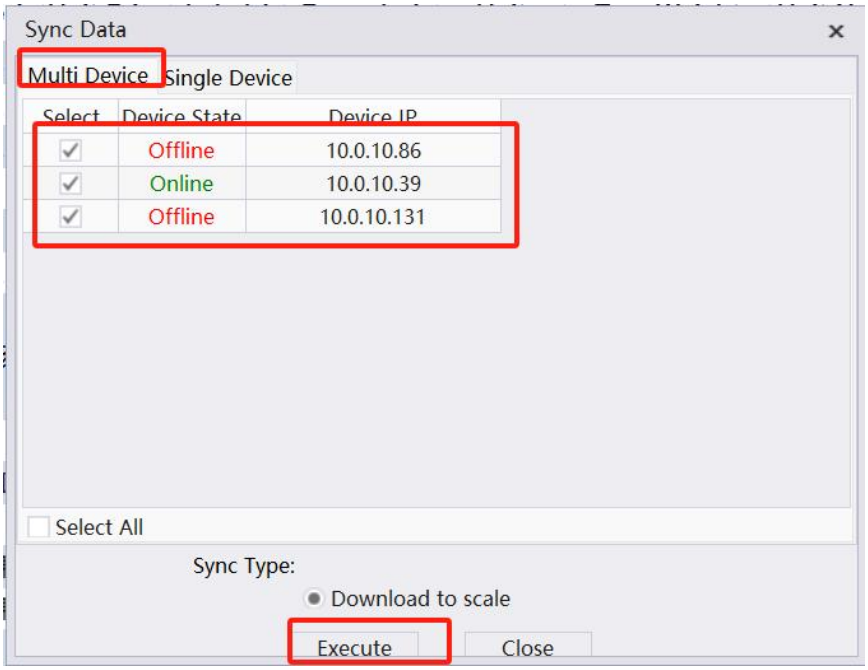

# Chapter 2 Tag Editing and Download

## 2.1 Software Open Interface

Open the tag editor on the homepage of the scale management software, click on "Label".




The functions of the menu bar from left to right are: New, Open, Save, Save As, Download, Upload, Zoom In, Zoom Out, Align Left, Align Right, Align Up, Align Down.



## 2.2 Menu File List

## 2.3 Introduction to Label Editing Software

Introduction to the tag editor, as shown in the following figure:

1. Corresponding to the selected component area, including commonly used components and all components; Select a component, draw a box in the label editing area with the mouse, select the component, and edit its properties in the rightmost property bar.

## 2.4 Common Label Editing

Open the label editor to edit and download labels as needed. The steps are as follows:


1. Click 'New'.
2. Select the desired component from the component area on the left and drag

it to the label editing area.

3. Edit the components within the label, with their properties located in the attribute area on the right.


4. After editing, click Save.

5. Download to electronic scale devices, supporting batch download to single or multiple devices.

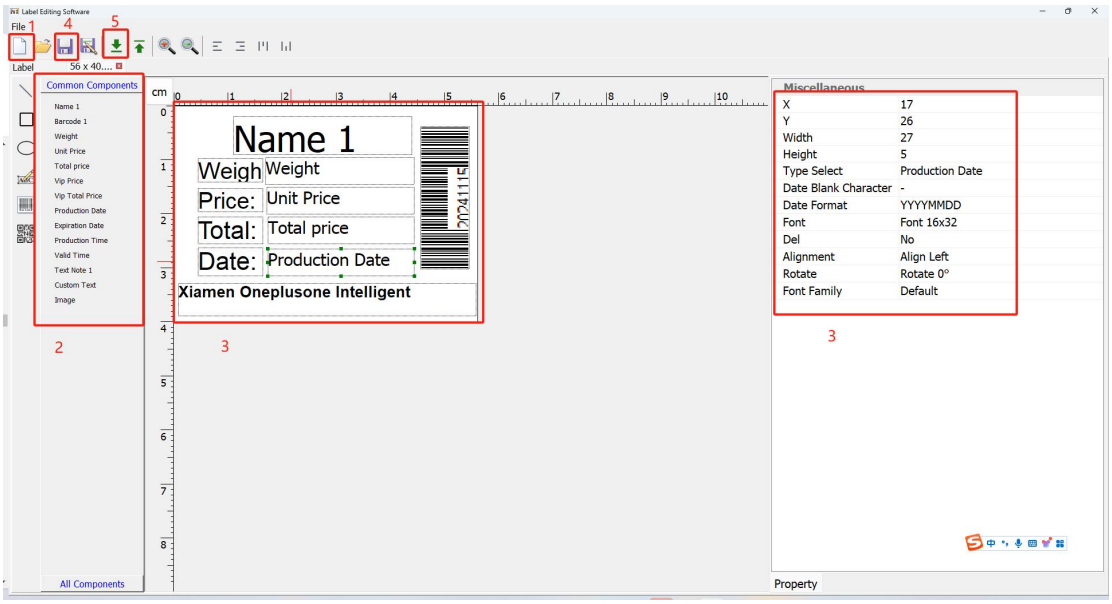

## 2.5 Cumulative Label Editing


Open the label editor and edit the accumulated label as shown in the following figure. The 32nd label is fixed as the accumulated label, so when setting the cumulative label, the label number must be set to 32.

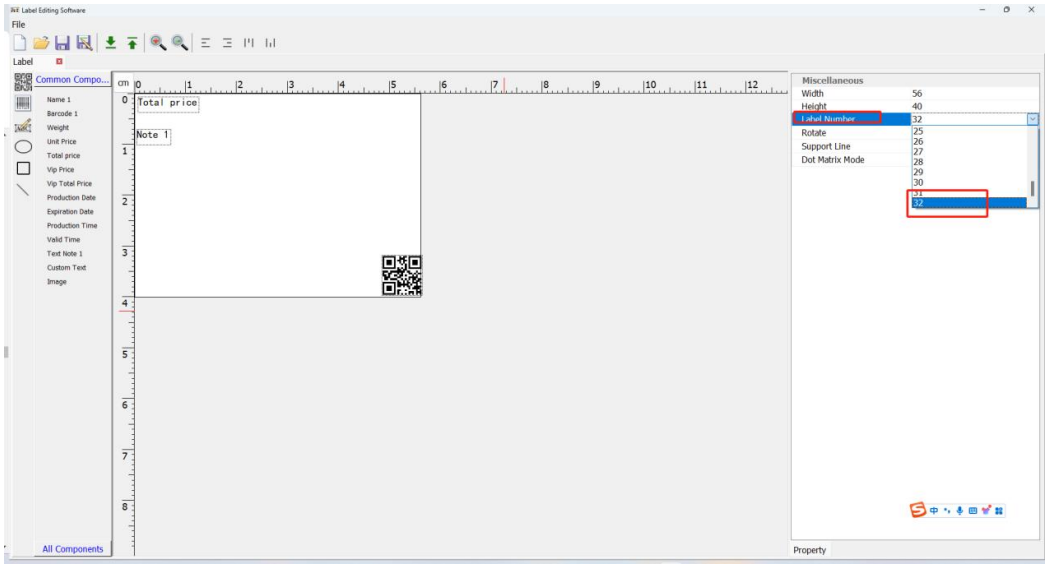


1 is the total price component, representing the total price of all products on the label.


2 is the information text element, representing all the products on the label.

3 is a QR code component that contains information about all products on the label.

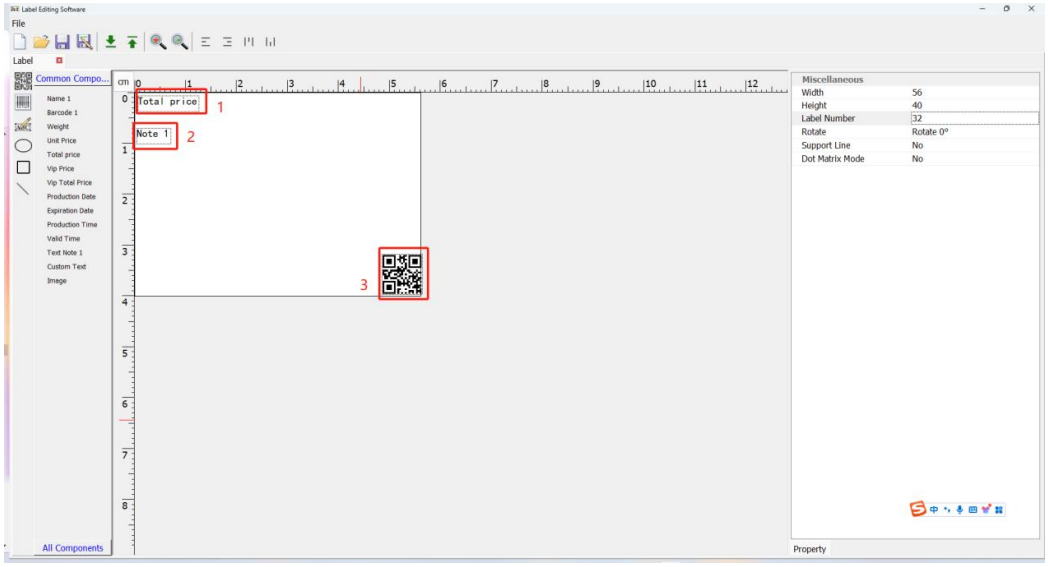


# 2.6 Label Alignment


The page with misaligned tags is shown in the following figure,

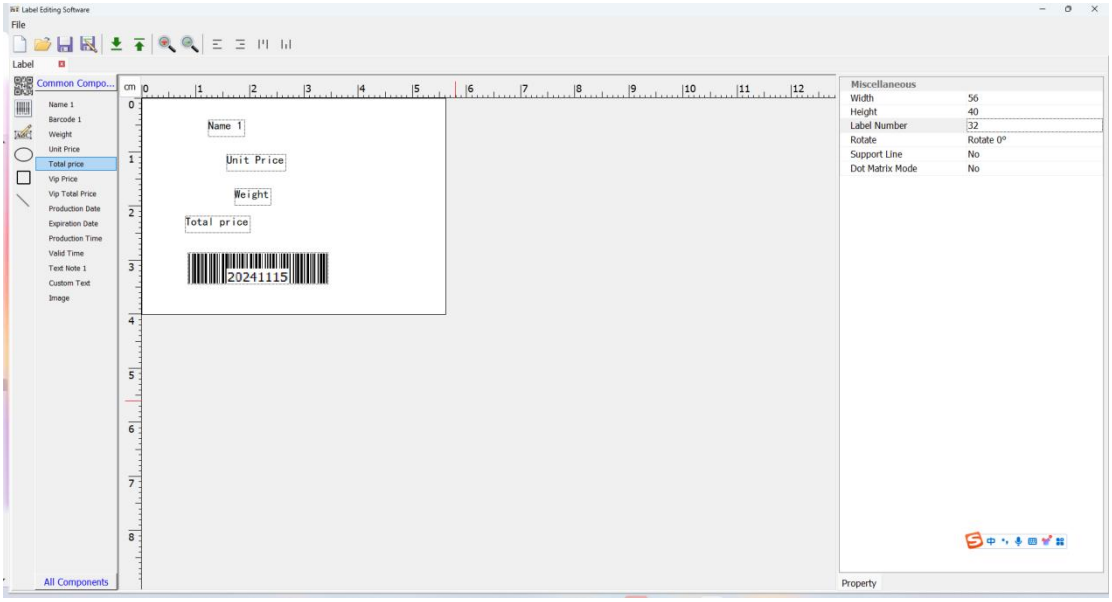



Left Alignment: After selecting all components, click **Left Alignment**. Left Alignment is based on the left side closest to the left component as the reference point.

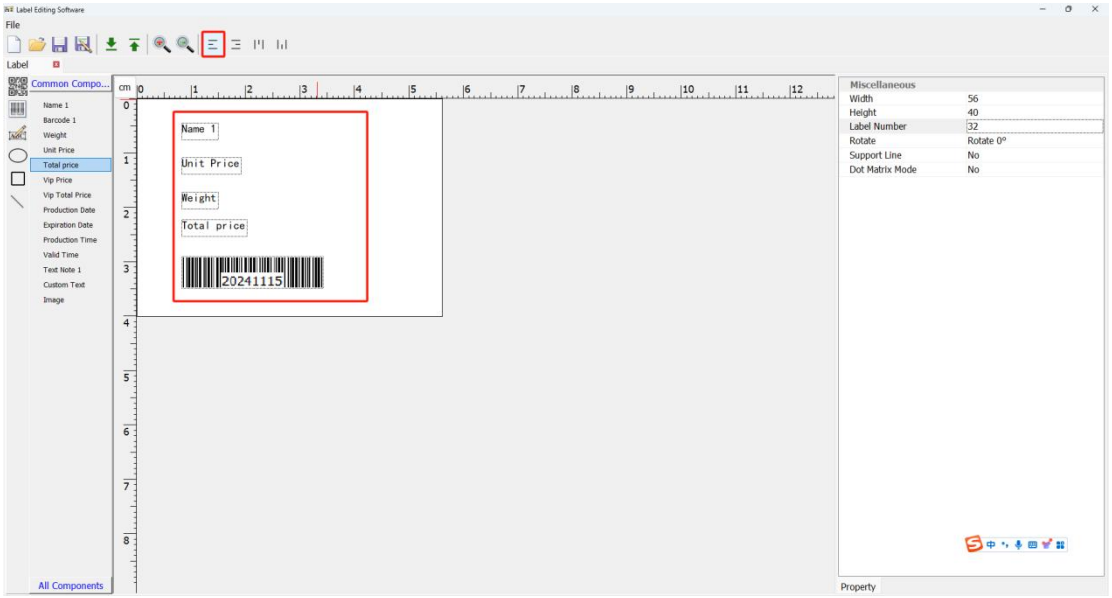


Right Alignment: After selecting all components, click **Right Alignment**. Right Alignment is based on the right side closest to the right end component as the reference point.

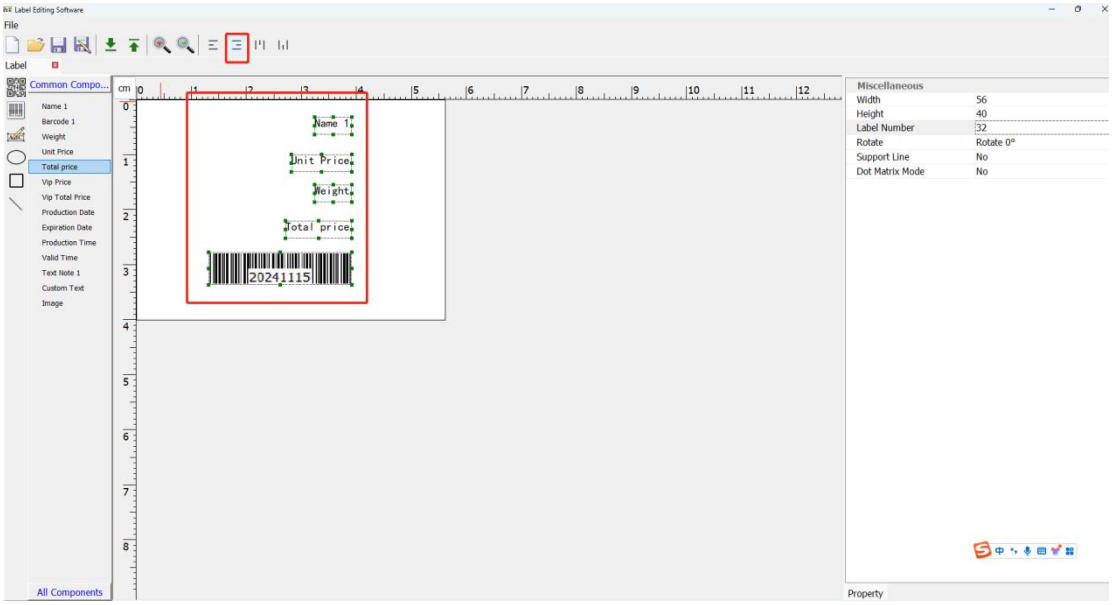


Top Alignment: After selecting all components, click on **Top Alignment**, which is based on the top closest to the top component as the reference point.

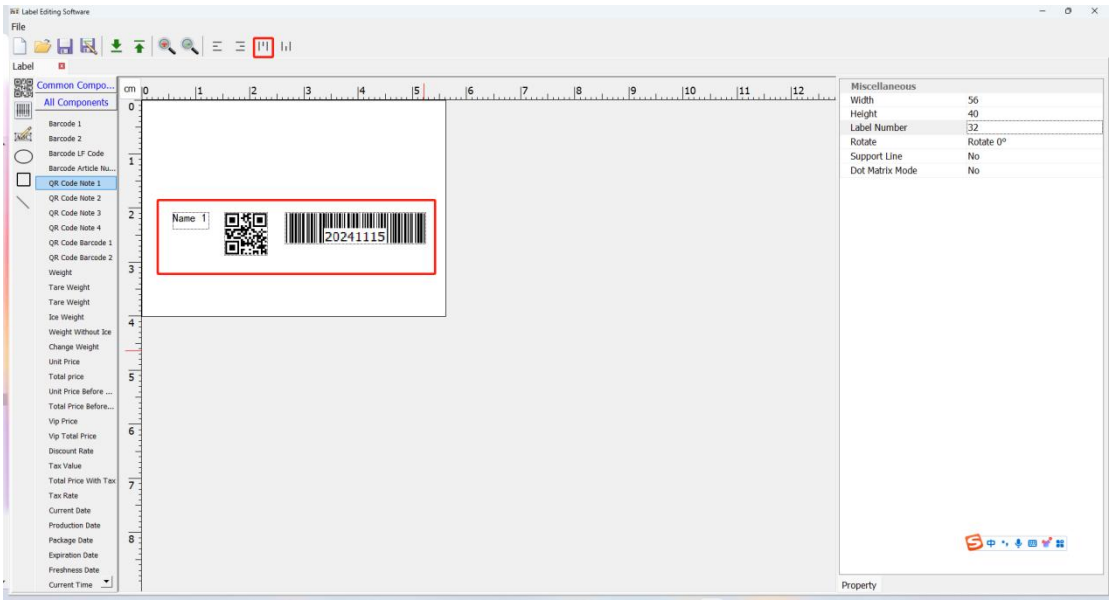


Bottom Alignment: After selecting all components, click on **Bottom Alignment**, which is based on the bottom closest to the bottom component as the reference point.

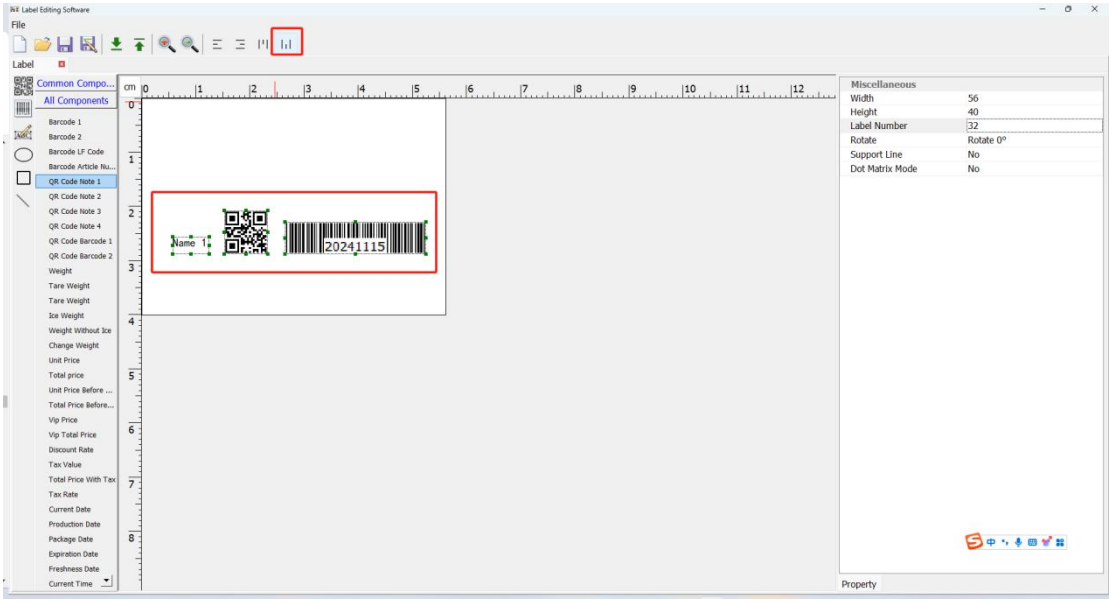


# 2.7 Type Selection of Label Components


## 2.7.1 Component Selection

After clicking on the component, click on the "Type Select" on the right to select and edit different label component categories. As shown in the following figure:

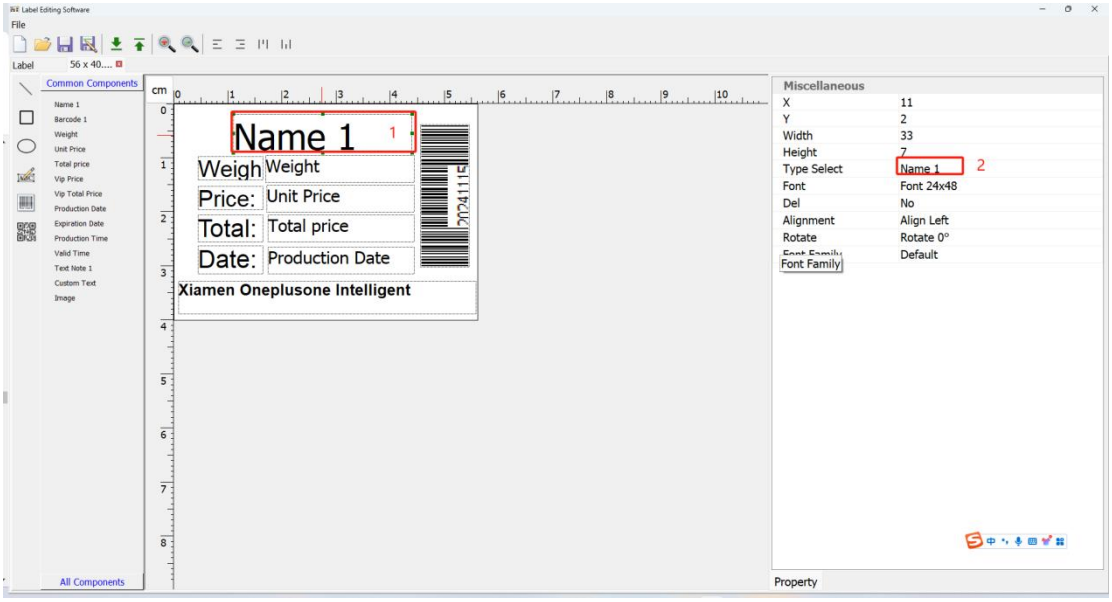


### 2.7.2 Component Attribute Editing

For example, by selecting "Price unit", you can edit the properties of the unit price. After completing the label editing, click "Save".

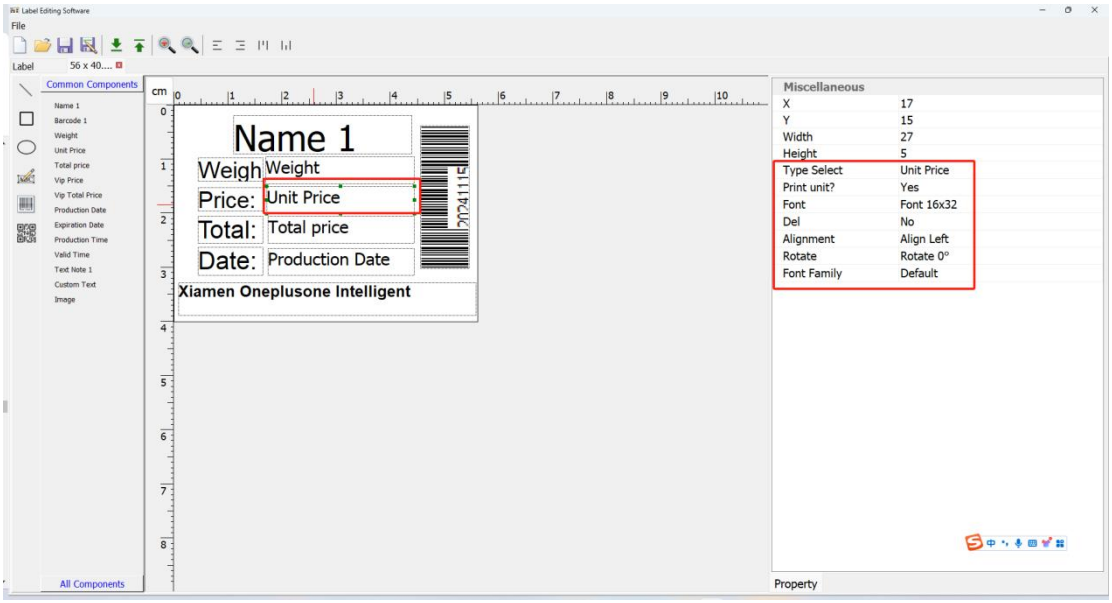



### 2.7.3 How to Edit Custom Text

For example, the custom text name is: Xiamen Oneplusone Intelligent Technology Co., Ltd.

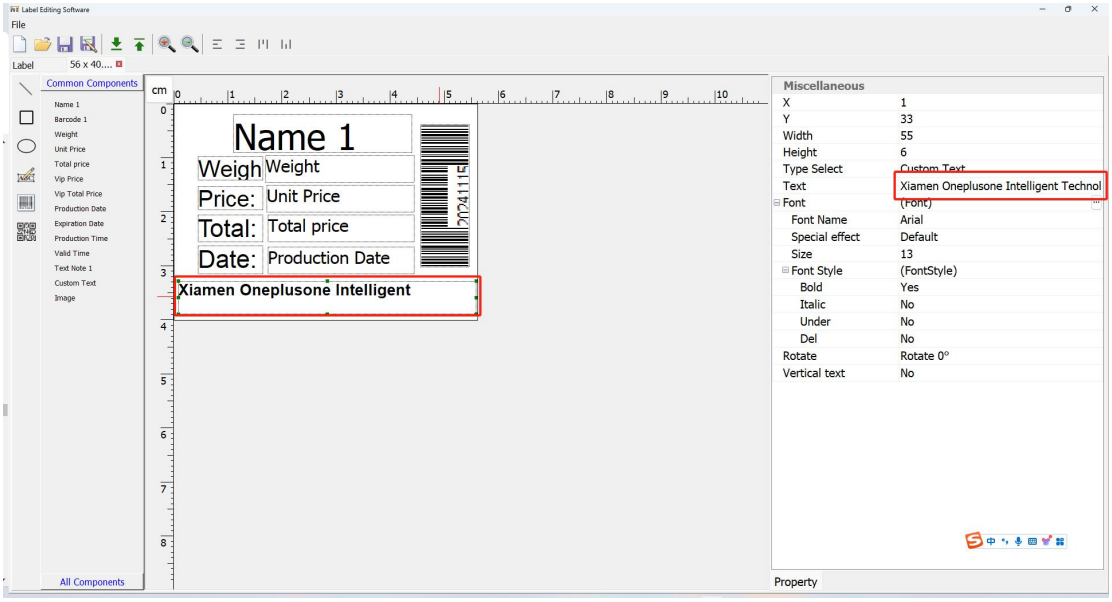

2.7.4 After completing the label editing, click Save or Save As.

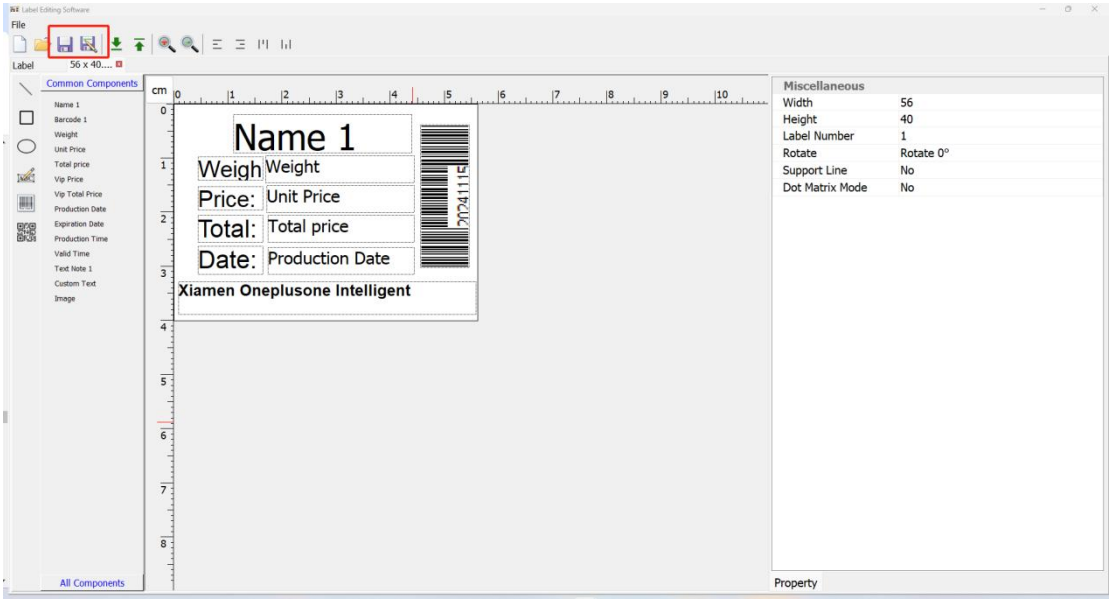


## 2.8 Download Label

To download the label, click on the download icon as shown in Figure 1, enter the scale's IP address in the pop-up dialog box, click "Download", and then click "Execute". As shown in Figure 2:

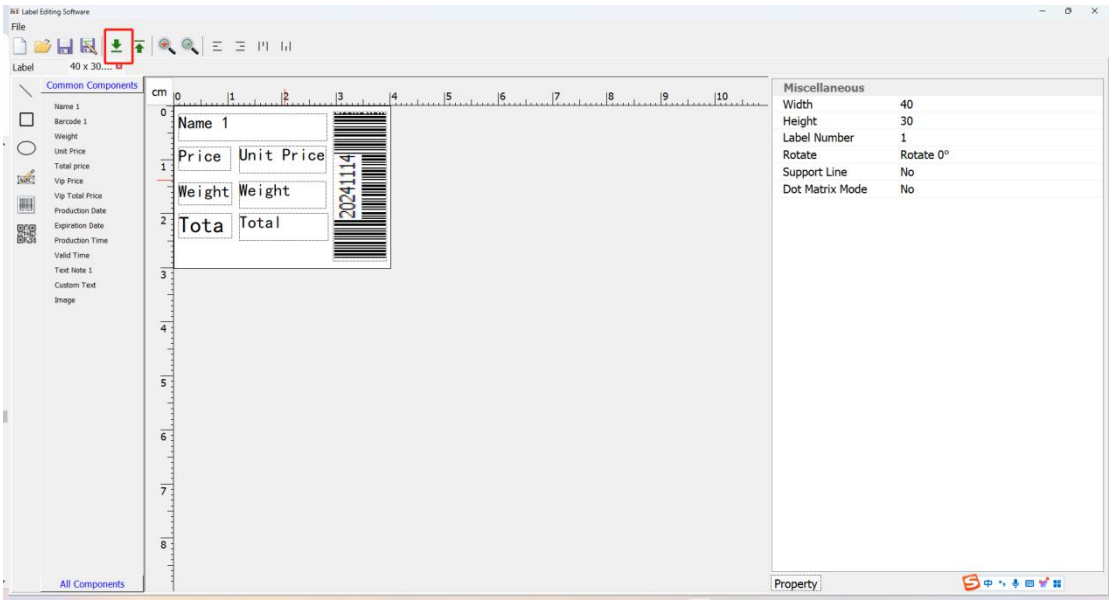



Figure 1

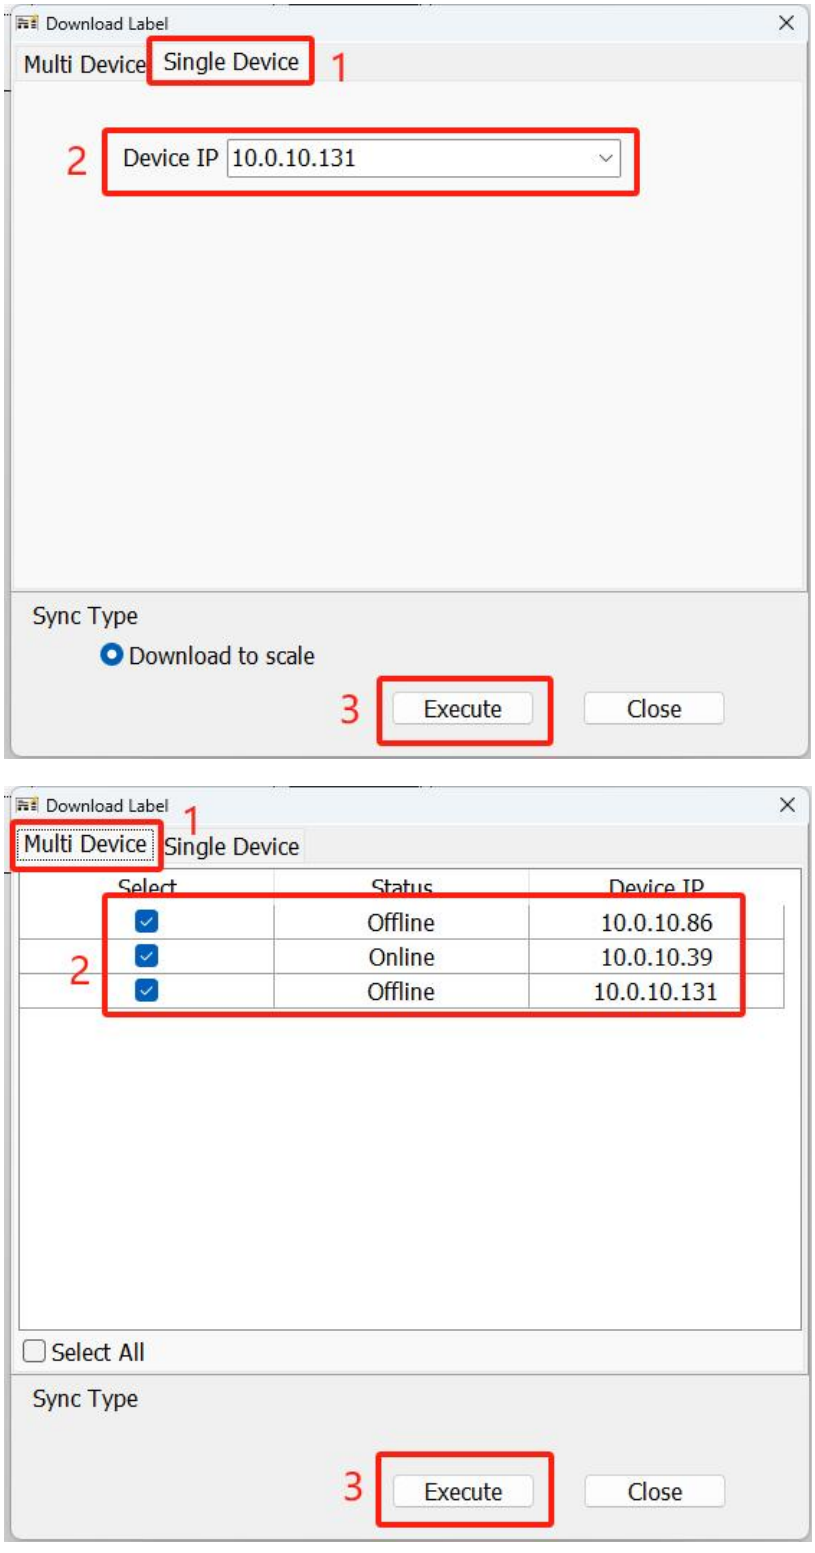

Download Label
Multi Device
Single Device
1
2
Device IP
10.0.10.131
Sync Type
Download to scale
3
Execute
Close
Download Label
1
Multi Device
Single Device
Select
Status
Device IP
2
Offline
10.0.10.86
Online
10.0.10.39
Offline
10.0.10.131
Select All
Sync Type
3
Execute
Close


Figure 2


# Chapter 3 Hotkey Editing and Hotkey Insert Installation


## 3.1 Common Hotkey Editing


### 3.1.1 Creating a Hotkey Table

1) Click "Hotkey" on the main interface -> click "Create Group", enter the group name and click "Confirm" -> click on "Create Hotkey", enter the table name and click "OK" -> select "Barcode" as the hotkey table type and click "Confirm" to complete the creation of the hotkey table. As shown in the following figure:

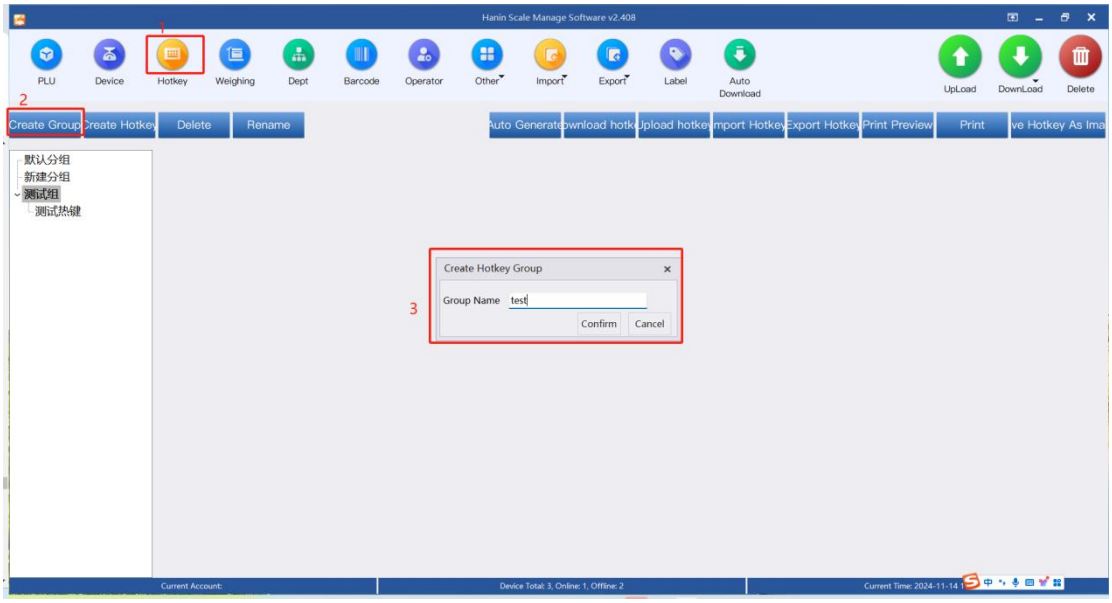

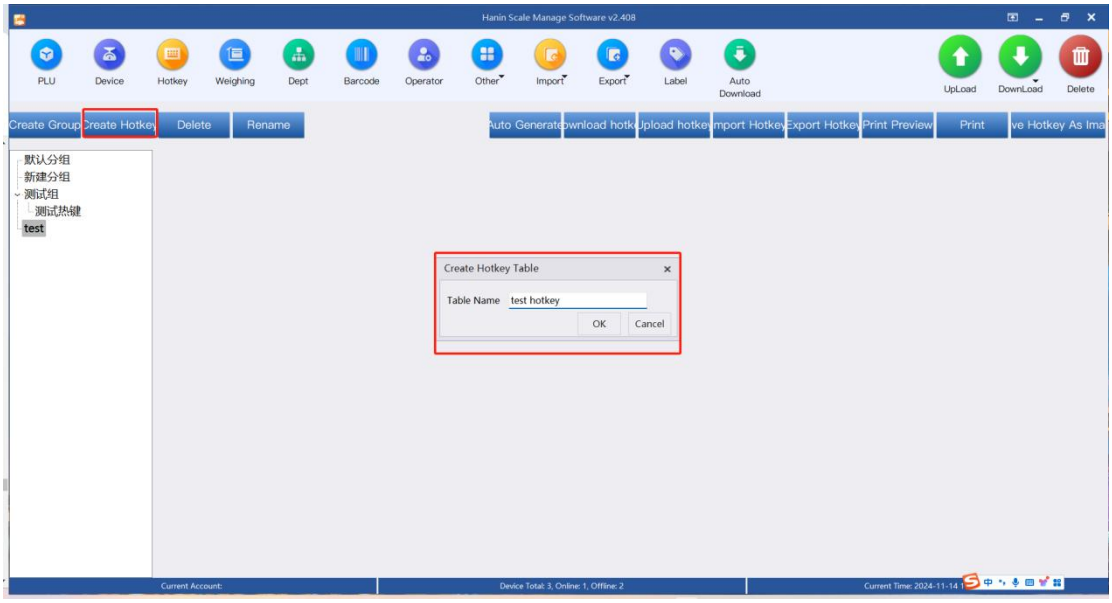

Hanin Scale Manage Software v2.408
PLU
Device
Hotkey
Weighing
Dept
Barcode
Operator
Other
Import
Export
Label
Auto Download
UpLoad
DownLoad
Delete
Create Group
Create Hotkey
Delete
Rename
Print Preview
Print
默认分组
新建分组
测试组
测试热键
test
Create Hotkey Table
Table Name
test hotkey
OK
Cancel
Current Account:
Device Total: 3, Online: 1, Offline: 2

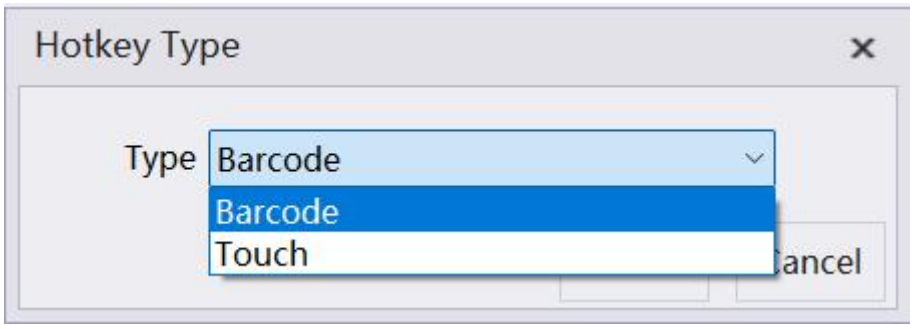
Hotkey Type
Type
Barcode
Barcode
Touch
Cancel

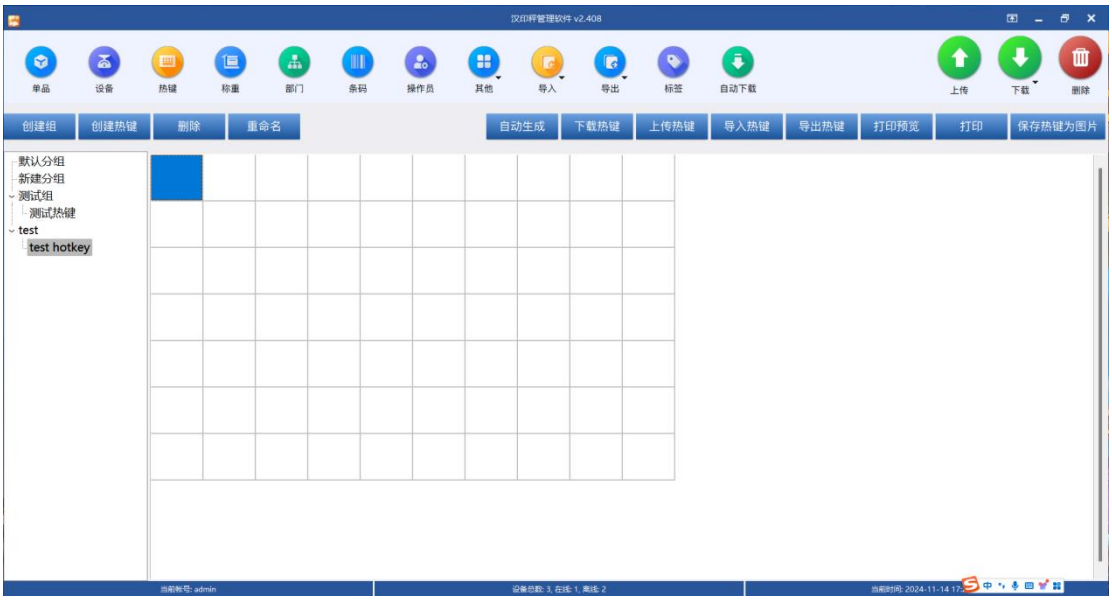
汉印秤管理软件 v2.408
单品
设备
热键
称重
部门
条码
操作员
其他
导入
导出
标签
自动下载
上传
下载
删除
创建组
创建热键
删除
重命名
自动生成
下载热键
上传热键
导入热键
导出热键
打印预览
打印
保存热键为图片
默认分组
新建分组
测试组
测试热键
test
test hotkey

## 3.1.2 Rename Group and Hotkey Table


For example, if the group or hotkey table name is "test", first select the group or hotkey table -> click "Rename" -> enter a new name and click "OK", as shown in the following figure:

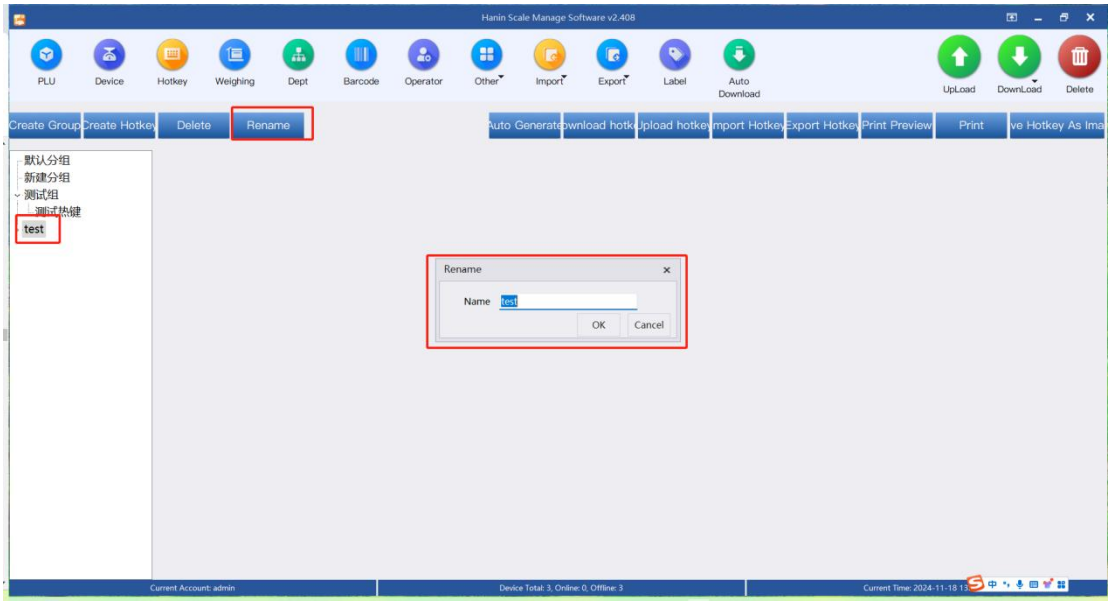

## 3.1.3 Edit Hotkeys

Hotkey editing is divided into automatic generation, download hotkeys, upload hotkeys, import hotkeys, print preview, print, and save hotkey as images.

Auto Generate: Click on the bottom left corner to generate page1, page2, or page3 as needed. As shown in the following figure:

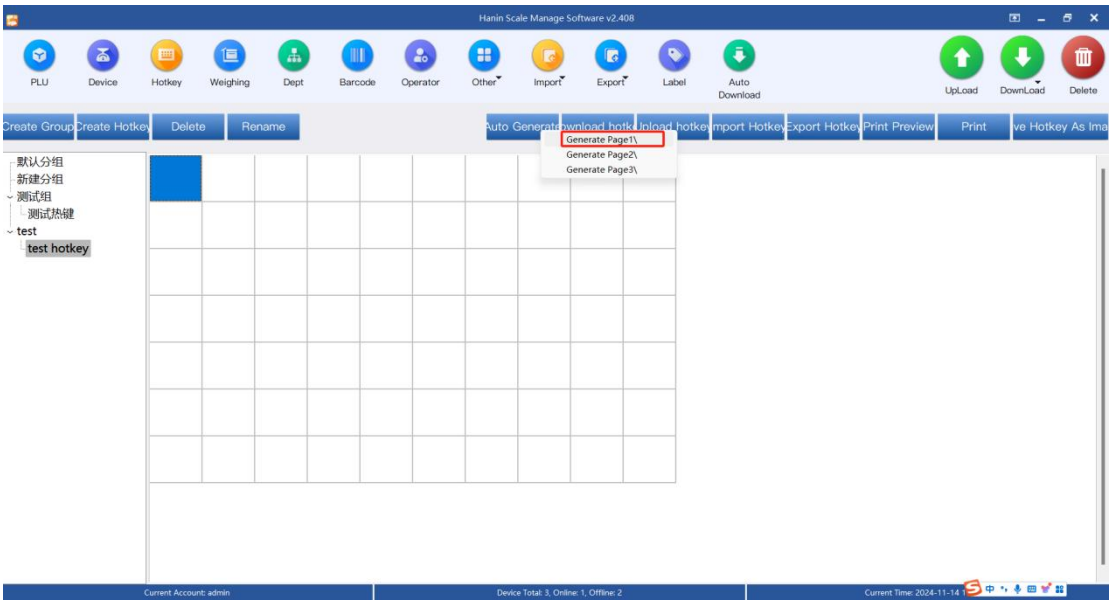






**Manual modification:** Double click the cell directly, enter the PLU of the product, press enter or click on the adjacent cell to complete the input.





## Select PLU to generate hotkeys


① Single edit: Right click on the hotkey grid → Select PLU→ Click Page 1 (or Page 2, or Page 3) → Select **LF Code** in the pop-up dialog box → Click "Confirm", as shown in the figure:

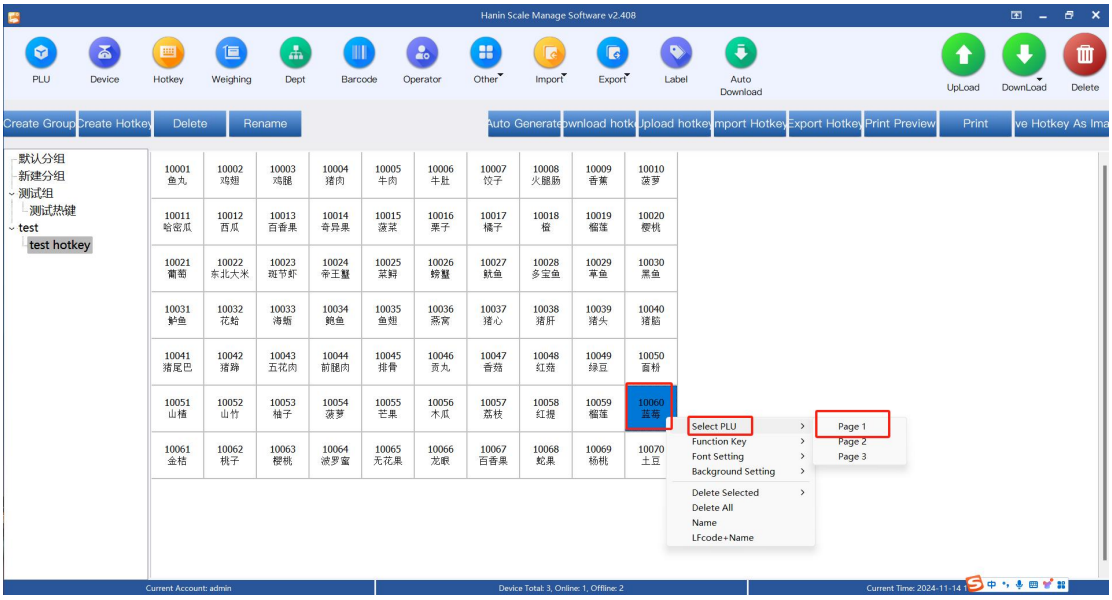


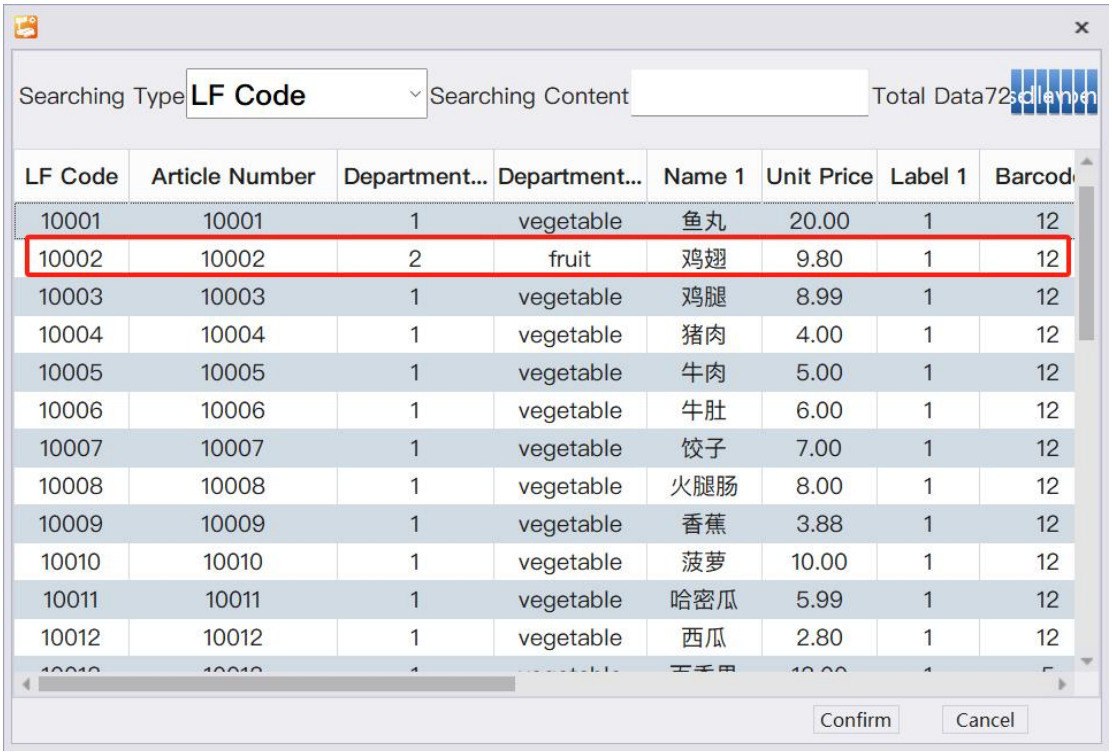
Searching Type
LF Code
Searching Content
Total Data72
LF Code
Article Number
Department...
Department...
Name 1
Unit Price
Label 1
Barcod
10001 10001 1 vegetable 鱼丸 20.00 1 12
10002 10002 2 fruit 鸡翅 9.80 1 12
10003 10003 1 vegetable 鸡腿 8.99 1 12
10004 10004 1 vegetable 猪肉 4.00 1 12
10005 10005 1 vegetable 牛肉 5.00 1 12
10006 10006 1 vegetable 牛肚 6.00 1 12
10007 10007 1 vegetable 饺子 7.00 1 12
10008 10008 1 vegetable 火腿肠 8.00 1 12
10009 10009 1 vegetable 香蕉 3.88 1 12
10010 10010 1 vegetable 菠萝 10.00 1 12
10011 10011 1 vegetable 哈密瓜 5.99 1 12
10012 10012 1 vegetable 西瓜 2.80 1 12
Confirm
Cancel

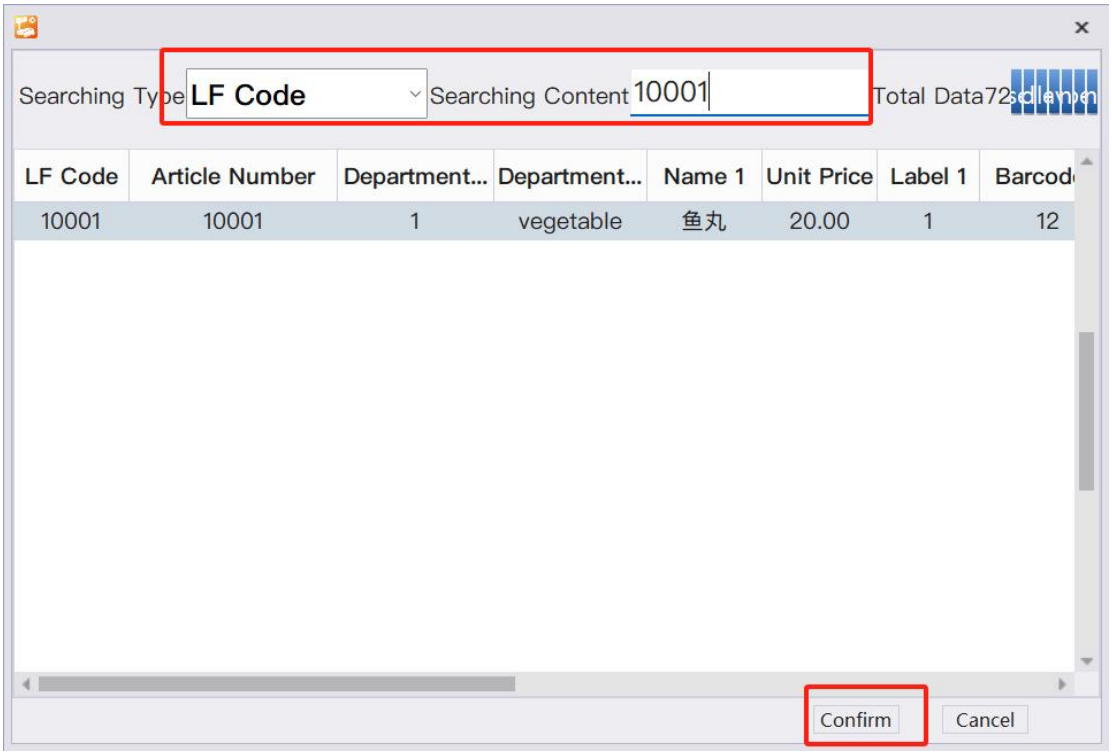
Searching Type
LF Code
Searching Content
10001
Total Data72
LF Code
Article Number
Department...
Department...
Name 1
Unit Price
Label 1
Barcod
10001 10001 1 vegetable 鱼丸 20.00 1 12
Confirm
Cancel

② Partial editing or full editing: Select partial or full in the hotkey table -> right-click -> select PLU -> Select Page 1 (or Page 2, or Page 3) -> select the desired item -> click "Confirm", as shown in the figure:

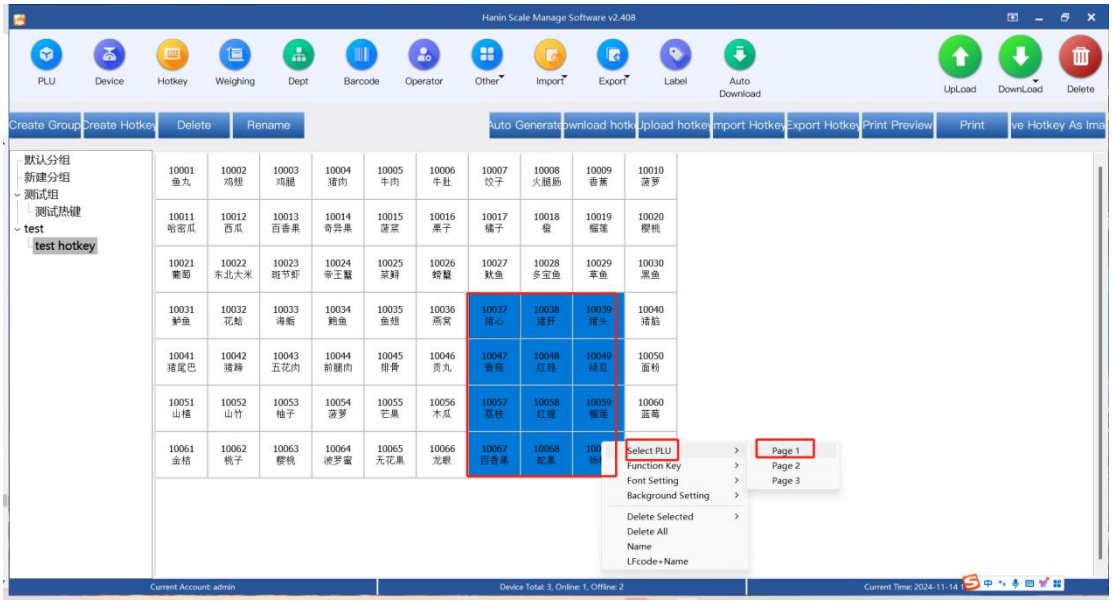

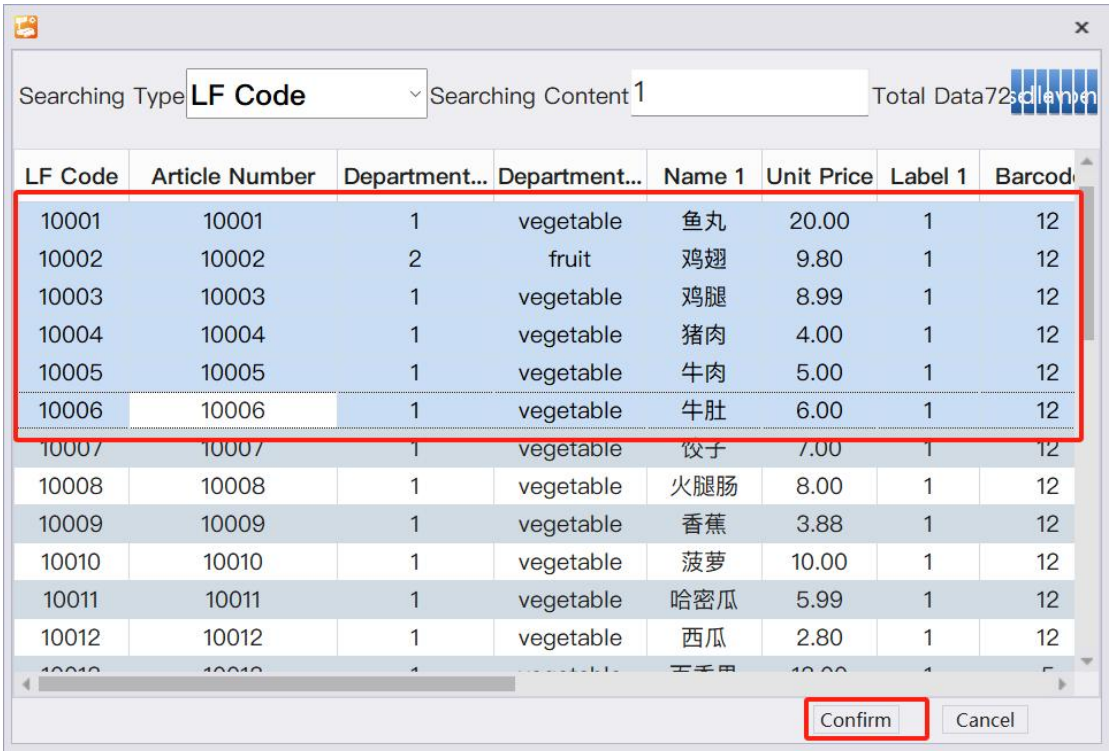
## 3.1.4 Function Key


Hot keys can also be used as function keys, and currently support three functions: displaying time, accumulating, and switching scales.


Select a hotkey, right-click to choose the **Function Key**, select the desired function, and the operation is completed.

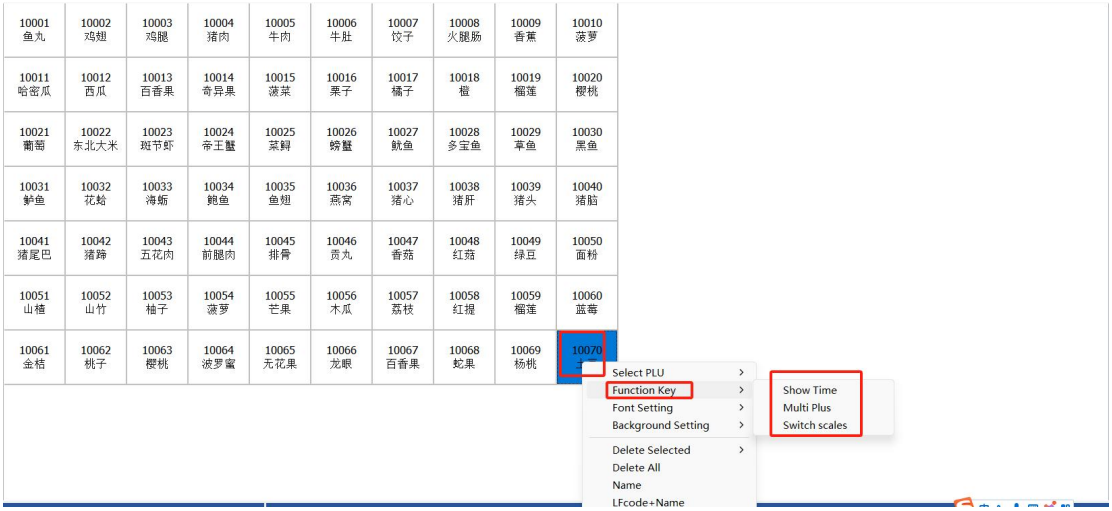


## 3.1.5 Font Setting


Select individual, partial or all items -> right-click -> Font Setting -> Page 1, Page 2 or Page 3, and edit the hotkey font as needed, as shown in the figure:

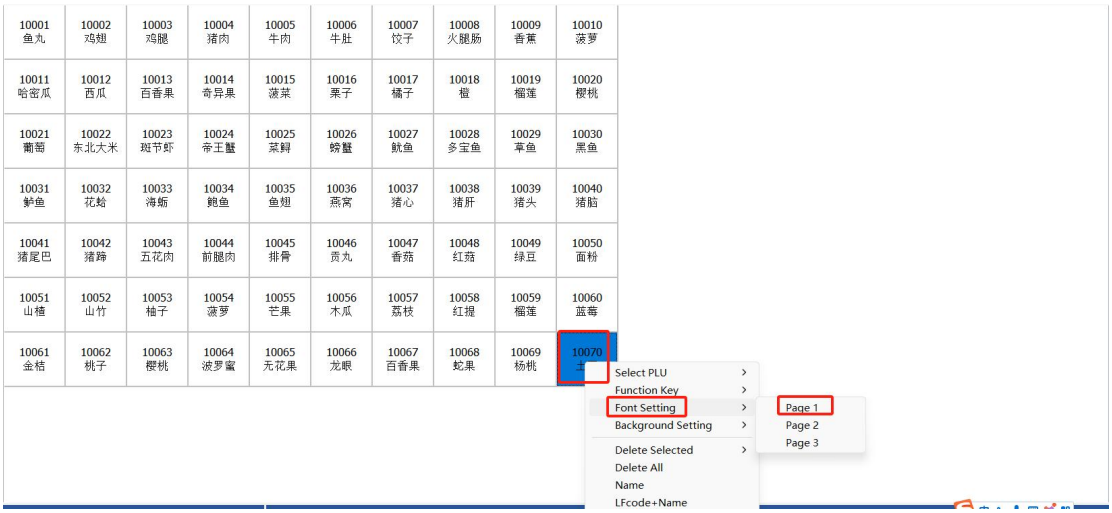


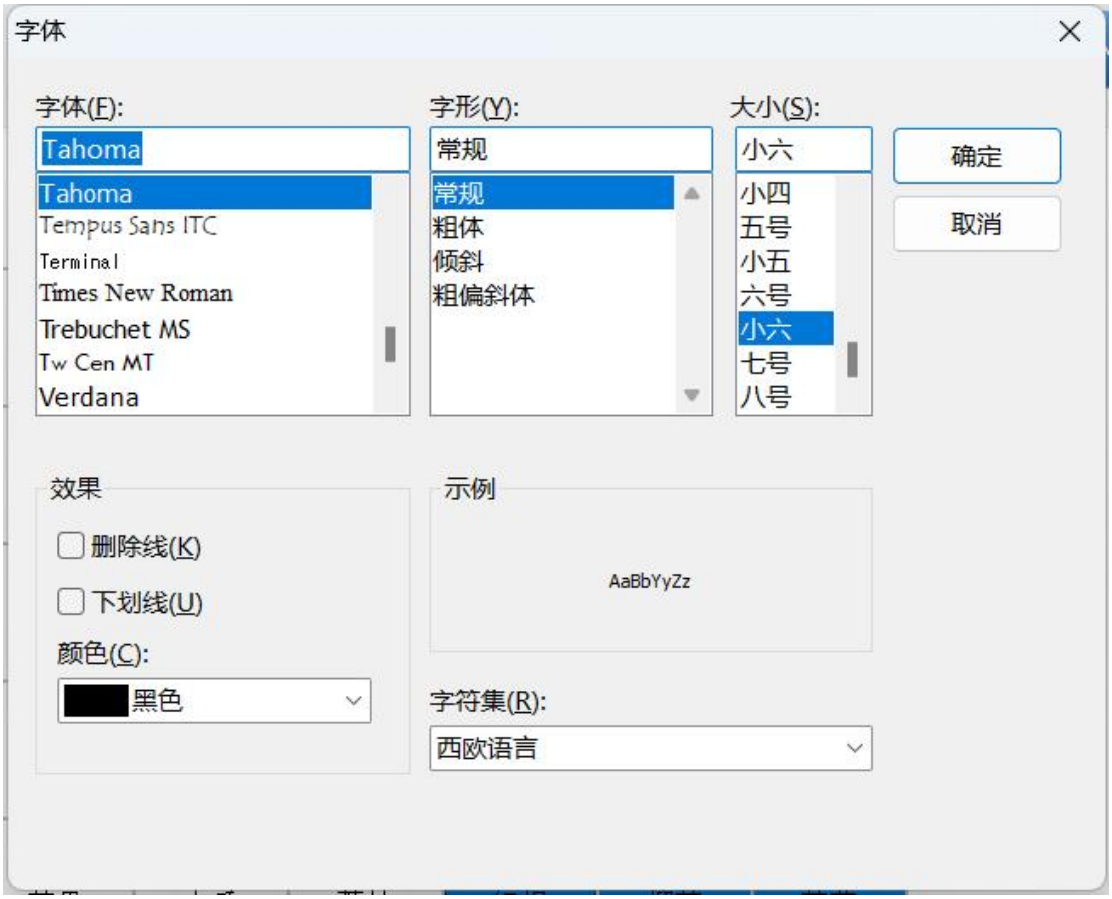


## 3.1.6 Background Setting


Select individual, partial or all items -> right-click -> Background Setting -> Page 1, Page 2 or Page 3, and set the background color of the hotkey table as needed, as shown in the figure:

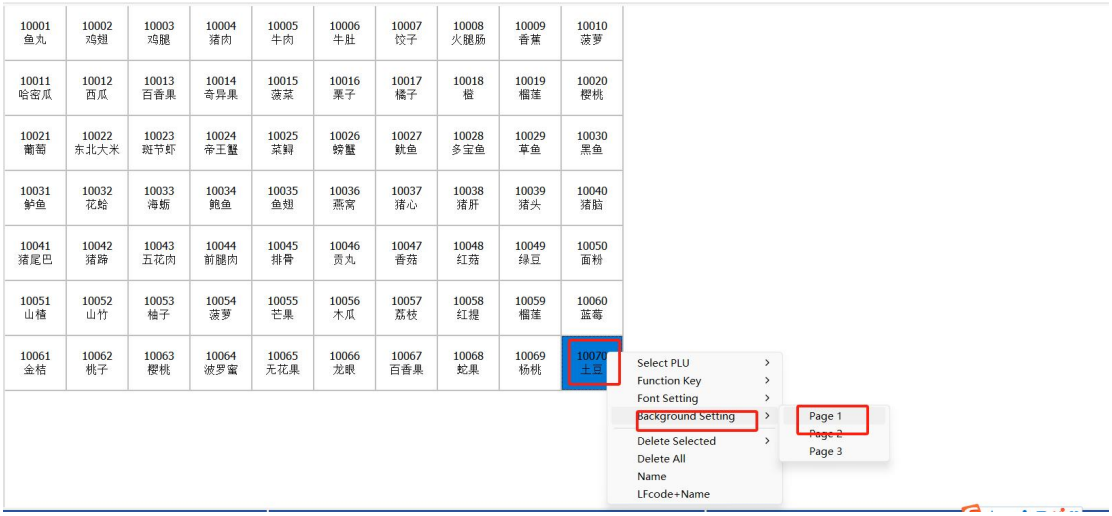

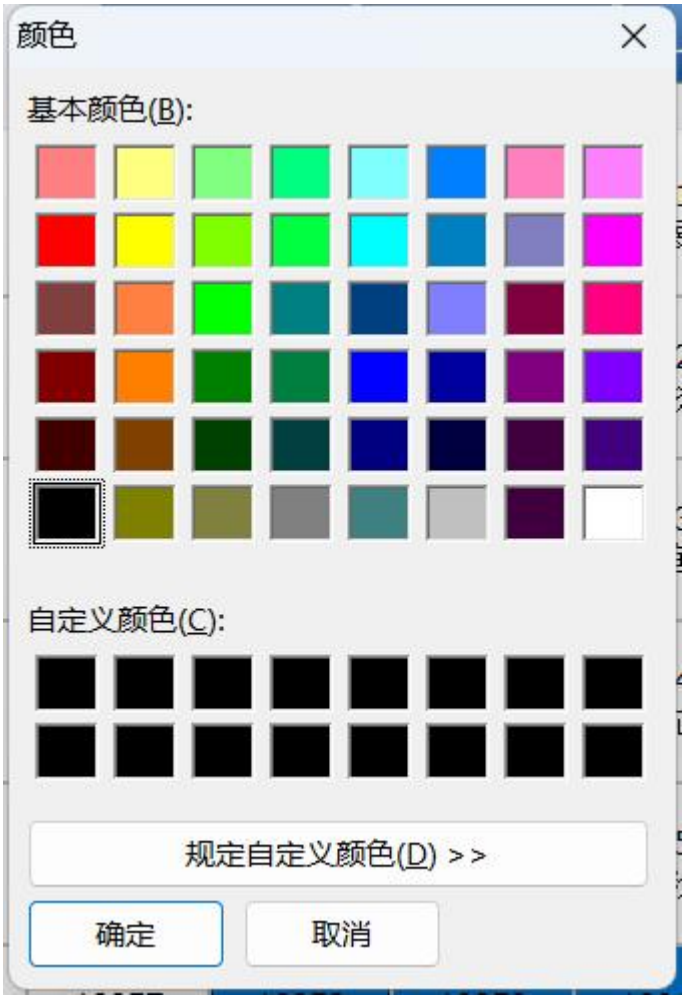



## 3.1.7 Hotkey Deletion

Select individual or partial item -> right-click -> Delete Selected -> Page 1, Page 2, or Page 3; (Note: If clearing the hotkey, select "Delete All" directly) as shown in the figure:

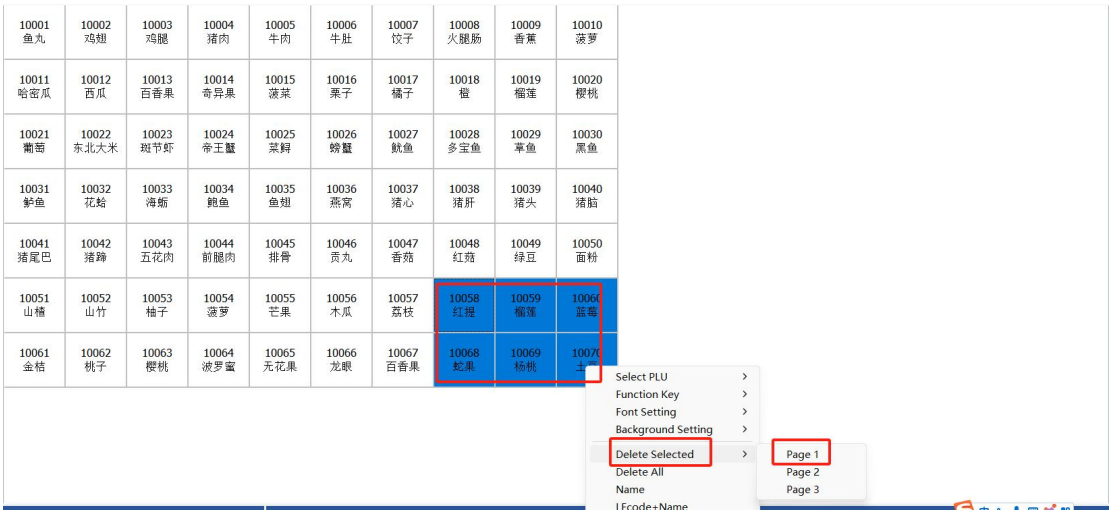

# 3.2 Hotkey Display Name or Fresh Code+Name


If the hotkey only displays the name of the product, right-click and select **Name**, then the hotkey will display only the name for all.

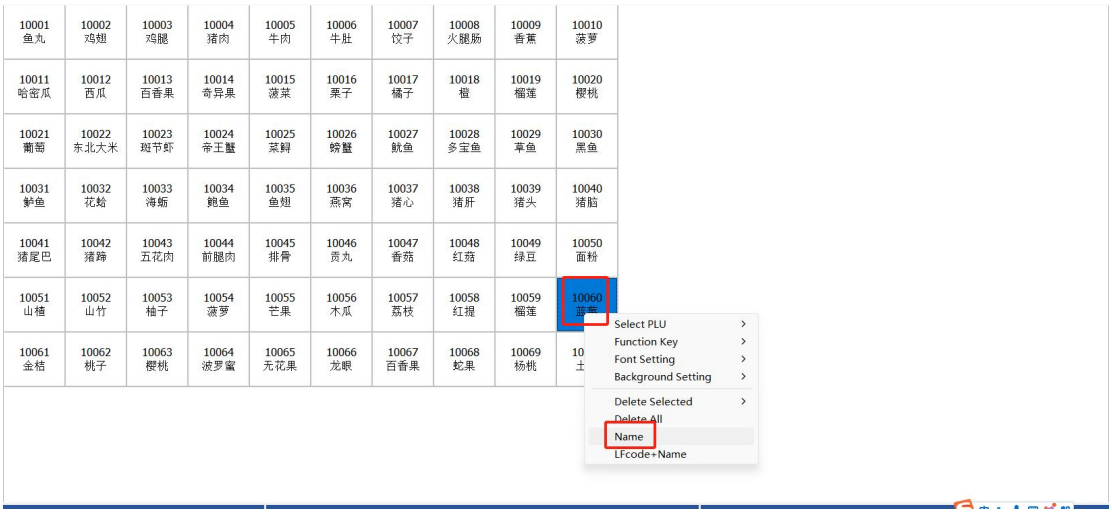




To display the fresh food code and name, right-click and select **LFcode+Name** to complete the setting.




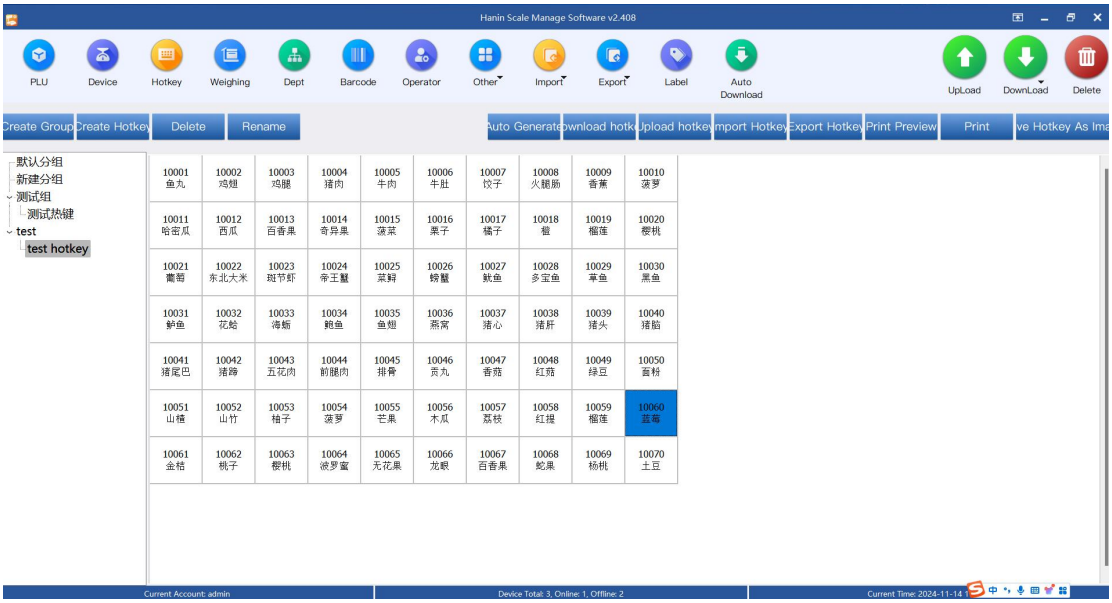



# 3.3 Download and Upload Hotkeys

## 3.3.1 Download Hotkeys


Firstly, after editing the hotkeys, go to the Download hotkey, select single or multiple devices, and then download; As shown in the figure:

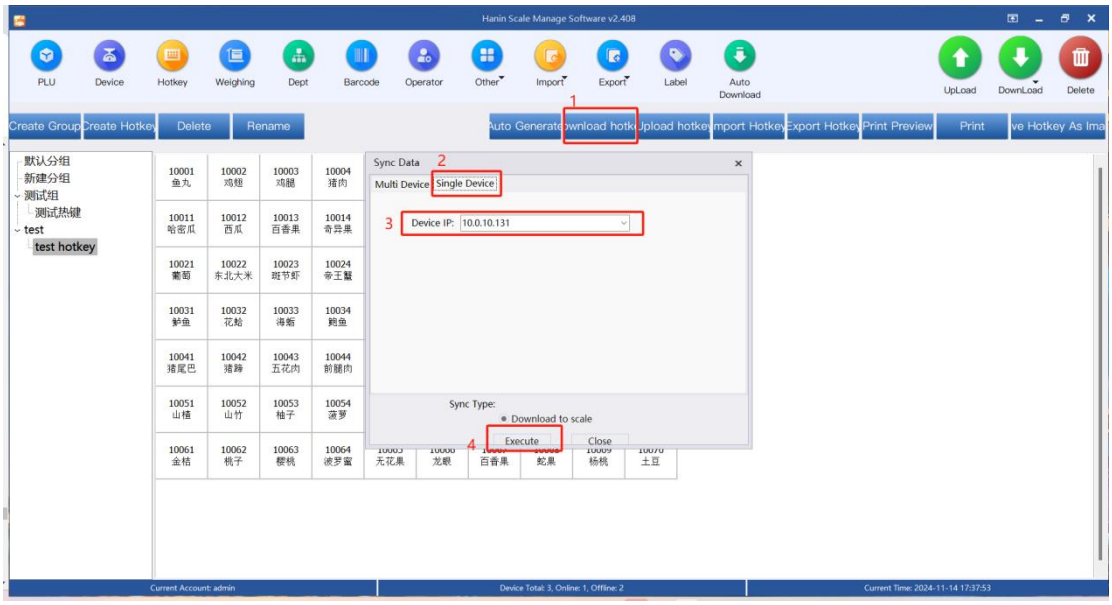
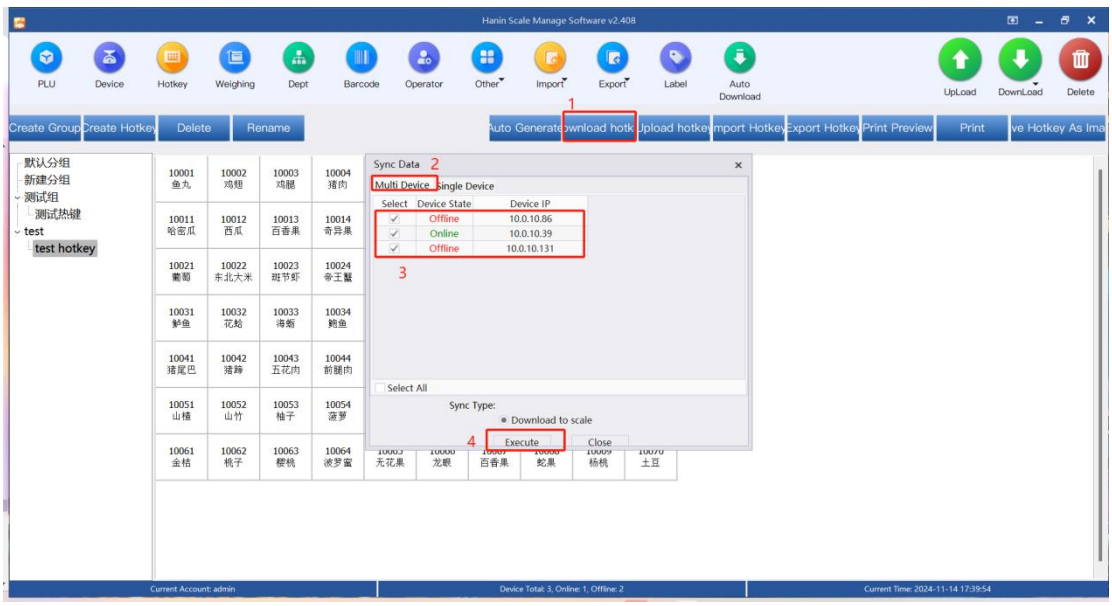
## 3.3.2 Upload Hotkeys


Click "Upload hotkey" -> click on "Device IP" to select the scale number -> click on "Execute"; As shown in the figure:

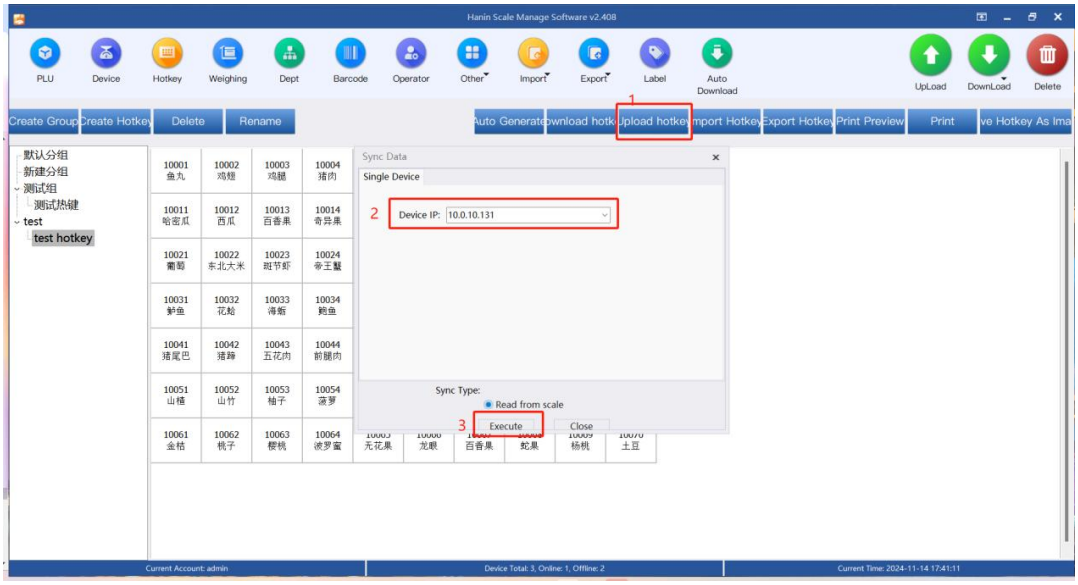


## 3.4 Import and Export Hotkeys


## 3.4.1 Import Hotkeys

Click "Import Hotkey" → select the backed up hotkey table → click "Open" as shown in the figure:

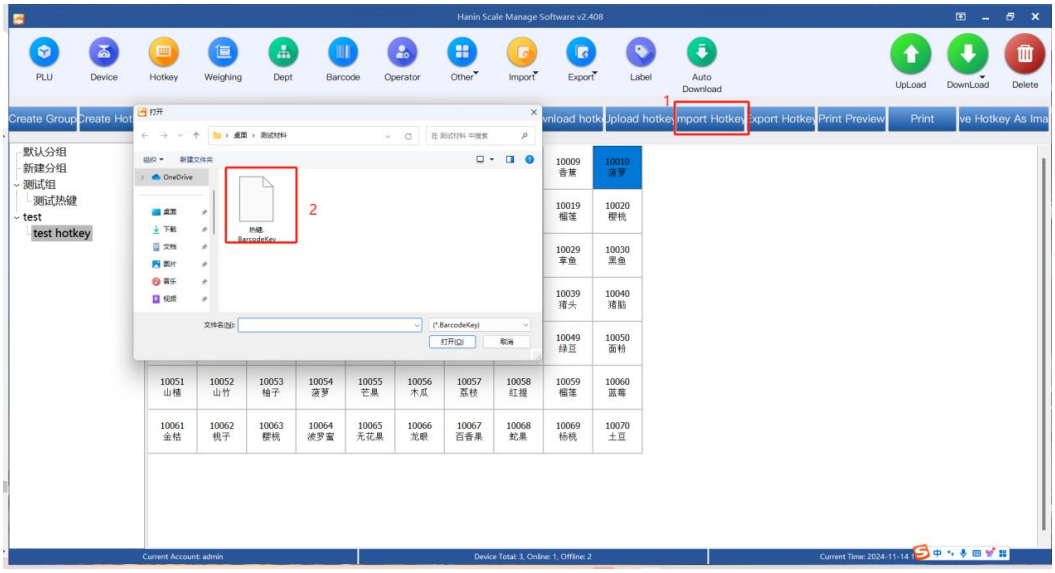


## 3.4.2 Export Hotkeys


Click "Export Hotkey" -> select the location where you want to save -> edit the "File Name" ->click "Save"; As shown in the figure:

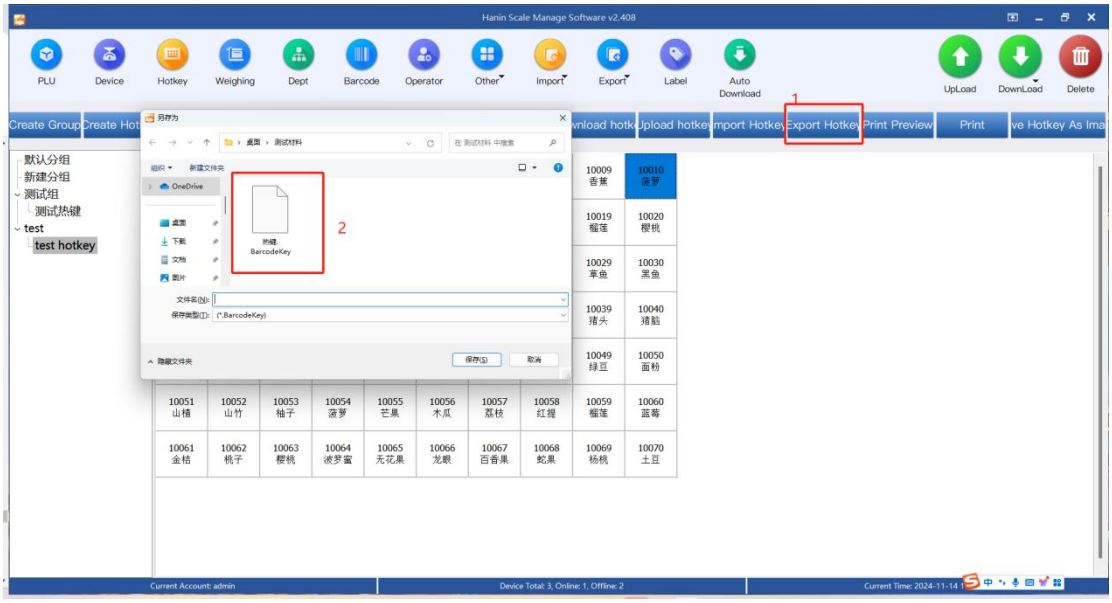

# 3.5 Printing Hotkeys

Before printing the hotkeys, you can first choose to click "Print Preview" to view the effect of the hotkeys printed. After confirming that there are no errors, you can then select to print. Click "Print" → Select printer → Click "OK" as shown in the figure:

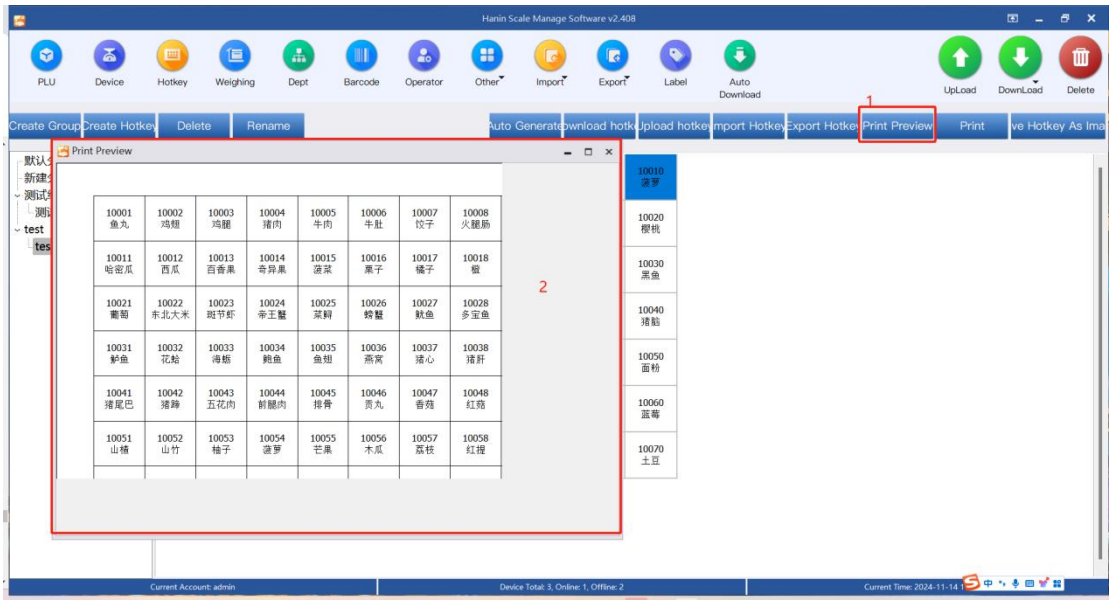

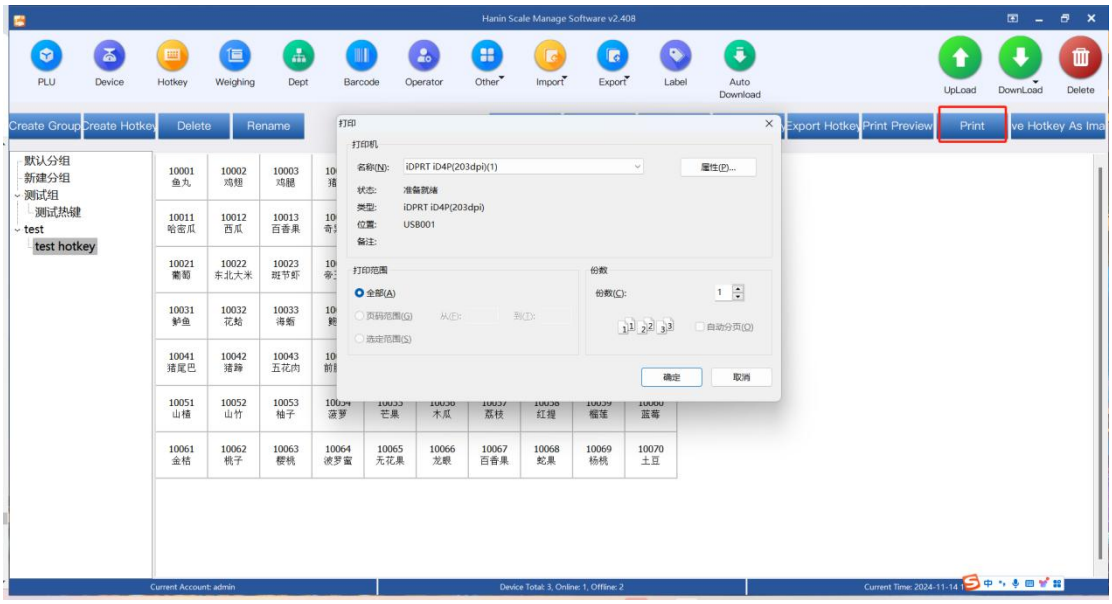



## 3.6 Installation of Hotkey Inserts

### 3.6.1 Cut the printed hotkey insert along the outer border.

| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| 苹果 | 香蕉 | 梨子 | 橙 | 番石榴 | 奇异果 | 柠檬 | 火龙果 | 木瓜 | 荔枝 |
| 红毛丹 | 琵琶 | 西瓜 | 椰青 | 蓝莓 | 柚子 | 石榴 | 菠萝 | 芒果 | 黑美人 |
| 红提 | 青提 | 榴莲 | 山竹 | 哈密瓜 | 草莓 | 黑布李 | 青枣 | 金桔 | 桃子 |
| 桑葚 | 樱桃 | 波罗蜜 | 无花果 | 龙眼 | 圣女番茄 | 百香果 | 蛇果 | 杨桃 | 释迦 |
| 杨梅 | 彩椒 | 南瓜 | 西红柿 | 黄瓜 | 土豆 | 秋葵 | 蘑菇 | 辣椒 | 葱 |
| 姜 | 蒜 | 菠菜 | 大白菜 | 包菜 | 黑枣 | 红枣 | 白木耳 | 黑木耳 | 腰果 |
| 茶树菇 | 核桃 | 桂圆 | 香菇 | 笋干 | 莲子 | 枸杞 | 杏仁 | 竹荪 | 鸡腿 |

### 3.6.2 Insert the cut hotkey insert from the bottom.

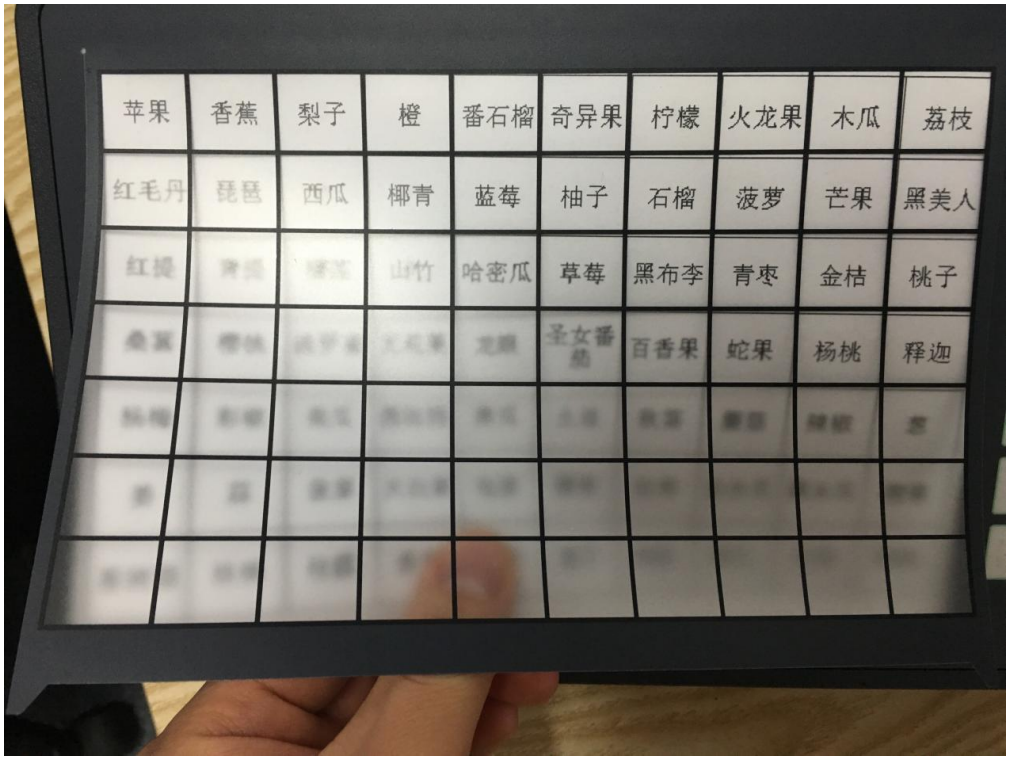

# Appendix I Barcode Code Comparison Table

| Barcode Type | Department | Article No. (Article number) | Total price | Weight | Checksum |
|---|---|---|---|---|---|
| 00~09: Ean13 code, with department code printed on the first two codes: | | | | | |
| 00 | DD(2) | IIIIIIIIII(10) | X | X | C |
| 01 | DD(2) | IIIIII(6) | PPPP(4) | X | C |
| 02 | DD(2) | IIIII(5) | PPPPP(5) | X | C |
| 03 | DD(2) | IIII(4) | PPPPPP(6) | X | C |
| 04 | DD(2) | III(3) | PPPPPPP(7) | X | C |
| 05 | DD(2) | IIIIII(6) | X | W.WWW(4) | C |
| 06 | DD(2) | IIIIII(6) | X | WW.WW(4) | C |
| 07 | DD(2) | IIIII(5) | X | WW.WWW(5) | C |
| 08 | DD(2) | IIIII(5) | X | WWWW.W(5) | C |
| 09 | DD(2) | IIIII(5) | X | WWWWW(5) | C |
| 10~19: Ean13 code, the first two codes printed fixed code: | | | | | |
| 10 | 20(2) | IIIIIIIIII(10) | X | X | C |

| Barcode Type | Department | Article No. (Article number) | Total price | Weight | Checksum |
|---|---|---|---|---|---|
| 11 | 21(2) | IIIIII(6) | PPPP(4) | X | C |
| 12 | 22(2) | IIIII(5) | PPPPP(5) | X | C |
| 13 | 23(2) | IIII(4) | PPPPPP(6) | X | C |
| 14 | 24(2) | III(3) | PPPPPPP(7) | X | C |
| 15 | 25(2) | IIIIII(6) | X | W.WWW(4) | C |
| 16 | 26(2) | IIIIII(6) | X | WW.WW(4) | C |
| 17 | 27(2) | IIIII(5) | X | WW.WWW(5) | C |
| 18 | 28(2) | IIIII(5) | X | WWWW.W(5) | C |
| 19 | 29(2) | IIIII(5) | X | WWWWW(5) | C |
| 20: Do not print barcode | | | | | |
| 21~29: Ean13 code, the department code is printed on the previous code: | | | | | |
| 21 | D(1) | IIIIIII(7) | PPPP(4) | X | C |
| 22 | D(1) | IIIIII(6) | PPPPP(5) | X | C |
| 23 | D(1) | IIIII(5) | PPPPPP(6) | X | C |
| 24 | D(1) | IIII(4) | PPPPPPP(7) | X | C |
| 25 | D(1) | IIIIIII(7) | X | W.WWW(4) | C |

| Barcode Type | Department | Article No. (Article number) | Total price | Weight | Checksum |
|---|---|---|---|---|---|
| 26 | D(1) | IIIIIII(7) | X | WW.WW(4) | C |
| 27 | D(1) | IIIIII(6) | X | WW.WWW(5) | C |
| 28 | D(1) | IIIIII(6) | X | WWWW.W(5) | C |
| 29 | D(1) | IIIIII(6) | X | WWWWW(5) | C |
| 30~35: 18 code, the department code is printed on the previous code | | | | | |
| 30&33 | D(1) | IIIIII(6) | PPPPP(5) | WW.WWW(5) | C |
| 31&34 | D(1) | IIIIII(6) | PPPPP(5) | WWWW.W(5) | C |
| 32&35 | D(1) | IIIIII(6) | PPPPP(5) | WWWWW(5) | C |
| 40-45:18 code, with department code printed on the previous code | | | | | |
| 40&43 | D(1) | IIIIII(6) | UUUUU(5) | WW. WWW(5) | C |
| 41&44 | D(1) | IIIIII(6) | UUUUU(5) | WWWW.W(5) | C |
| 42&45 | D(1) | IIIIII(6) | UUUUU(5) | WWWWW(5) | C |
| 46:18 code | | | | | |
| 46 | DD(2) | IIIIII(6) | PPPPP(5) | WWWWW(5) | X |

| Barcode Type | Department | Article No. (Article number) | Total price | Weight | Checksum |
|---|---|---|---|---|---|
| 50~55: 51"(8yd) | | | | | |
| 50 | X | IIIIIII(7) | X | X | C |
| 51 | D(1) | IIIIII(6) | X | X | C |
| 52 | DD(2) | IIIII(5) | X | X | C |
| 53 | X | IIIIIIII(8) | X | X | X |
| 54 | D(1) | IIIIIII(7) | X | X | X |
| 55 | DD(2) | IIIIII(6) | X | X | X |
| 36-38: 18 code, with department code printed on the previous code, dedicated for fresh batch management | | | | | |
| 36 | D(1) | LLLLLL(6) | BBBB(4) | RR(2) | WW.WWW(5) |
| 37 | D(1) | LLLLLL(6) | BBBB(4) | RR(2) | WWWW.W(5) |
| 38 | D(1) | LLLLLL(6) | BBBB(4) | RR(2) | WWWWW(5) |
| 66~68:18 ode, dedicated for fresh batch management | | | | | |
| 66 | D(1) | LLLLL(5) | BBBB(4) | RR(2) | WW.WWW(5) | C |
| 67 | D(1) | LLLLL(5) | BBBB(4) | RR(2) | WWWW.W(5) | C |
| 68 | D(1) | LLLLL( | BBBB(4) | RR(2) | WWWWW(5) | C |

| Barcode Type | Department | Article No. (Article number) | Total price | Weight | Checksum |
|---|---|---|---|---|---|
| | | 5) | | | |
| 60-65: ISBN code, a type of 18 code | | | | | |
| 60 | D(1) | IIIIII(6) | PPPPP(5) | WW.WWW(5) | C |
| 61 | D(1) | IIIIII(6) | PPPPP(5) | WWWW.W(5) | C |
| 62 | D(1) | IIIIII(6) | PPPPP(5) | WWWWW(5) | C |
| 63 | D(1) | IIIIII(6) | UUU.UU(5) | WW.WWW(5) | C |
| 64 | D(1) | IIIIII(6) | UUU.UU(5) | WWWW.W(5) | C |
| 65 | D(1) | IIIIII(6) | UUU.UU(5) | WWWWW(5) | C |
| 79~85, 87:18 code | | | | | |
| 79 | DD | IIIIII(6) | WW.WWW | PPPPP | X |
| 80 | D | IIIIII(6) | WW.WWW | PPPPP | C |
| 81 | D | IIIIII(6) | WWWW.W | PPPPP | C |
| 82 | D | IIIIII(6) | WWWWW | PPPPP | C |
| 83 | D | IIIIII(6) | WW.WWW | UUU.UU | C |

| Barcode Type | Department | Article No. (Article number) | Total price | Weight | Checksum |
|---|---|---|---|---|---|
| 84 | D | IIIIII(6) | WWWW.W | UUU.UU | C |
| 85 | D | IIIIII(6) | WWWWW | UUU.UU | C |
| 87 | DD | IIIII(5) | WW.WWW | PPPPP | C |
| 90~95: 18 codes, with department codes printed on the first two codes: | | | | | |
| 90 | DD(2) | IIIIII(6) | WW.WWW | UU.UU(4) | C |
| 91 | DD(2) | IIIIII(6) | WWWW.W | UU.UU(4) | C |
| 92 | DD(2) | IIIIII(6) | WWWWW | UU.UU(4) | C |
| 93 | D(1) | IIIIII(6) | PPPPP(5) | UUU.UU(5) | C |
| 94 | DD(2) | IIIII(5) | PPPPP(5) | WW.WWW | C |
| 95 | DD(2) | IIIIII(6) | WWWWW | UU.UU(4) | C |
| 96 | DD(2) | IIIIII(6) | W.WWW | PPPPP(5) | C |

| Barcode Type | Department | Article No. (Article number) | Total price | Weight | Checksum |
|---|---|---|---|---|---|
| 97 | DD(2) | IIII(4) | PPPPPP(6) | WW.WWW | C |
| 98 | DD(2) | IIIII(5) | UUUUU(5) | WW.WWW | C |

**The meanings of the letters in the table are as follows:**

C: CheckSum D: Department code 2: Fixed number "2" I: Article No. (Article number)

L: Fresh code P: Total price U: Unit price R:  Discount W:  Weight X: No such item

Ean13 code=DEPMENT+CODE+[TOTAL PRICE]+[WEIGHT]+C, where: with [] item indicating in some encodings

This item is not included in the method.

For Ean13 codes, if a price barcode is used, the barcode type is often 2 (or 22), and if a weight barcode is used, the barcode type is often 7 (or 27).

CHECK SUM is automatically calculated by the label scale, and users do not need to enter this item in the label scale management software.

The difference between 30-32 and 33-35 formats lies in the calculation method of CHECK SUM.

The difference between the 40-45 and 30-35 formats is that the price in 30-35 is the total price, while the price in 40-45 is the unit price.

36-38, 66-68 are barcode types that can be used for fresh batch management. The product batch number is filled in the product number field, and the product number is filled in the fresh code field.

60-65 is the ISBN code.

The calculation method of EAN13 code verification code Z:

(Sum of even digits * 3)+Sum of odd digits+Z=a multiple of 10

# APPENDIXII CODE AND GRAVITY ACCELERATION COMPARISON TABLE FOR MAJOR CITIES IN CHINA

| City Code | City | Gravity Acceleration | A/D Compensation value | City Code | City | Gravity Acceleration | A/D Compensation value |
|---|---|---|---|---|---|---|---|
| 0 | Xiamen | 9.7887 | / | 39 | Chengdu | 9.7913 | -8 |
| 1 | Peking | 9.8015 | -39 | 40 | Kunming | 9.7836 | 16 |
| 2 | Shanghai | 9.7946 | -18 | 41 | Guiyang | 9.7868 | 6 |
| 3 | Tianjin | 9.8011 | -38 | 42 | Nanning | 9.7877 | 3 |
| 4 | Chongqing | 9.7914 | -8 | 43 | Liuzhou | 9.7985 | -30 |
| 5 | Haerbin | 9.8066 | -55 | 44 | Zhengzhou | 9.7966 | -24 |
| 6 | Jiamusi | 9.8079 | -59 | 45 | Luoyang | 9.7961 | -23 |

| City Code | City | Gravity Acceleration | A/D Compensation value | City Code | City | Gravity Acceleration | A/D Compensation value |
|---|---|---|---|---|---|---|---|
| 7 | Mudanjiang | 9.8051 | -50 | 46 | Kaifeng | 9.7966 | -24 |
| 8 | Qiqihaer | 9.8080 | -59 | 47 | Wuhan | 9.7936 | -15 |
| 9 | Changchun | 9.8048 | -49 | 48 | Hankou | 9.7936 | -15 |
| 10 | Jilin | 9.8048 | -49 | 49 | Yichang | 9.7933 | -14 |
| 11 | Shenyang | 9.8035 | -45 | 50 | Changsha | 9.7915 | -9 |
| 12 | Dalian | 9.8011 | -38 | 51 | Hengyang | 9.7907 | -6 |
| 13 | Dandong | 9.8019 | -40 | 52 | Guangzhou | 9.7883 | 1 |
| 14 | Jinzhou | 9.8027 | -43 | 53 | Huiyang | 9.7882 | 2 |
| 15 | Shijiazhuang | 9.7997 | -34 | 54 | Haikou | 9.7863 | 7 |

| City Code | City | Gravity Acceleration | A/D Compensation value | City Code | City | Gravity Acceleration | A/D Compensation value |
|---|---|---|---|---|---|---|---|
| 16 | Fuxin | 9.8032 | -44 | 55 | Nanchang | 9.7920 | -10 |
| 17 | Baoding | 9.8003 | -36 | 56 | Jiujiang | 9.7928 | -13 |
| 18 | Tangshan | 9.8016 | -40 | 57 | Fuzhou | 9.7891 | -1 |
| 19 | Zhangjiakou | 9.8000 | -35 | 58 | Hangzhou | 9.7936 | -15 |
| 20 | Chengde | 9.8017 | 40 | 59 | Nanjing | 9.7949 | -19 |
| 21 | Shanhaiguan | 9.8018 | -40 | 60 | Pukou | 9.7951 | -20 |
| 22 | Taiyuan | 9.7970 | -25 | 61 | Xuzhou | 9.7967 | -25 |
| 23 | Datong | 9.7984 | -30 | 62 | Hefei | 9.7947 | -18 |
| 24 | Wulanliha | 9.7994 | -33 | 63 | Bengbu | 9.7954 | -21 |

| City Code | City | Gravity Acceleration | A/D Compensation value | City Code | City | Gravity Acceleration | A/D Compensation value |
|---|---|---|---|---|---|---|---|
| 25 | Baotou | 9.7986 | -30 | 64 | Anqing | 9.7936 | -15 |
| 26 | Hulanhaote | 9.8066 | -55 | 65 | Wuhu | 9.7944 | -17 |
| 27 | Hailaer | 9.8081 | -59 | 66 | Jinan | 9.7988 | -31 |
| 28 | Xian | 9.7944 | -17 | 67 | Qingdao | 9.7985 | -30 |
| 29 | Yanan | 9.7955 | -21 | 68 | Dezhou | 9.7995 | -33 |
| 30 | Baoji | 9.7933 | -14 | 69 | Mohe | 9.8121 | -72 |
| 31 | Tongguan | 9.7951 | -20 | 70 | Huhehaote | 9.8066 | -55 |
| 32 | Lanzhou | 9.7926 | -12 | 71 | Yueyang | 9.7929 | -13 |
| 33 | Xining | 9.7911 | -7 | 72 | Wenzhou | 9.7919 | -10 |
| 34 | Yinchuan | 9.7961 | -23 | 73 | Zhuzhou | 9.7916 | -9 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| 35 | Wulumuqi | 9.8015 | -39 | 74 | Mianyang | 9.7913 | -8 |
| 36 | Tulufan | 9.8024 | -42 | 75 | Shenzhen | 9.7887 | 0 |
| 37 | Hami | 9.8006 | -36 | 76 | Zhanjiang | 9.7868 | 6 |
| 38 | Lasa | 9.7799 | 27 | 77 | Taibei | 9.7900 | / |

**Note**:

The above list is only the gravity acceleration values of major cities in China, and other cities need to be interpolated and converted according to latitude.

Adjusting the gravity acceleration value requires our company's personnel or dealers to do so.