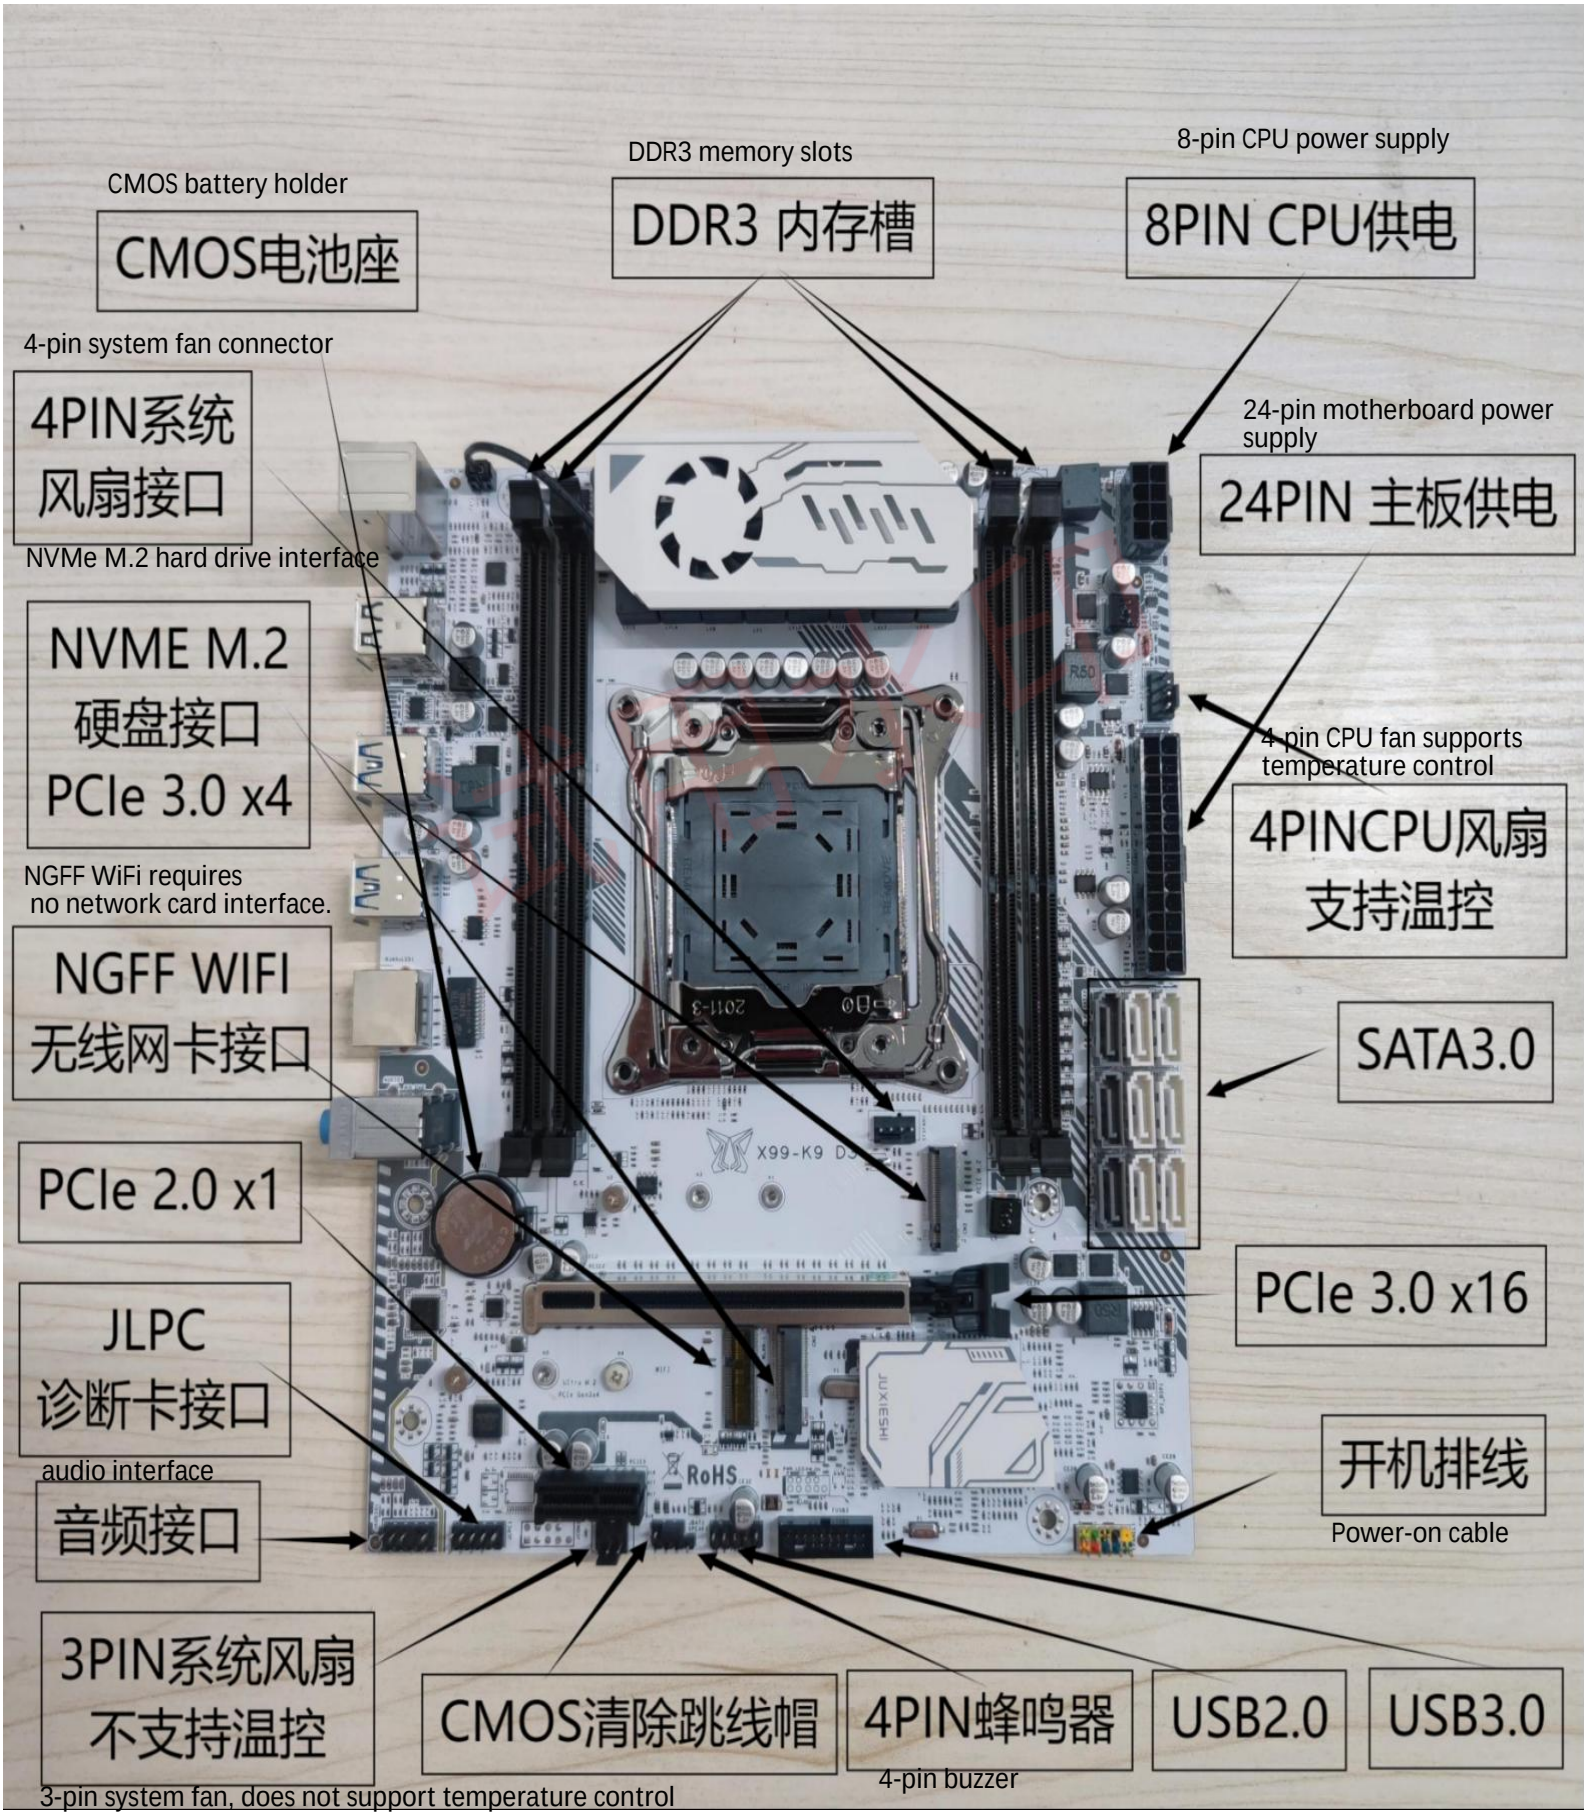
接口定义（Interface definition）



CMOS battery holder

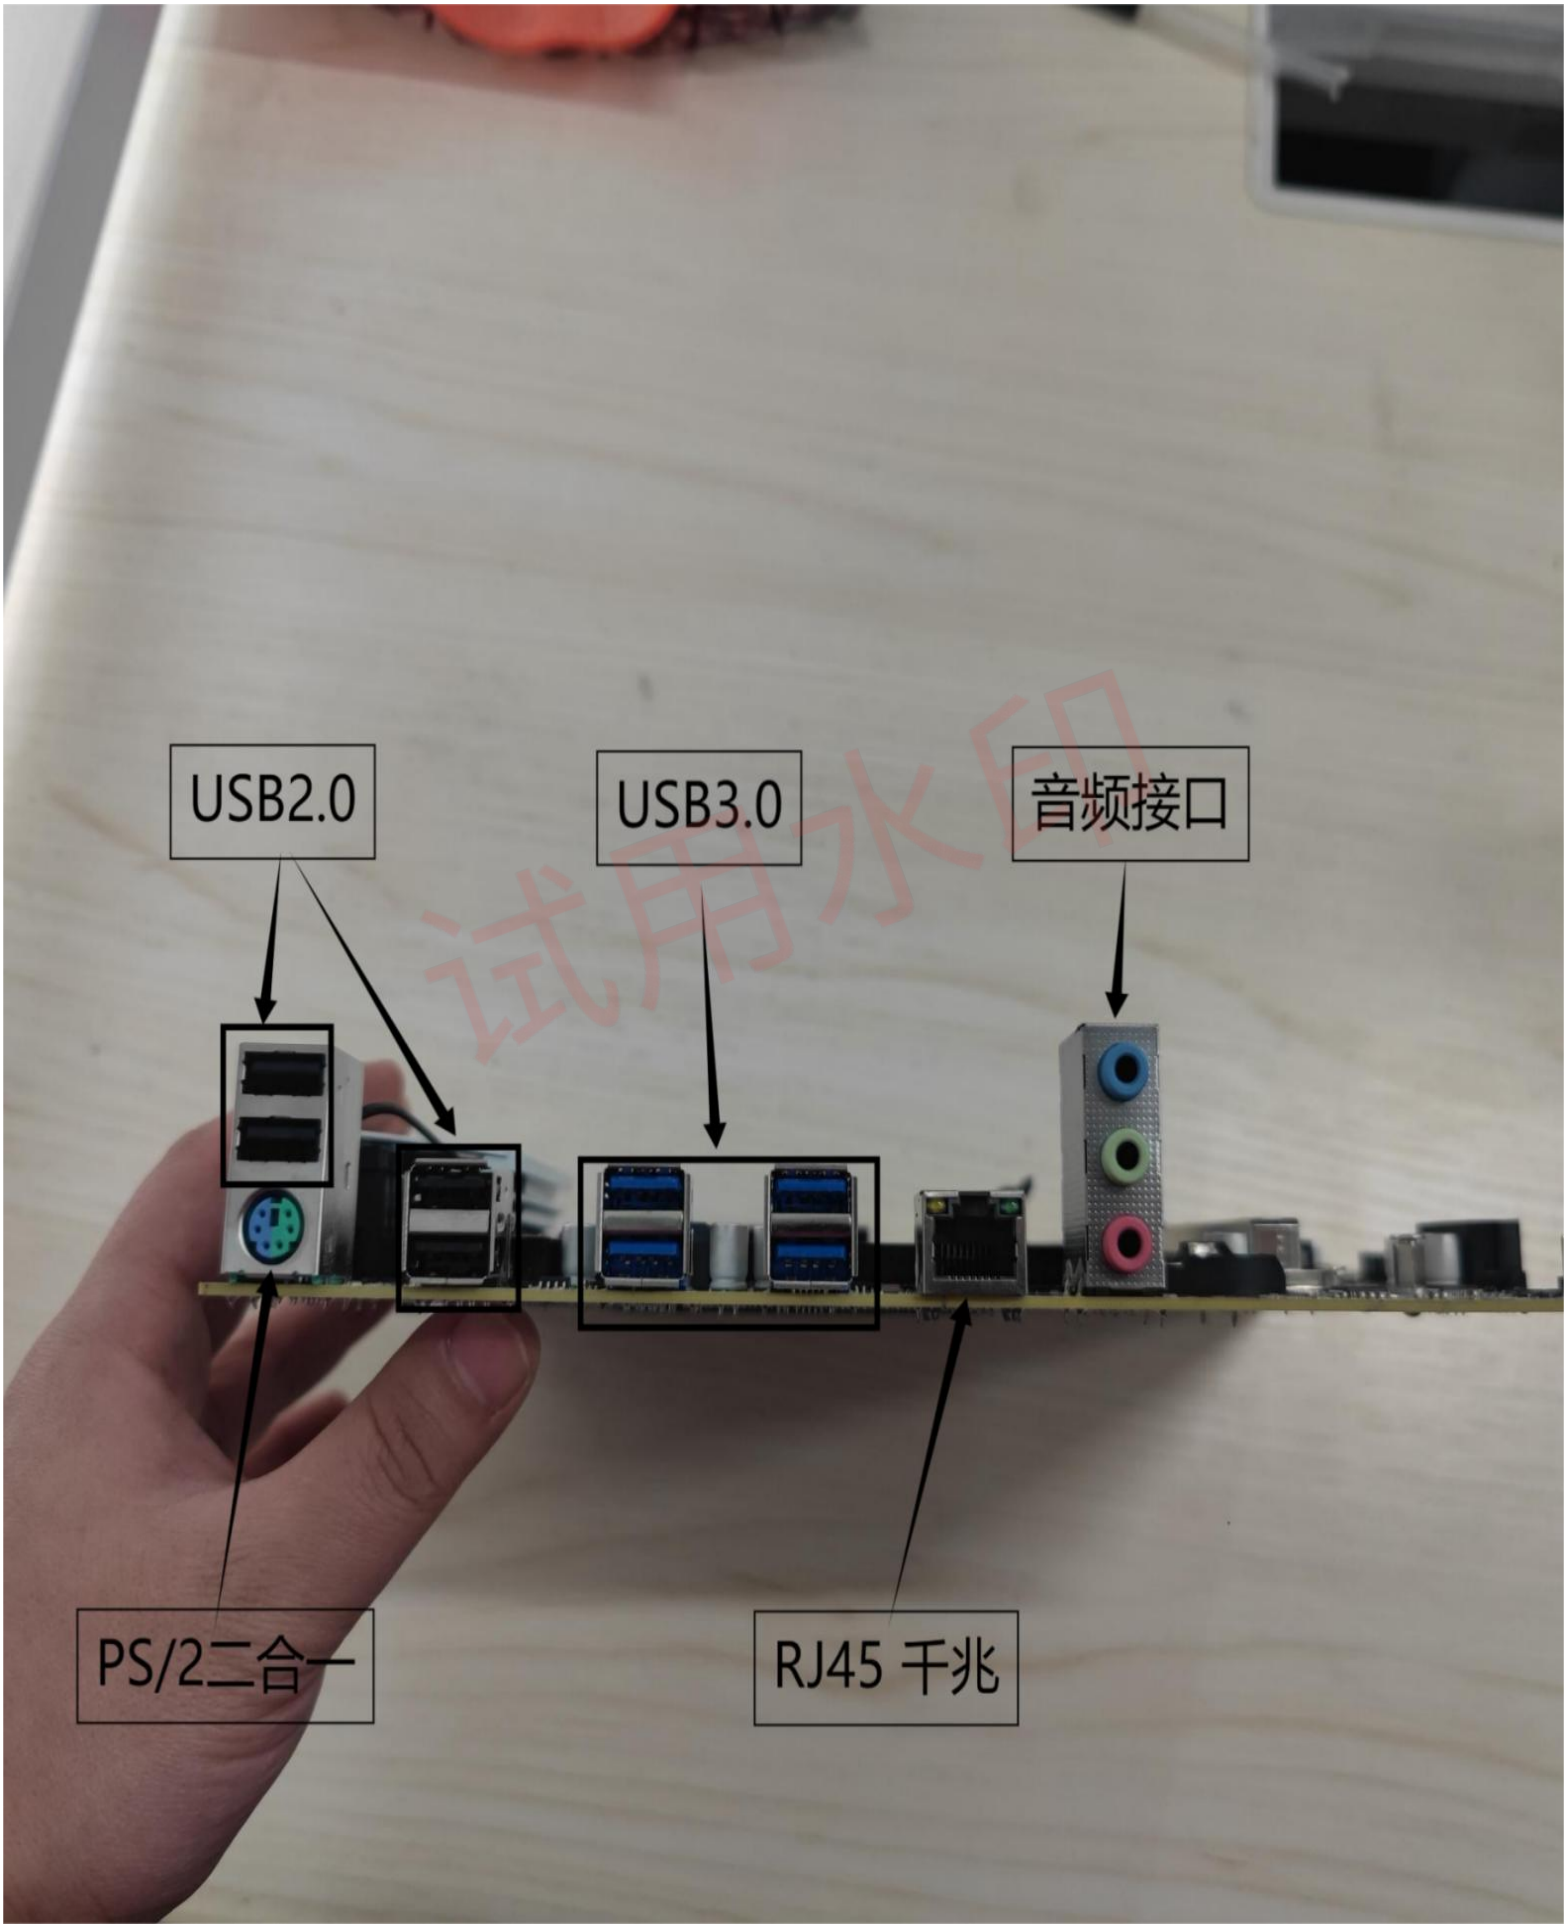
DDR3

4-pin system fan connector

NVMe M.2 hard drive interface

NGFF WiFi requires no network card interface.

试用水印


USB2.0
USB3.0
音频接口
PS/2二合一
RJ45 千兆

芯片组：x99&C612

适用 CPU 型号：能支持 DDR3 内存 LGA2011-3 针脚的 CPU,2629 V3,2649 V3,2669 V3,2666 V3,2673 V3,2676 V3,2678 V3,2696 V3

适用内存：台式机 DDR3,服务器 DDR3(ECC,RECC),支持 4 通道，最大支持 2133 频率，128G（4*32）容量，内存插槽顺序无限制

适用硬盘：SATA 2.5 寸固态硬盘，SATA 3.5 寸机械硬盘,，NVME M.2 固态硬盘（PCIe 3.0 x4，最快读写速度 3600M/S）

进入 BIOS：按下开机键后，不停点按 DEL

快捷启动项： 按下开机键后，不停点按 F11

不装显卡可以开机，可以进系统

声卡 瑞昱 ALC 897 5.1 声道

网卡 瑞昱 8111G 千兆

尺寸：M-ATX 235MM*200MM

RAID:支持 raid 0，raid 1

显卡交火：不支持

支持 S3 睡眠

Chipset: x99 & C612

Compatible CPU Models: CPUs supporting DDR3 memory with LGA2011-3 pins, including 2629 V3,

试用水印

2649 V3, 2669 V3, 2666 V3, 2673 V3, 2676 V3, 2678 V3, and 2696 V3.

Compatible Memory: Desktop DDR3, Server DDR3 (ECC, RECC), supports 4 channels, maximum frequency of 2133MHz, 128GB (4*32) capacity, no restrictions on memory slot order.

Compatible Hard Drives: SATA 2.5-inch SSDs, SATA 3.5-inch HDDs, NVMe M.2 SSDs (PCIe 3.0 x4, maximum read/write speed 3600MB/s).

Enter BIOS: Press the power button and repeatedly press DEL.

Quick Start Menu: Press the power button and repeatedly press F11.

The computer can boot and enter the system without a graphics card.

Sound Card: Realtek ALC 897 5.1 Channel Audio

Network Card: Realtek 8111G Gigabit

Size: M-ATX 235mm*200mm

RAID: Supports RAID 0 and RAID 1

GPU CrossFire: Not Supported

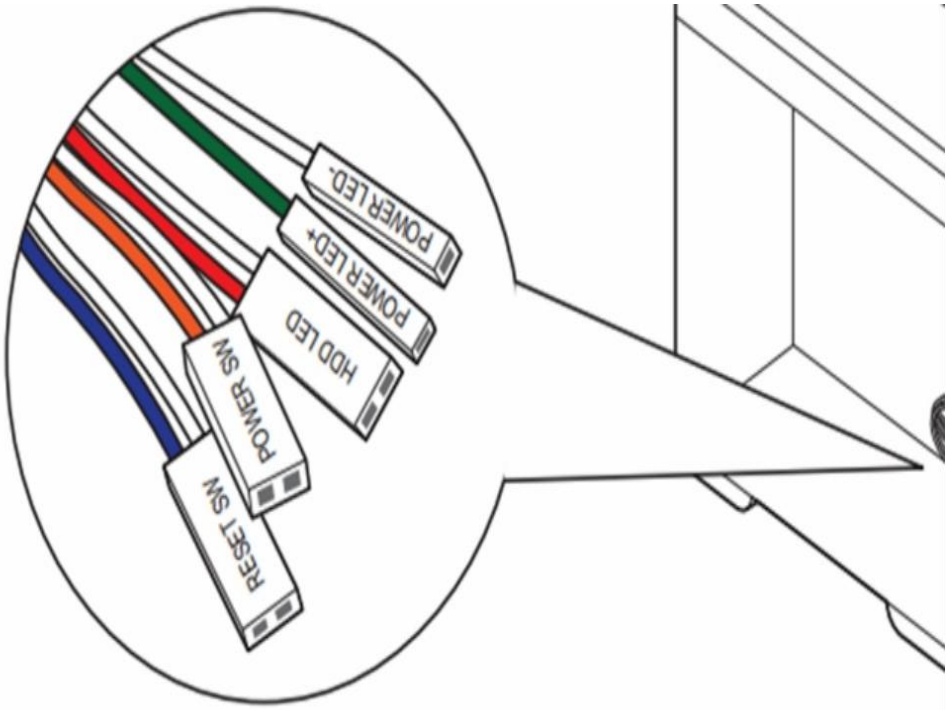
Supports S3 Sleep

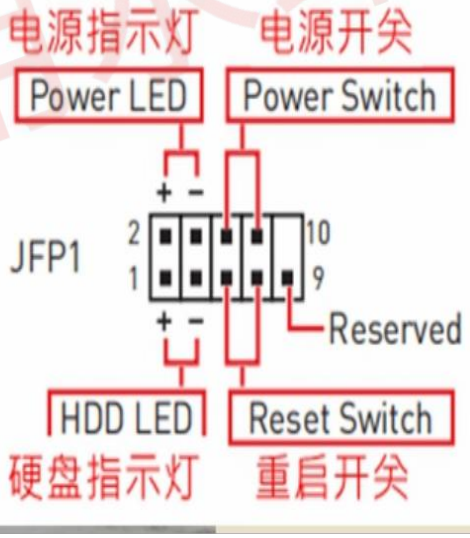
试用水印

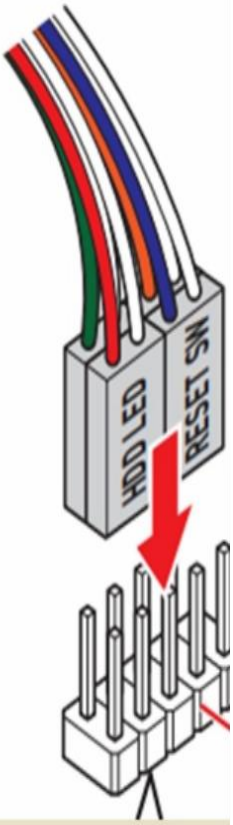
开机排线接法 Power-on cable method

试用水印


5KD20
560
6.3V

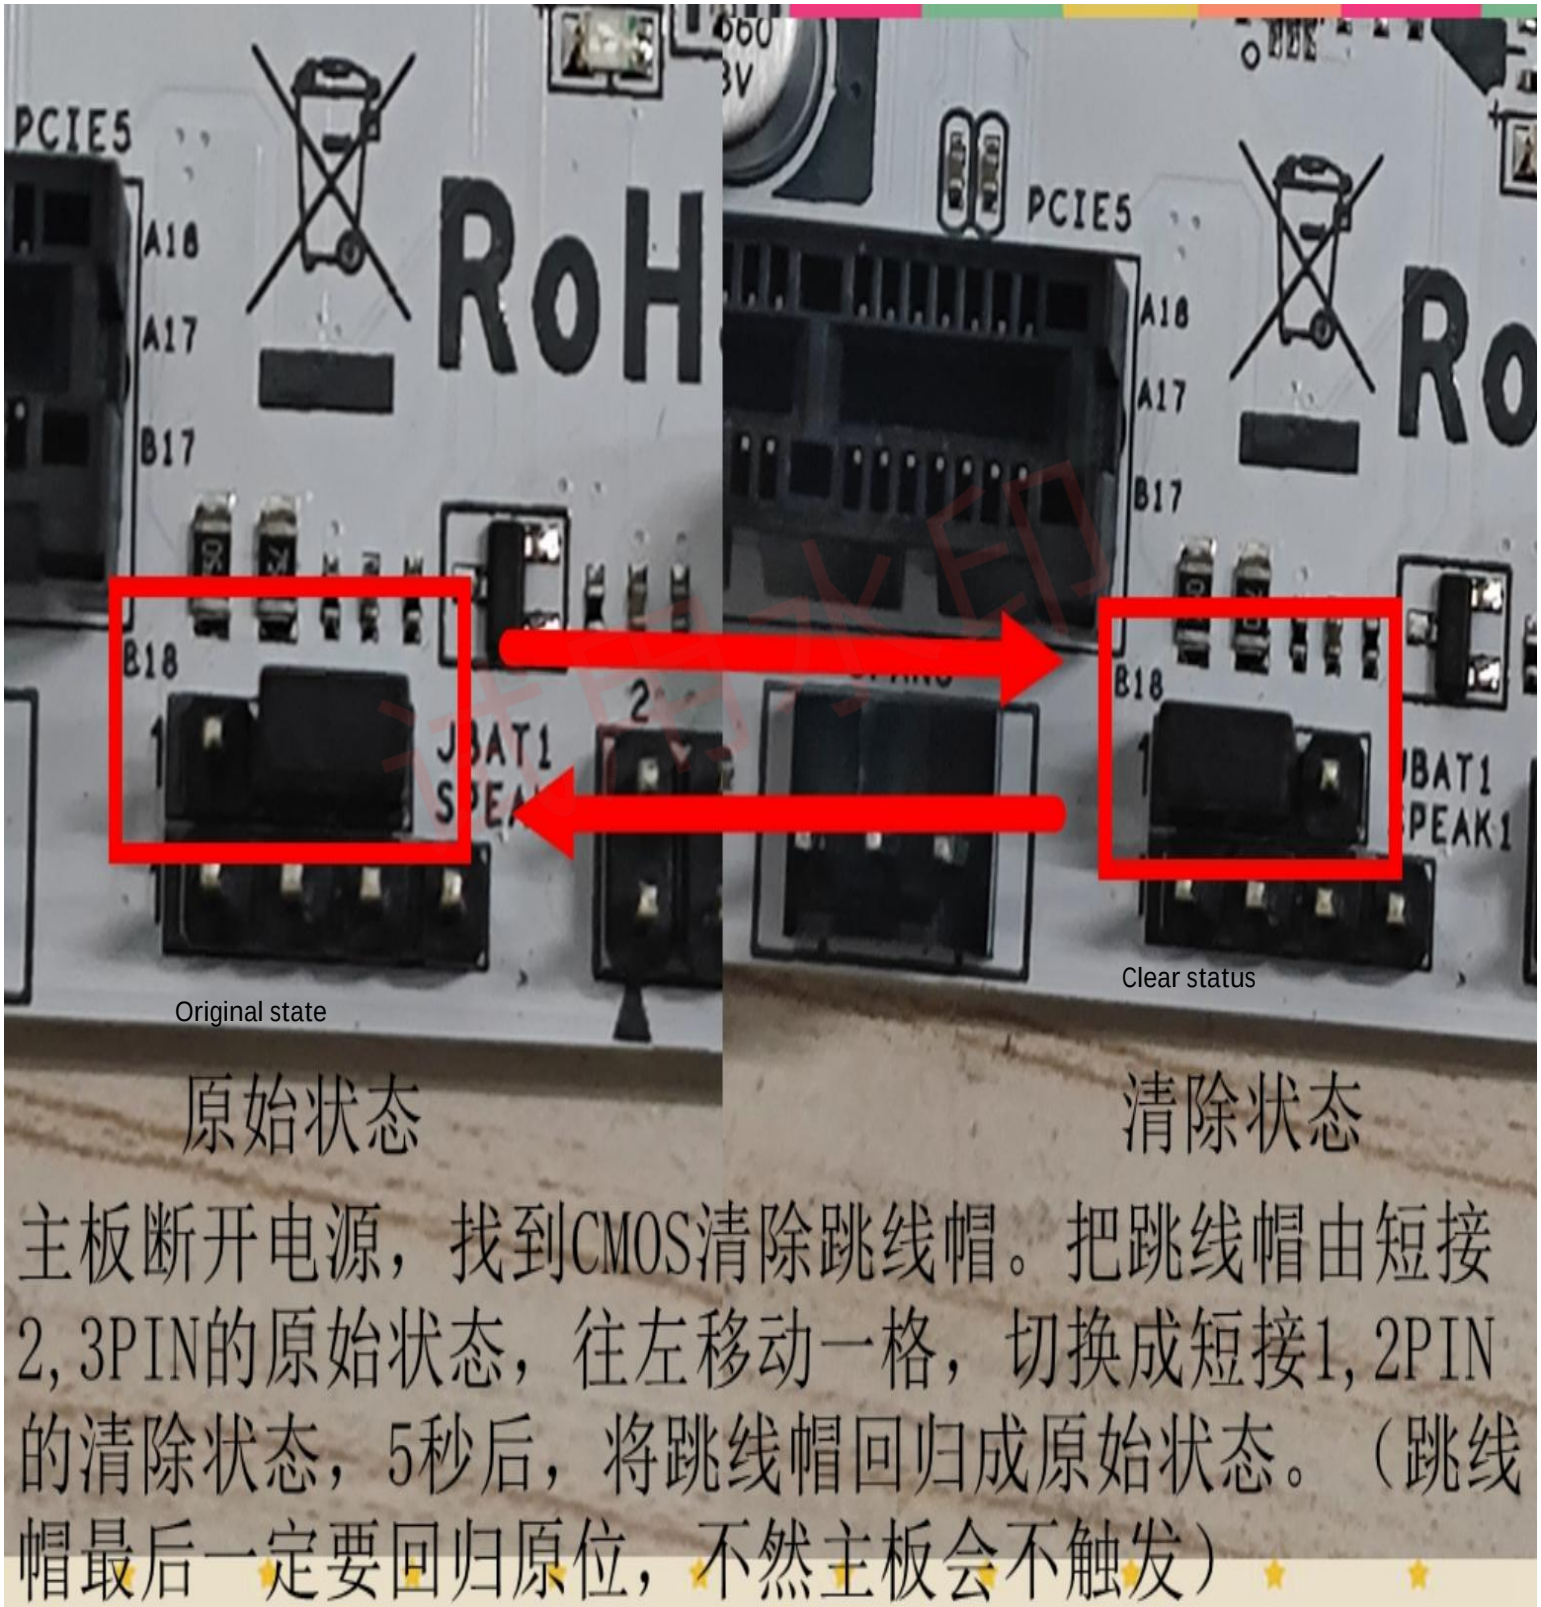

POWER LED-
POWER LED+
HDD LED
POWER SW
RESET SW


电源指示灯
电源开关
Power LED
Power Switch
JFP1
2
1
10
9
Reserved
HDD LED
Reset Switch
硬盘指示灯
重启开关


HDD LED
RESET SW

试用水印

清除 CMOS 方法



Disconnect the motherboard power and locate the CMOS clear jumper. Move the jumper one notch to the left from its original position (shorts pins 2 and 3) to the clear position (shorts pins 1 and 2). After 5 seconds, return the jumper to its original position. (The jumper must be returned to its original position; otherwise, the motherboard will not trigger.)

试用水印

Original state

CPU 供电详解 CPU Power Supply Details

试用水印

560
6.3V
820
2.5V
CE8
CE6
LV9
LV14

CPU 供电介绍：8 相供电，严格来说是 4 倍相供电，倍相器为 uP1961S，PWM 控制器为 P1649Q,MOS 管为一上一下，上管为 4508NH,下管为 4503NH

CPU Power Supply Introduction: 8-phase power supply, strictly speaking, 4-phase power supply, phase doubler is uP1961S, PWM controller is P1649Q, MOSFETs are one high-side and one low-side, high-side MOSFET is 4508NH and low-side MOSFET is 4503NH.

试用水印