



USER MANUAL

Tennibot

Rover



info@tennibot.com




(334)-449-7347



Use these QR codes to download the Tennibot app!

TABLE OF CONTENTS

PRODUCT OVERVIEW	1
SETTING UP YOUR TENNIBOT	3
SAFETY INSTRUCTIONS	9
CERTIFICATIONS	11
SPECIFICATIONS	12

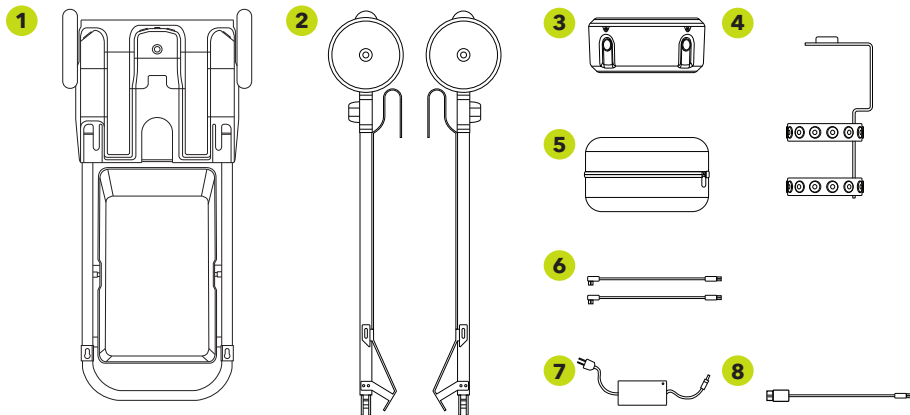

1) Rover

2) Arms (2)

3) Station


4) Station Holder

5) Station Case

6) Arm Cables (2)


7) Rover Charger

8) Station Charging Cable

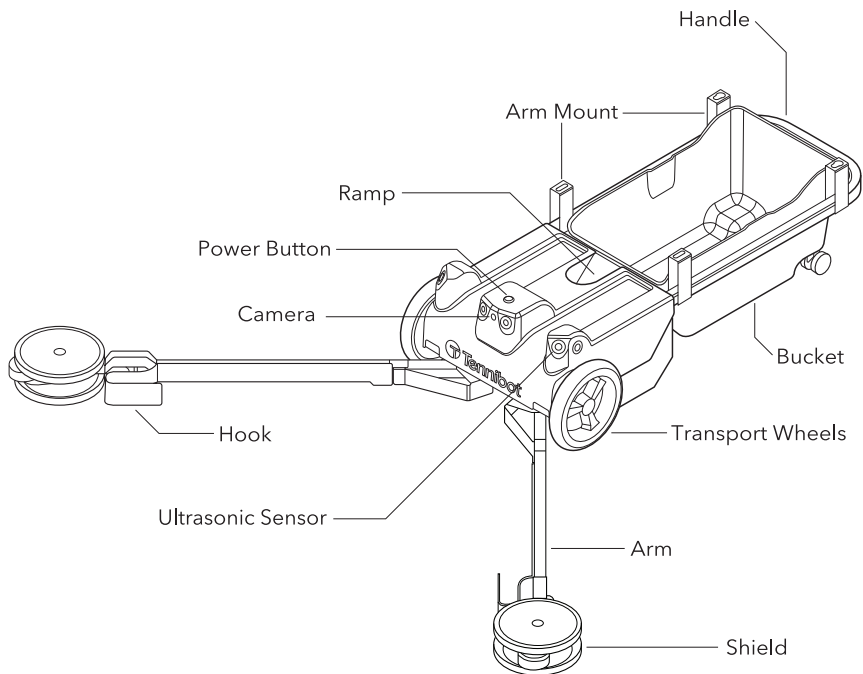


SETTING UP YOUR TENNIBOT


Stow the arms by inserting the bolt on the bottom of the arm into the arm mount and sliding forward.

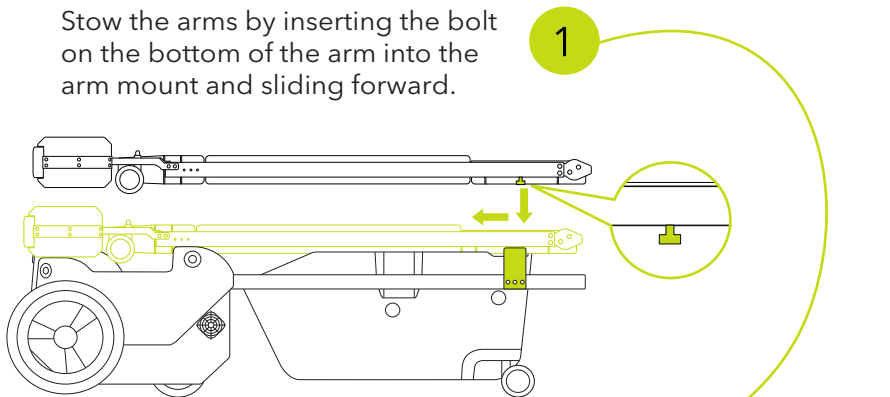

2


Use the rear handle to roll the Tennibot like a suitcase. Place the Tennibot on the court.

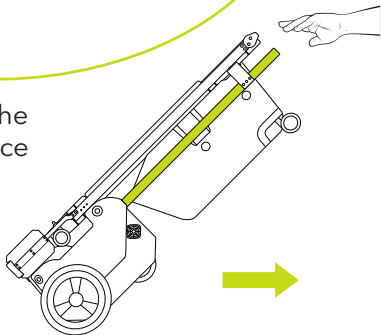


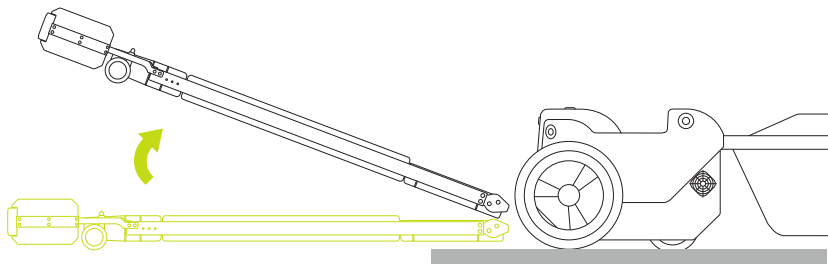


3

Remove the arms from the top of the Tennibot. To attach the arm, raise the end and insert the arm at a 45 degree angle.

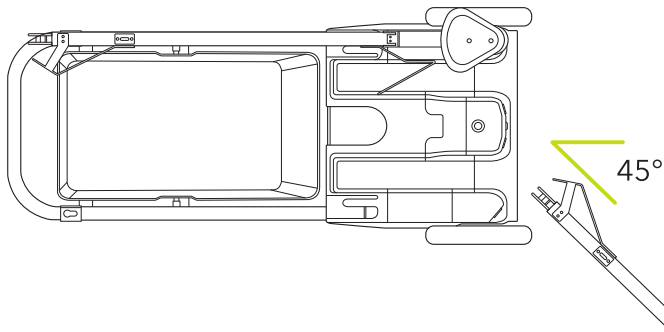


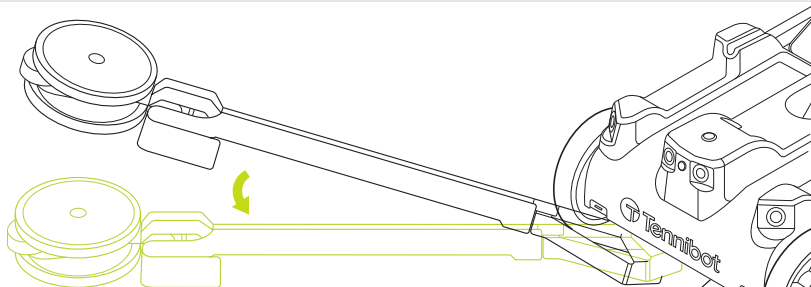


Once the arm is in the receptacle, lower the end to lock it in place. When the arm is properly attached, you will not be able to pull it out without lifting.

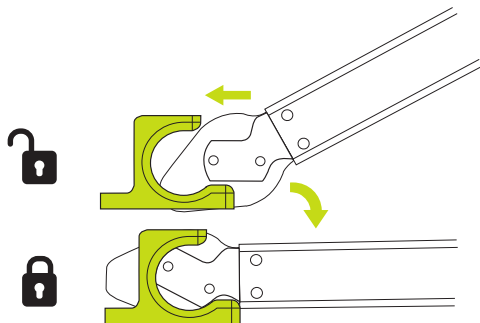

4

Connect the Arm Cable to the arm and the Rover.

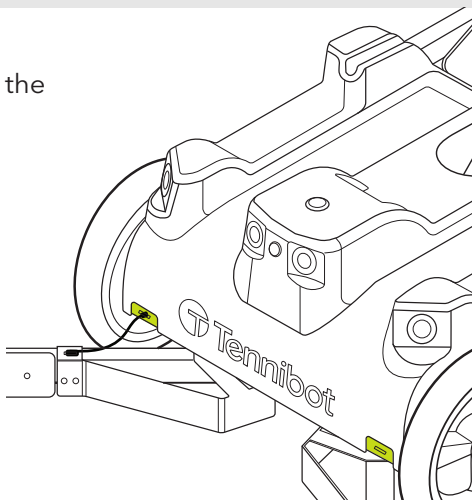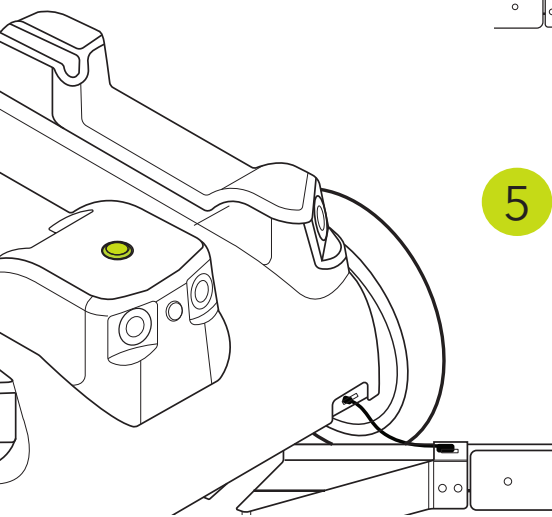

5

Turn on the Rover.
*(Make sure the Rover is on
before you turn on the Station.)*

6

Mount the Station Holder to either net post using the belts. The **tighter the belts** the better the **performance**.

Make sure the Holder is **mounted level** and the cameras are **facing both sides** of the court.

Turn on the Station

7



8

Turn on the Station.



9


Open the Tennibot app and connect to your Rover.

10

If this is your first time connecting to a Rover, you will need to add a new Rover. If you have previously connected to it, you will be able to select it from the list. The activation code can be found in the included packaging

11

Open your **phone's settings** and connect your phone to the Wi-Fi matching the Rover's serial number. This can be found on the sticker underneath the charging port. The Wi-Fi password is: **tennibot**

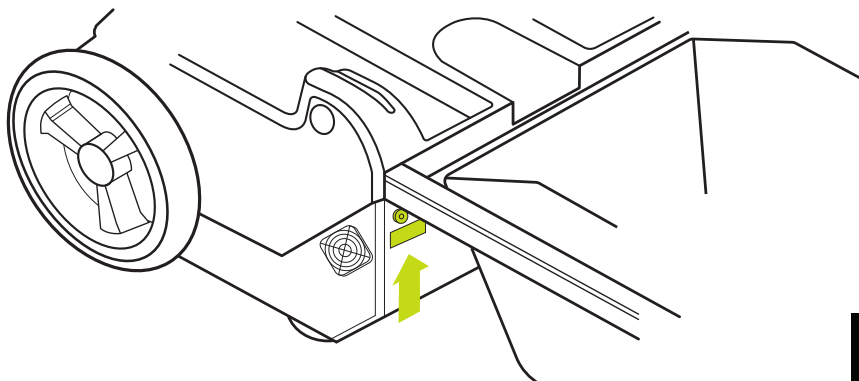

SAFETY INSTRUCTIONS

Always exercise caution when operating your Tennibot. To reduce the risk of injury or damage, keep these safety precautions in mind when setting up, using and maintaining your Tennibot:

GENERAL SAFETY INSTRUCTIONS:

- Read all safety and operating instructions before operating the Tennibot.
- Retain the safety and operating instructions for future reference.
- Heed all warnings on the Tennibot, battery, power supply and in the User Manual.
- Follow all operating and use instructions.

TENNIBOT USE INSTRUCTIONS:

- Only use the Tennibot on intended surfaces.
- Do not use the Tennibot to pick up anything other than standard sized tennis balls.
- Tennibot is not a toy. Do not sit or stand on this device. Small children and pets should be supervised when the Tennibot is running.
- Before using this device, clear the court surface of any objects other than standard sized tennis balls.
- As a best practice, operate the Tennibot on the opposite side of the court. When the Tennibot is on your side of the court, be sure to exercise caution and be aware of the Tennibot's location at all times.

• Tennibot is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Do not put hands or feet near or under any moving or rotating parts.
- Never attempt to service or adjust the Tennibot.
- Do not use a power supply with a damaged cord or plug.
- Never handle the power supply with wet hands.
- Do not attempt to make any modifications to your Tennibot.

WARNING: Do not expose the electronics, battery, or power supply of the Tennibot. There are no user-serviceable parts inside. Refer servicing to qualified personnel. Please ensure voltage rating for enclosed power supply matches standard outlet voltage.

WARNING: Tennibot is only intended for use consistent with this User Manual. Any use of Tennibot other than as described in this User Manual, or failure to follow the Safety Instructions contained herein, may result in injury or damage. In no event shall Tennibot be held liable for any injury or any direct, indirect, punitive, incidental, special, or consequential damages, to property or life, whatsoever arising out of or connected with the use of Tennibot for use that is not consistent with this User Manual and the Safety Instructions contained herein.

CERTIFICATIONS

Federal Communications Commission (FCC) Compliance Statement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

Tennibot Inc.
2175 Pumphrey Ave.
Auburn, AL
36832
www.tennibot.com

Model Number:

Tennibot TBR-0002
Contains FCC ID: 2ABCB-RPI4B and 2AC7YRT5370
Station TBS-0002
Contains FCC ID: 2ABCB-RPI4B

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: –Reorient or relocate the receiving antenna. –Increase the separation between the equipment and receiver. –Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. –Consult the dealer or an experienced radio/TV technician for help.

SPECIFICATIONS

TENNIBOT

DIMENSIONS	Arms Stowed	40"x18.75"x13.75"
WEIGHT	Net	Approx. 25 lbs
MAIN PARAMETERS	Max. Speed	0.9 m/s
	Charging Time	90 Minutes
	Operating Temp.	15 °F to 122 °F
	Battery Duration	3-5 Hours (based on usage and weather conditions)
BATTERY	Nominal Voltage	10.8 V
	Max. Charging Voltage	12.6 V
	Nominal Capacity	14 Ah
MOTOR	Rated Torque	10 kg/cm
	Rated Current	5 A
CHARGING ADAPTER	Input Voltage	100 VAC to 240 VAC
	Output Voltage	12.4 V to 12.8 V
	Output Current	3.5 A to 4 A

STATION

DIMENSIONS	Diameter x Height	4" x 6"
WEIGHT	Net	Approx. 1.3 lbs
BATTERY	Nominal Voltage	3.6 V
	Max. Charging Voltage	4.2 V
	Nominal Capacity	10.5 Ah
	Battery Duration	Approx. 6 Hours (may vary from usage and weather)
CHARGING (5V USB)	Charging Time	Approx. 100 Minutes (may vary by adapter)
	Charging Current	2.5A Max. (may vary by adapter)



Have a question?

✉ info@tennibot.com

☎ (334)-449-7347

www.tennibot.com