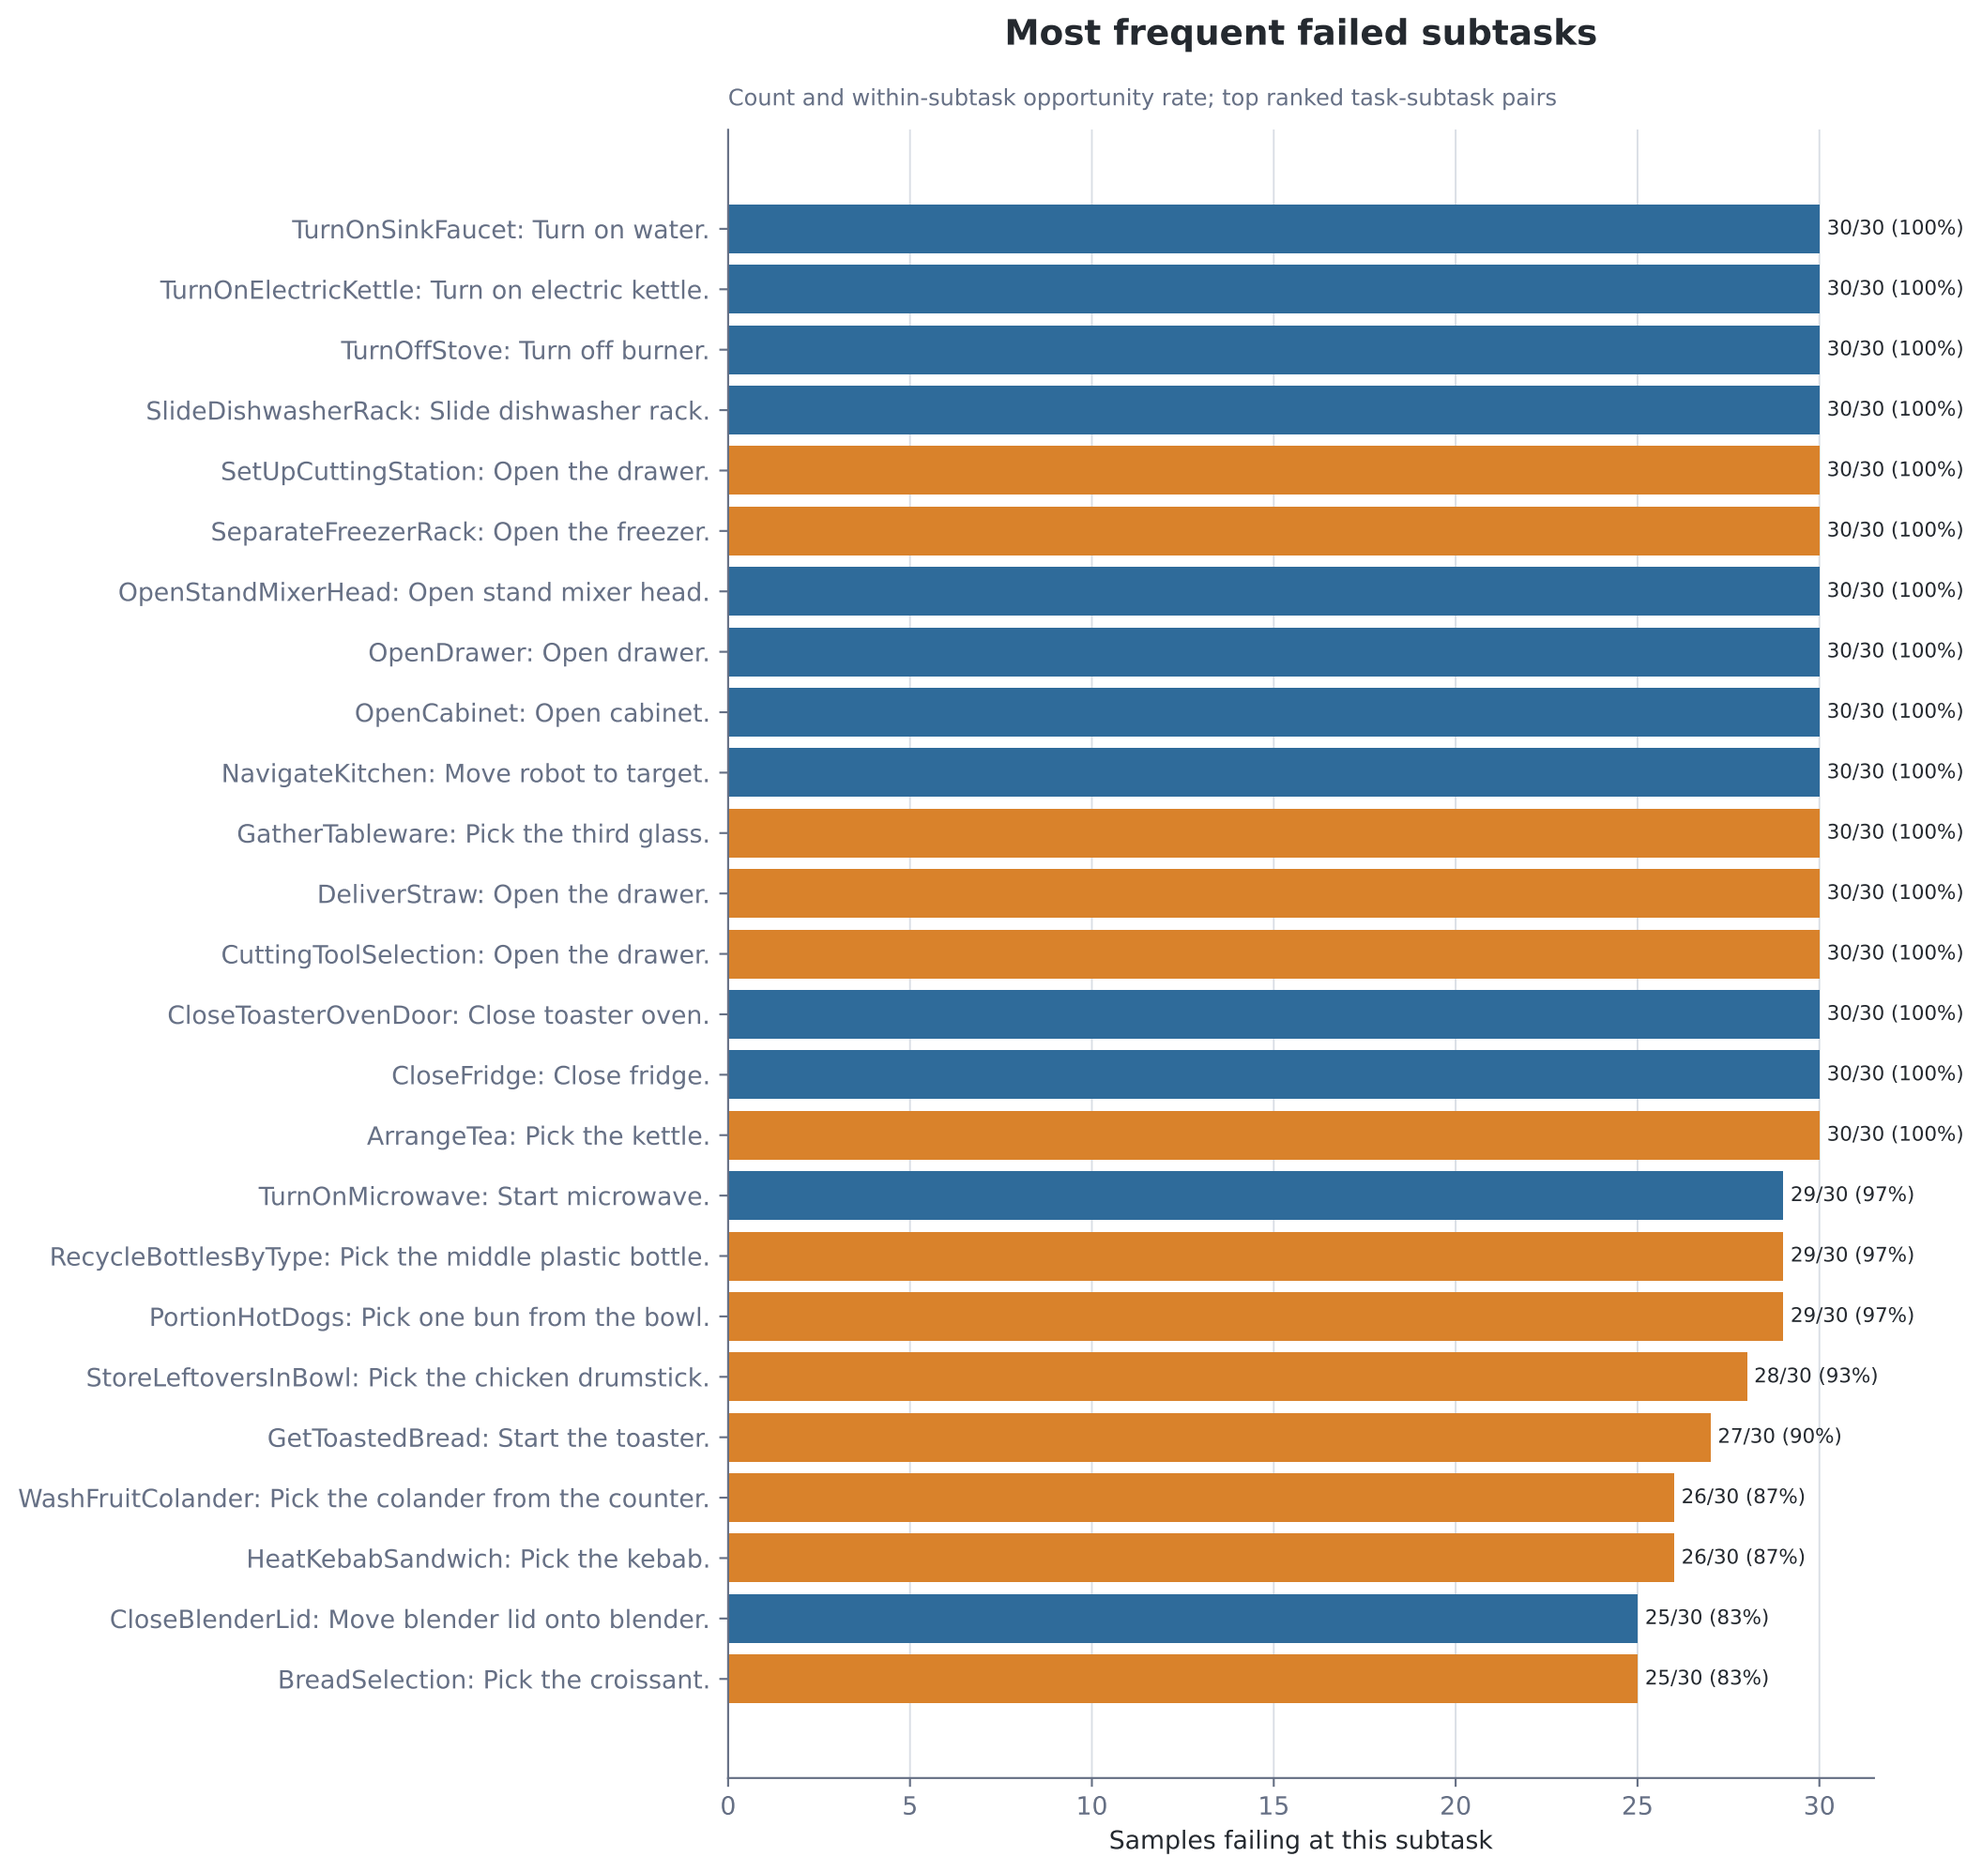
Most frequent failed subtasks
Count and within-subtask opportunity rate; top ranked task-subtask pairs
TurnOnSinkFaucet: Turn on water.
TurnOnElectricKettle: Turn on electric kettle.
TurnOffStove: Turn off burner.
SlideDishwasherRack: Slide dishwasher rack.
SetUpCuttingStation: Open the drawer.
SeparateFreezerRack: Open the freezer.
OpenStandMixerHead: Open stand mixer head.
OpenDrawer: Open drawer.
OpenCabinet: Open cabinet.
NavigateKitchen: Move robot to target.
GatherTableware: Pick the third glass.
DeliverStraw: Open the drawer.
CuttingToolSelection: Open the drawer.
CloseToasterOvenDoor: Close toaster oven.
CloseFridge: Close fridge.
ArrangeTea: Pick the kettle.
TurnOnMicrowave: Start microwave.
RecycleBottlesByType: Pick the middle plastic bottle.
PortionHotDogs: Pick one bun from the bowl.
StoreLeftoversInBowl: Pick the chicken drumstick.
GetToastedBread: Start the toaster.
WashFruitColander: Pick the colander from the counter.
HeatKebabSandwich: Pick the kebab.
CloseBlenderLid: Move blender lid onto blender.
BreadSelection: Pick the croissant.
30/30 (100%)
30/30 (100%)
30/30 (100%)
30/30 (100%)
30/30 (100%)
30/30 (100%)
30/30 (100%)
30/30 (100%)
30/30 (100%)
30/30 (100%)
30/30 (100%)
30/30 (100%)
30/30 (100%)
30/30 (100%)
30/30 (100%)
30/30 (100%)
30/30 (100%)
29/30 (97%)
29/30 (97%)
29/30 (97%)
28/30 (93%)
27/30 (90%)
26/30 (87%)
26/30 (87%)
25/30 (83%)
25/30 (83%)
0
5
10
15
20
25
30
Samples failing at this subtask