



GENESIS®

BEZEL, SIDE PANEL, TRIM REPLACEMENT INSTRUCTIONS


⚠ CAUTION: TURN THE GAS OFF AT THE GAS SUPPLY, BEFORE STARTING.

DISCONNECT AND REMOVE GAS SUPPLY AT SOURCE.


⚠ BEFORE STARTING: Verify that the part(s) you are replacing match the part(s) that you received. This replacement sheet works with several different models grills.




**SEE STEP #1:
BEZEL REPLACEMENT**

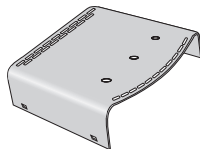


**SEE STEP #3:
CONTROL PANEL**

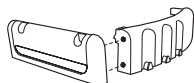

**SEE STEP #4:
RIGHT TRIM**

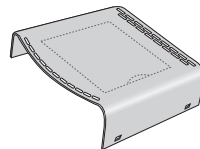

**SEE STEP #5:
LEFT PANEL**

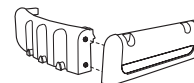

**SEE STEP #6:
LEFT TRIM**



TOOLS NEEDED:



1

BEZEL REMOVAL


- A) Remove control knob.
- B) Remove the two bezel screws with Phillips head screwdriver.
- C) **CAREFULLY** Remove the two plastic screw guides (if necessary).

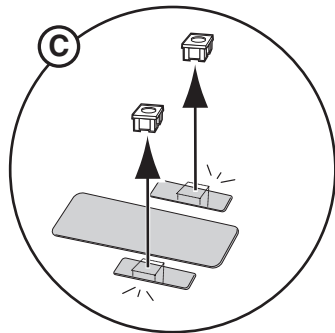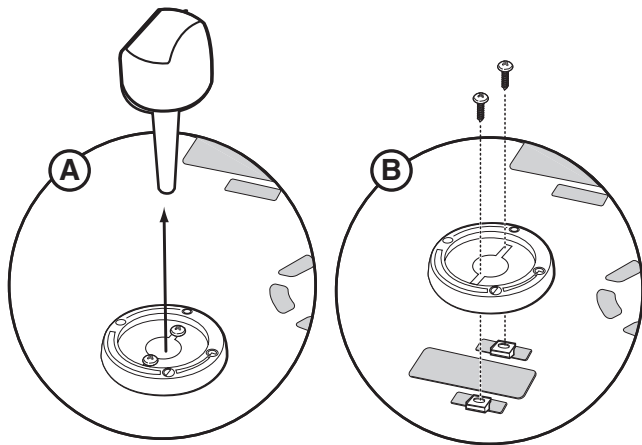

2

BEZEL REPLACEMENT



- A) Replace old bezel with new bezel. Do not fully tighten screws.

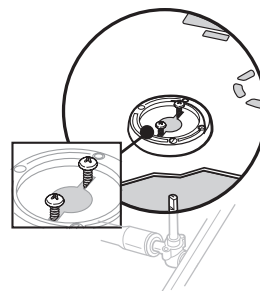

- B) Make sure bezel moves freely in all directions.



- C) Match end of alignment tool with valve stem by looking down barrel of tool. Push alignment tool onto valve stem.

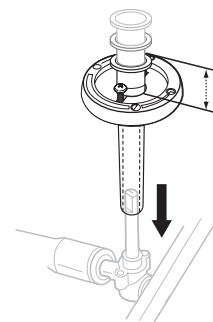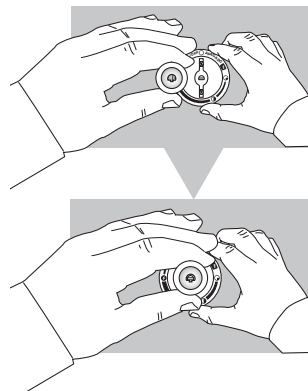


**The grills illustrated may have slight differences than the model purchased.*

56268 12/08/06


2

BEZEL REPLACEMENT (continued)



- D) Once aligned, continue to hold control knob bezel and tighten screws. Push tool again to check for free movement.

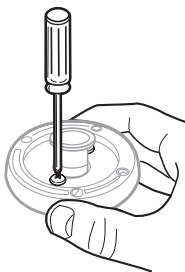

- E) Remove alignment tool.

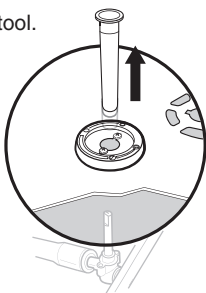

- F) Install knob onto valve stem and test for free movement. Readjust if necessary.




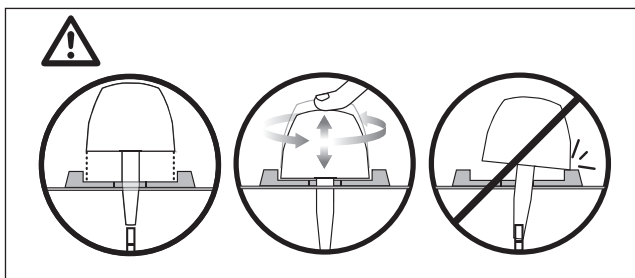
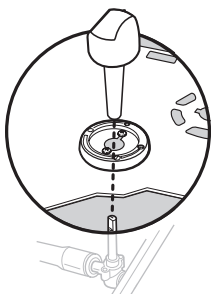


3

CONTROL PANEL

- ⚠ **MAKE SURE THAT ALL BEZELS HAVE BEEN REMOVED FROM CONTROL PANEL BEFORE ATTEMPTING STEP #3. SEE STEP#1 FOR DETAILS.**

- A) Remove control knobs (not pictured).
 B) Remove igniter button and battery.
 C) Remove screw and washer from back of control panel with a Phillips screwdriver.
 D) Tilt the back edge of the control panel up. Push in on the front edge to release locking tabs.
 E) Disconnect the igniter wires from the ignition module & carefully pull control panel away from frame.
 F) Remove the ignition module. Use a screwdriver to release the locking tabs from the control panel.

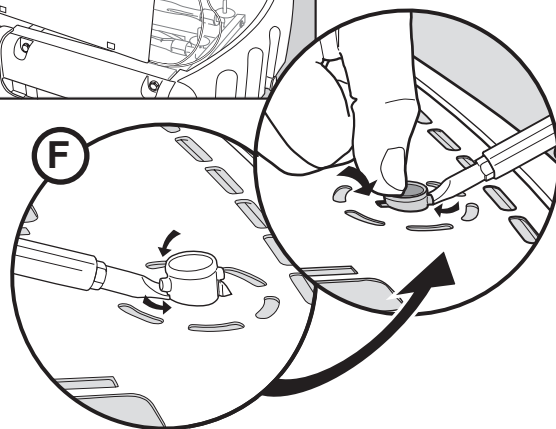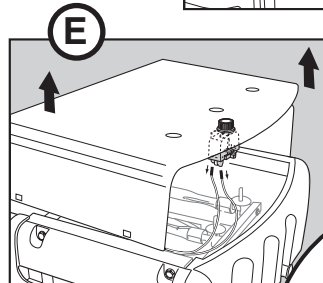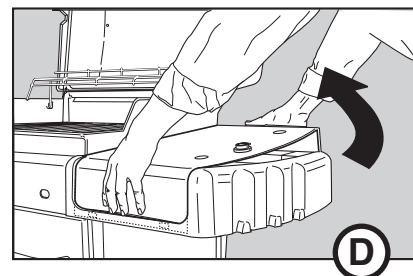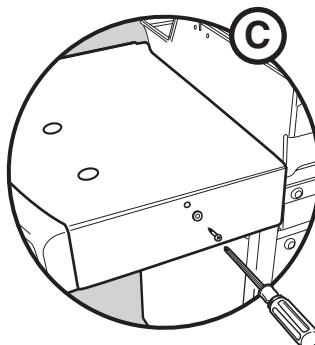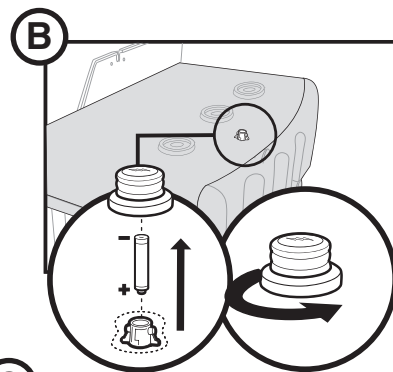

FOLLOW THE ABOVE STEP IN REVERSE TO INSTALL NEW CONTROL PANEL.


- THEN FOLLOW STEP #2 TO REPLACE BEZELS
- THEN SEE STEP #7: CHECK FOR GAS LEAKS

4

RIGHT TRIM

△ FIRST REMOVE CONTROL PANEL. SEE STEP #3, A - F.

Trim removal:

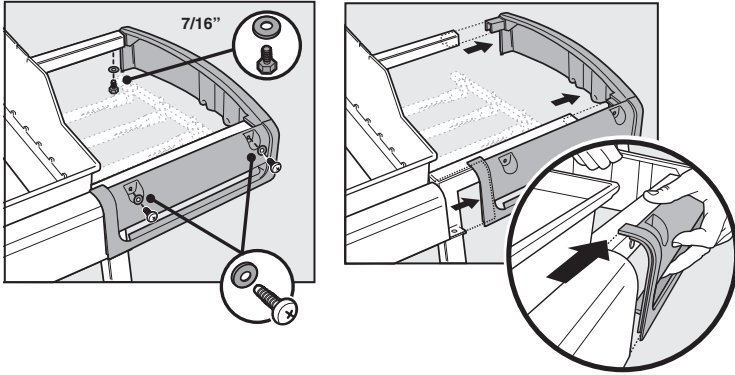

FOLLOW ABOVE STEP IN REVERSE TO INSTALL NEW RIGHT TRIM.


- THEN SEE STEPS #1-3 IN REVERSE FOR GRILL RE-ASSEMBLY.
- THEN SEE STEP #7: CHECK FOR GAS LEAKS

5




LEFT PANEL

IF YOUR GENESIS GRILL HAS A SIDE BURNER:

Remove quick-disconnect gas line from the side burner assembly on the underside of the side burner.

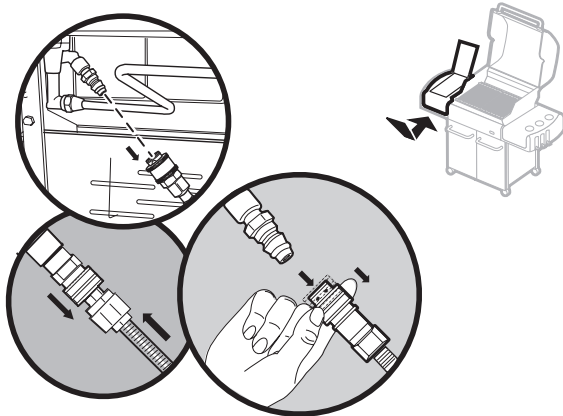

- A) Remove screw and washer from back of the panel with a Phillips screwdriver.
- B) Tilt the back edge of the panel up. Push in on the front edge to release locking tabs.
- C) Carefully pull panel assembly away from frame.

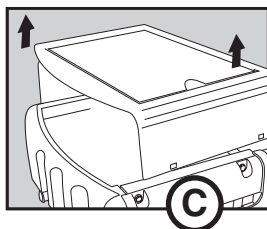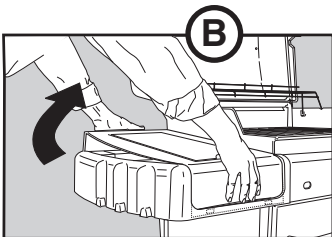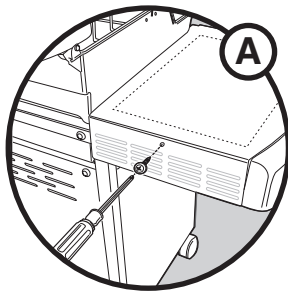


6

LEFT TRIM

△ MAKE SURE THAT STEP #5 HAS BEEN COMPLETED BEFORE ATTEMPTING STEP #6.

Trim removal:

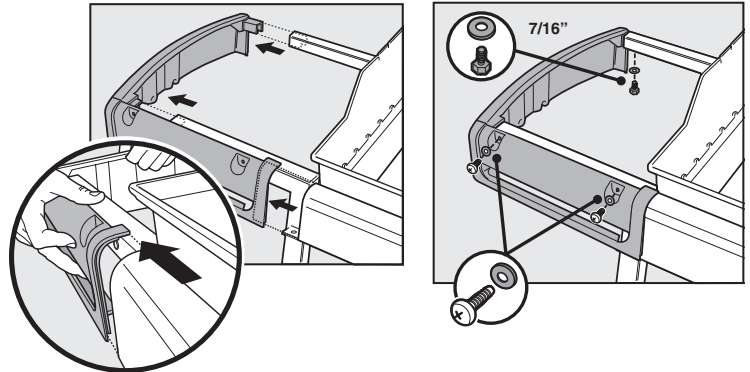

FOLLOW ABOVE STEP IN REVERSE TO INSTALL NEW LEFT TRIM.

- THEN SEE STEP #5 TO RE-INSTALL LEFT PANEL.
- THEN SEE STEPS #1-3 IN REVERSE FOR GRILL RE-ASSEMBLY.
- THEN SEE STEP #7: CHECK FOR GAS LEAKS

STEP #7: CHECK FOR GAS LEAKS ON PAGE 4.....

⚠ DANGER

Do not use an open flame to check for gas leaks. Be sure there are no sparks or open flames in the area while you check for leaks. Sparks or open flames will result in a fire or explosion, which can cause serious bodily injury or death and damage to property.

You will need: a soap and water solution and a rag or brush to apply it.

- A)** Mix soap and water.
- B)** Turn on the cylinder valve.
- C)** Check for leaks by wetting the fitting with the soap and water solution and watching for bubbles. If bubbles form, or if a bubble grows, there is a leak.
- D)** When leak checking is complete, turn gas supply off at the source and rinse connections with water.

Check:


- 1)** Side burner quick disconnect gas line connection (1).

⚠ WARNING: If there is a leak at connection (1), reconnect the fitting and recheck for leaks with soap and water solution. If a leak persists, turn OFF the gas. **DO NOT OPERATE THE GRILL.** Contact the Customer Service Representative in your area using the contact information on our web site. Log onto www.weber.com.

- 2)** LP: Regulator connection (2).
- 3)** NG: Hose to quick disconnect gas line connection (3).

⚠ WARNING: If there is a leak at connection (2 or 3), turn off the gas. **DO NOT OPERATE THE GRILL.** Contact the Customer Service Representative in your area using the contact information on our web site. Log onto www.weber.com.

When leak checks are complete, turn gas supply OFF at the source and rinse connections with water.

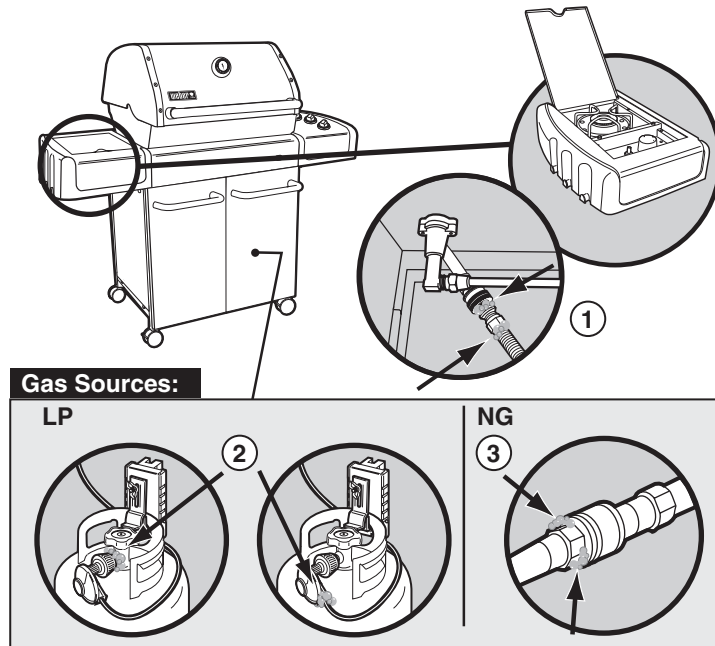

WEBER-STEPHEN PRODUCTS CO.
Customer Service Center
1890 Roselle Road, Suite 308
Schaumburg, IL 60195

1-800-446-1071 (USA ONLY)
www.weber.com

⚠ ATTENTION: ALL repairs to gas carrying or gas burning components must be performed by a qualified service technician.

These parts may be gas carrying or gas burning components. Please contact Weber-Stephen Products Co., Customer Service Department for genuine Weber-Stephen Products Co. replacement part(s) information.

⚠ WARNING: Do not attempt to make any repair to gas carrying or gas burning components without contacting Weber-Stephen Products Co., Customer Service Department. Your actions, if you fail to follow this product Warning, may cause a fire or an explosion resulting in serious personal injury or death and damage to property.