



GENESIS®

RIGHT & LEFT FRAME REPLACEMENT INSTRUCTIONS

**THIS PROCEDURE MUST BE PERFORMED BY AN AUTHORIZED
WEBER-STEPHEN PRODUCTS CO. SERVICE TECHNICIAN.
(ANY UNAUTHORIZED REPAIRS WILL VOID WARRANTY PROTECTION).**

⚠ WARNING: GENUINE WEBER-STEPHEN REPLACEMENT PARTS MUST BE USED FOR ANY REPAIR OR REPLACEMENT. YOUR ACTIONS, IF YOU FAIL TO FOLLOW THIS PRODUCT WARNING, MAY CAUSE A FIRE, AN EXPLOSION, OR STRUCTURAL FAILURE RESULTING IN SERIOUS PERSONAL INJURY OR DEATH AS WELL AS DAMAGE TO PROPERTY. (WILL VOID ALL WARRANTY PROTECTION.)

⚠ DANGER: BEFORE PERFORMING ANY WORK MAKE SURE THE GAS SUPPLY IS TURNED OFF AT THE SOURCE. FAILURE TO FOLLOW DANGERS, WARNINGS AND CAUTIONS CONTAINED IN THIS INSTRUCTION SHEET MAY CAUSE A FIRE OR AN EXPLOSION RESULTING IN SERIOUS PERSONAL INJURY OR DEATH AS WELL AS DAMAGE TO PROPERTY.

⚠ BEFORE STARTING: Make sure that the casters are locked to prevent the grill from moving.


⚠ WARNING: Make sure that all control knobs are turned to the OFF position before reconnecting the gas supply and operating the grill.

1

SHROUD REMOVAL

Shroud Assembly Removal:

- A) Lift the shroud to the open position, remove the cotter pins out of the clevis pins (1). Close the shroud, remove the clevis pins.
- B) Lift and remove the shroud.

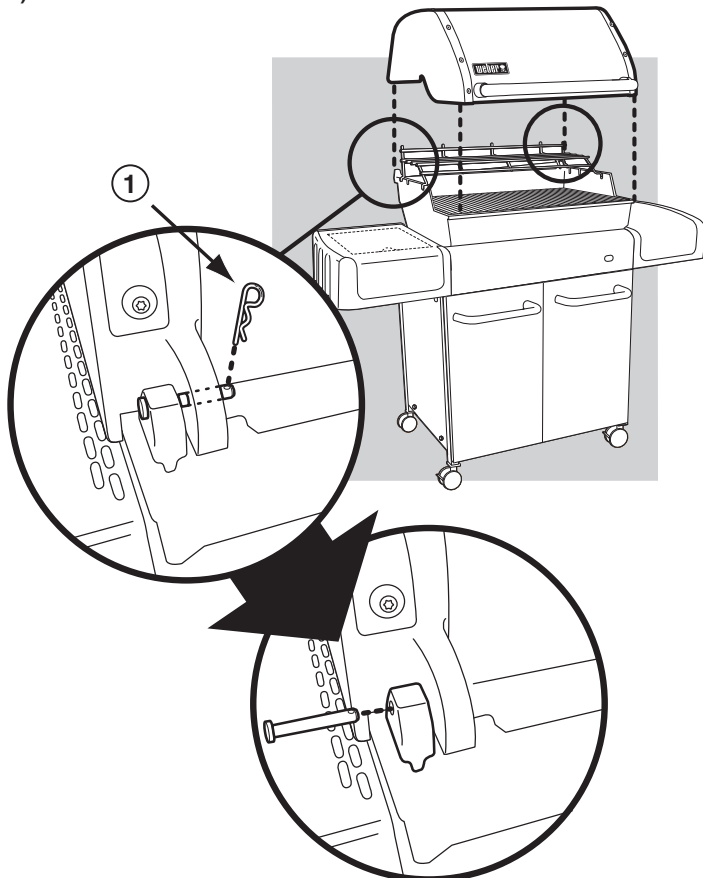


2

SIDE BURNER GAS LINE REMOVAL

FOR GENESIS GRILLS WITH A SIDE BURNER:

Side Burner Gas Line Disconnect:

- A) Remove the quick-disconnect side burner gas line from underneath the side burner assembly, which is located under the left side burner table.

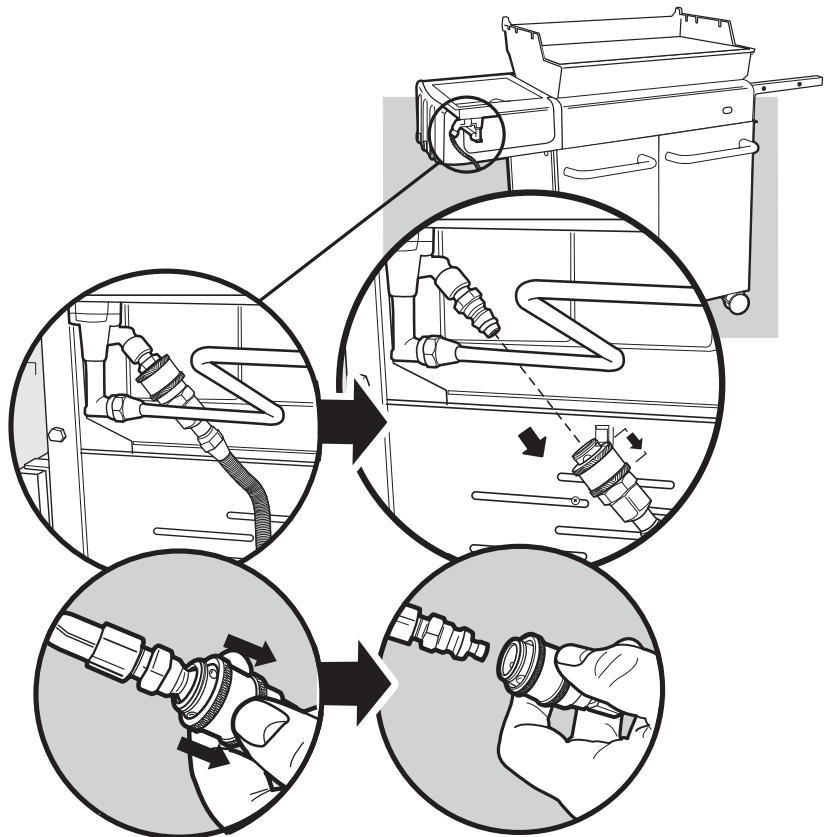

3

LEFT SIDE PANEL REMOVAL


TOOLS NEEDED:



- PHILLIPS

Left Panel Removal:

- A) Remove the screw and washer from the back of the left side panel with a Phillips head screwdriver.
- B) Tilt the back edge of the panel up (1). Push in on the front edge to release locking tabs (2).
- C) Carefully pull left side panel away from grill assembly.

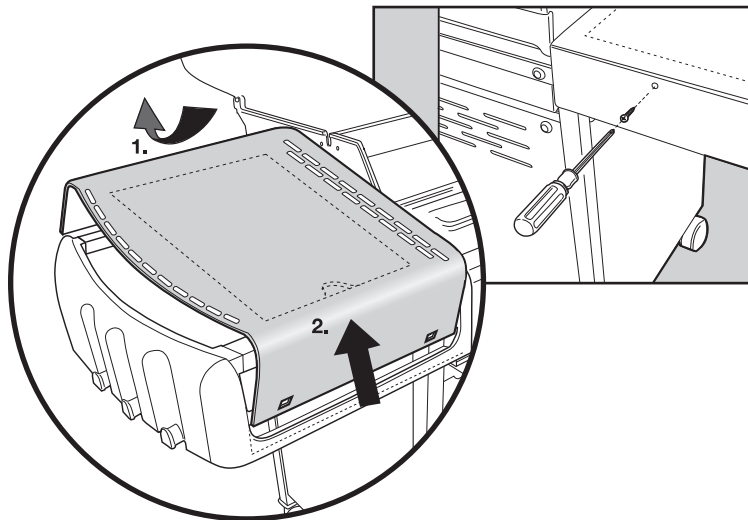

4

LEFT SIDE TRIM REMOVAL


TOOLS NEEDED:



- 7/16"



- PHILLIPS

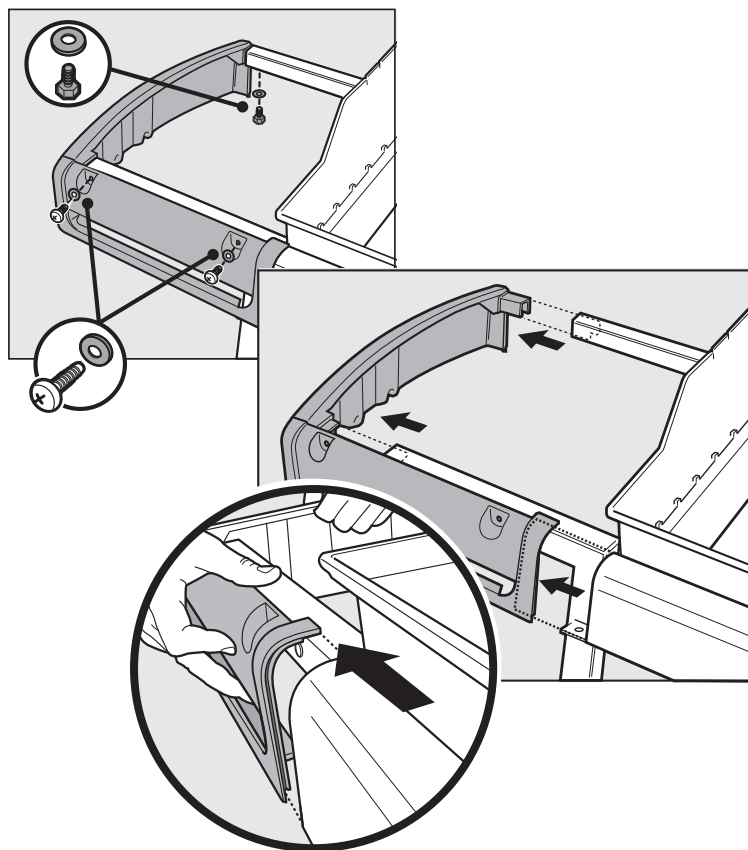

5

RIGHT SIDE PANEL REMOVAL


TOOLS NEEDED:




- PHILLIPS

Right Side (Control Panel) Removal:

- A) Remove ALL of the control knobs and the igniter button with battery (1) from the control panel assembly.
- B) Remove the screw and washer from the back of the control panel (2) with a Phillips head screwdriver.

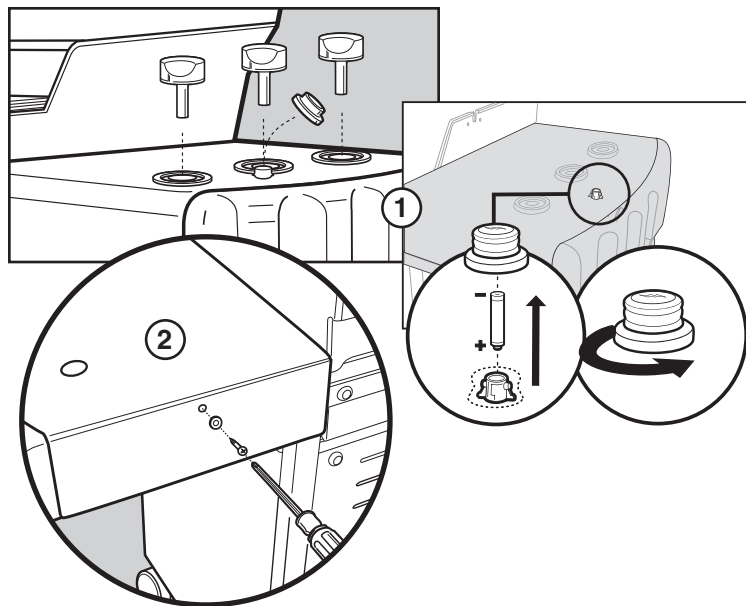

- C) Tilt the back edge of the control panel up (3). Push in on the front edge to release locking tabs (4).
- D) Lift the control panel and disconnect the igniter wires from the ignition module.

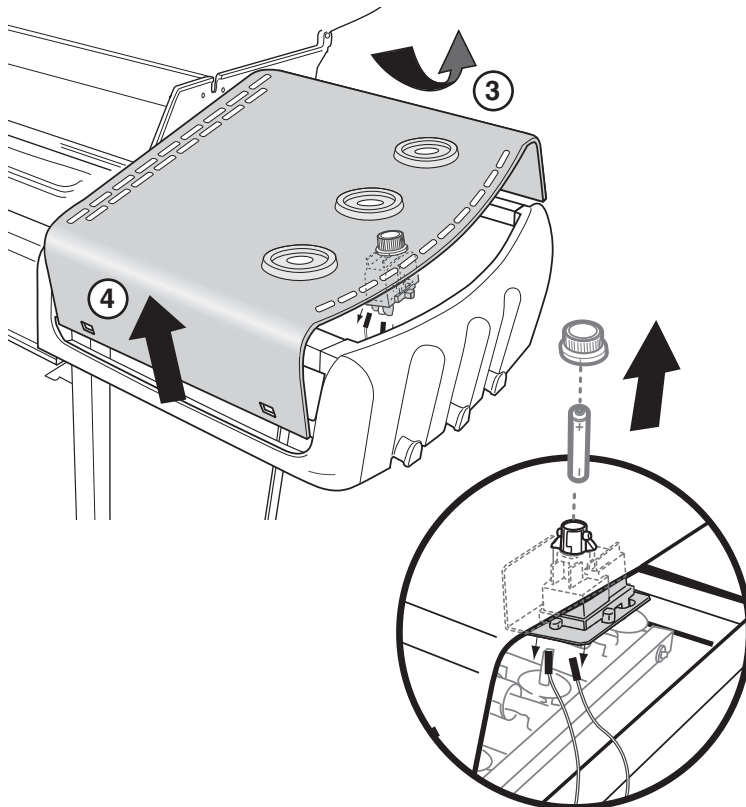


⚠ **IMPORTANT:** To do a proper leak check the control panel must be removed. After checking for leaks replace the control panel and control knobs.

6

MANIFOLD BRACKET REMOVAL

TOOLS NEEDED:  - 7/16"

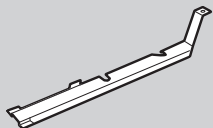


YOUR GRILL MAY OR MAY NOT BE EQUIPPED WITH A MANIFOLD SUPPORT BRACKET LOCATED UNDERNEATH CONTROL PANEL (SEE ILLUSTRATIONS TO IDENTIFY SUPPORT BRACKET).

IF YOUR GRILL IS EQUIPPED WITH THIS BRACKET, CONTINUE WITH THIS STEP #6.

IF YOUR GRILL IS NOT EQUIPPED WITH THIS BRACKET, SKIP TO STEP #7.

Manifold Bracket Removal:

- A) Remove the washer and bolt (1) that holds the manifold support bracket to the grill assembly.
- B) Rotate the right side of the manifold support bracket out from under the manifold. Allow the left side of the manifold support bracket to come off of the bottom ledge of the right front trim assembly (2).


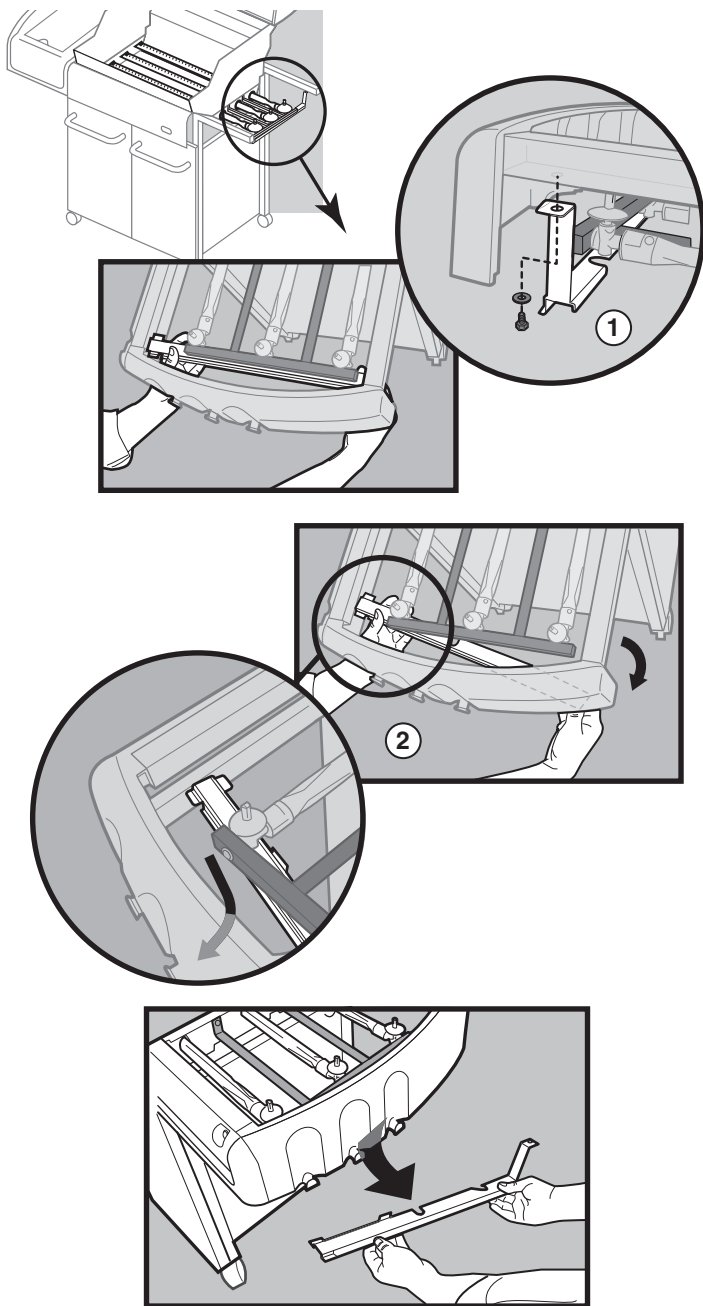


7

RIGHT SIDE TRIM REMOVAL

TOOLS NEEDED:

 - 7/16"
 - PHILLIPS

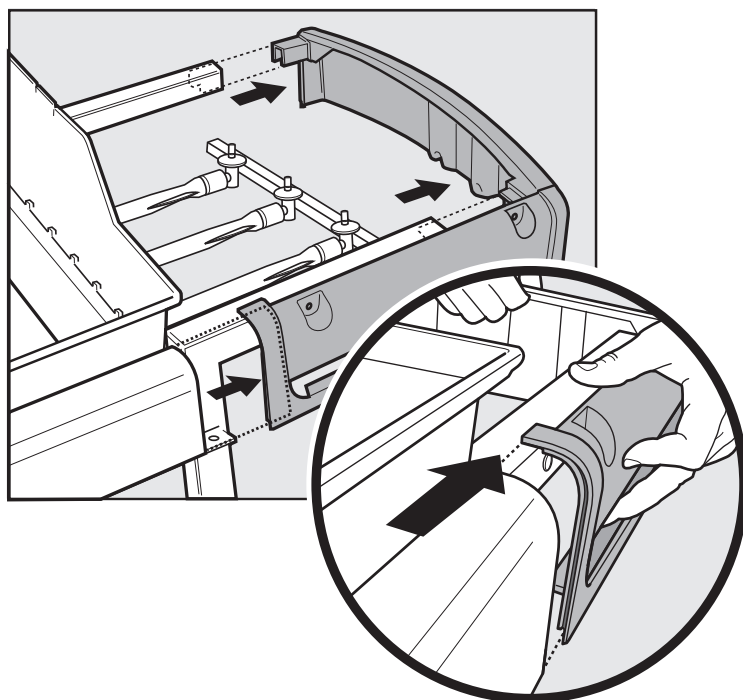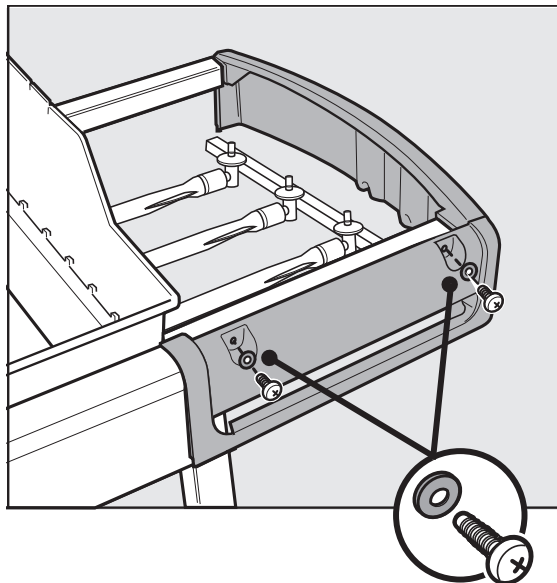

8

FRONT PANEL REMOVAL

TOOLS NEEDED:




- 7/16"


⚠ **DEPENDING ON YOUR GRILL MODEL, THIS STEP MAY OR MAY NOT REQUIRE THE REMOVAL OF TWO BOLTS & WASHERS.**

- A) Remove the bolts and washers that secure the front panel (using a 7/16" wrench or nutdriver) **IF NECESSARY.**
- B) Slide the top of the front panel out and lower the front panel down and away from the grill assembly.

MODEL STYLE 1 — (REMOVE BOLTS)

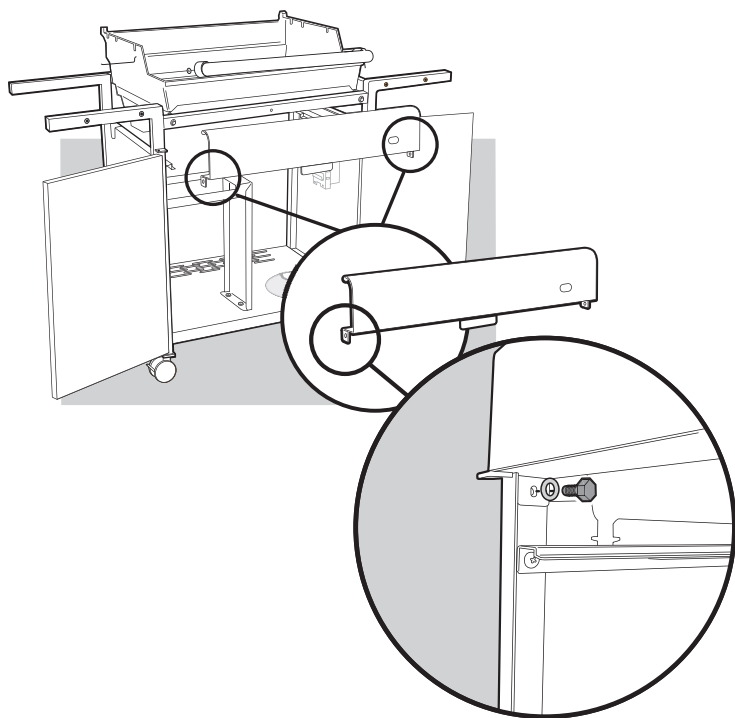

MODEL STYLE 2 — (NO BOLT REMOVAL REQUIRED)

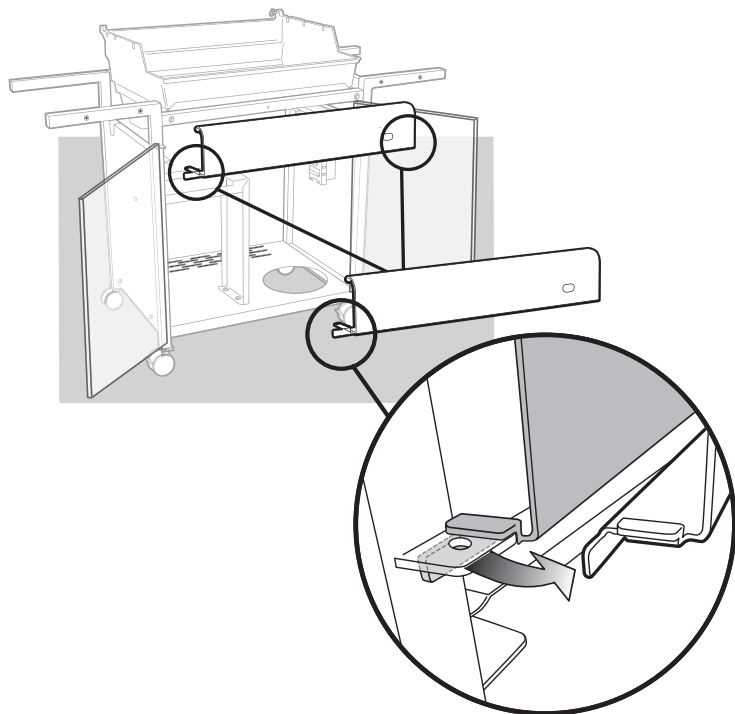

9

LEFT/RIGHT DOOR REMOVAL


TOOLS NEEDED:



- PENCIL

Door Removal:

- A) Locate the door pins in the side trim assemblies (1).
- B) Using the eraser end of a pencil, push down on the door pin (2) until the door releases from the frame of the grill.

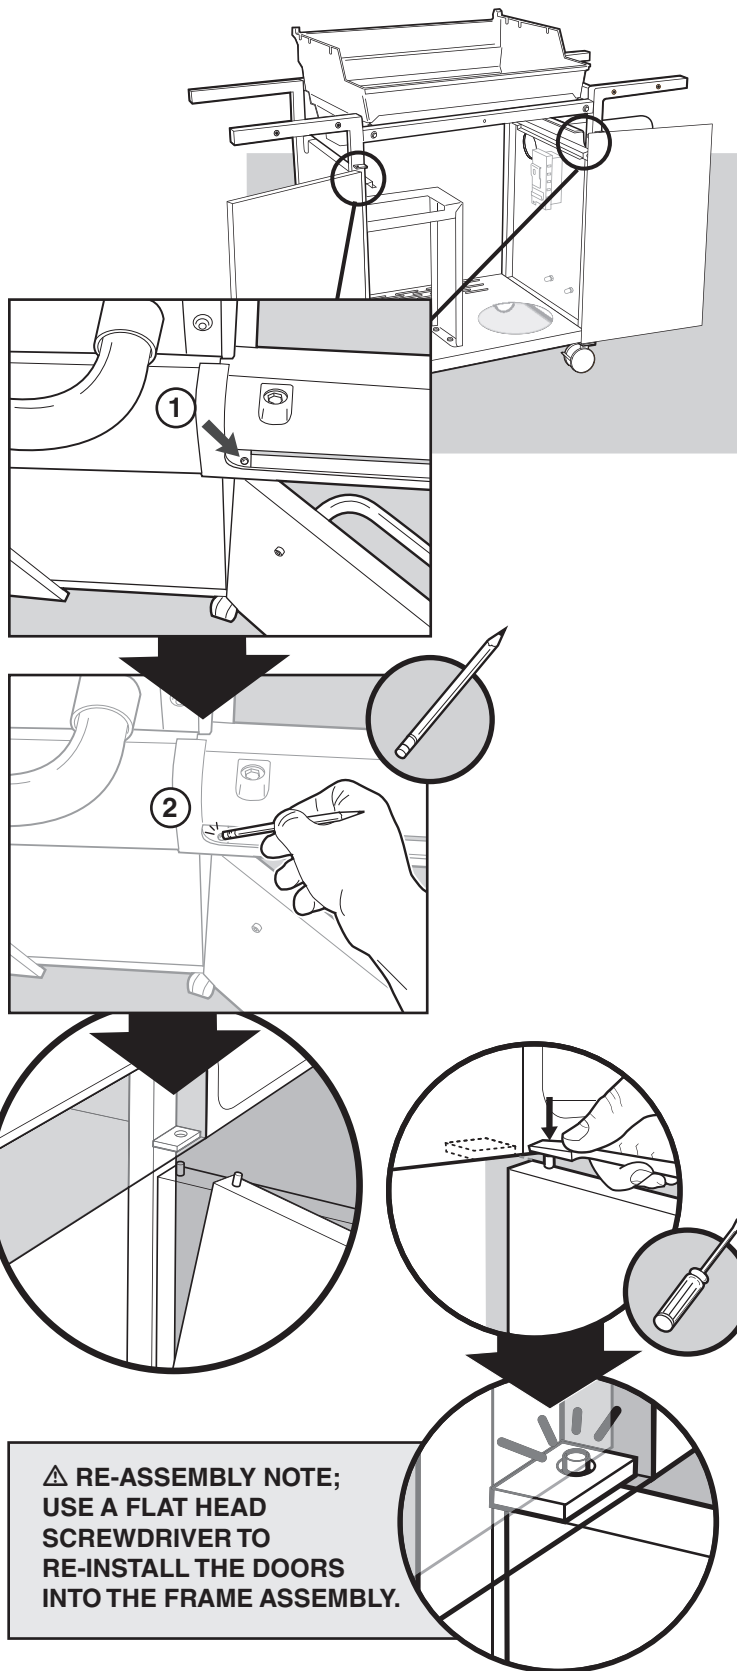


⚠ **RE-ASSEMBLY NOTE;
USE A FLAT HEAD
SCREWDRIVER TO
RE-INSTALL THE DOORS
INTO THE FRAME ASSEMBLY.**

10

DRIP TRAY REMOVAL

Drip Tray and Catch-Pan Removal:

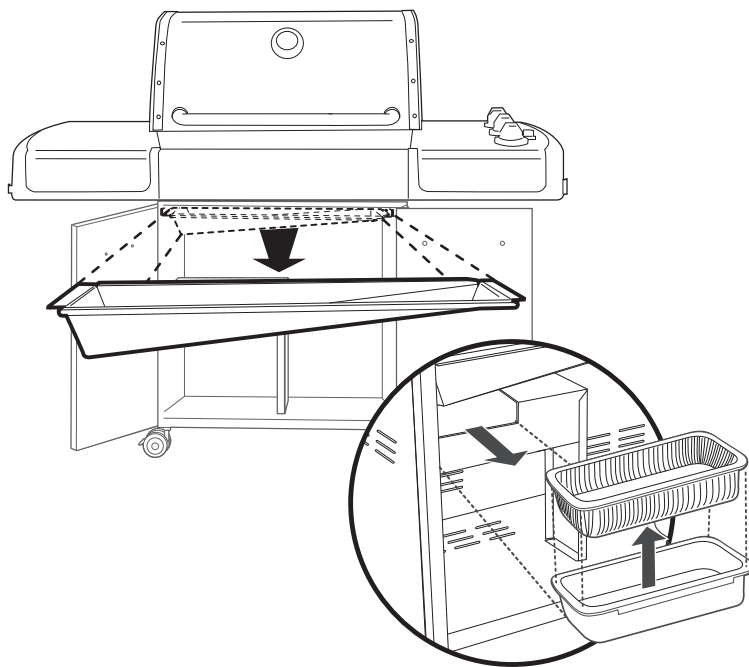

11

CATCH-PAN HOLDER REMOVAL


TOOLS NEEDED:



- PHILLIPS

Catch-Pan Holder Removal:

- A) Remove the three (3) screws holding the catch-pan holder to the grill assembly with a Phillips head screwdriver.

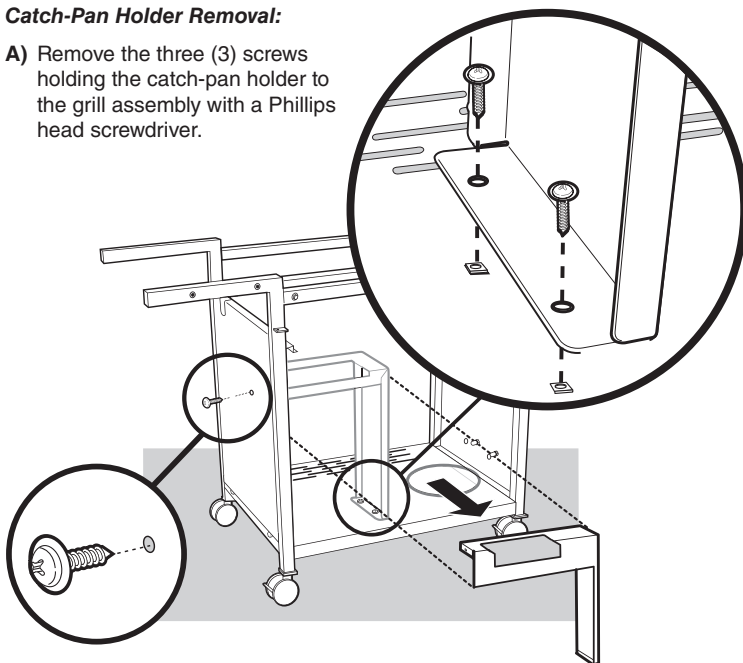

12

COOKBOX REMOVAL


TOOLS NEEDED:



- 7/16"



Cookbox Assembly Removal:

- A) Remove the cooking grates & Flavorizer® bars (not pictured).
B) Remove the two (2) cookbox bolts, nuts and washers from the front and back of the frame supports (using a 7/16" wrench or nut driver).

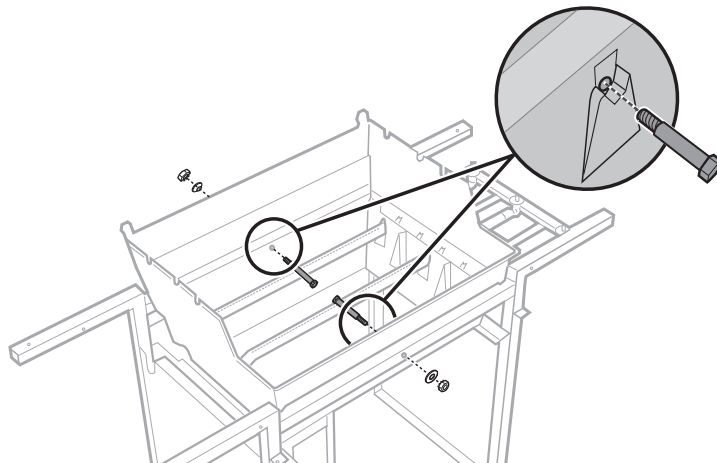


FOR LP UNITS:

- A) Remove the hose retention clip (1) on the regulator hose. Remove from the slot (2) on the underside of the tank scale.

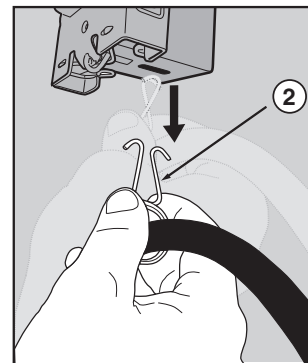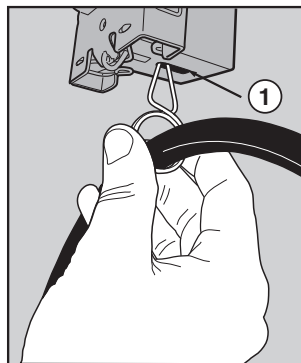

- ⚠ **WARNING:** The hose must be secured to the tank scale with the Hose Retention Clip when grill is used. Failure to do so could cause damage to the hose resulting in a fire or explosion which can cause serious bodily injury or death, and damage to property.

- C) Lift out the whole cookbox assembly. Make sure gas line(s) do not catch on the frame when removing the unit.
Two people are needed for this step.

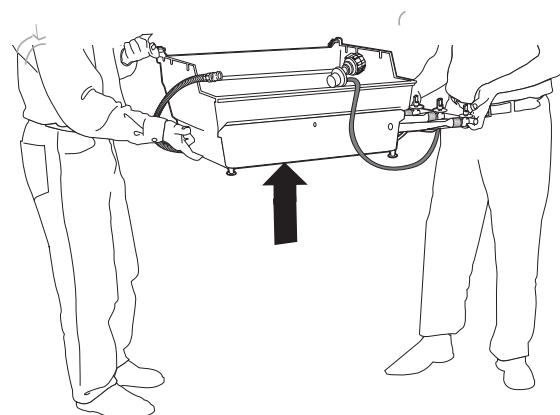

13

BACK PANEL REMOVAL


TOOLS NEEDED:



- 7/16"

Back Panel Removal:

- A) Remove the four (4) bolts and washers from the rear panel (using a 7/16" wrench or nutdriver).
- B) Slide out the top of the rear panel to release the rear panel from the frame assembly.

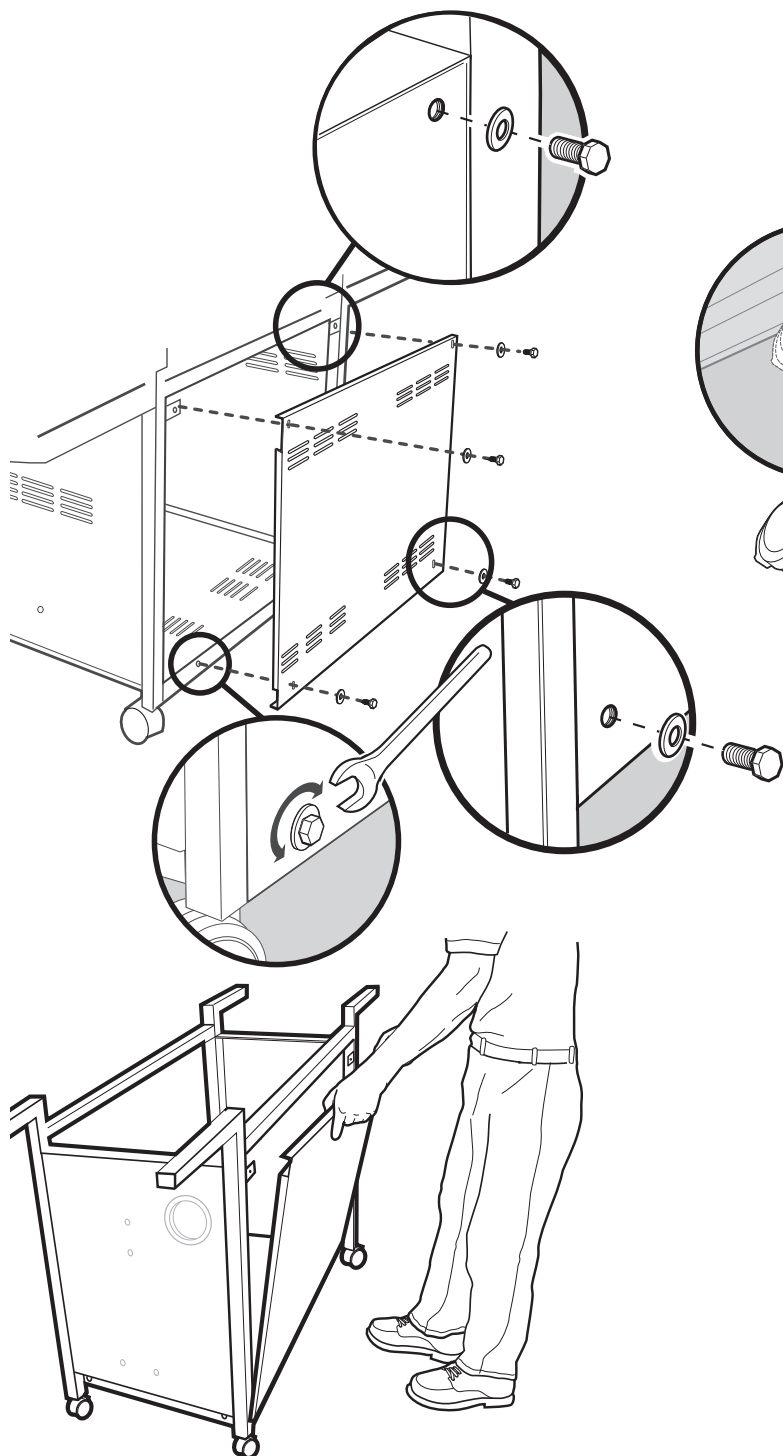


14

RIGHT OR LEFT FRAME REPLACEMENT


Right or Left Frame Removal:

IMPORTANT: Carefully lay the whole grill assembly on its back, this will reduce the chance of bending the bottom panel when removing either side of the frame.

- A) Remove the bolts and washers that connect the side frame to the bottom panel (1).
- B) Remove the bolts and washers that connect the side frame to the front and rear frame support pieces (2).
- C) Remove the casters and the caster inserts. To remove: apply a little pressure to remove caster and caster insert out of the frame.

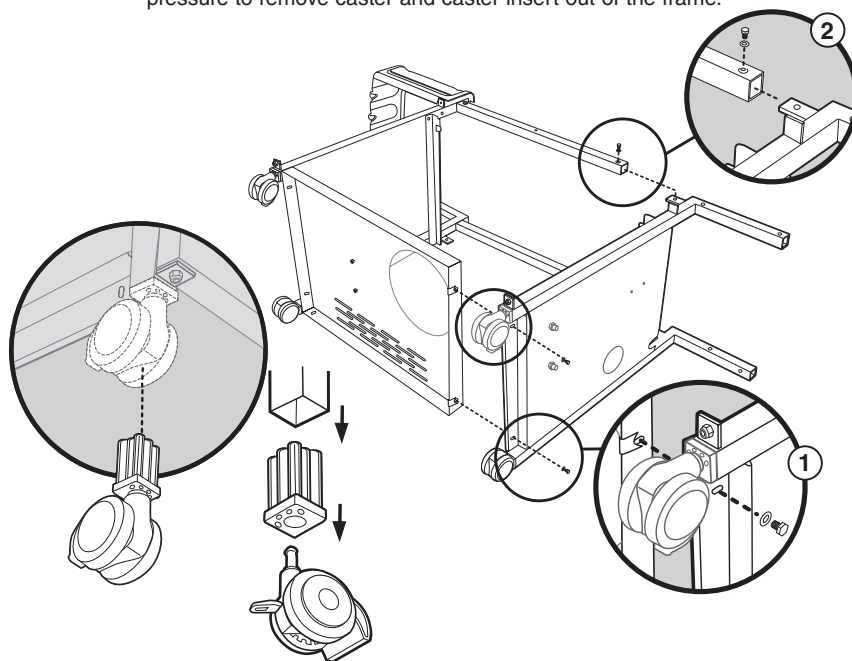**WHEN REPLACING THE RIGHT FRAME ON A LP UNIT:**

Remove the tank scale and the tank glides from the old right side frame and install these items on the new right frame.

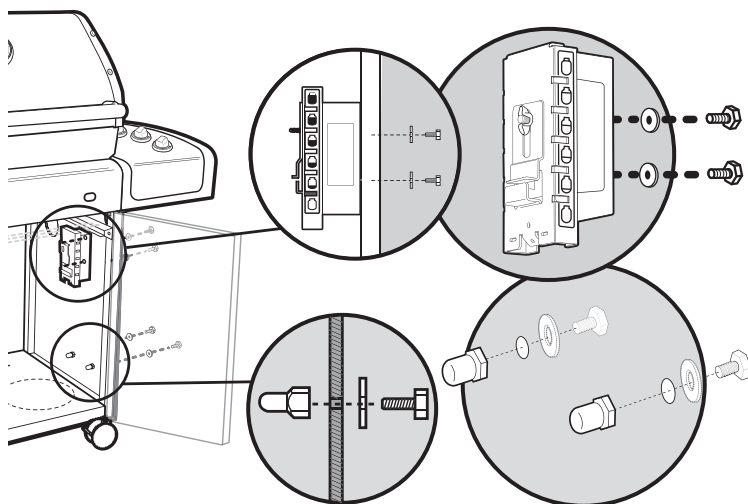

⚠ WARNING: Before grill use, the hose must be secured to the tank scale with the Hose Retention Clip. Failure to do so could cause damage to the hose resulting in a fire or explosion which can cause serious bodily injury or death, and damage to property.

INSTALL THE NEW LEFT OR RIGHT FRAME, THEN FOLLOW THIS REPLACEMENT SHEET IN REVERSE ORDER FOR GRILL RE-ASSEMBLY.

- BEFORE COMPLETING THE RE-ASSEMBLY REFER TO STEP #15 (CHECK FOR GAS LEAKS).
- THEN, FINISH STEP #5 TO RE-ASSEMBLY THE CONTROL PANEL.

⚠ DANGER

Do not use an open flame to check for gas leaks. Be sure there are no sparks or open flames in the area while you check for leaks. Sparks or open flames will result in a fire or explosion, which can cause serious bodily injury or death and damage to property.

You will need: a soap and water solution and a rag or brush to apply it.

- A) Mix soap and water.
- B) Turn on the cylinder valve.
- C) Check for leaks by wetting the fitting with the soap and water solution and watching for bubbles. If bubbles form, or if a bubble grows, there is a leak.
- D) When leak checking is complete, turn gas supply off at the source and rinse connections with water.

Check:

- A) Gas line to gas supply connection (1).
- B) Gas line to side burner valve connection (2).
- C) Manifold to burner tube connection (3).



⚠ DANGER: If there is a leak at connection (1, 2 or 3), retighten the fitting with a wrench and recheck for leaks with soap and water solution. If a leak persists, turn OFF the gas. **DO NOT OPERATE THE GRILL.** Failure to follow dangers, warnings and cautions contained in this Instruction sheet may cause a fire or an explosion resulting in serious personal injury or death as well as damage to property. Contact the Customer Service Representative in your area using the contact information on our web site. Log onto www.weber.com.

- D) Side burner quick disconnect gas line connection (4).
- E) LP: Regulator connection (5).
- F) NG: Hose to quick disconnect gas line connection (6).

⚠ DANGER: If there is a leak at connection (4, 5, or 6), turn off the gas. **DO NOT OPERATE THE GRILL.** Failure to follow dangers, warnings and cautions contained in this Instruction sheet may cause a fire or an explosion resulting in serious personal injury or death as well as damage to property. Contact the Customer Service Representative in your area using the contact information on our web site. Log onto www.weber.com.

When leak checks are complete, turn gas supply OFF at the source and rinse connections with water.

⚠ IMPORTANT: To do a proper leak check the control panel must be removed. After checking for leaks replace the control panel and control knobs.

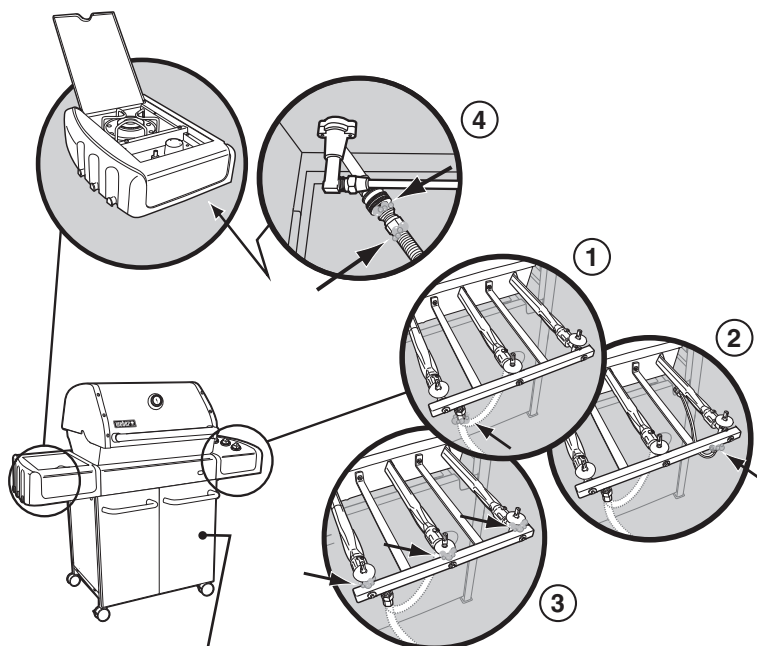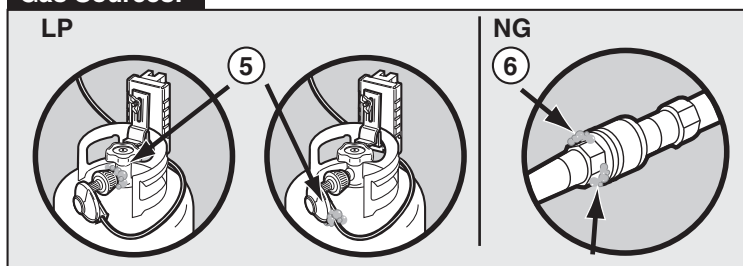**Gas Sources:**

⚠ PROPOSITION 65 WARNING: HANDLING THE BRASS MATERIAL ON THIS PRODUCT EXPOSES YOU TO LEAD, A CHEMICAL KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM.

(WASH HANDS AFTER HANDLING THIS PRODUCT.)

⚠ WARNING: All repairs to gas carrying, gas burning, igniter components or structural components must be performed by an authorized Weber-Stephen Products Co. service technician.

These parts may be gas carrying, gas burning components, igniter components or structural components. Please contact Weber-Stephen Products Co., Customer Service Department for Genuine Weber-Stephen Products Co. replacement part(s) information.

⚠ WARNING: Do not attempt to make any repair to gas carrying, gas burning, igniter components or structural components without contacting Weber-Stephen Products Co., Customer Service Department. Your actions, if you fail to follow this Product Warning, may cause a fire, an explosion, or structural failure resulting in serious personal injury or death as well as damage to property.



WEBER-STEPHEN PRODUCTS CO.
Customer Service Center
1890 Roselle Road, Suite 308
Schaumburg, IL 60195

1-800-446-1071 (USA ONLY)
www.weber.com