PILOT REMOTE

Elevator Toggle (driver)

Trigger: NONE

Front/Back Toggle

Press With CoPilot to toggle going over limit

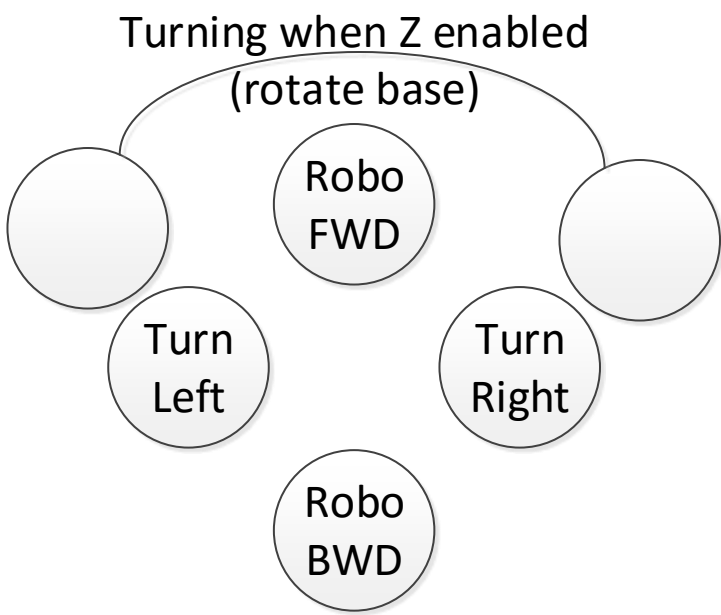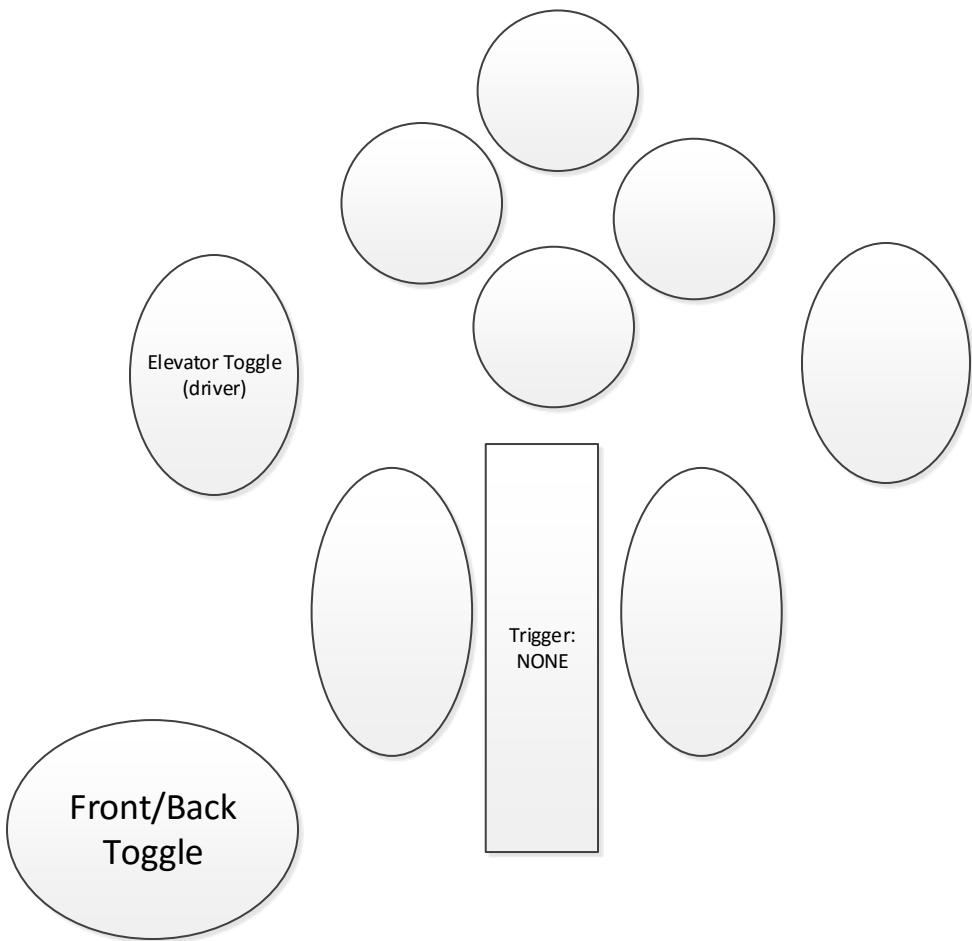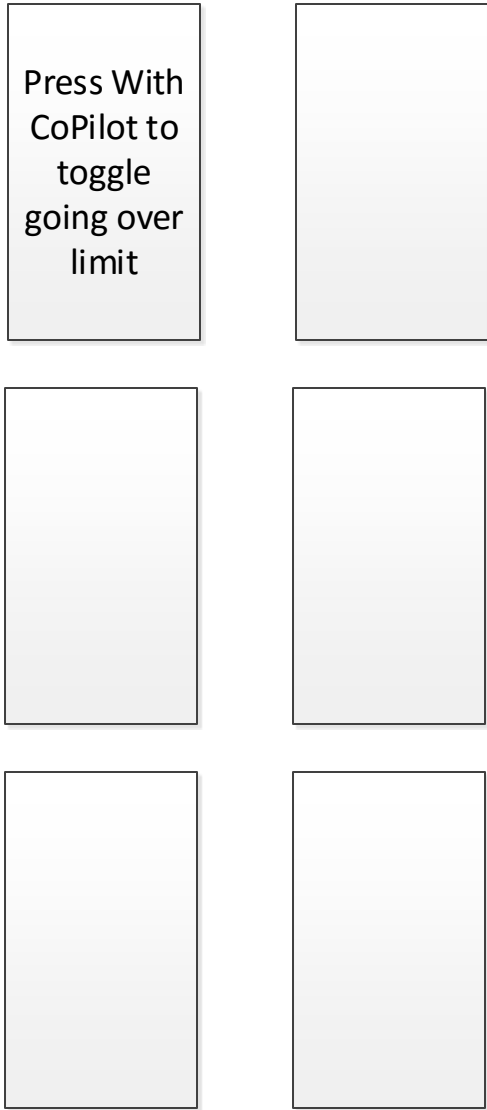**Turning when Z enabled (rotate base)**

Robo FWD

Turn Left

Turn Right

Robo BWD

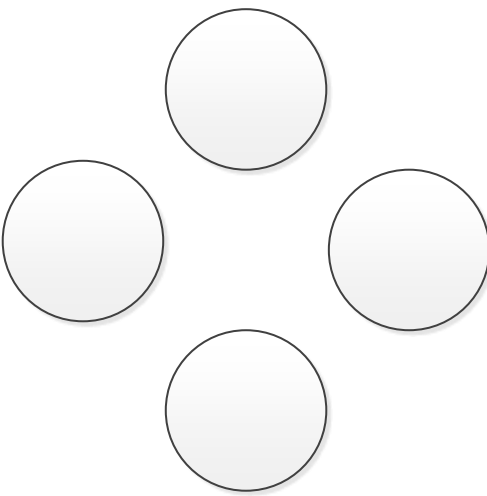Driver Scissor
+ Speed Up
- Speed Down

CO-PILOT REMOTE

A: Close Manipulator Arms
B: [Ltoggle] Left Manipulator

Hold to switch [Ltoggle] to open

A: Open Manipulator Arms
B: [Rtoggle] Right Manipulator

Hold to switch [Rtoggle] to open

A, B: Toggle (manual on dash)

Press with pilot to toggle going over limit

DO NOT PRESS
MAKE SURE LIGHT OFF
AND X ON BACK

Raise Scissor

Hold to Give Driver Scissor

Lock claw UP/DOWN

Lower Scissor

Hook Out

Claw Up

Claw Down

Hook In

Claw Up/ Hook Out

Claw Down/ Hook In