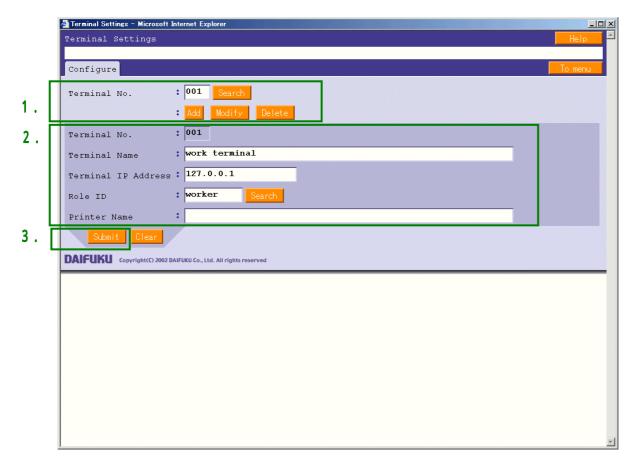# 10. Terminal Setup

<Abstract>

Set a terminal.
A screen to add/modify/delete the data in the Terminal table.

<Screen Image>

<Notes>

- For technical staff's use: You may modify "undefined terminal" data, but are not allowed to delete it.
- For customer's use: You are not allowed to modify or delete "undefined terminal" data.
- For customer's use: "undefined terminal" is not displayed in the Terminal List Box.

  undefined terminal
- If an access from the IP address undefined in the Terminal table is found, the functions for "undefined terminal data".
  - Definition for undefined data
    - IPAddress: UNDEFINED_TERMINAL
    - RoleID   : Only "View" function is available as a default guest role.

- Even when no restriction is put on terminal, sub-menu as UNDEFINED_TERMINAL role appears.

Add

Add a new data into the Terminal table.

<Procedure>

1. Enter the terminal No. you add, and press "Add" button.

(1) Enter the terminal No. (Necessary)
Enter the terminal No. undefined in the Terminal table.

(2) Press [Add] button.
The entered terminal No. is displayed in the input field.

2. Enter the terminal data you add.

(1) Enter the terminal name.

(2) Enter the terminal IP address.

(3) Enter the role ID. (Necessary)
Enter the role ID of the role to which the terminal you add belongs.
Press [Search] button, and select "Role ID" from the "Role List Box".
For the list box image, refer to the "Role List Box" of the Role Setup (Modify).

(4) Enter the printer name.

3. Confirm the data you add, and reflect it to the Terminal table.

(1) Press [Submit] button.

(2) Press [OK] button on the confirmation message.
Press [Submit] button, and the message for confirmation appears.
Press [OK] to continue.
=> The entered user data is added.
Press [Cancel] button to stop setting.
=> The entered user data is left as it is, and the adding process is canceled.

Modify
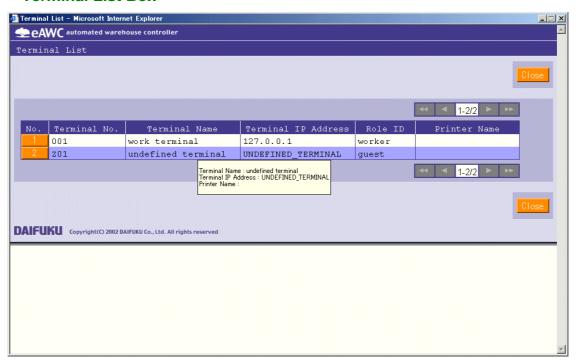
Modify the terminal data.

<Procedure>

1. Enter the terminal No. you modify, and press "Modify" button.

(1) Enter the terminal No. (Necessary)
Enter the terminal No. you add into the Terminal table.
Press [Search] button, and select [Terminal No.] from the [Terminal List Box].

(2) Press [Modify] button.
The entered terminal data is displayed in the input field.

Terminal List Box

74

2. Enter the terminal data you modify.

(1) Enter the terminal name.

(2) Enter the terminal IP address.
 * You are not allowed to modify data if the terminal IP address is "UNDEFINED_TERMINAL".

(3) Enter the role ID. (Necessary)
 Enter the role Id of the role to which the terminal you add belongs.
 Press [Search] button, and select the "Role ID" from the "Role List Box".
For the list box image, refer to the "Role List Box" of the Role Setup (Modify).

(4) Enter the printer name.

3. Confirm the data, and reflect it to the Terminal table.

(1) Press [Submit] button.

(2) Press [OK] button on the confirmation message.
 Press [Submit] button, and the message for confirmation appears.
 Press [OK] to continue.
 => The entered user data is modified.
 Press [Cancel] button to stop setting.
 => The entered user data is left as it is, and the modifying process is canceled.

Delete

Delete the entered terminal data from the Terminal table.

<Procedure>

1. Enter the terminal No. you delete, and press "Delete" button.

(1) Enter the terminal No. (Necessary)
Enter the terminal No. defined in the Terminal table.
Press [Search] button , and select [Terminal No.] from the Terminal List Box".
For the list box image, refer to the "Terminal List Box" of the Terminal Setup (Modify).

(2) Press [Delete] button.
The entered terminal data is displayed in the input field.

2. Confirm the terminal data you delete.

3. Confirm the data you delete, and reflect it to the Terminal data.

(1) Press [Submit] button.

(2) Press [OK] button on the message for confirmation.
Press [Submit] button, and the message for confirmation appears.
Press [OK] to continue.
=> The entered user data is deleted.
Press [Cancel] button to stop setting.
=> The entered user data is left as it is, and the deleting process is canceled.