



## **Application Note**

### **AN\_565**

# **User Guide for FTDI FT260 Test Utility**

**Version 1.0**

**Issue Date: 30-10-2025**

This application note explains how to use the FT260\_Test\_Utility which provides a user interface to control I2C/UART/GPIO with FT260.

Use of FTDI devices in life support and/or safety applications is entirely at the user's risk, and the user agrees to defend, indemnify and hold FTDI harmless from any and all damages, claims, suits or expense resulting from such use.

**Future Technology Devices International Limited (FTDI)**

Unit 1,2 Seaward Place, Glasgow G41 1HH, United Kingdom  
Tel.: +44 (0) 141 429 2777 Fax: + 44 (0) 141 429 2758  
E-Mail (Support): [support1@ftdichip.com](mailto:support1@ftdichip.com) Web: <http://www.ftdichip.com>  
Copyright © Future Technology Devices International Limited

---

## Table of Contents

|          |                                           |           |
|----------|-------------------------------------------|-----------|
| <b>1</b> | <b>Introduction .....</b>                 | <b>3</b>  |
| <b>2</b> | <b>FT260_Test_Utility Basics .....</b>    | <b>4</b>  |
| 2.1      | Connect Device .....                      | 5         |
| <b>3</b> | <b>I2C Functions .....</b>                | <b>8</b>  |
| 3.1      | Send Command .....                        | 8         |
| 3.2      | Get Status .....                          | 9         |
| 3.3      | Reset.....                                | 9         |
| 3.4      | Scan Bus .....                            | 10        |
| 3.5      | EEPROM Dump .....                         | 10        |
| <b>4</b> | <b>UART Functions .....</b>               | <b>11</b> |
| 4.1      | Send Command .....                        | 11        |
| 4.2      | Break .....                               | 12        |
| 4.3      | DCD/RI .....                              | 12        |
| <b>5</b> | <b>GPIO Function .....</b>                | <b>14</b> |
| 5.1      | GPIO Setup .....                          | 14        |
| 5.2      | GPIO Update .....                         | 14        |
| 5.3      | GPIO0~GPIO5 driving strength .....        | 14        |
| 5.4      | GPIO Function Assignment .....            | 15        |
| 5.4.1    | GPIO2 function .....                      | 15        |
| 5.4.2    | GPIO3 function .....                      | 15        |
| 5.4.3    | GPIOA function .....                      | 15        |
| 5.4.4    | GPIOG function .....                      | 15        |
| 5.5      | GPIO Feature Configuration .....          | 15        |
| 5.5.1    | GPIO Direction .....                      | 15        |
| 5.5.2    | GPIO Driving Mode.....                    | 15        |
| <b>6</b> | <b>Automatically Fill Command.....</b>    | <b>16</b> |
| 6.1      | I2C Fill Command.....                     | 16        |
| 6.2      | UART Fill Command.....                    | 17        |
| <b>7</b> | <b>Definition of Error Messages .....</b> | <b>19</b> |
| <b>8</b> | <b>Contact Information.....</b>           | <b>20</b> |

|                                                     |           |
|-----------------------------------------------------|-----------|
| <b>Appendix A - References .....</b>                | <b>21</b> |
| Document References .....                           | 21        |
| <b>Appendix B – List of Tables and Figures.....</b> | <b>22</b> |
| List of Tables .....                                | 22        |
| List of Figures .....                               | 22        |
| <b>Appendix C – Revision History .....</b>          | <b>24</b> |

## 1 Introduction

FT260\_Test\_Utility is a free test tool designed specifically for the FT260 device. It provides the ability to configure and control the I2C, UART and GPIO interfaces.

The executable version is hard-coded to work with the default VID and PID. The FT260 default VID/PID is 0403/6030. The application is built for Windows x64 platform and requires the Microsoft .NET Framework 4.6 or later to run.

For optimal use, we recommend using the [UMFT260EV1A](#) development module with this utility.

Features of the FT260\_Test\_Utility:

- Automatic detection of the FT260 device.
- Support three core functions: I2C Master, UART, GPIO
- Include a logging feature for messages during I2C/UART transfers.
- Supports loading UART/I2C commands from an external file.
- GPIO state display: availability, function, direction, value.
- All functions are controlled by the libft260.dll library.


The FT260\_Test\_Utility is available as a free download from the FTDI [Utilities](#) page of the [FTDI website](#).

## 2 FT260\_Test\_Utility Basics

After Extracting the FT260\_Test\_Utility archive, there are three files in the folder:

- FT260\_Test\_Utility.exe: The main application program (Windows x64).
- LibFT260.dll: The dynamic link library for the FT260 (Windows x64).
- Ft260\_cmd\_list.csv: A template file used to automatically fill command list.

Run the executable file by double clicking on the .exe and the following screen appears:

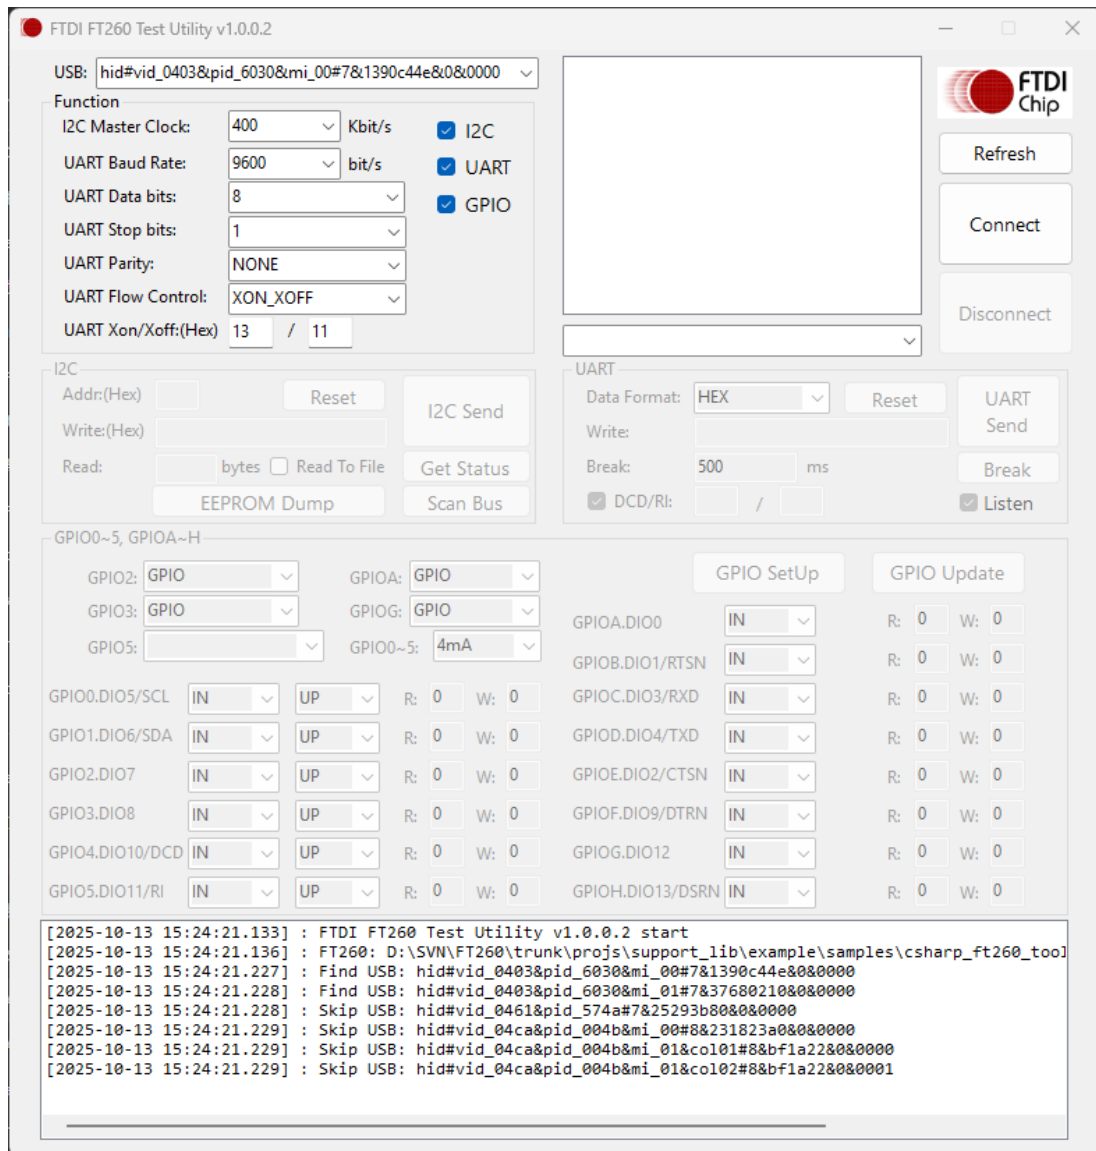

**Figure 2-1 FT260\_Test\_Utility Default GUI**

Before initiating any test, the user must configure the operating mode of the FT260. The following table describes the operating mode of the FT260:

| DCMF1 | DCNF0 | Mode | HID Interface | I2C     | UART    | GPIO    |
|-------|-------|------|---------------|---------|---------|---------|
| 0     | 0     | 0    | 2             | Support | Support | Support |
| 0     | 1     | 1    | 1             | Support | X       | Support |
| 1     | 0     | 2    | 1             | X       | Support | Support |
| 0     | 0     | 3    | 2             | Support | Support | Support |

**Table 2-1 FT260 Mode**

- FT260 DCMF0/DCNF1 pins need to be 00 or 11 to enable both UART and I2C functionality.
- In Mode 0 or Mode 3, the HID Interface 0 is for I2C.
- In Mode 0 or Mode 3, the HID Interface 1 is for UART.
- In Mode 0 or Mode 3, either interface can be used for GPIO.


## 2.1 Connect Device

USB List will display all detected FT260 devices. Select one device from the list that you wish to test.

- If the same FT260 device appears with two interfaces in the USB list, please select one of the interfaces.
- If the expected FT260 is not detected, please re-insert the FT260 device and click the "Refresh" button.


Once the device is selected, choose the parameters for the functions you wish to use. You may uncheck I2C or UART, if they are not required for your test. However, the GPIO function is mandatory and cannot be unchecked.

Click the "**Connect**" button to establish the connection.

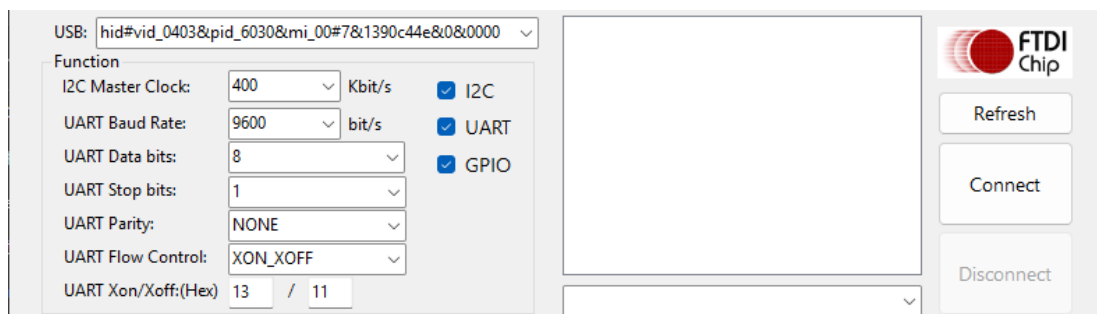

**Figure 2-2 FT260\_Test\_Utility Function Selection Panel**


After successfully connecting, the left-hand message box will display critical FT260 information. It is including the libft260.dll version, chip version and feature settings.

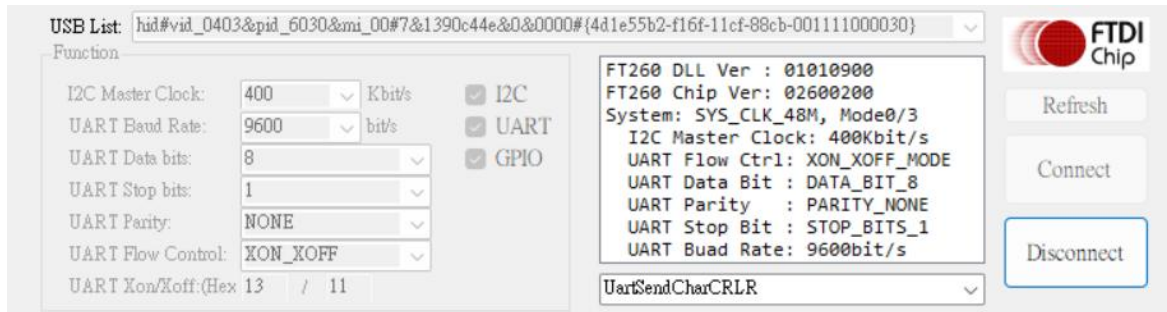

**Figure 2-3 The information of FT260 after connected**

If the FT260\_Test\_Utility is configured to enable I2C and UART, it will proceed to initialize the I2C, UART and GPIO interfaces.

The screen looks like the one given below:

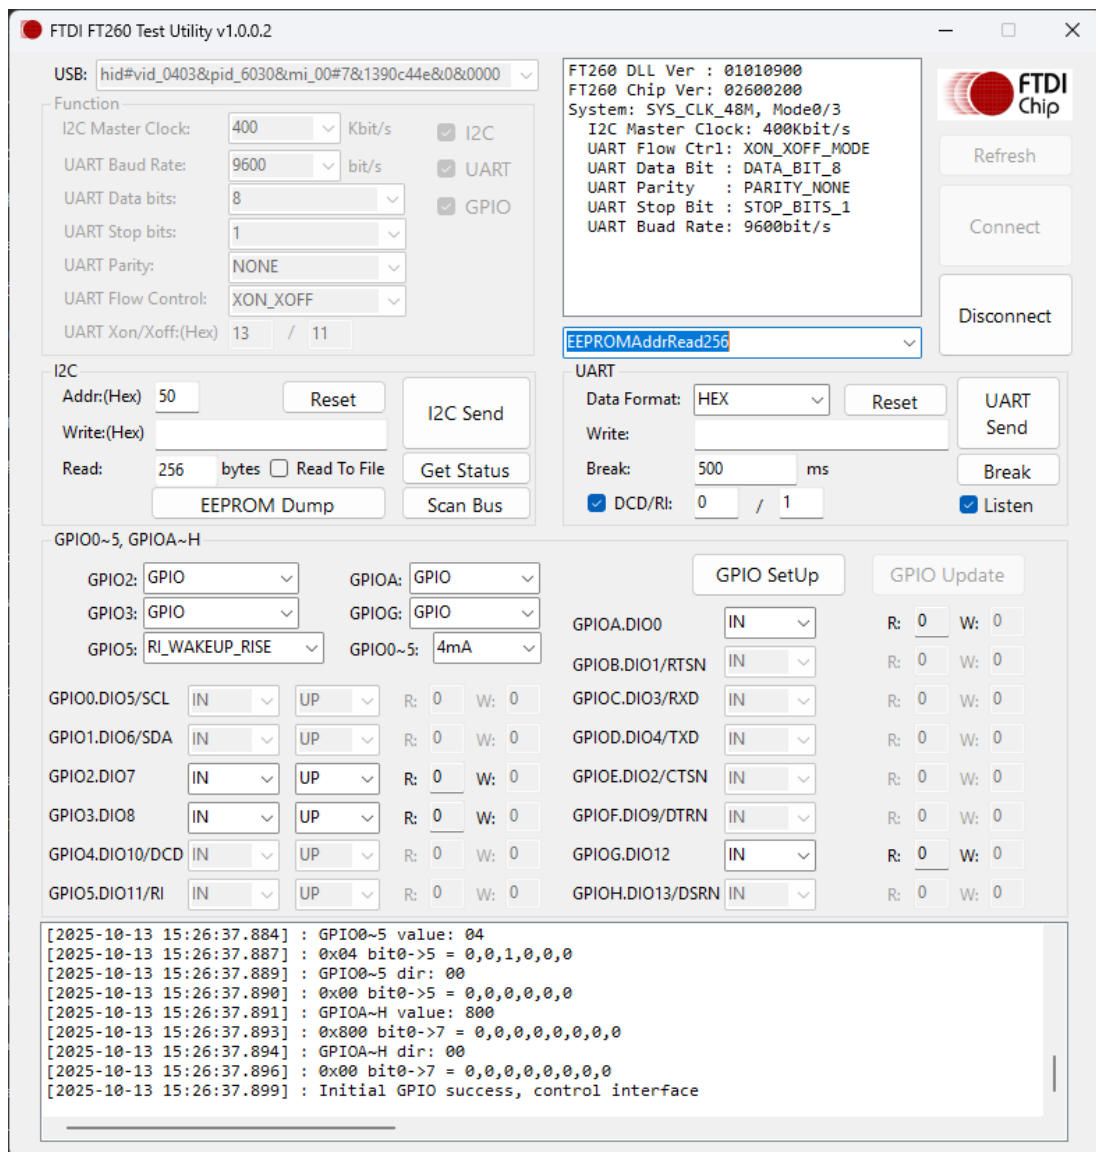

**Figure 2-4 FT260 is connected**

Note the following automatic pin assignment behaviours:

- If the I2C function is enabled, GPIO0 and GPIO1 will be disabled.
- If the UART is enabled, GPIOB, GPIOC, GPIOD, GPIOE, GPIOH will be disabled.
- If the UART is enabled and the DCD/RI options is checked, GPIO4 and GPIO5 will be disabled.



## 3 I2C Functions

The I2C control panel looks like the one given below:



The screenshot shows the I2C Control Panel with the following fields and buttons:

- Addr:(Hex)**: 5A
- Write:(Hex)**: (empty)
- Read:** 0 bytes
- ☐ **Read To File**
- Buttons**: Reset, I2C Send, Get Status, EEPROM Dump, Scan Bus

**Figure 3-1 I2C Control Panel**

- The address uses hexadecimal format and represent 7-bit address without R/W select bit.
- Write data use hexadecimal format, with data separated by spaces.
- Data Read is decimal format.
- If option "Read To File" is checked, the read data will be saved into two files: "FT260\_READ\_xxx.txt" and "FT260\_READ\_xxx.bin".

### 3.1 Send Command

Click the "**I2C Send**" button to send I2C command data. After I2C data is transferred, a Data Table Form will appear to record the transaction details.

Example 1:

I2C Write: 0xAB, 0xCD, 0xEF

I2C Read: 0



The screenshot shows the I2C Control Panel with the following fields and buttons:

- Addr:(Hex)**: 50
- Write:(Hex)**: AB CD EF
- Read:** 0 bytes
- ☐ **Read To File**
- Buttons**: Reset, I2C Send, Get Status, EEPROM Dump, Scan Bus

**Figure 3-2 I2C Example 1 Control Panel**

| DataTableForms I2C |      |      |     |     |          |
|--------------------|------|------|-----|-----|----------|
|                    | Item | Addr | W/R | Len | Data     |
|                    | #1   | 5A   | W   | 3   | AB CD EF |

**Figure 3-3 I2C Example 1 Data Table Form**

Example 2:

I2C Write: 0

I2C read: 256



The control panel for I2C Example 2 includes the following fields and buttons:

- I2C Addr:(Hex)**: 50
- Write:(Hex)**: 0
- Read:** 256 bytes
- ☐ **Read To File**
- Buttons**: Reset, I2C Send, Get Status, EEPROM Dump, Scan Bus

**Figure 3-4 I2C Example 2 Control Panel**

| DataTableForms I2C |      |      |     |     |                                                     |
|--------------------|------|------|-----|-----|-----------------------------------------------------|
|                    | Item | Addr | W/R | Len | Data                                                |
|                    | #1   | 5A   | W   | 3   | AB CD EF                                            |
|                    | #2   | 50   | W   | 1   | 0                                                   |
|                    | #2   | 50   | R   | 256 | 45 31 03 04 30 60 08 00 A0 FA 46 54 44 49 2C 0A ... |

**Figure 3-5 I2C Example 2 Data Table Form**

```
[2025-09-25 14:54:15.301] : 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
[2025-09-25 14:54:15.303] : 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
[2025-09-25 14:54:15.304] : 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
[2025-09-25 14:54:15.305] : 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
[2025-09-25 14:54:15.306] : 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
[2025-09-25 14:54:15.308] : 00 00 00 00 00 00 00 00 00 00 00 00 00 00 7D 87
[2025-09-25 14:54:15.314] : EEPROM save to file: FT260_READ_20250925145415.txt
[2025-09-25 14:54:15.315] : EEPROM save to file: FT260_READ_20250925145415.bin
```

**Figure 3-6 I2C Save Read Data to File**

## 3.2 Get Status

Click the **"Get Status"** button to get the current I2C status. If the I2C bus is operating normally, the status will be reported as idle. If the I2C transfer fails, the status will indicate the error condition.

```
[2025-09-25 15:01:29.024] : I2C Status: 0x4E
[2025-09-25 15:01:29.025] : I2C Write Fail
[2025-09-25 15:01:29.027] : ErrorBox: Error I2C Command Send fail, I2C Write Fail
[2025-09-25 15:01:52.139] : I2C Status: 0x4E
[2025-09-25 15:01:52.140] : - Error condition
[2025-09-25 15:01:52.140] : - Address not acknowledged (NACK)
[2025-09-25 15:01:52.142] : - Data not acknowledged (NACK)
[2025-09-25 15:01:52.144] : - Bus is busy
```

**Figure 3-7 I2C Write Fail and Get Status**

## 3.3 Reset

Click the **"Reset"** button to reset the I2C bus. After reset is complete, the I2C status will return to idle.

```
[2025-09-25 15:01:52.139] : I2C Status: 0x4E
[2025-09-25 15:01:52.140] : - Error condition
[2025-09-25 15:01:52.140] : - Address not acknowledged (NACK)
[2025-09-25 15:01:52.142] : - Data not acknowledged (NACK)
[2025-09-25 15:01:52.144] : - Bus is busy
[2025-09-25 15:02:00.883] : I2C reset
[2025-09-25 15:02:02.443] : I2C Status: 0x20
[2025-09-25 15:02:02.444] : - Controller is idle
```

**Figure 3-8 I2C Reset and Get Status**

## 3.4 Scan Bus

Click the “**Scan Bus**” button to execute an address scan. This function sends a read command to all possible 7-bit addresses ranging from 0x01 to 0x7F. If an ACK response is received, it means an I2C slave device has been successfully found at that address on the I2C bus.

```
[2025-09-25 15:03:54.051] : Addr 7D, get status: 0x26
[2025-09-25 15:03:54.052] : Addr 7D - Address not acknowledged (NACK)
[2025-09-25 15:03:54.057] : Addr 7E, get status: 0x26
[2025-09-25 15:03:54.058] : Addr 7E - Address not acknowledged (NACK)
[2025-09-25 15:03:54.064] : Addr 7F, get status: 0x26
[2025-09-25 15:03:54.065] : Addr 7F - Address not acknowledged (NACK)
[2025-09-25 15:03:54.067] : I2C bus scan find 1 device
[2025-09-25 15:03:54.069] : 50
```

**Figure 3-9 I2C Scan Bus Result**

## 3.5 EEPROM Dump


Click the “**EEPROM Dump**” button to read all data from the EEPROM located on the [UMFT260EV1A](#). The retrieved data will be saved to a file.

```
[2025-09-25 15:04:20.339] : 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
[2025-09-25 15:04:20.340] : 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
[2025-09-25 15:04:20.341] : 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
[2025-09-25 15:04:20.342] : 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
[2025-09-25 15:04:20.343] : 00 00 00 00 00 00 00 00 00 00 00 00 00 00 7D 87
[2025-09-25 15:04:20.349] : EEPROM save to file: FT260_EEPROM_20250925150420.txt
[2025-09-25 15:04:20.350] : EEPROM save to file: FT260_EEPROM_20250925150420.bin
[2025-09-25 15:04:20.351] : EEPROM Dump Finish
```

**Figure 3-10 I2C Dump EEPROM Data**

## 4 UART Functions

The UART control panel looks like the one given below:

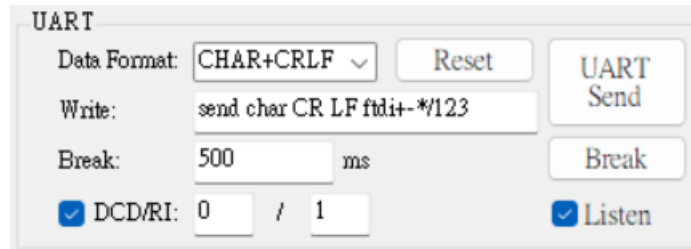

The UART control panel is a window titled "UART". It contains the following controls:

- Data Format:** A dropdown menu currently set to "CHAR+CRLF".
- Reset:** A button to reset the settings.
- UART Send:** A button to send the data.
- Write:** A text input field containing "send char CR LF ftdi-\*123".
- Break:** A button to trigger a break.
- Break:** A text input field set to "500" with a "ms" unit label.
- DCD/RI:** Two checkboxes, both checked, with input fields set to "0" and "1".
- Listen:** A checked checkbox.

**Figure 4-1 UART Control Panel**


- Support three data formats for UART transmission: HEX, CHAR, CHAR+CRLF
- Write commands must adhere to the selected data format setting.
- After UART is initialised, the utility starts an automatic UART data read operation every 1000 ms.
- If any UART data is received, a Data Table Form will be displayed to record the transaction details.

### 4.1 Send Command

Select the data format first and then input the write data. Click the "**UART Send**" button to transmit the write data. After the UART data is sent, a Data Table Form will appear to record the transaction detail.

Example 1:

Data Format is HEX. Write data use hexadecimal format, with individual data bytes separated by spaces.

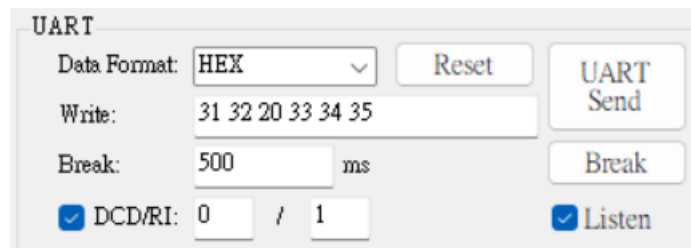

The UART control panel is shown with the following settings for Example 1:

- Data Format:** A dropdown menu set to "HEX".
- Reset:** A button.
- UART Send:** A button.
- Write:** A text input field containing "31 32 20 33 34 35".
- Break:** A button.
- Break:** A text input field set to "500" with a "ms" unit label.
- DCD/RI:** Two checked checkboxes with input fields set to "0" and "1".
- Listen:** A checked checkbox.

**Figure 4-2 UART Example 1 Control Panel**

| DataTableForms UART |      |        |     |     |                   |
|---------------------|------|--------|-----|-----|-------------------|
|                     | Item | Format | W/R | Len | Data              |
|                     | #1   | HEX    | W   | 6   | 31 32 20 33 34 35 |

**Figure 4-3 UART Example 1 Data Table Form**

Example 2:

Data Format is CHAR. Write data use character format.



UART Control Panel showing settings for Example 2:

- Data Format: CHAR
- Write: test any char
- Break: 500 ms
- DCD/RI: ☒ 0 / 1
- Buttons: Reset, UART Send, Break, Listen

**Figure 4-4 UART Example 2 Control Panel**

| DataTableForms UART |      |        |     |     |               |
|---------------------|------|--------|-----|-----|---------------|
|                     | Item | Format | W/R | Len | Data          |
|                     | #1   | CHAR   | W   | 13  | type any char |

**Figure 4-5 UART Example 2 Data Table Form**

Example 3:

Data Format is CHAR+CRLF. Write data use character format. The utility will automatically append 0x0d<CR> and 0x0A<LF> after the write data.



UART Control Panel showing settings for Example 3:

- Data Format: CHAR+CRLF
- Write: test any char
- Break: 500 ms
- DCD/RI: ☒ 0 / 1
- Buttons: Reset, UART Send, Break, Listen

**Figure 4-6 UART Example 3 Control Panel**

| DataTableForms UART |      |        |     |     |               |
|---------------------|------|--------|-----|-----|---------------|
|                     | Item | Format | W/R | Len | Data          |
|                     | #1   | CHAR   | W   | 13  | type any char |

**Figure 4-7 UART Example 3 Data Table Form**

## 4.2 Break

Click the **"Break"** button to send a UART break condition on the TX line. The duration of this break signal is determined by the time value set by the user in the control panel.

## 4.3 DCD/RI

Check the **"DCD/RI"** option to enable the UART DCD(GPIO4) and UART RI(GPIO5).

- If DCD/RI is checked: the GPIO4 and GPIO5 are disabled. The utility will update the DCD and RI statuses every 1000ms. When the RI is enabled, the GPIO5 serves as the wakeup pin in USB suspend mode.

| GPIO0~5, GPIOA~H      |    |              |      |                   |                  |                    |      |      |  |
|-----------------------|----|--------------|------|-------------------|------------------|--------------------|------|------|--|
| GPIO2: GPIO           |    | GPIOA: GPIO  |      | <b>GPIO SetUp</b> |                  | <b>GPIO Update</b> |      |      |  |
| GPIO3: GPIO           |    | GPIOG: GPIO  |      |                   |                  |                    |      |      |  |
| GPIO5: RI_WAKEUP_RISE |    | GPIO0~5: 4mA |      |                   |                  |                    |      |      |  |
| GPIO0.DIO5/SCL        | IN | UP           | R: 0 | W: 0              | GPIOA.DIO0       | IN                 | R: 0 | W: 0 |  |
| GPIO1.DIO6/SDA        | IN | UP           | R: 0 | W: 0              | GPIOB.DIO1/RTSN  | IN                 | R: 0 | W: 0 |  |
| GPIO2.DIO7            | IN | UP           | R: 0 | W: 0              | GPIOC.DIO3/RXD   | IN                 | R: 0 | W: 0 |  |
| GPIO3.DIO8            | IN | UP           | R: 0 | W: 0              | GPIOD.DIO4/TXD   | IN                 | R: 0 | W: 0 |  |
| GPIO4.DIO10/DCD       | IN | UP           | R: 0 | W: 0              | GPIOE.DIO2/CTSN  | IN                 | R: 0 | W: 0 |  |
| GPIO5.DIO11/RI        | IN | UP           | R: 0 | W: 0              | GPIOF.DIO9/DTRN  | IN                 | R: 0 | W: 0 |  |
|                       |    |              |      |                   | GPIOG.DIO12      | IN                 | R: 0 | W: 0 |  |
|                       |    |              |      |                   | GPIOH.DIO13/DSRN | IN                 | R: 0 | W: 0 |  |

**Figure 4-8 UART is Enabled and DCD/RI is Checked**

- If DCD/RI is unchecked: the GPIO4 and the GPIO5 are enabled.

| GPIO0~5, GPIOA~H |    |              |      |                   |                  |                    |      |      |  |
|------------------|----|--------------|------|-------------------|------------------|--------------------|------|------|--|
| GPIO2: GPIO      |    | GPIOA: GPIO  |      | <b>GPIO SetUp</b> |                  | <b>GPIO Update</b> |      |      |  |
| GPIO3: GPIO      |    | GPIOG: GPIO  |      |                   |                  |                    |      |      |  |
| GPIO5:           |    | GPIO0~5: 4mA |      |                   |                  |                    |      |      |  |
| GPIO0.DIO5/SCL   | IN | UP           | R: 0 | W: 0              | GPIOA.DIO0       | IN                 | R: 0 | W: 0 |  |
| GPIO1.DIO6/SDA   | IN | UP           | R: 0 | W: 0              | GPIOB.DIO1/RTSN  | IN                 | R: 0 | W: 0 |  |
| GPIO2.DIO7       | IN | UP           | R: 0 | W: 0              | GPIOC.DIO3/RXD   | IN                 | R: 0 | W: 0 |  |
| GPIO3.DIO8       | IN | UP           | R: 0 | W: 0              | GPIOD.DIO4/TXD   | IN                 | R: 0 | W: 0 |  |
| GPIO4.DIO10/DCD  | IN | UP           | R: 0 | W: 0              | GPIOE.DIO2/CTSN  | IN                 | R: 0 | W: 0 |  |
| GPIO5.DIO11/RI   | IN | UP           | R: 0 | W: 0              | GPIOF.DIO9/DTRN  | IN                 | R: 0 | W: 0 |  |
|                  |    |              |      |                   | GPIOG.DIO12      | IN                 | R: 0 | W: 0 |  |
|                  |    |              |      |                   | GPIOH.DIO13/DSRN | IN                 | R: 0 | W: 0 |  |


**Figure 4-9 UART is Enabled and DCD/RI is Unchecked**

## 5 GPIO Function

The FT260 has 3 pins which have more than 2 functions. They are GPIO 2, GPIOA, and GPIOG. After GPIO initial, these 3 pins will be configured to GPIO via USB commands.

For detailed information of GPIO, please reference to Chapter 3.3 Pin Description of the [FT260 HID class USB to UART/I2C Master](#).


If the user selects the GPIO function only, the user will have full control over all FT260 GPIO pins.

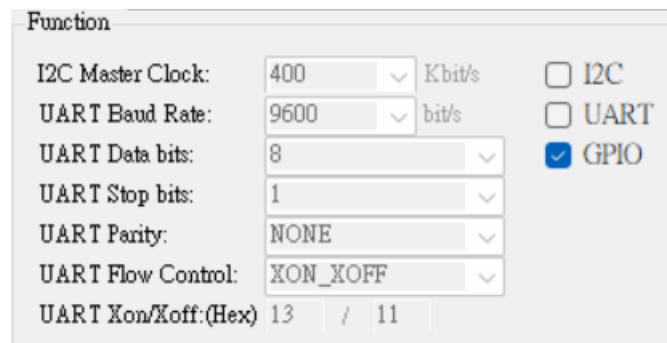

The figure shows a 'Function' control panel with the following settings:

- I2C Master Clock: 400 Kbit/s
- UART Baud Rate: 9600 bit/s
- UART Data bits: 8
- UART Stop bits: 1
- UART Parity: NONE
- UART Flow Control: XON\_XOFF
- UART Xon/Xoff (Hex): 13 / 11
- Function Selection: ☐ I2C, ☐ UART, ☒ GPIO

**Figure 5-1 GPIO Control Panel**

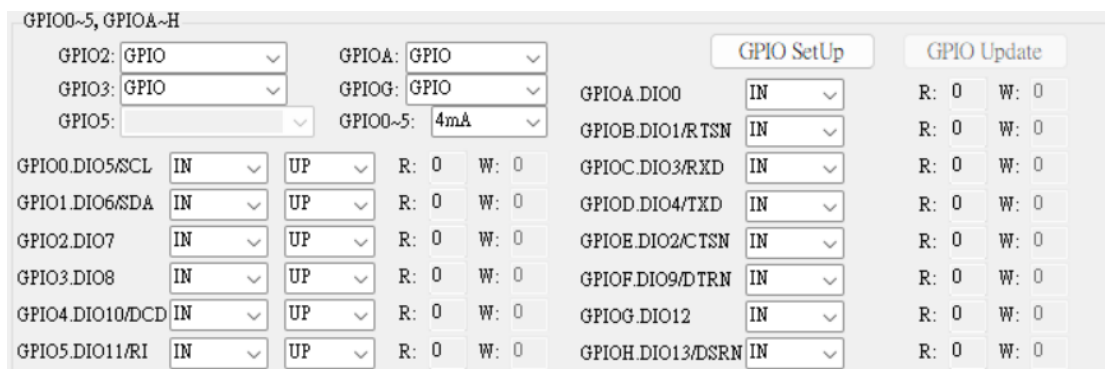

The figure shows the GPIO configuration interface with the following settings:

- GPIO0~5, GPIOA~H
- GPIO2: GPIO, GPIOA: GPIO, GPIOG: GPIO
- GPIO3: GPIO, GPIO0~5: 4mA
- GPIO5: (empty)
- Buttons: GPIO SetUp, GPIO Update
- GPIO Pin Configurations (Direction, Mode, Read, Write):

| Pin              | Direction | Mode | R | W |
|------------------|-----------|------|---|---|
| GPIO0.DIO5/SCL   | IN        | UP   | 0 | 0 |
| GPIO1.DIO6/SDA   | IN        | UP   | 0 | 0 |
| GPIO2.DIO7       | IN        | UP   | 0 | 0 |
| GPIO3.DIO8       | IN        | UP   | 0 | 0 |
| GPIO4.DIO10/DCD  | IN        | UP   | 0 | 0 |
| GPIO5.DIO11/RI   | IN        | UP   | 0 | 0 |
| GPIOA.DIO0       | IN        |      |   |   |
| GPIOB.DIO1/RTSN  | IN        |      |   |   |
| GPIOC.DIO3/RXD   | IN        |      |   |   |
| GPIOD.DIO4/TXD   | IN        |      |   |   |
| GPIOE.DIO2/CTSN  | IN        |      |   |   |
| GPIOF.DIO9/DTRN  | IN        |      |   |   |
| GPIOG.DIO12      | IN        |      |   |   |
| GPIOH.DIO13/DSRN | IN        |      |   |   |

**Figure 5-2 GPIO is Enabled and I2C/UART are Disabled**

### 5.1 GPIO Setup

Click the "GPIO Setup" button, the utility will set direction for all GPIOs and set the driving mode for GPIO0~GPIO5.

### 5.2 GPIO Update

Click the "GPIO Update" button, the utility will write value to any GPIO pins set as output and then read the current value of all GPIO pins.

### 5.3 GPIO0~GPIO5 driving strength

The GPIO0~GPIO5 support configurable driving strength setting, offering options of 4mA, 8mA, 12mA, 16mA.

## 5.4 GPIO Function Assignment

### 5.4.1 GPIO2 function

GPIO2 support GPIO, SUSPOUT\_N, PWREN\_N, TX\_LED functions.

- If set to GPIO, the GPIO2 will be enabled. Otherwise, the GPIO2 will be disabled.

### 5.4.2 GPIO3 function

GPIO3 support GPIO, WAKEUP, INTERIN functions.

- If set to GPIO, the GPIO3 will be enabled. Otherwise, the GPIO3 will be disabled.
- If set to WAKEUP, the utility will set wakeup type to rising edge detection.
- If set to INTERIN, the utility will set interrupt type to rising edge detection. Note that the UART function must be enabled first.

### 5.4.3 GPIOA function

GPIOA support GPIO, TX\_ACTIVE, TX\_LED functions.

- If set to GPIO, the GPIOA will be enabled. Otherwise, the GPIOA will be disabled.

### 5.4.4 GPIOG function

GPIOG support GPIO, BCD\_DET, RX\_LED, PWREN\_N functions.

- If set to GPIO, the GPIOG will be enabled. Otherwise, the GPIOG will be disabled.

## 5.5 GPIO Feature Configuration

### 5.5.1 GPIO Direction

The GPIO direction can be selected as either output or input.

- If a GPIO set to output, the write value field will be enabled to allow the user to set the pin state to 0 or 1. Otherwise, the write value field will be disable.


### 5.5.2 GPIO Driving Mode

GPIO0~GPIO5 support pull-up/pull-down/open-drain mode.



## 6 Automatically Fill Command

The FT260\_Test\_Utility supports an automatically fill command function for both the I2C and UART functions. The utility reads the file "ft260\_cmd\_list.csv" and parses the valid entries to display them in the command list for easy selection. Users are free to modify this file to create custom commands for specific testing.

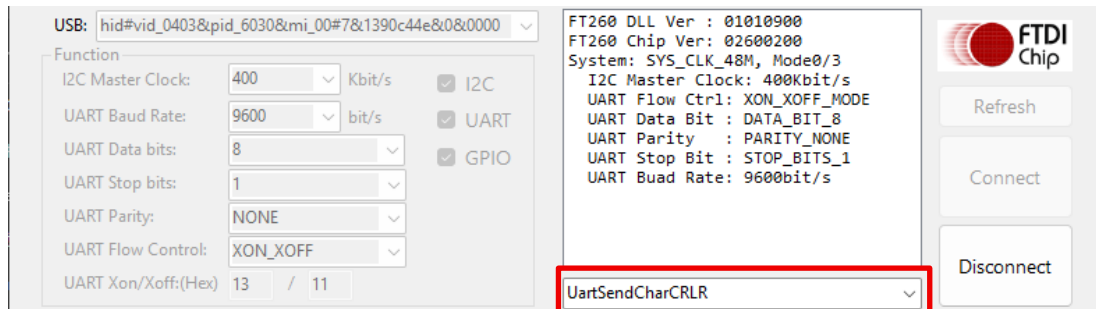

**Figure 6-1 Command List**

- Lines beginning with "//" or "#" will be treated as comments and skipped.
- If a command contains "//", the text following it will be ignored.

### 6.1 I2C Fill Command

I2C command format include five parts (command\_name, device\_name, addr, write, read).

| Field Name   | Description                    | Constraints                                                           |
|--------------|--------------------------------|-----------------------------------------------------------------------|
| command_name | A descriptive name.            | Must be unique within the file.                                       |
| device_name  | Specifies the interface type.  | Must be either I2C or I2CM.                                           |
| address      | The slave address.             | The 7-bit slave address for the I2C transaction.                      |
| write        | The data to be written.        | If it is a read-only command, leave this field empty or type a space. |
| read         | The length of data to be read. | If it is a write-only command, enter 0 or type a space.               |

**Table 6-1 I2C Fill Command Format**

| command_name      | device_name | addr | write | read |
|-------------------|-------------|------|-------|------|
| EEPROMAddrRead256 | I2C         | 50   | 0     | 256  |
| EEPROMRandomRead  | I2CM        | 50   |       | 64   |
| EEPROMByteWrite   | I2CM        | 50   | 0 30  | 0    |

**Table 6-2 I2C Fill Command Example**

Example 1:

Select command "EEPROMAddrRead256"



**Figure 6-2 I2C Control Panel - EEPROMAddrRead256**

Example2:

Select command "EEPROMRandomRead"



**Figure 6-3 FT260\_Test\_Utility is connected - EEPROMRandomRead**

Example3:

Select command "EEPROMByteWrite"



**Figure 6-4 FT260\_Test\_Utility is connected - EEPROMByteWrite**

## 6.2 UART Fill Command

The UART command format include four parts (command\_name, device\_name, data\_format, write).

| Field Name   | Description                   | Constraints                                                                        |
|--------------|-------------------------------|------------------------------------------------------------------------------------|
| command_name | A descriptive name.           | Must be unique within the file.                                                    |
| device_name  | Specifies the interface type. | Must be UART.                                                                      |
| data_format  | The format of the write data. | Supports HEX, CHAR, or CHAR+CRLF.                                                  |
| write        | The data to be written.       | The content of this field must be formatted according to the selected data format. |


**Table 6-3 I2C Control Panel - EEPROMAddrRead256**

| command_name     | device_name | data_format | write                       |
|------------------|-------------|-------------|-----------------------------|
| UartSendCharCRLR | UART        | CHAR+CRLF   | send char CR LF ftdi+~*/123 |
| UartSendChar     | UART        | CHAR        | send char ftdi+~*/987       |
| UartSendHex      | UART        | HEX         | 31 32 20 33 34 35           |

**Table 6-4 UART Fill Command Example**

Example 1:

Select command "UartSendCharCRLR"

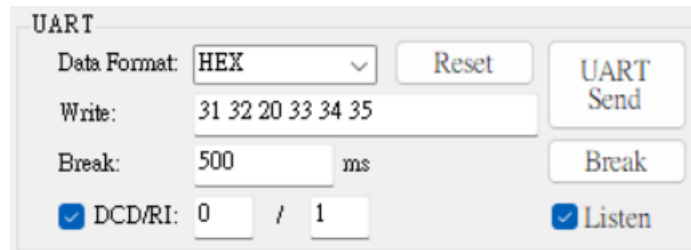


The screenshot shows the UART Control Panel with the following settings: Data Format is set to HEX, Write is 31 32 20 33 34 35, Break is 500 ms, and DCD/RI is checked with values 0 and 1. The Listen checkbox is also checked. The UART Send button is visible on the right.

**Figure 6-5 UART Control Panel - UartSendCharCRLR**

Example 2:

Select command "UartSendChar"

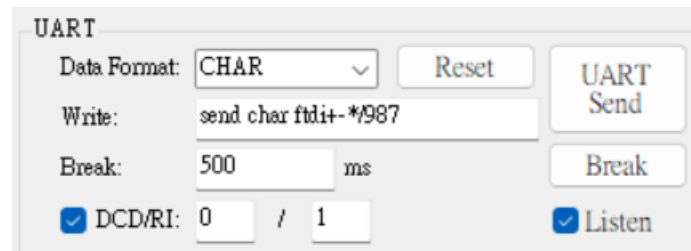


The screenshot shows the UART Control Panel with the following settings: Data Format is set to CHAR, Write is send char ftdi+~\*/987, Break is 500 ms, and DCD/RI is checked with values 0 and 1. The Listen checkbox is also checked. The UART Send button is visible on the right.

**Figure 6-6 UART Control Panel - UartSendChar**

Example 3:

Select command "UartSendHex"

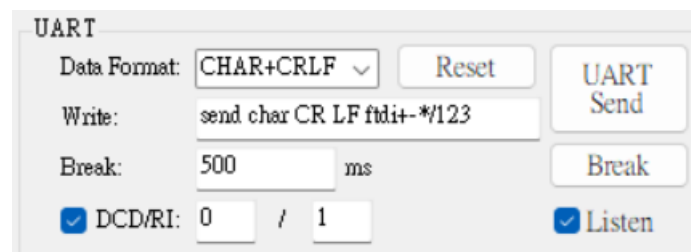


The screenshot shows the UART Control Panel with the following settings: Data Format is set to CHAR+CRLF, Write is send char CR LF ftdi+~\*/123, Break is 500 ms, and DCD/RI is checked with values 0 and 1. The Listen checkbox is also checked. The UART Send button is visible on the right.

**Figure 6-7 UART Control Panel - UartSendHex**

## 7 Definition of Error Messages

### Connect:

Please refresh and connect again.

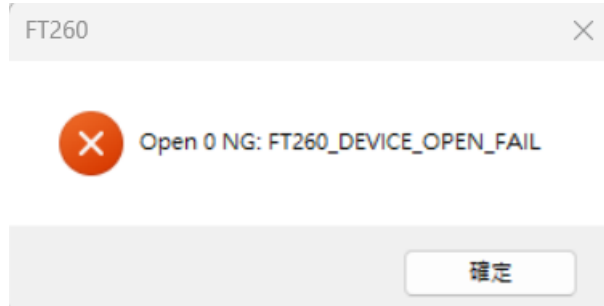

**Figure 7-1 Connect Fail Message Box**

### Disconnect:


After connecting, the utility will detect FT260 is connected or not.



**Figure 7-2 FT260 Disconnect Message Box**

### I2C:

Please check I2C bus or I2C slave.

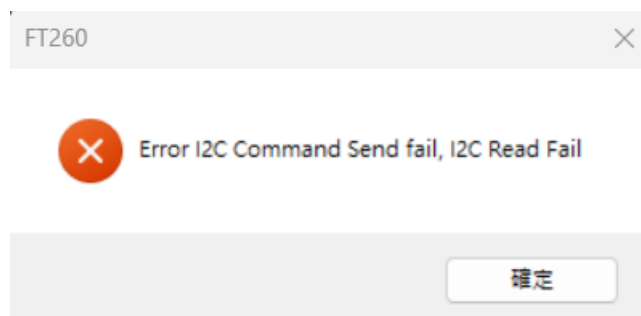

**Figure 7-3 I2C Command Send Fail Message Box**

## 8 Contact Information

### Europe, Middle East, Africa

Future Technology Devices International Limited (UK)  
Unit 1, 2 Seaward Place, Centurion Business Park  
Glasgow G41 1HH  
United Kingdom  
Tel: +44 (0) 141 429 2777

E-mail (Sales) [sales1@ftdichip.com](mailto:sales1@ftdichip.com)  
E-mail (Technical Support) [support1@ftdichip.com](mailto:support1@ftdichip.com)

### Americas

Future Technology Devices International Limited (USA)  
7130 SW Fir Loop  
Tigard, OR 97223-8160  
USA  
Tel: +1 (503) 547 0988

E-mail (Sales) [us.sales@ftdichip.com](mailto:us.sales@ftdichip.com)  
E-mail (Technical Support) [us.support@ftdichip.com](mailto:us.support@ftdichip.com)

### China

Future Technology Devices International Limited  
(China)  
Room 1103, No. 666 West Huaihai Road, 200052  
Shanghai, P.R.  
China  
Tel: +86 (21) 62351596

E-mail (Sales) [cn.sales@ftdichip.com](mailto:cn.sales@ftdichip.com)  
E-mail (Technical Support) [cn.support@ftdichip.com](mailto:cn.support@ftdichip.com)

### Asia Pacific

Future Technology Devices International Limited  
(Singapore)  
1 Tai Seng Avenue, Tower A #03-06  
Singapore 536464  
Tel: (+65) 6841 1174  
Tel (Technical Support): +886 (0) 2 8797 1330

E-mail (Sales) [tw.sales1@ftdichip.com](mailto:tw.sales1@ftdichip.com)  
E-mail (Technical Support) [tw.support1@ftdichip.com](mailto:tw.support1@ftdichip.com)

### Web Site

<http://ftdichip.com>

### Distributor and Sales Representatives

Please visit the Sales Network page of the [FTDI Web site](#) for the contact details of our distributor(s) and sales representative(s) in your country.

System and equipment manufacturers and designers are responsible to ensure that their systems, and any Future Technology Devices International Ltd (FTDI) devices incorporated in their systems, meet all applicable safety, regulatory and system-level performance requirements. All application-related information in this document (including application descriptions, suggested FTDI devices and other materials) is provided for reference only. While FTDI has taken care to assure it is accurate, this information is subject to customer confirmation, and FTDI disclaims all liability for system designs and for any applications assistance provided by FTDI. Use of FTDI devices in life support and/or safety applications is entirely at the user's risk, and the user agrees to defend, indemnify and hold harmless FTDI from any and all damages, claims, suits or expense resulting from such use. This document is subject to change without notice. No freedom to use patents or other intellectual property rights is implied by the publication of this document. Neither the whole nor any part of the information contained in, or the product described in this document, may be adapted or reproduced in any material or electronic form without the prior written consent of the copyright holder. Future Technology Devices International Ltd, Unit 1, 2 Seaward Place, Centurion Business Park, Glasgow G41 1HH, United Kingdom. Scotland Registered Company Number: SC136640

## Appendix A - References

### Document References

[FT260 HID class USB to UART/I2C Master](#)

[UMFT260EV1A Development Module](#)

## Appendix B – List of Tables and Figures

### List of Tables

|                                                      |    |
|------------------------------------------------------|----|
| Table 2-1 FT260 Mode.....                            | 5  |
| Table 6-1 I2C Fill Command Format .....              | 16 |
| Table 6-2 I2C Fill Command Example .....             | 16 |
| Table 6-3 I2C Control Panel - EEPROMAddrRead256..... | 17 |
| Table 6-4 UART Fill Command Example .....            | 18 |

### List of Figures

|                                                                    |    |
|--------------------------------------------------------------------|----|
| Figure 2-1 FT260_Test_Utility Default GUI .....                    | 4  |
| Figure 2-2 FT260_Test_Utility Function Selection Panel .....       | 5  |
| Figure 2-3 The information of FT260 after connected .....          | 6  |
| Figure 2-4 FT260 is connected.....                                 | 6  |
| Figure 3-1 I2C Control Panel .....                                 | 8  |
| Figure 3-2 I2C Example 1 Control Panel.....                        | 8  |
| Figure 3-3 I2C Example 1 Data Table Form .....                     | 8  |
| Figure 3-4 I2C Example 2 Control Panel.....                        | 9  |
| Figure 3-5 I2C Example 2 Data Table Form .....                     | 9  |
| Figure 3-6 I2C Save Read Data to File.....                         | 9  |
| Figure 3-7 I2C Write Fail and Get Status.....                      | 9  |
| Figure 3-8 I2C Reset and Get Status .....                          | 9  |
| Figure 3-9 I2C Scan Bus Result .....                               | 10 |
| Figure 3-10 I2C Dump EEPROM Data .....                             | 10 |
| Figure 4-1 UART Control Panel .....                                | 11 |
| Figure 4-2 UART Example 1 Control Panel.....                       | 11 |
| Figure 4-3 UART Example 1 Data Table Form .....                    | 11 |
| Figure 4-4 UART Example 2 Control Panel.....                       | 12 |
| Figure 4-5 UART Example 2 Data Table Form .....                    | 12 |
| Figure 4-6 UART Example 3 Control Panel.....                       | 12 |
| Figure 4-7 UART Example 3 Data Table Form .....                    | 12 |
| Figure 4-8 UART is Enabled and DCD/RI is Checked .....             | 13 |
| Figure 4-9 UART is Enabled and DCD/RI is Unchecked.....            | 13 |
| Figure 5-1 GPIO Control Panel.....                                 | 14 |
| Figure 5-2 GPIO is Enabled and I2C/UART are Disabled .....         | 14 |
| Figure 6-1 Command List.....                                       | 16 |
| Figure 6-2 I2C Control Panel - EEPROMAddrRead256 .....             | 17 |
| Figure 6-3 FT260_Test_Utility is connected - EEPROMRandomRead..... | 17 |
| Figure 6-4 FT260_Test_Utility is connected - EEPROMByteWrite ..... | 17 |

|                                                        |    |
|--------------------------------------------------------|----|
| Figure 6-5 UART Control Panel - UartSendCharCRLR ..... | 18 |
| Figure 6-6 UART Control Panel - UartSendChar.....      | 18 |
| Figure 6-7 UART Control Panel - UartSendHex.....       | 18 |
| Figure 7-1 Connect Fail Message Box .....              | 19 |
| Figure 7-2 FT260 Disconnect Message Box.....           | 19 |
| Figure 7-3 I2C Command Send Fail Message Box.....      | 19 |



## Appendix C – Revision History

Document Title : AN\_565 User Guide for FTDI FT260 Test Utility  
Document Reference No. : FT\_001646  
Clearance No. : FTDI# 618  
Product Page : <https://ftdichip.com/product-category/products/>  
Document Feedback : [Send Feedback](#)

| Revision | Changes         | Date       |
|----------|-----------------|------------|
| 1.0      | Initial Release | 30-10-2025 |