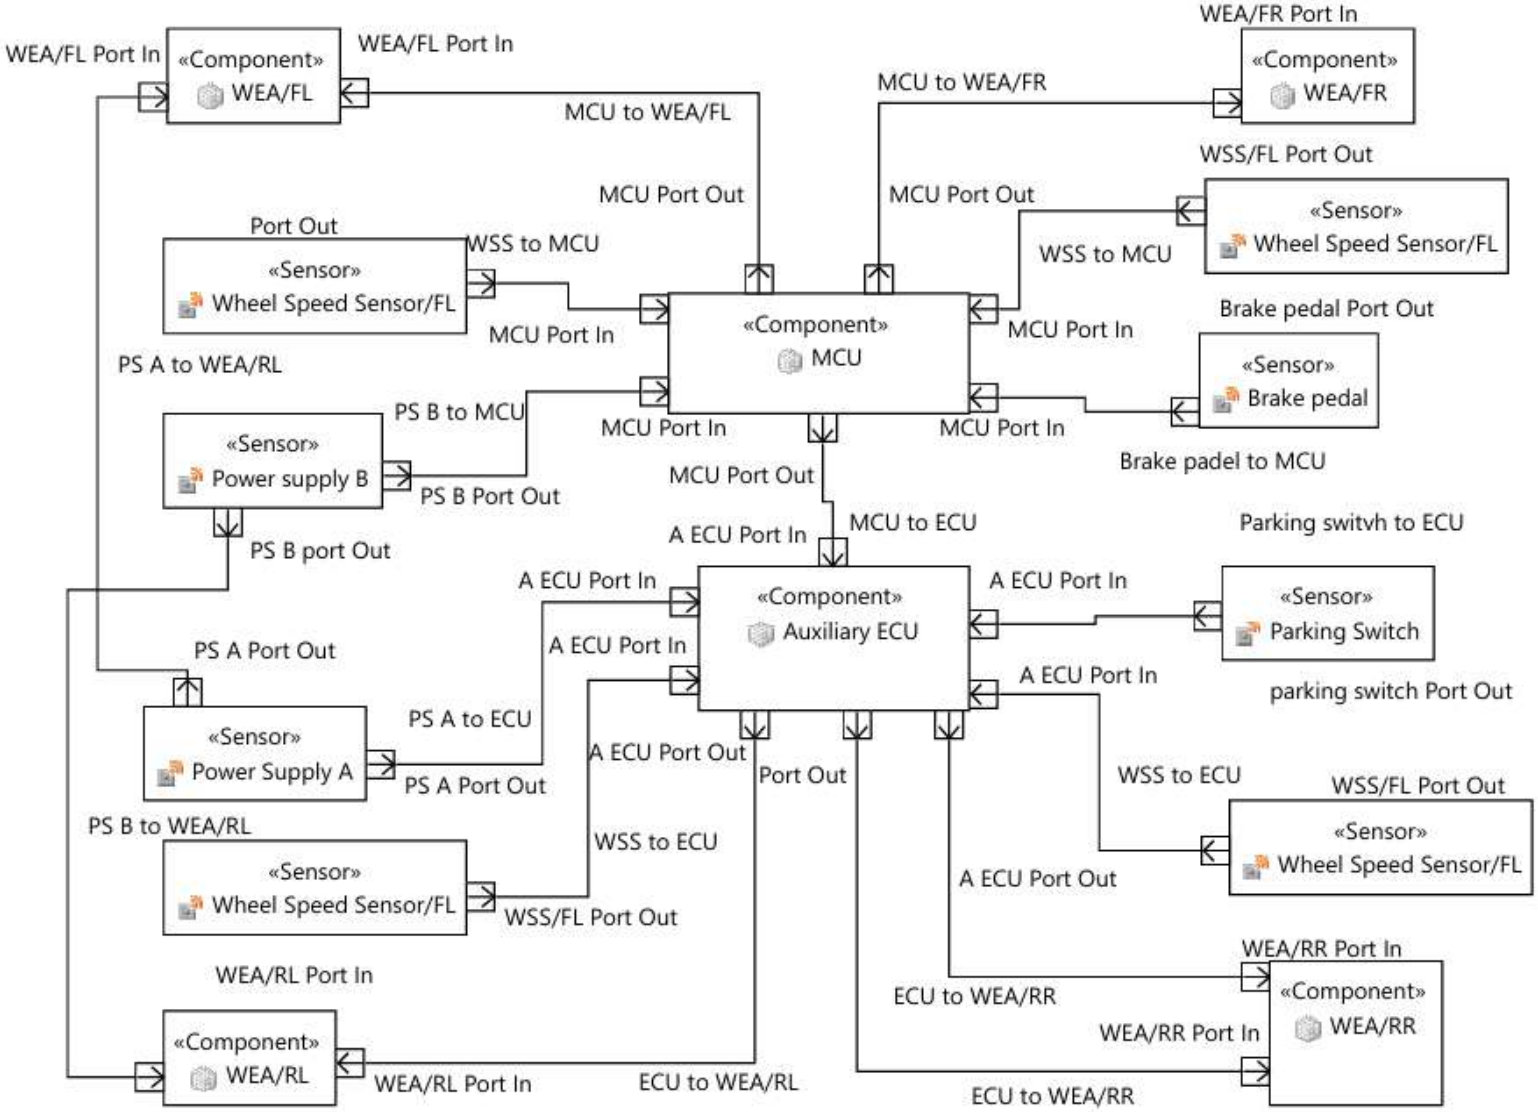

WEA/FL Port In
«Component»
WEA/FL
WEA/FL Port In
MCU to WEA/FL
WEA/FR Port In
«Component»
WEA/FR
MCU to WEA/FR
WSS/FL Port Out
«Sensor»
Wheel Speed Sensor/FL
MCU Port Out
MCU Port Out
Port Out
«Sensor»
Wheel Speed Sensor/FL
WSS to MCU
WSS to MCU
MCU Port In
«Component»
MCU
MCU Port In
Brake pedal Port Out
«Sensor»
Brake pedal
PS A to WEA/RL
PS B to MCU
MCU Port In
MCU Port In
«Sensor»
Power supply B
PS B Port Out
Brake padel to MCU
MCU Port Out
MCU to ECU
A ECU Port In
Parking switvh to ECU
PS B port Out
A ECU Port In
«Component»
Auxiliary ECU
A ECU Port In
«Sensor»
Parking Switch
PS A Port Out
A ECU Port In
A ECU Port In
parking switch Port Out
«Sensor»
Power Supply A
PS A to ECU
PS A Port Out
A ECU Port Out
Port Out
WSS to ECU
WSS/FL Port Out
PS B to WEA/RL
«Sensor»
Wheel Speed Sensor/FL
WSS to ECU
WSS/FL Port Out
A ECU Port Out
WEA/RR Port In
WEA/RL Port In
ECU to WEA/RR
«Component»
WEA/RR
WEA/RR Port In
«Component»
WEA/RL
WEA/RL Port In
ECU to WEA/RL
ECU to WEA/RR