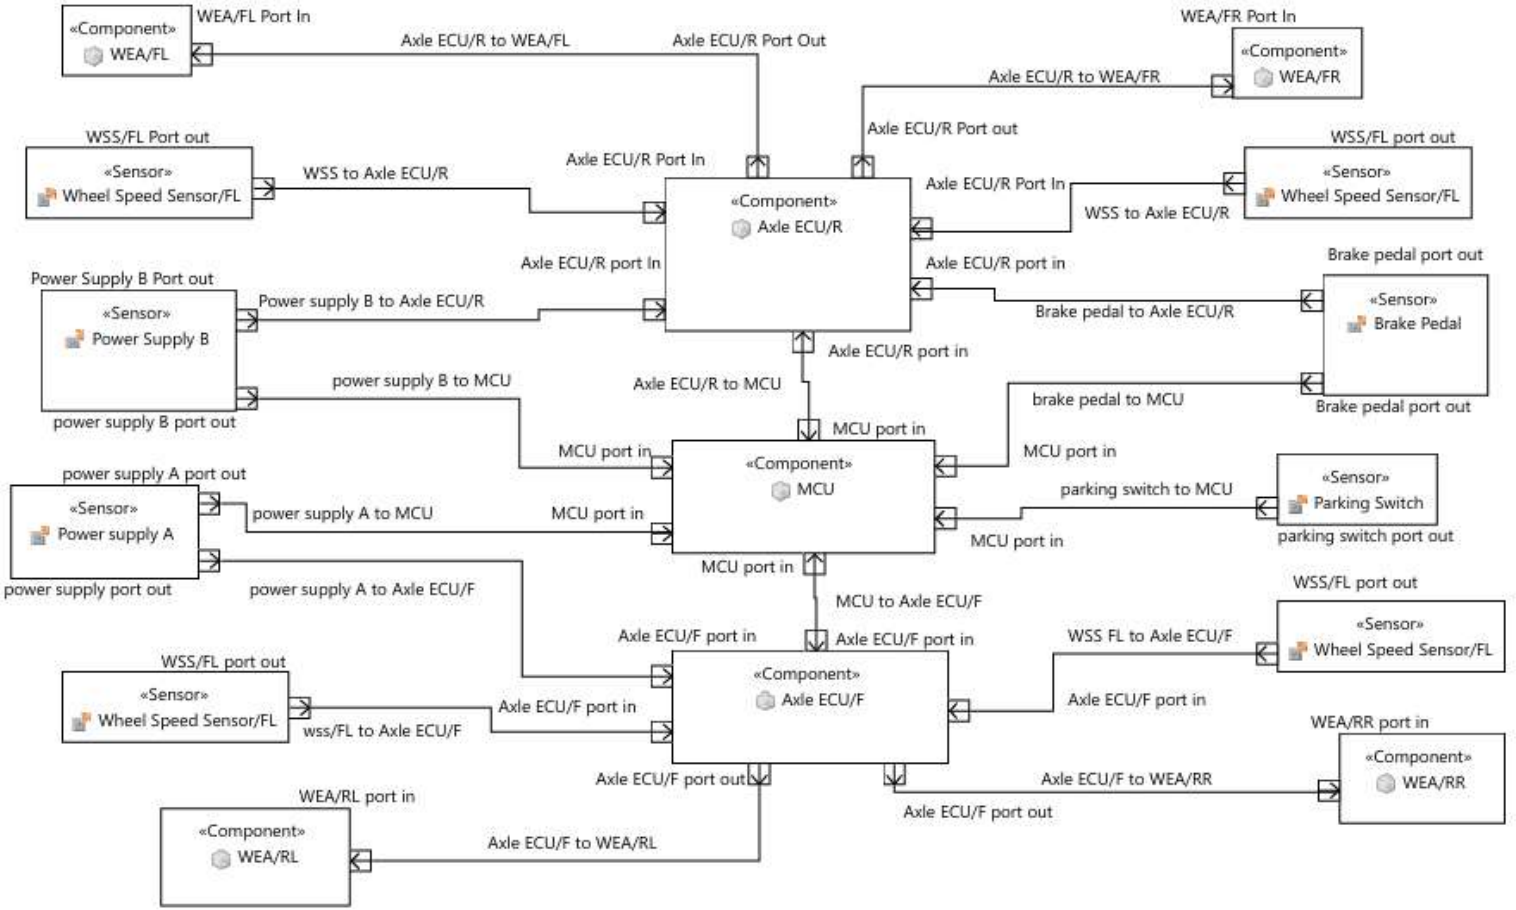
«Component»
WEA/FL
WEA/FL Port In
Axle ECU/R to WEA/FL
Axle ECU/R Port Out
WEA/FR Port In
«Component»
WEA/FR
Axle ECU/R to WEA/FR
Axle ECU/R Port out
WSS/FL Port out
«Sensor»
Wheel Speed Sensor/FL
WSS to Axle ECU/R
Axle ECU/R Port In
«Component»
Axle ECU/R
Axle ECU/R Port In
WSS to Axle ECU/R
WSS/FL port out
«Sensor»
Wheel Speed Sensor/FL
Power Supply B Port out
«Sensor»
Power Supply B
Power supply B to Axle ECU/R
Axle ECU/R port In
Axle ECU/R port in
Brake pedal to Axle ECU/R
Brake pedal port out
«Sensor»
Brake Pedal
power supply B port out
power supply B to MCU
Axle ECU/R to MCU
Axle ECU/R port in
brake pedal to MCU
Brake pedal port out
MCU port in
MCU port in
«Component»
MCU
MCU port in
power supply A port out
«Sensor»
Power supply A
power supply A to MCU
MCU port in
parking switch to MCU
«Sensor»
Parking Switch
MCU port in
parking switch port out
power supply port out
power supply A to Axle ECU/F
MCU port in
MCU to Axle ECU/F
WSS/FL port out
«Sensor»
Wheel Speed Sensor/FL
Axle ECU/F port in
Axle ECU/F port in
WSS FL to Axle ECU/F
WSS/FL port out
«Sensor»
Wheel Speed Sensor/FL
Axle ECU/F port in
«Component»
Axle ECU/F
Axle ECU/F port in
wss/FL to Axle ECU/F
WEA/RR port in
«Component»
WEA/RR
Axle ECU/F port out
Axle ECU/F to WEA/RR
Axle ECU/F port out
WEA/RL port in
«Component»
WEA/RL
Axle ECU/F to WEA/RL