



To Enable DMI:


1. Go to the DMI -> DMI manager

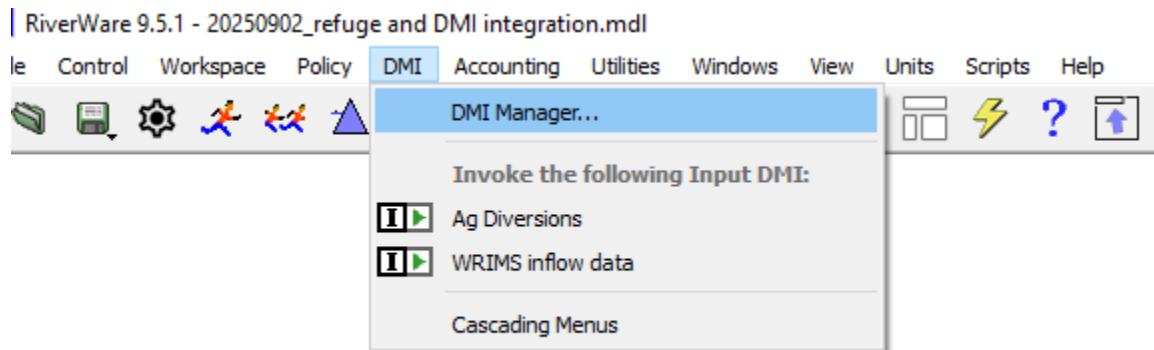


2. Click on the utilities menu and then datasets

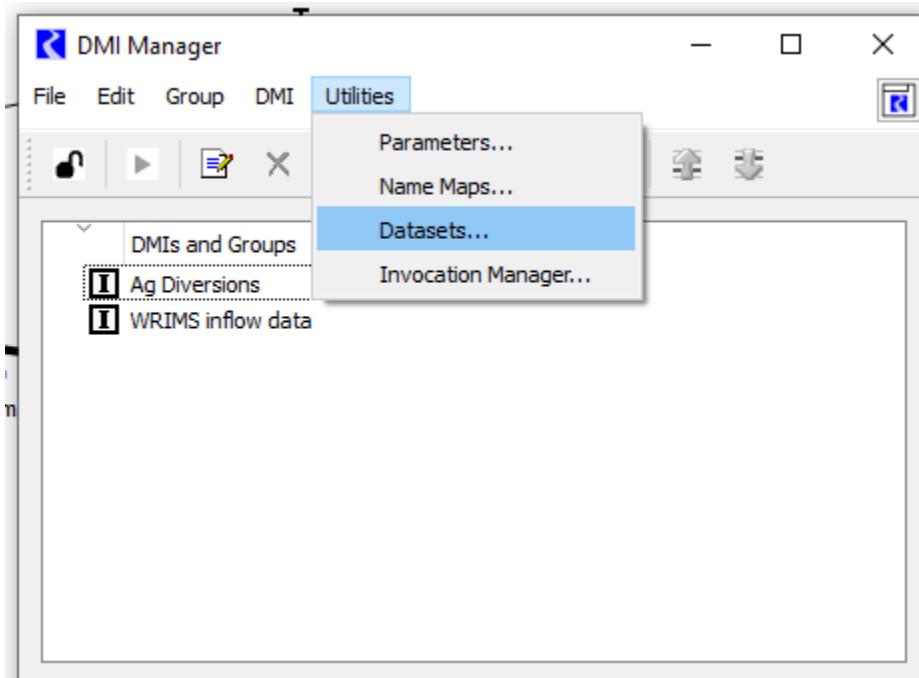


3. Select WRIMS input dataset and double click to open it.

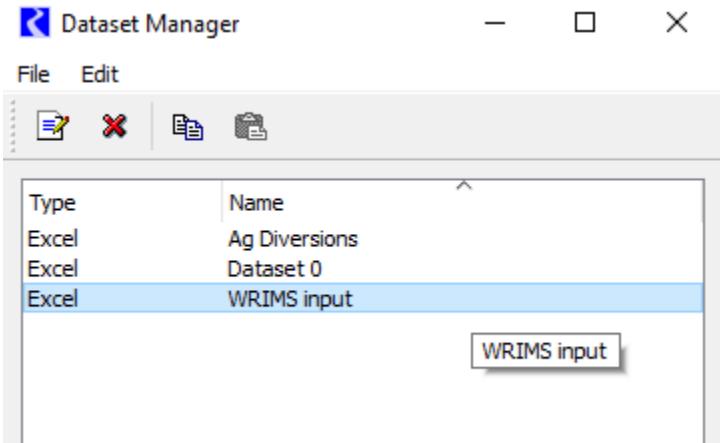


4. Select the open file button in the upper right corner

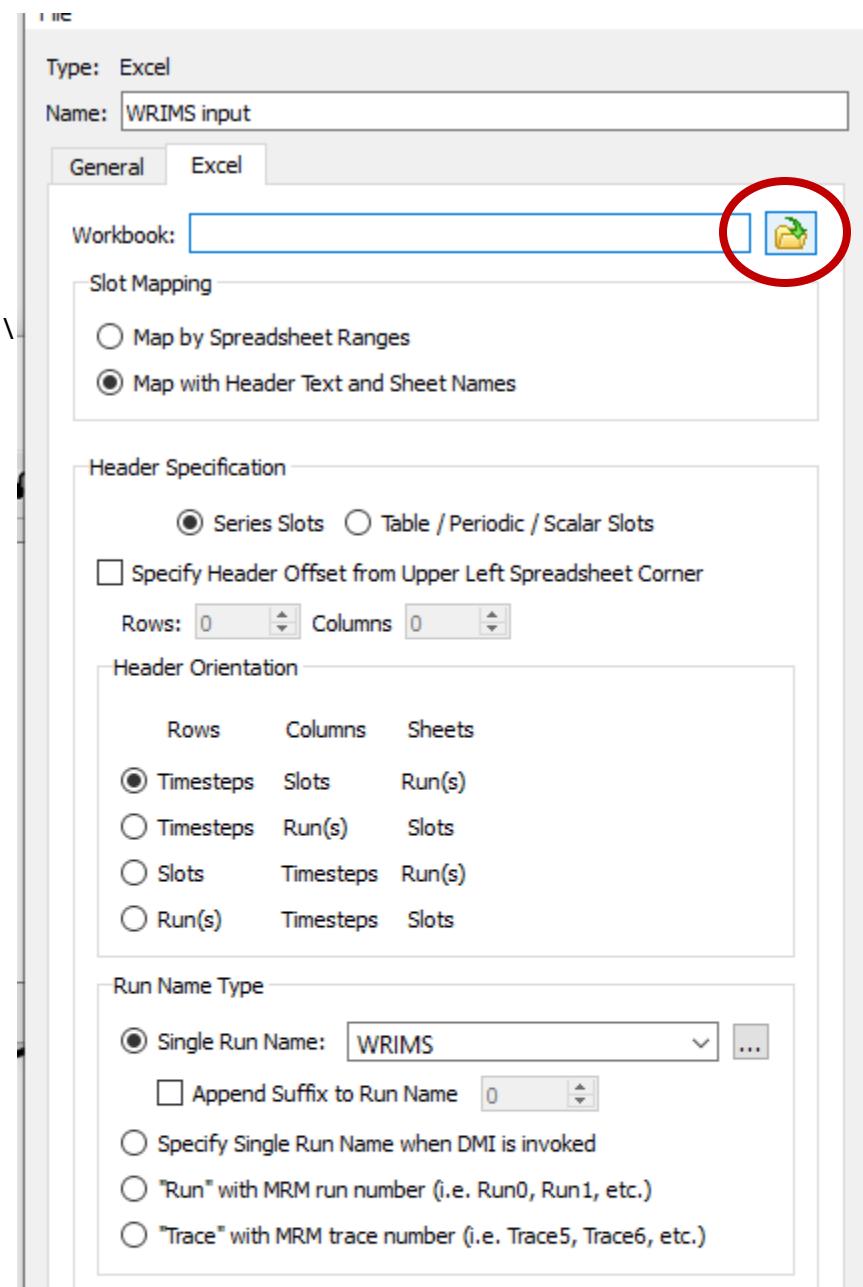

5. Navigate to and select wherever the excel spreadsheet “NWI and Inflows” is located. Click Save

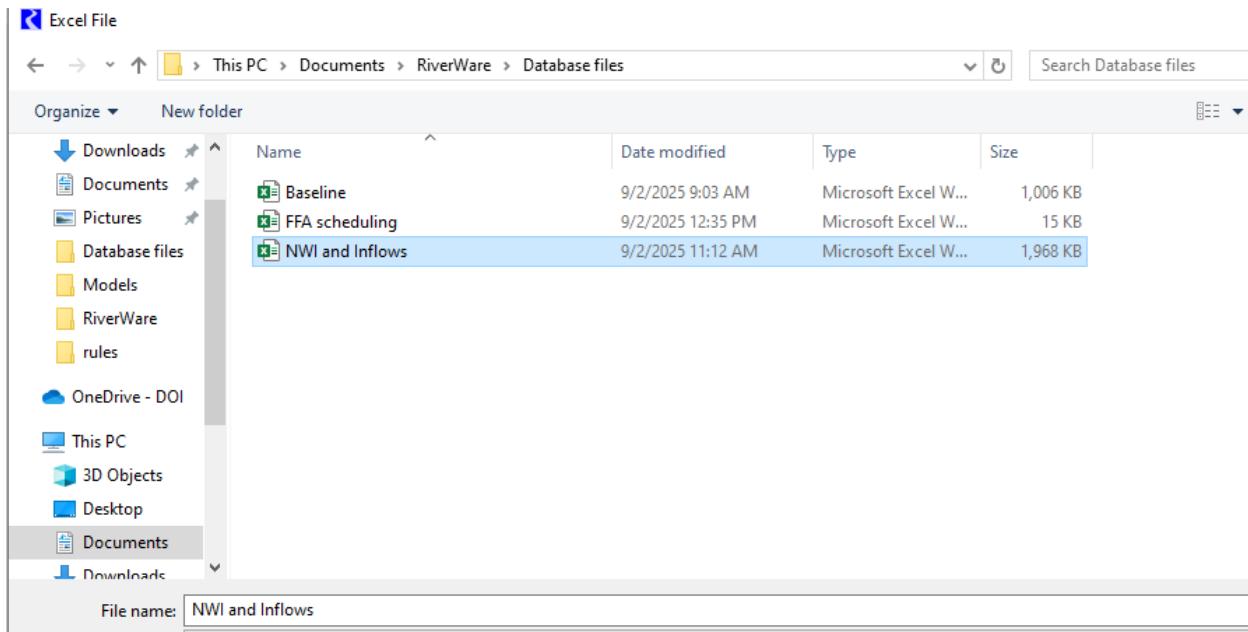

6. Then click “Okay” at the bottom to save the file location.
7. Double check to see if “Single Run name” is enabled and has a value. If not, you should be able to click either the drop down button or the three dots and select “WRIMS import”.

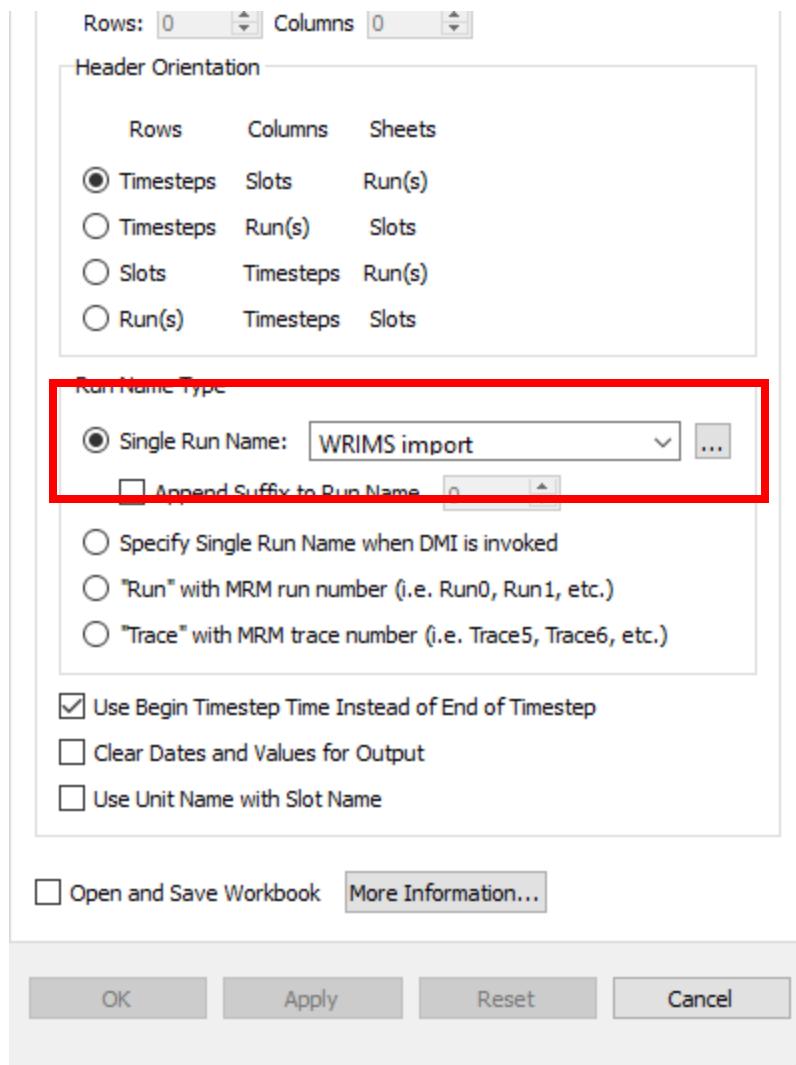

Click Okay to save all the settings.