

THE BEGINNING OF A BORE HOLE WITH A 1.5 METER CORE BARRELL

OBJECTIVE

The purpose of this procedure is to define safe and effective methods for starting a borehole with a 1.5 m core barrel

APPLICATION

This procedure applies to all employees of **MACHINES ROGER INTERNATIONAL**.

RESPONSIBILITIES

The worker is responsible for applying this procedure and for ensuring the smooth running of the operations and the quality of the work done.

NECESSARY MATERIAL
Core barrel ronde de 1,5 m
6,, reaming shell
Locking coupling
Locking adapter
1,5 meter tube
backend
3 meters drill rod
bit

MANDATORY PPES

Basic personnel protectives equipment mandatory on the site

THE BEGINNING OF A BORE HOLE WITH A 1.5 METER CORE BARRELL

PROCEDURE

1. Install the bearing with the modified bushing on the clam cover, make sure the bearing is in good condition.



2. Put the complete core barrel (6 inches reaming shell, 1.5 m core barrel, locking adapter and locking coupling)
It is important to check the reaming shell with the shell gauge to check for wear and replace if necessary.



THE BEGINNING OF A BORE HOLE WITH A 1.5 METER CORE BARRELL

3. Put the 1.5m tube in the core barrel with the backend
4. Put the 3 meters drill rod with the water swivel.
It is very important to thoroughly grease the tread



5. Drill the 1.5 meter core barrel and the 3 meter rod to make sure you have enough space to put the 3 meter core barrel.
 - Drill 2 rods of 3 meters if you want to put in 6 meters
6. Put the complete core barrel in the head and the clam of the drill (3 meters or 6 meters as appropriate) and insert the core tube with the backend
7. Put the 3 meters with the water swivel
8. Back the drill head over the drill pipe and core barrel joint

THE BEGINNING OF A BORE HOLE WITH A 1.5 METER CORE BARRELL


9. Unscrew the drill rod and lift the drill head until there is enough space to remove the modified bushing and put the standard bushing on the drill rod, screw the rod back to the barrel core



10. Insert the core barrel inside the hole to the bottom so that it is no longer inside the clam

11. Bolt the bearing with the standard bushing on the clam once the core barrel is at the bottom of the hole

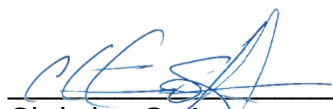


Christian St-Amour
Operations manager