

WORK PROCEDURE

PRO-DD-ST-004A

INNER TUBE EXTRACTING PROCEDURE WITH THE LOADING CHAMBER

OBJECTIVE

The objective of this procedure is to define safe methods for extracting an inner tube with the loading chamber.

APPLICATION

This procedure applies to all MACHINES ROGER INTERNATIONAL diamond drilling employees.

INTERPRETATION

The personnel having the authority for the interpretation of this document is the Operations Manager. Any request for modification, revision or update must be made to this person.

RESPONSABILITIES

Drillers and helpers should follow this procedure, and supervisors should ensure workers follow it.

PROCEDURE

- 1- Perform the normal maneuvers to break the drill core with the drill
- 2- Stop the water pump



- 3- Purge the water pressure in the drill rods using the purge valve




- 4- Remove the water hose from the end of the "water swivell"
- 5- Put the transmission in first gear before unscrewing the "water swivell"
- 6- Unscrew the "water swivell" using the head of the drill, it must be fitted with a long adapter to perform the maneuver. For short adapters, the drill rod will need to be removed complete with the drill head.

IT IS FORBIDDEN TO USE A PIPE WRENCH TO UNSCREW THE WATER SWIVELL

- 7- Install the «loading chamber» with the «over shot»
- 8- Connect the water hose
- 9- Tighten the rubbers of the "loading chamber" with the adjustable wrench



10-Evacuate the work area behind the safety doors and close the doors. -no worker should be inside the work area when there is movement of the winch. The access door to the work area must be closed. **exception: when changing the cable on the winch**

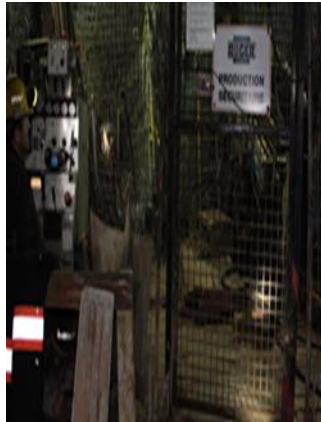

11-Open the water pump



12-When the "over shot" has reached the bottom of the hole, purge the water pressure in the drill pipes



13-Loosen the rubber of the "loading chamber" with the adjustable wrench

14-Evacuate the work place

15-Pull the inner tube using the winch control until it arrives in the "loading chamber"

It is mandatory to have the loading chambers in place at all times until the tube is raised to the collar to avoid the ejection of the tube when intercepting a stream of water or gas

16-Remove the water hose



17-Remove the loading chamber and place it between the skids to keep the floor free of any obstacle



18-Remove the inner tube from the drill rods. At this stage only, the helper is allowed to stay in the work area and use the dead man to pull the tube out of the rods.



19-Install the tube clamps if the hole goes down

20-For drilling in 6 meters (When the two tubes are unscrewed):

- a. The worker holding the tube inside the rods should keep eye contact with his partner as he walks away with the other tube.
- b. Once this has passed through the door, the second tube can then be taken out of the rods.
- c. The same procedure should be followed by reinserting the tubes into the drill pipes.

21-Store the core (s) on the table



Christian St-Amour
Operations Manager