

WORK PROCEDURE

PRO-MEC-004A

PROCEDURE FOR «AIR SWIVEL» (GEAR BOX)

GOAL

The purpose of this procedure is to define safe methods for changing the air swivel.

APPLICATION

This procedure applies to all employees of MACHINES ROGER INTERNATIONAL.

INTERPRETATION

The staff with authority for the interpretation of this document are the Maintenance Manager and the Director of Operations. Any request for modification, revision or update must be made to one of these persons.

RESPONSIBILITIES

The worker is responsible for his work and must make sure to follow this procedure and follow the instructions. The supervisor must be familiar with the procedure and ensure that it is followed.

PROCEDURE

1. Lower the gear box onto the slip plates.
- 2. Lock-out the air at the header (main supply) and bleed the air on the drill;**
3. Unscrew the hoses in the air (swivel support, high pressure, piston spline)
4. Install the swivel wrench
5. Break the swivel using the rotation by pressing the " unscrew " function. At this point, the use of the sledge hammer may be necessary. Make sure no one is in the firing line of the mass.
- 6. Apply the complet lockout procedure**

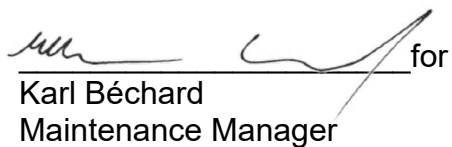
PROCEDURE FOR «AIR SWIVEL» (GEAR BOX)

7. As soon as it is loose, remove the wrench and unscrew the swivel by hand (the threads are counterclockwise).
8. Remove the swivel
9. Install the new swivel using the reverse procedure. Make sure that the O-ring is present and in good condition.
10. During the tightening operation, the swivel must be screwed by hand as much as possible.

11. Unlock the drill

NEVER HOLD THE SWIVEL WITH HANDS WHEN ROTATION IS OPERATED.

12. Place the wrench and finish the tightening with the rotation of the drill. DO NOT EXCEED 800 PSI on the rotating pressure gauge.
13. Replace the hoses with the whip check and bracket.
14. Make sure that the 2 bolts on the swivel mount are tightened securely. Residue may be trapped under the bolt, preventing it from being tightened properly.
15. Unlock the air on the headers (main supply)


Karl Béchard
Maintenance Manager


Christian St-Amour
Operations Manager

Ajouts et modifications	Date	Par
Clarify responsibilities. Add to point #3: lock the air to the header. Add "complete" to point #7. Remove the point stating that the gearbox arrives from the workshop with the swivel already installed. Add O-ring to point #9. Add unlock sequence.	25-11-2025	S. Tremblay D. Baribeault Opérations