

WORK PROCEDURE

PRO-OP-CAT416-001A

CATERPILLAR 416 OPERATION PROCEDURE

OBJECTIVE

The objective of this procedure is to define safe methods for using the CATERPILLAR 416 tractor.

APPLICATION

This procedure applies to all employees of MACHINES ROGER INTERNATIONAL using the Caterpillar 416.

INTERPRÉTATION

The personnel with authority for the interpretation of this document are the Operations Manager and the Maintenance Manager. Any request for modification, revision or update must be made to one of these people.

RESPONSABILITIES

The operator is responsible for inspecting his equipment and ensuring that the operation of the equipment is carried out safely for him and for other workers on the site. The worker must have received training to operate the equipment. The supervisor must ensure that this procedure is followed.

Any more demanding procedure takes precedence over this one.

CAPACITIES

FORK LOAD CAPACITY: 6535 LBS/2964 KG

FRONT BASKET LOAD CAPACITY: 2500 LBS/1100 KG

TOWING CAPACITY: Maximum R55 compressor (4600 lbs)

FORK LOAD CAPACITY AT THE SAME TIME AS TOWING AN R-55: THE EQUIVALENT OF THE WEIGHT OF THE V-30 (3300 LBS)

CATERPILLAR 416 OPERATION PROCEDURE

PRE-OPERATION VERIFICATION

- Use the inspection sheet,
- Visual inspection of the equipment,
- Report any breakage or anomaly on the equipment,
- Follow the steps of the scheduled inspection.

BRAKES TESTS

BRAKES TESTS PAGES : FOLLOW THE INSTRUCTIONS TO PERFORM THE DIFFERENTS BRAKES TESTS (PARK BRAKES AND SERVICE BRAKES)

HAND BRAKE TEST



IF THE TRACTOR MOVES, LOCK OUT THE TRACTOR AND NOTIFY TO THE SUPERVISOR

CATERPILLAR 416 OPERATION PROCEDURE

PARK BRAKE TEST WITH HAND BRAKE



IF THE TRACTOR MOVES, LOCK OUT THE TRACTOR AND NOTIFY TO THE SUPERVISOR

PARK BRAKE TEST WITHOUT HAND BRAKE



IF THE TRACTOR MOVES, LOCK OUT THE TRACTOR AND NOTIFY TO THE SUPERVISOR

CATERPILLAR 416 OPERATION PROCEDURE

SERVICE BRAKE TEST WITH HAND BRAKE



IF THE TRACTOR MOVES, LOCK OUT THE TRACTOR AND NOTIFY TO THE SUPERVISOR

SERVICE BRAKE TEST WITHOUT HAND BRAKE



IF THE TRACTOR MOVES, LOCK OUT THE TRACTOR AND NOTIFY TO THE SUPERVISOR

CATERPILLAR 416 OPERATION PROCEDURE

OPERATION OF THE CATERPILLAR 416

- The tractor operator must push the horn the number of times required by mine procedure:
 - Before moving forward,
 - Before moving backwards,
 - At intersections,
 - When crossing pedestrians.
- Always keep a distance of 30 meters between vehicles on the ramp.

STAFF TRANSPORT

- Before any movement with the equipment, site and/or MRI procedures must be understood and respected;
- Coming in and coming out of this equipment must always be done facing the equipment, either by using the rule of 3 contact points;
- For passengers to get in or off the equipment, the equipment must be completely immobilized, on neutral position and the parking brake or hand brake applied;
- The doors on each side and rear of the tractor must be closed before starting any movement;
- Depending on the sites:
 - We cannot have more passengers than seats with functional belts, or
 - If it is permitted to have passengers standing in the rear basket, a maximum of 4 passengers can stand there.
- The front basket must be securely anchored with the hydraulic rods before workers enter it.

TRANSPORT OF MATERIEL

- **The material carrying capacity with the forks is 2964KG / 6535LBS;**
- The material in the baskets must never obstruct the operator's view;
- It is prohibited to transport equipment ON THE TRACTOR. Everything must be put in the baskets or on the forks;

CATERPILLAR 416 OPERATION PROCEDURE

- No material can be placed on the tractor floor so as not to block the operation of the pedals
- No part must exceed the height of the basket guardrails. **The only exception is for “CASINGS ONLY” and the following rules must be respected:**
 - Casings must be carried diagonally in the front basket,
 - If this is not possible, they must be arranged diagonally in the rear basket,
 - No passenger can take a seat in the basket while there are protruding casings.
- When the tractor is used to tow a load, the following rules must be respected:
 - The trailer must be tied to the hitch,
 - Safety cables or chains must be attached to the rings provided for this purpose,
 - NO PASSENGER can take place in the baskets
 - The maximum towing weight is the **equivalent of the R-55 compressor,**
 - It is permitted **to tow the R-110 on the flat only,**
 - With the compressor in tow, the maximum weight that can be transported with the forks is the equivalent of a V-30 (3300 lbs)
- When the front basket is **transported** on the forks, it must be attached with a chain to the mast and no one can sit inside.

USING THE FRONT BASKET

- A maximum of 3 workers can be in the front basket;
- Only workers having to carry out work can be in the front basket;
- Workers must leave the basket for movements of more than 10 meters and for movements other than those required for the work to be carried out;

CATERPILLAR 416 OPERATION PROCEDURE

- For movements, other than those required for the work to be carried out and less than 10 meters, the bottom of the front basket must be lowered to the height of the lowest point of the tractor hood;
- There must be an operator in the driver's seat at all times when there are workers in the front basket;
- The tractor's travel speed must not exceed **the walking speed when there are personnel** in the front basket;
- The parking brakes must be applied to raise the front basket higher than the bottom of the hood;
- When working from **the front basket and on a slope**, the position of the basket must be **positioned towards the top of the slope**;
- Only one worker must make signals to the tractor operator;
- **Workers must wear the harness and fasten themselves into the front basket at all times;**
- Never allow a pedestrian to pass the side doors while working on the basket

PARKING


- The site's procedures take precedence over this one. If we are stricter, we must apply our own;
- Always use both wheel chocks when parking;
- **On slopes**, in addition to the wheel chocks, approach the wall diagonally, with the wheels pointing towards the nearest wall. **Do not apply jacks**;
- Jacks can only be applied when parking on flat, stable ground. **NEVER ON SLOPES**;
- If jacks are used and the rear wheels no longer touch the ground, chocks are not mandatory;
- When parking underground, always park the vehicle in full view of other vehicles in the area, and never near an intersection;
- For short-term underground parking, the flashing light must always be on and the front basket or forks must be on the ground;

CATERPILLAR 416 OPERATION PROCEDURE

- For long-term parking, always turn off the master switch and place the front basket or forks on the ground;
- It is forbidden to park equipment in the following areas:
 - In front of ventilation doors,
 - In front of emergency exits
 - In the shaft stations
 - In front of oil, fuel or explosives depots,
 - In front of a refuge stations

**SEE THE APPENDIX FOR THE VARIOUS INFORMATION
PAGES AVAILABLE ON THE SCREEN**

**KEEP THE EQUIPMENT CLEAN AND WASH AT THE END OF
EACH SHIFT**

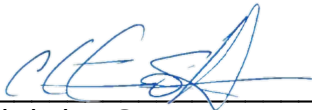

Christian St-Amour
Operations Manager





Karl Béchard
Maintenance Manager

Adds or modifications	Date	By
Remove the entire scheduled inspection and brake tests part and put in the new images that explain how to do the brake tests	July 2022	S. Tremblay
Complete update following changes to the hood switch and additions of different brake tests	November 2023	S. Tremblay M. Trottier

CATERPILLAR 416 OPERATION PROCEDURE


ANNEXE

PAGE PRINCIPALE

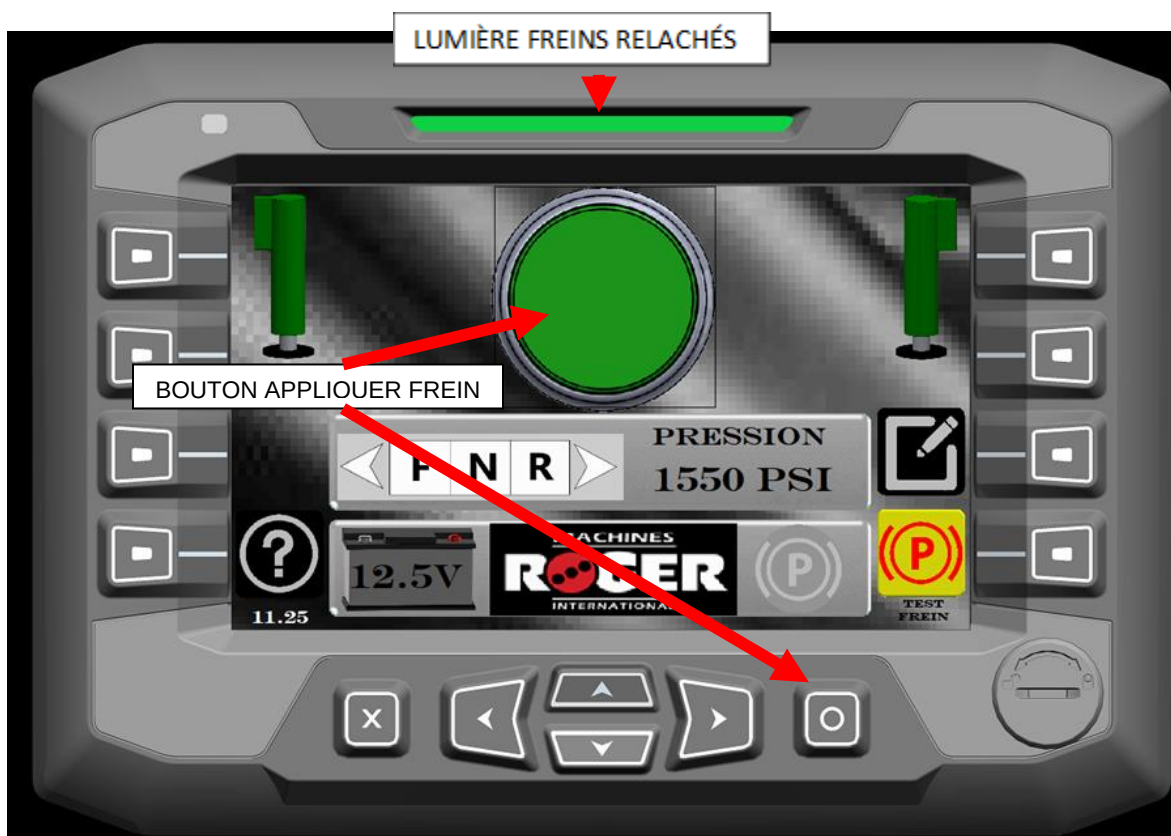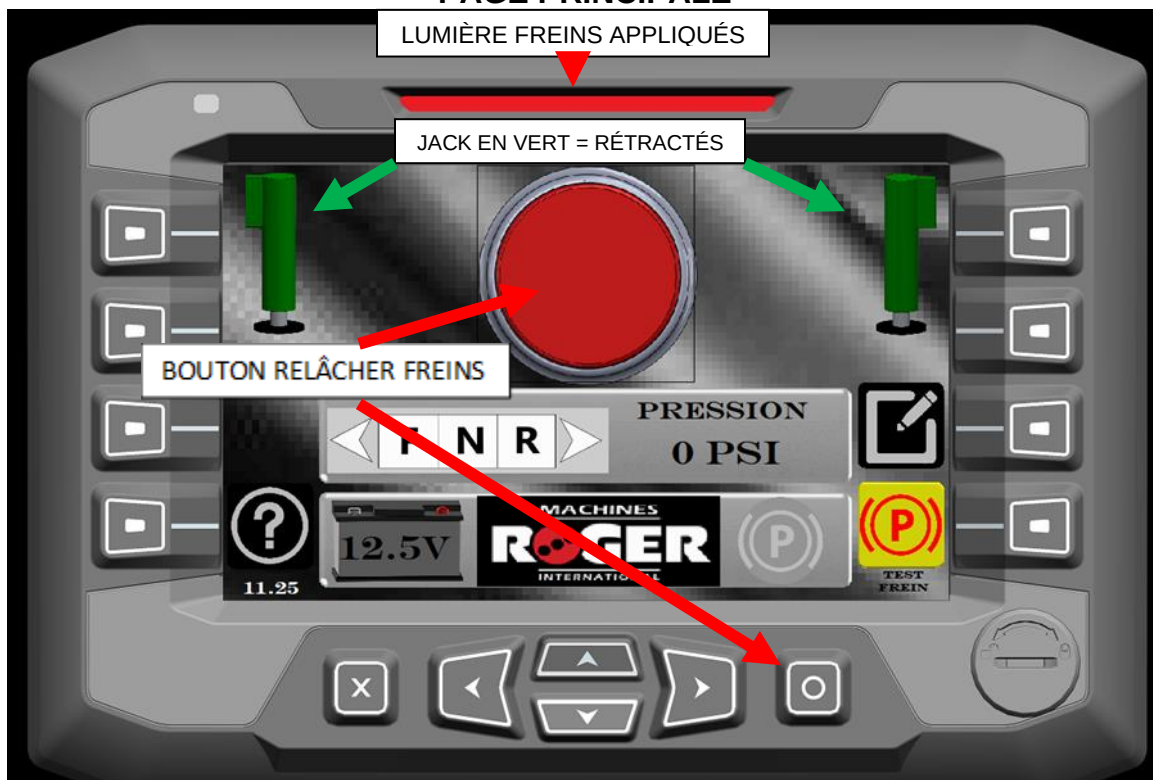


CATERPILLAR 416 OPERATION PROCEDURE

PAGE PRINCIPALE

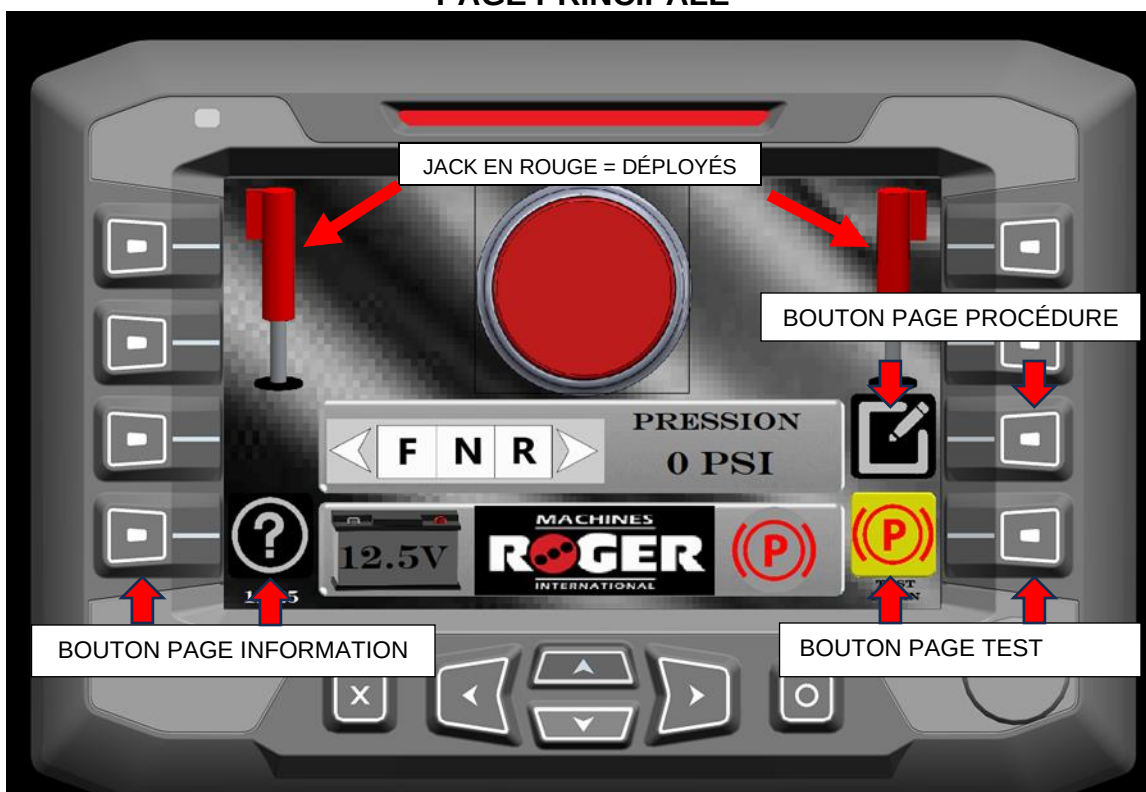

PAGE D'INFORMATIONS

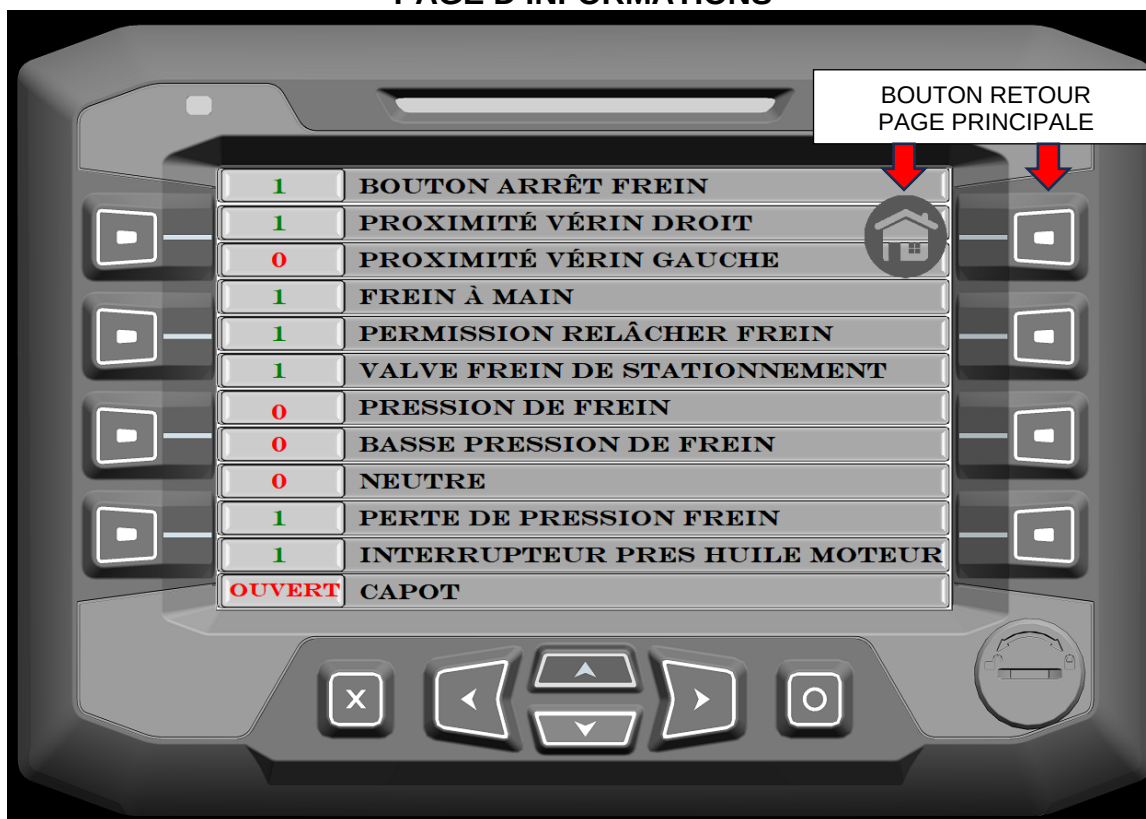

CATERPILLAR 416 OPERATION PROCEDURE

PAGE PROCÉDURE D'OPÉRATION

