



## **How to connect WiFi**

1. After entering the Raspberry Pi system, open a browser and enter 192.168.50.1

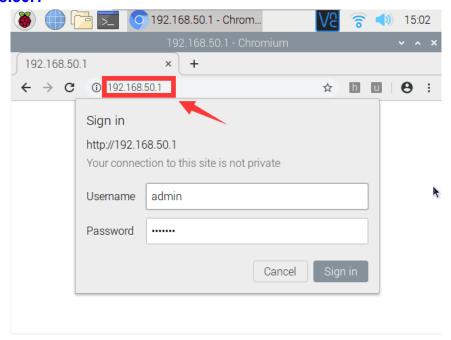

Enter username: admin Password: yahboom

2. Configure Wifi client

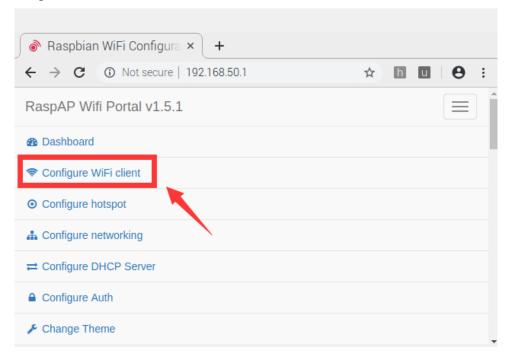


We need to Click "Configure Wifi client".

3. Select your Wifi and input password, then click "ADD"





4. Click "Connect", you will connect your Wifi.

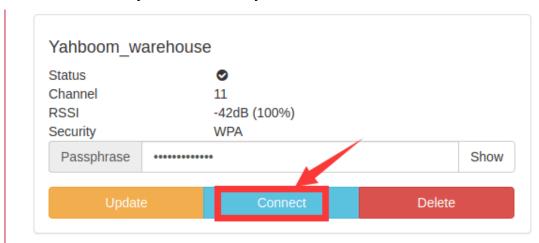

5.Click on the top left corner of the Raspberry Pi system and you will see the IP address of the wireless network.

