

Contents

Contents	1
Preface	2
Important Notes	2
Miner	2
Freenove ESP32 Mini TV	3
Obtaining the BTC Receiving Address	4
NerdMiner_v2 (Freenove Miner)	10
Project Introduction	10
Precautions	10
Compatibility Description	11
How to Use	12
Firmware Flashing	12
Wi-Fi Configuration	18
Management Tool	21
Public Pool	21
NMMiner	23
Project Introduction	23
Precautions	23
Compatibility Description	24
How to Use	25
Firmware Flashing and Activating	25
Wi-Fi Configuration	30
Management Tools	34
NMController Client	34
NMController Web	37
IP Address Management	38
Public Pool	39

Preface

Important Notes

Freenove ESP32 Mini TV comes with pre-installed firmware. Upon initial power-up, the device will behave as follows:



This is the latest firmware version we recently released (Freenove Miner), The original NerdMiner firmware is not fully compatible with FNK0102. Therefore, we have made modifications to ensure full compatibility with FNK0102, based on the original NerdMiner. We have also optimized the display, improving screen refresh smoothness and responsiveness.

If you have any concerns, please feel free to contact us via support@freenove.com

Miner

The firmware is our latest release (Freenove Miner), an optimized version of NerdMiner_V2. It features full compatibility with the FNK0112 display, along with enhanced refresh rate smoothness and improved response speed.

Disclaimer:

Freenove is not the original developer of these projects. All development, maintenance, feature implementation, and commercial licensing are the sole responsibility of their respective official developers.



NerdMiner (Freenove version, free):
Fully compatible
(Pre-installed in the product)



NMMiner (2.99 USD per device):
Fully compatible
(Need to buy and install it yourself)


Freenove ESP32 Mini TV

ESP32 Module

A powerful, generic and small-sized controller with onboard wireless.

Dual-core 32-bit microprocessor	520 KB SRAM
Up to 240 MHz clock frequency	448 KB ROM
Compatible with Arduino IDE	4 MB flash

2.4 GHz Wi-Fi, Bluetooth 4.2 (LE)

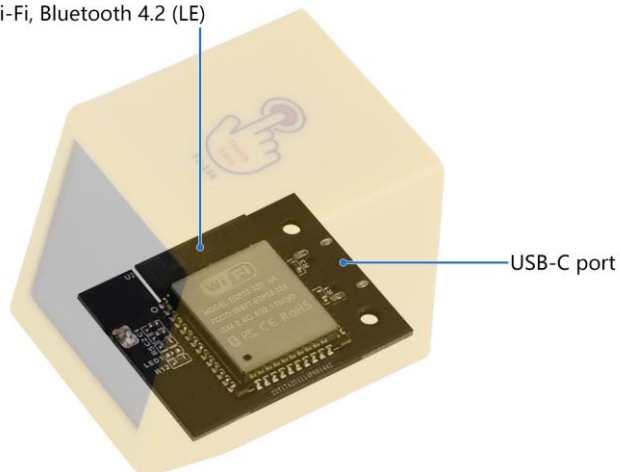

Color Screen

A delicate screen integrated on the mini TV.


1.54 inch	TFT screen
240x240 pixel	ST7789 driver
IPS wide viewing angle	4-wire SPI communication




Obtaining the BTC Receiving Address

Note: If you already have a BTC receiving address, feel free to skip this step. Otherwise, the following section will guide you through obtaining a new one.


1. Click this link (<https://www.exodus.com/download>) to open the Exodus downloading interface. Choose the version consistent with your system.

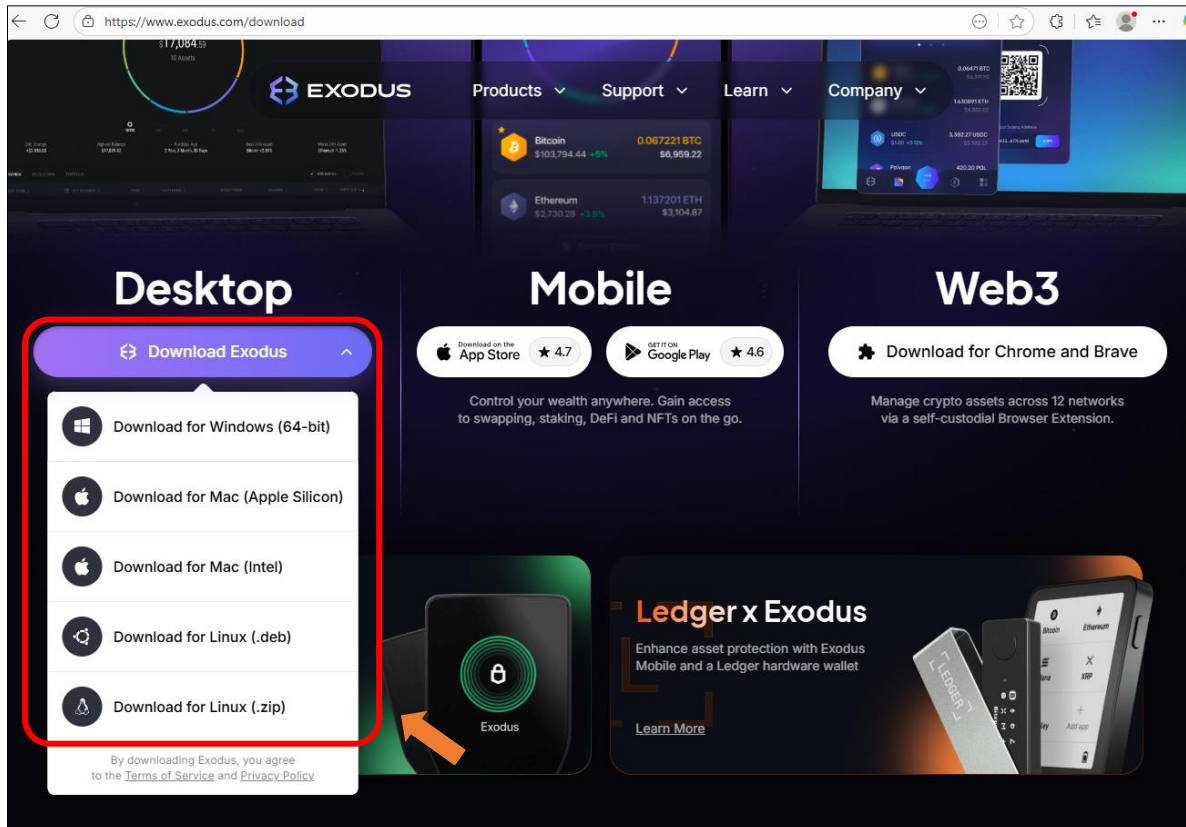


2. Open the downloaded installation package to install.

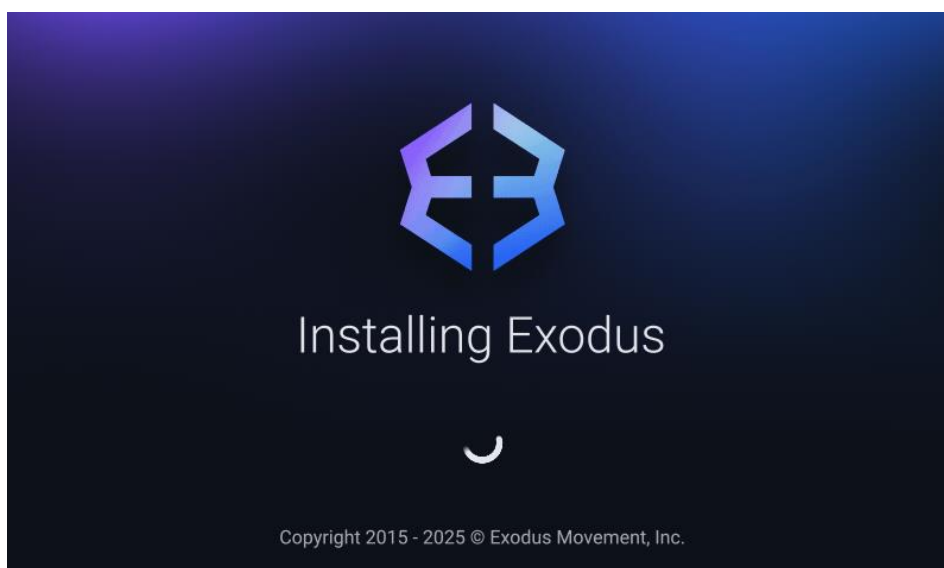

3. The following prompt indicates that the installation is successful.

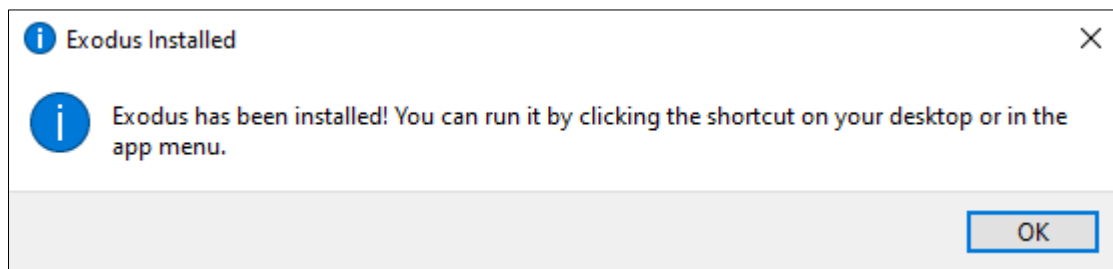


4. Open **Exodus**, click "Setting".

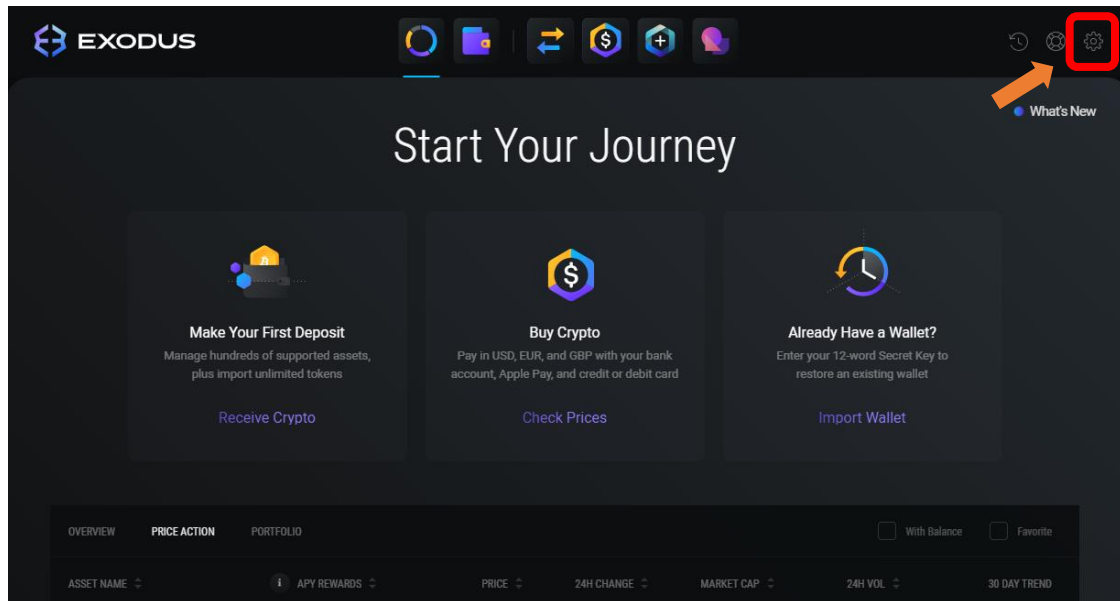


5. Click "Backup" to create your password for registering your wallet.


Important Note: Do not forget or share this password with anyone.

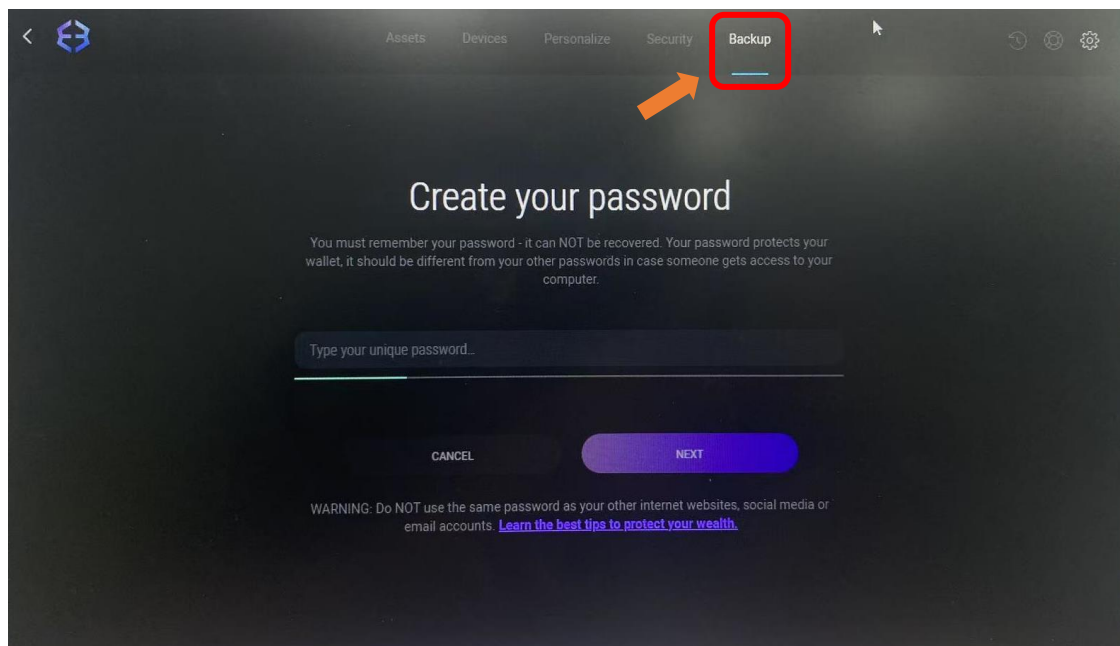


6. Click **"NEXT"**.

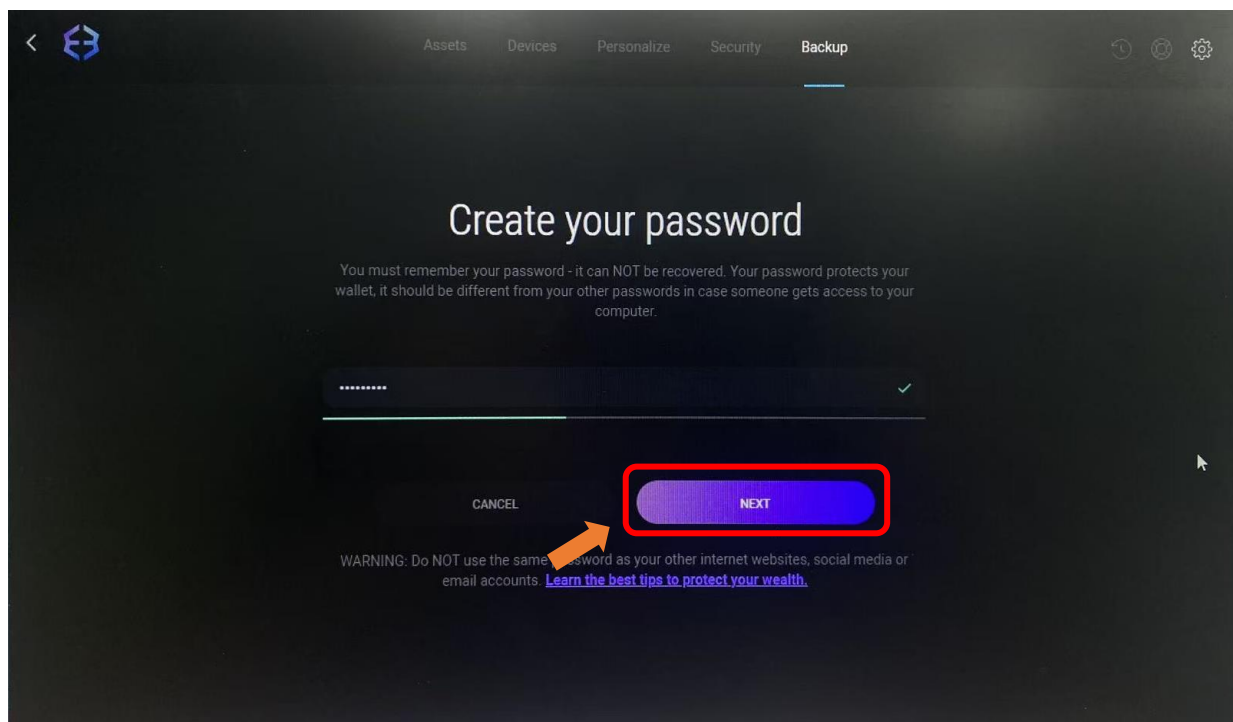

7. Enter the password again and click **"NEXT"**.

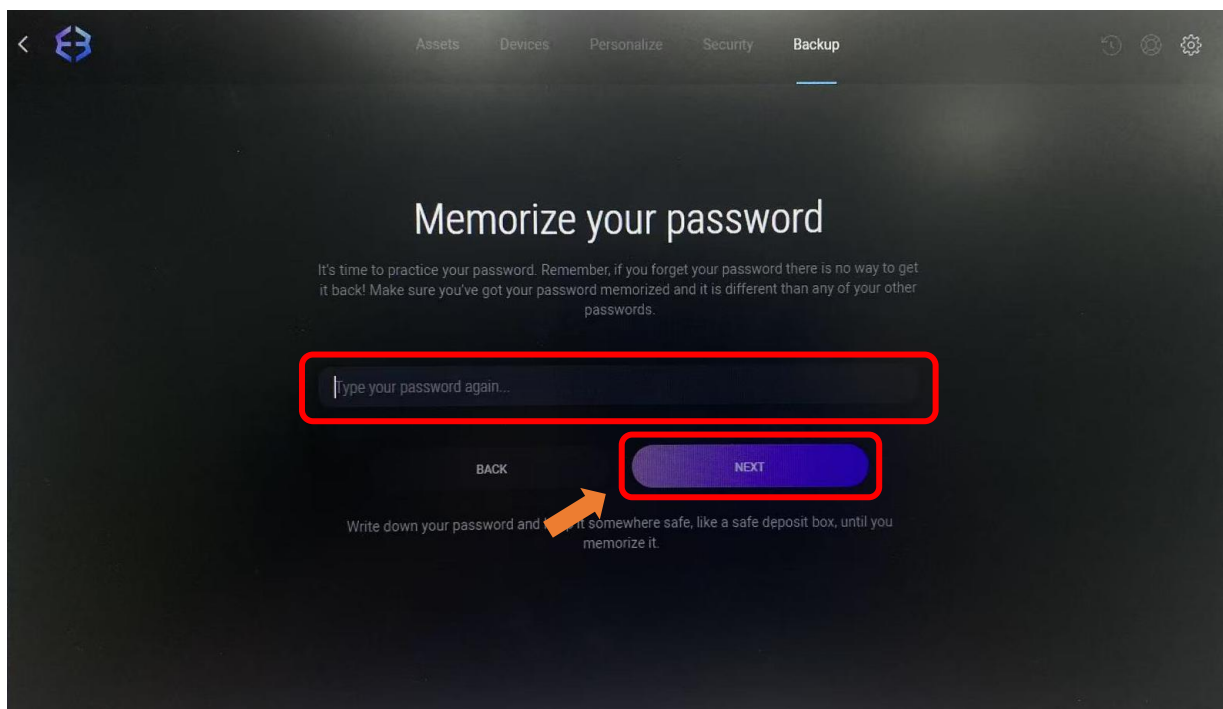


8. Check the box "I understand the risks of sharing my Secret Key", and click "VIEW SECRET KEY".

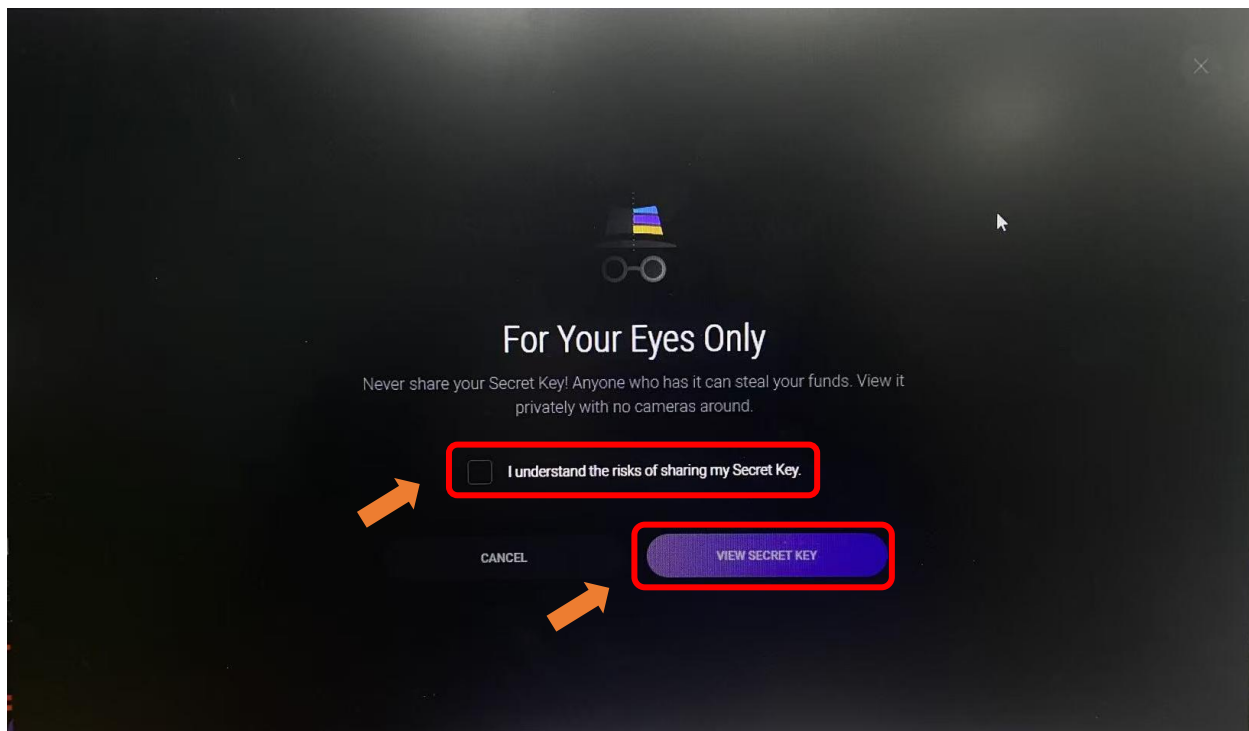


9. Check "Show Secret Key".

Please note: This interface cannot be screenshot or photographed. Do not disclose any information related to these mnemonic words to anyone. You must securely store these 12 mnemonic words corresponding to the numbers. Without them, you will permanently lose access to this wallet.


10. Click "DONE".
11. Select the correct answer based on the recorded mnemonic words. Then click "DONE".

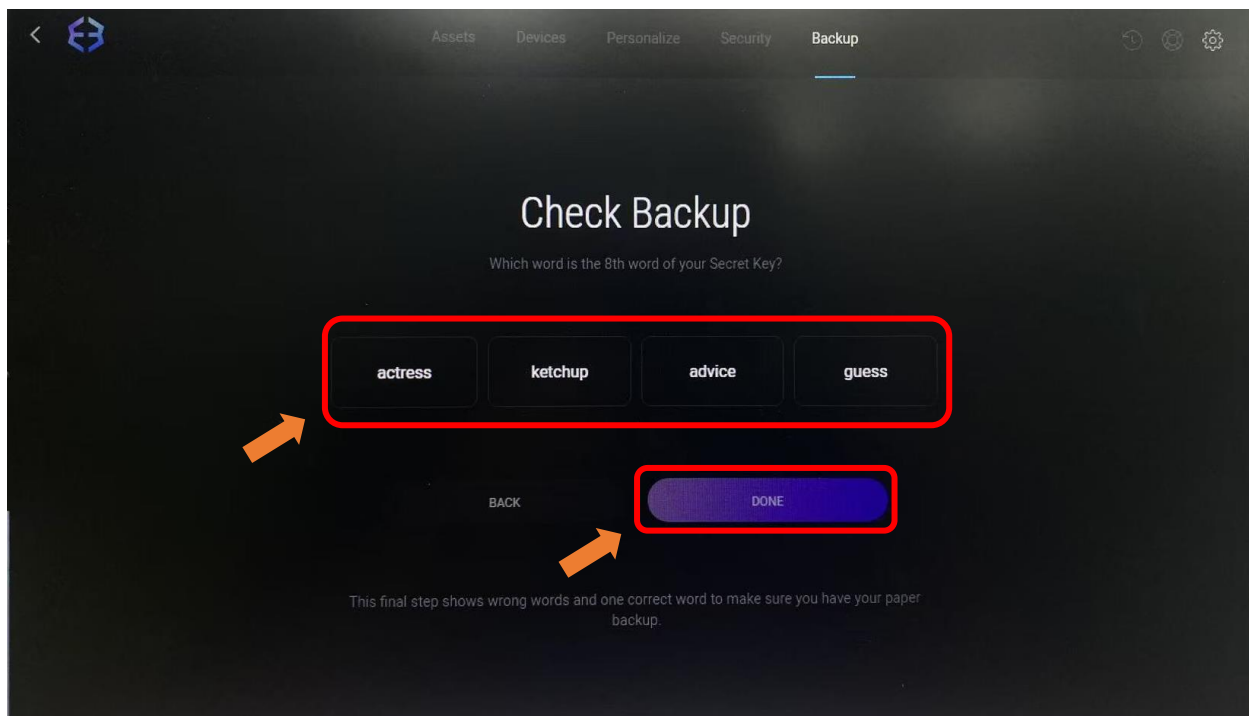


12. So far, you have successfully created your wallet.

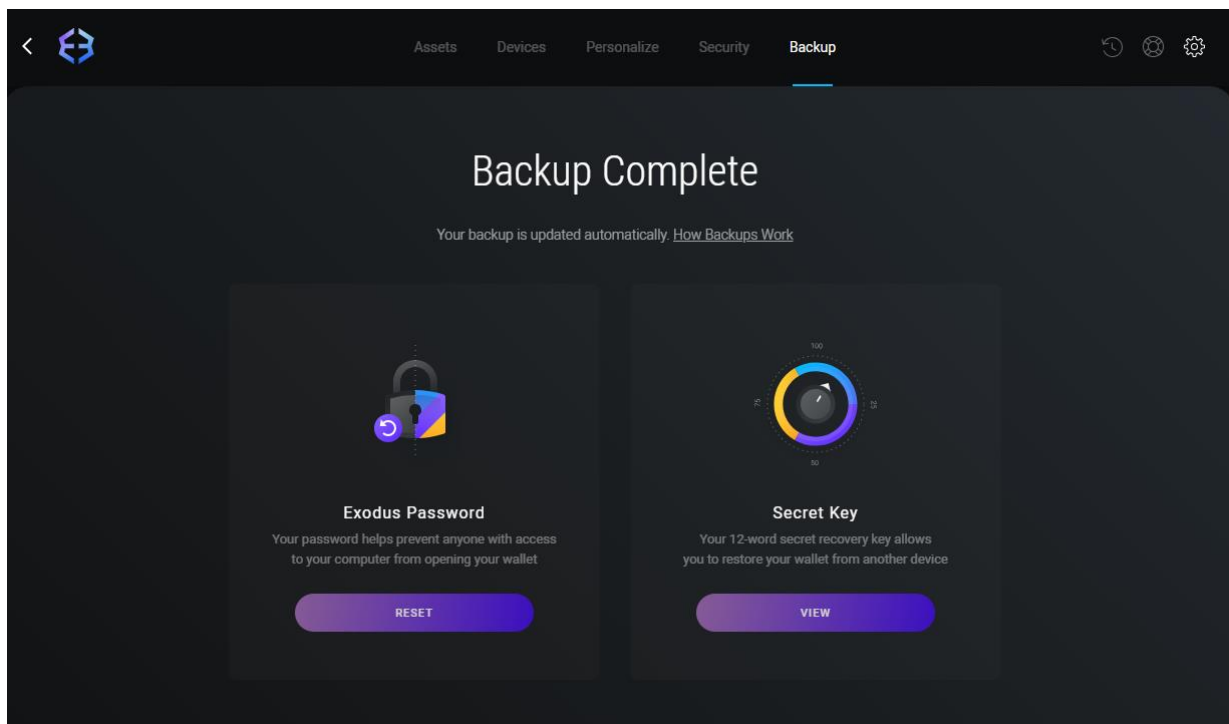


13. Click “Assets”, type “BTC” to search, and then click “Bitcoin”.

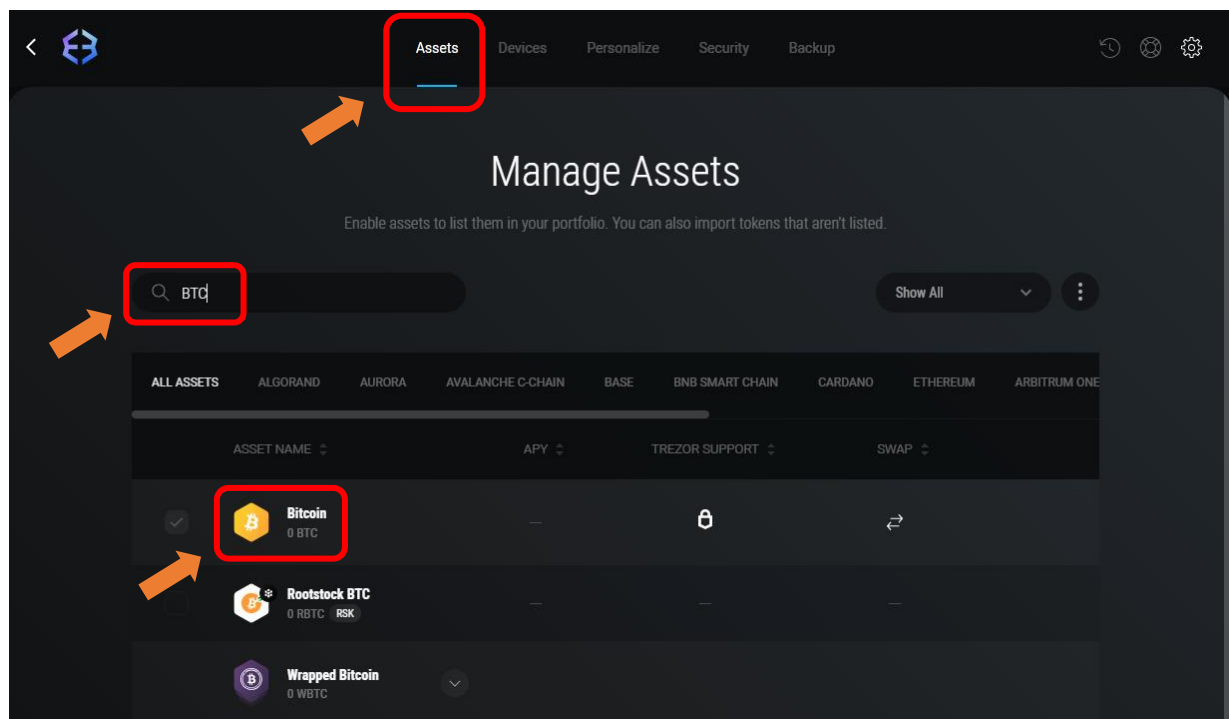

14. Click "Receive".

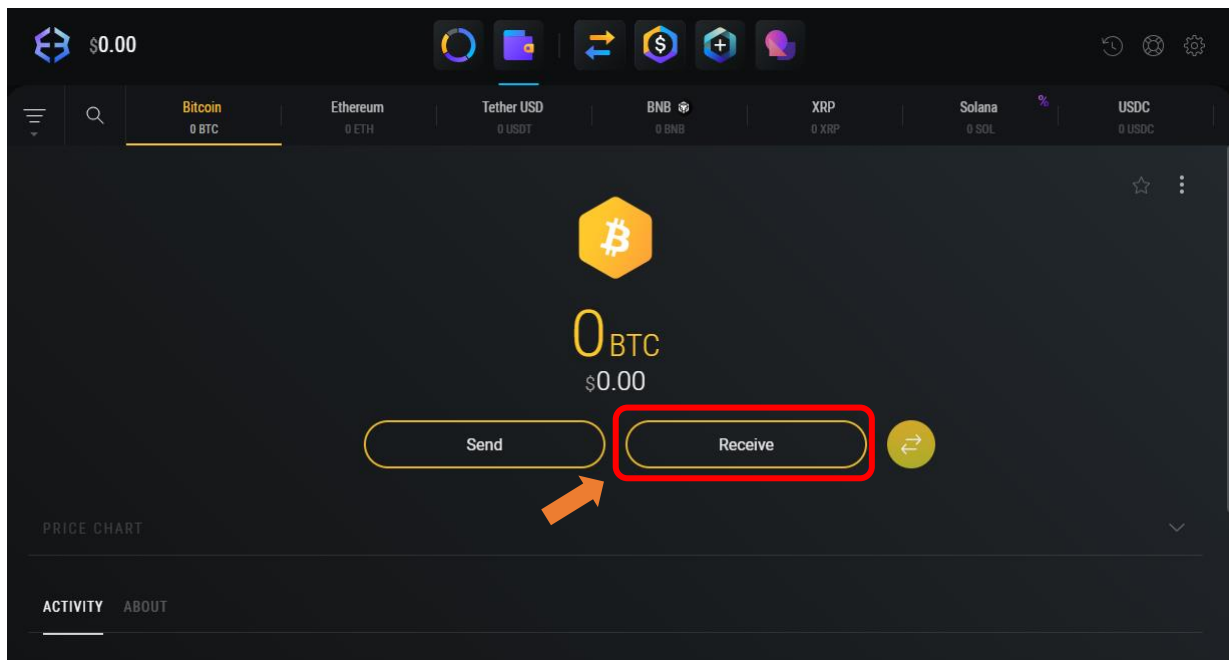

15. The generated string of characters is a BTC address. This address can be publicly shared and is used to receive BTC.

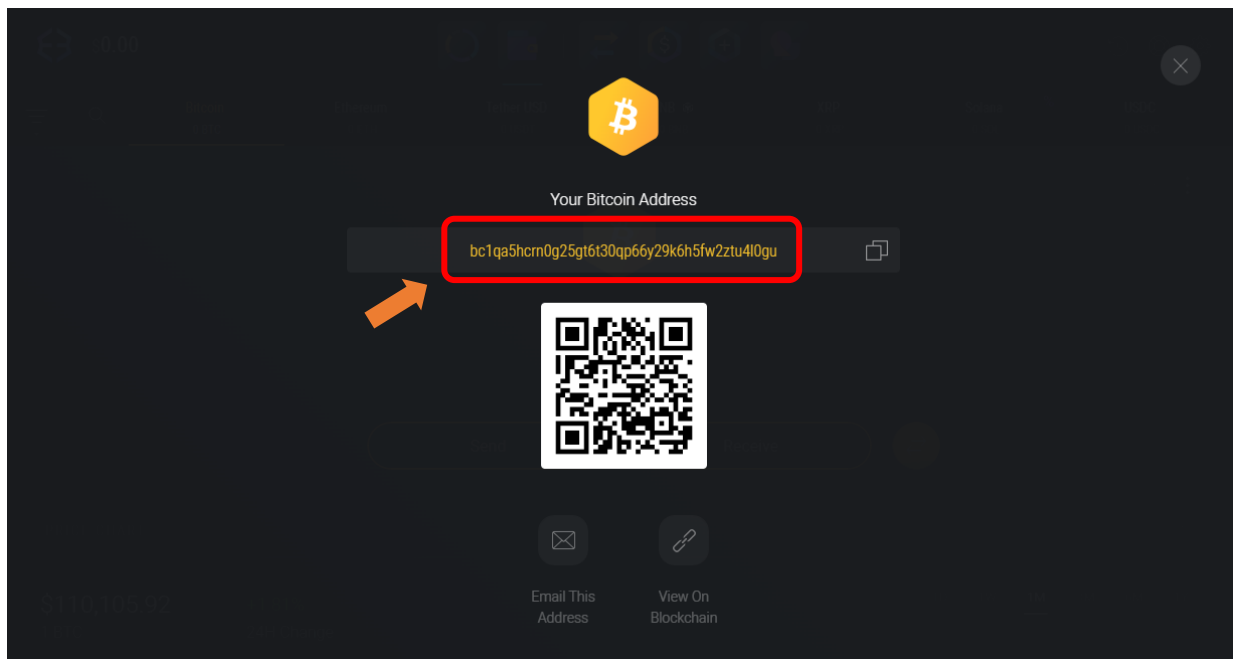

For any Exodus-related usage questions, answers can be found at:

<https://www.exodus.com/support/en/>

If you have any concerns, please feel free to contact us via support@freenove.com

NerdMiner_v2 (Freenove Miner)

This project utilizes Freenove ESP32 Mini TV and NerdMiner_v2 to implement Bitcoin mining. It requires some programming background and a basic understanding of digital currencies.

Project Introduction

NerdMiner_v2 (https://github.com/BitMaker-hub/NerdMiner_v2) is an excellent open-source BTC mining firmware designed for ESP32 development boards. Its goal is to allow users to experience the process of "mining a Bitcoin block" using a small piece of hardware. The primary aim of this project is to help more people **learn about cryptocurrency mining** while owning an aesthetically pleasing desktop accessory.

NerdMiner_v2 supports mining on **solo pools** by implementing the **Stratum protocol** (by default, it connects to **public-pool.io**, which supports Nerdminer devices, but the pool address can be customized). Freenove has ported this project to run on the Freenove ESP32 Mini TV.

This tutorial will guide you through the process of running the project on the Freenove ESP32 Mini TV.

Precautions

- **Cost**
 - As of the time of writing this document, NerdMiner_v2 is temporarily free to use.
- **Security Precautions**
 - Never disclose your wallet's private key or recovery phrase to anyone. The only information you need to provide is your public cryptocurrency receiving address.
- **Troubleshooting**
 - If you have followed the tutorial but are still unable to use the miner, please feel free to contact us for assistance. (support@freenove.com)

Compatibility Description

At the time of writing this guide, the Freenove ESP32 Mini TV is available in five different models. Although they vary in terms of screen drivers, resolutions, and screen sizes, all of them can be set up using this tutorial to learn how to use NerdMiner_v2.

The official firmware of NerdMiner_v2 is not fully compatible with this product. Therefore, Freenove has conducted secondary development based on it to ensure stable operation.

Miner Compatibility

Provide a tutorial to show how to install the following miner firmware.



NerdMiner (Freenove version, free):
Fully compatible
(Pre-installed in the product)



NMMiner (2.99 USD per device):
Fully compatible
(Need to buy and install it yourself)


If you have any concerns, please feel free to contact us via support@freenove.com

How to Use


Firmware Flashing

Note: Since the official NerdMiner_v2 firmware is not compatible with this product, this tutorial only demonstrates how to flash the adapted firmware onto the product via Freenove official website. For information on the official NerdMiner_v2 firmware tool ([Bitronics Flasher](#)), please refer to the relevant documentation separately.


1. Open the [Freenove - Web Flasher](#) and click "Select device".

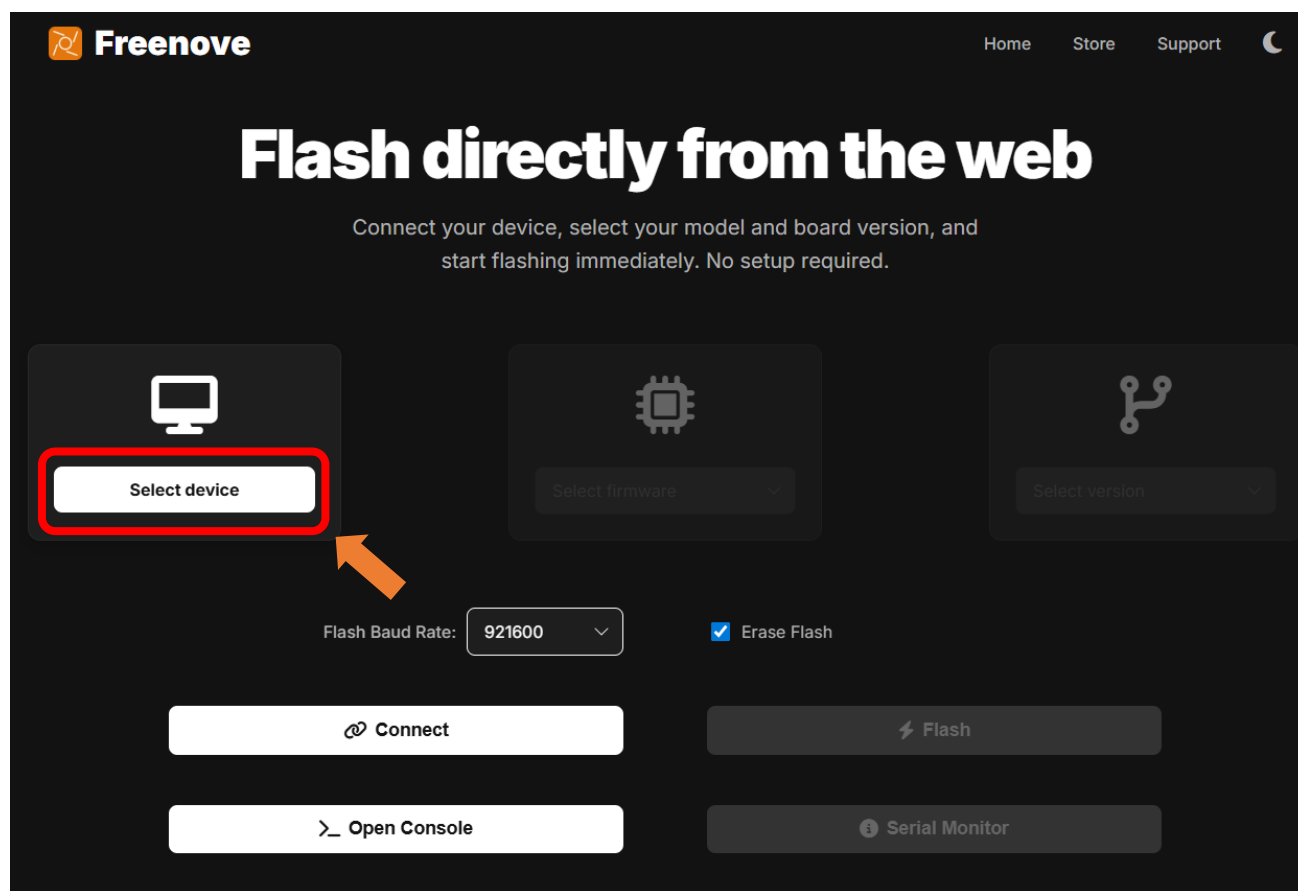


2. Select "FNK0103"

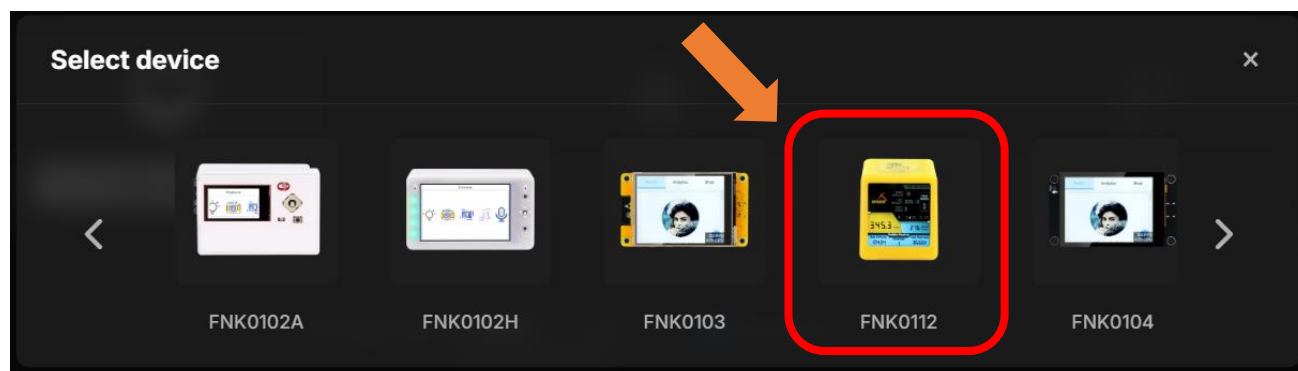

3. Click **"Select firmware"** and select the firmware corresponding to your display model.

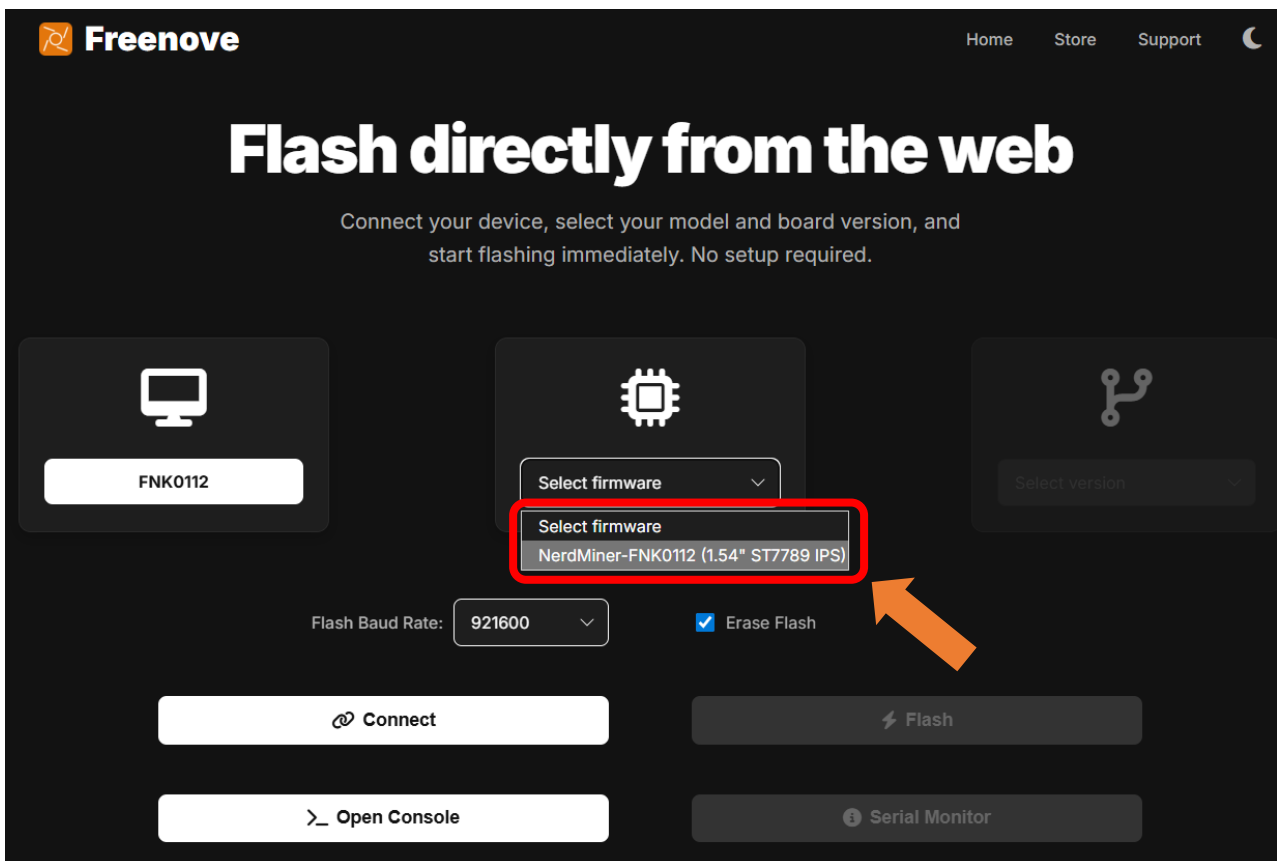


4. Click **"Select version"** to select the appropriate version.

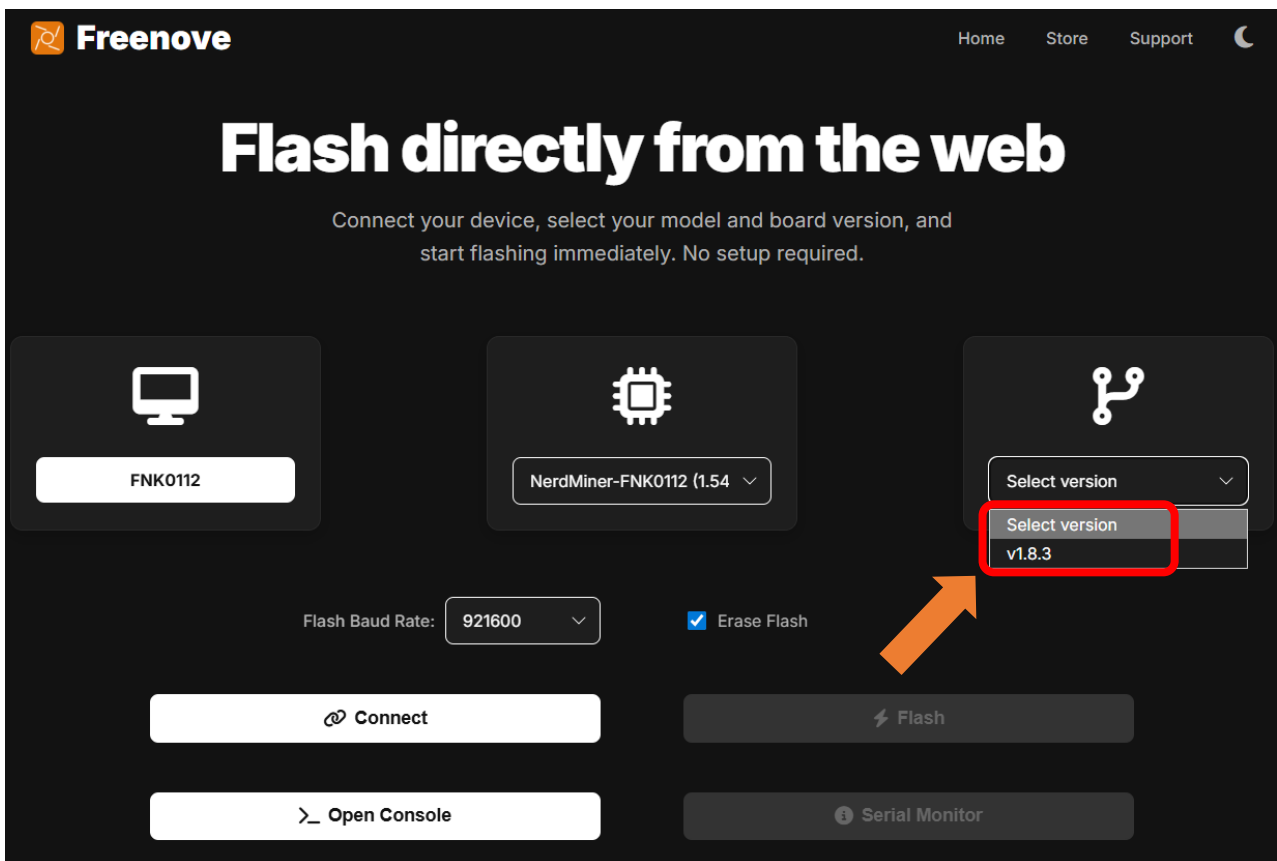


5. Click "**Connect**", select the correct serial port from the pop-up window in the upper left corner of the webpage, and then click "**Connect**" within that window.

Note:

1. The port number (e.g., COMx) is dynamically assigned by your system. The specific value (such as COM3, COM5, etc.) may differ from the example in the diagram. Please select the port that is actually displayed.
2. COM1 is typically not the port for the target device. Please select a different port to connect.

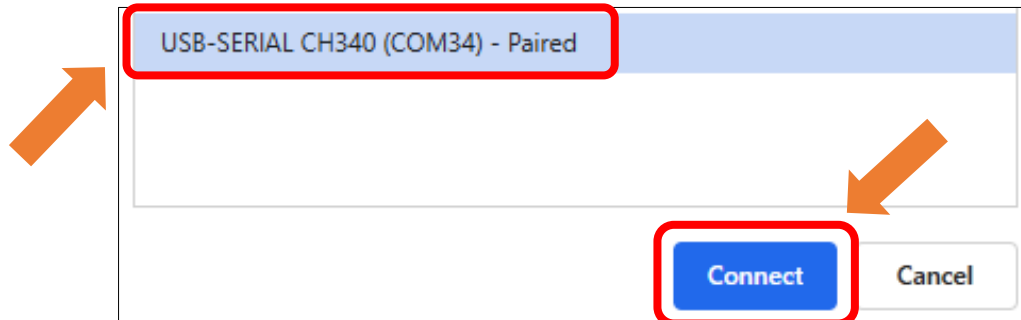

6. Click "**Flash**" to start the firmware burning process. Click "**Open Console**" to view the current progress.

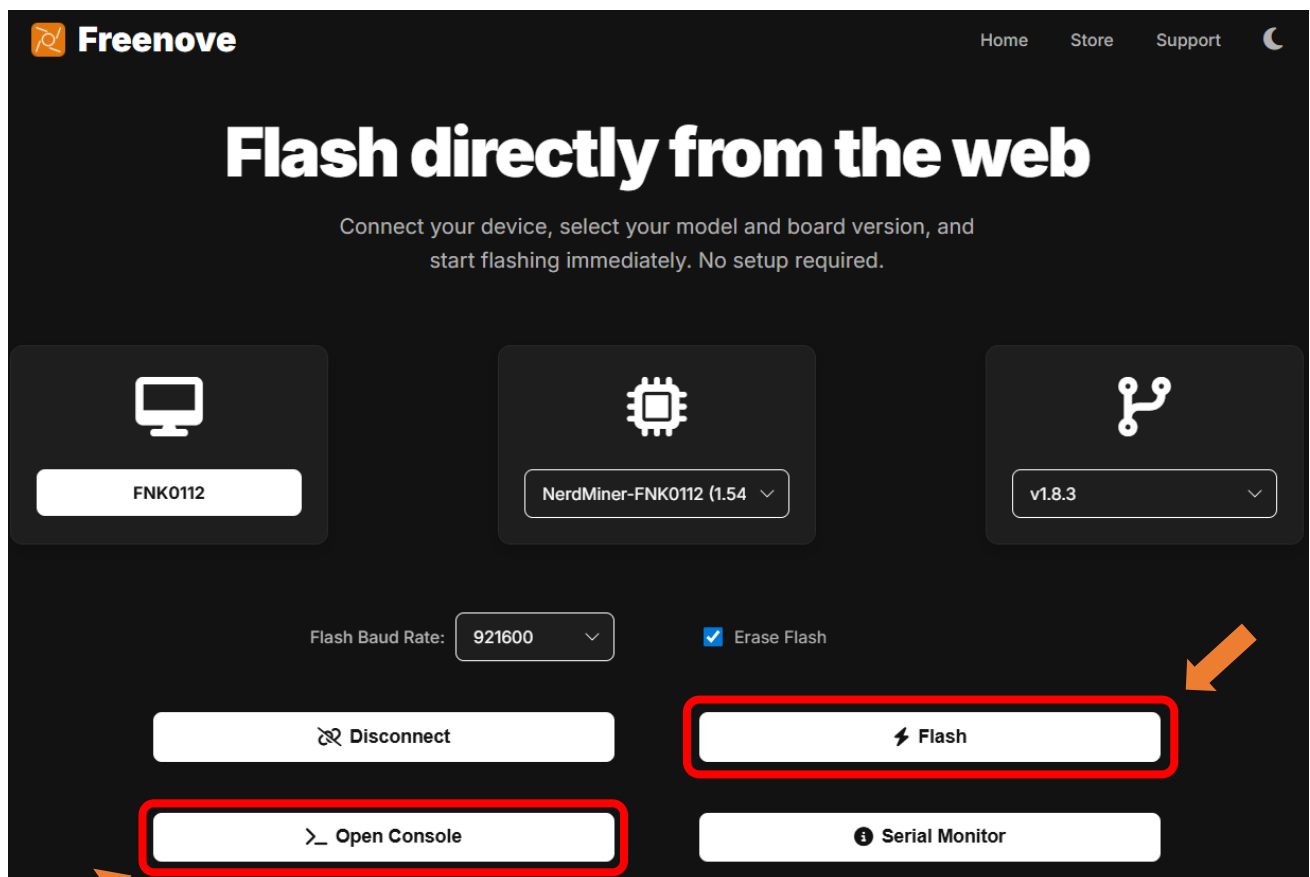

7. The device starts flashing the firmware.

Note:

1. Do not disconnect the device from your computer during the firmware flashing process!
2. If the download does not start after clicking "Flash", it may be due to network latency. Try refreshing the webpage and attempting the process again.
3. If the "Flash" button is disabled (grayed out), please check that all previous configuration steps have been completed.

If you have any concerns, please feel free to contact us via support@freenove.com

Flash directly from the web

Connect your device, select your model and board version, and start flashing immediately. No setup required.



FNK0112



NerdMiner-FNK0112 (1.54 ▾)



v1.8.3 ▾

Flash Baud Rate: 921600 ▾ ☒ Erase Flash

Disconnect

Flashing...

>_ Close Console


Serial Monitor

```
File 2/4 [██████████] 100% Wrote 3072 bytes (137 compressed) at 0x8000 in 0.017 seconds.
Hash of data verified.
Compressed 8192 bytes to 47...
File 3/4 [-----] 0% Writing at 0xe000... (100%)
File 3/4 [██████████] 100% Wrote 8192 bytes (47 compressed) at 0xe000 in 0.027 seconds.
Hash of data verified.
Compressed 2023568 bytes to 882825...
File 4/4 [-----] 0% Writing at 0x10000... (1%)
File 4/4 [-----] 2% Writing at 0x6ba68... (3%)
File 4/4 [-----] 4% Writing at 0x8380a... (5%)
File 4/4 [-----] 6% Writing at 0xa2aaa... (7%)
File 4/4 [-----] 7% Writing at 0xc5c60... (9%)
File 4/4 [-----] 9% Writing at 0xcflc3... (11%)
File 4/4 [-----] 11% Writing at 0xda9f5... (12%)
File 4/4 [-----] 13% Writing at 0xe5d9b... (14%)
File 4/4 [-----] 15% Writing at 0xf0c72... (16%)
File 4/4 [-----] 17% Writing at 0xff0c7... (18%)
File 4/4 [-----] 19% Writing at 0x105757... (20%)
File 4/4 [-----] 20% Writing at 0x10b3bb... (22%)
█
```


Note: During the first boot, the screen may display a solid color (e.g., white or other colors) for a few seconds. Please wait patiently, as this is normal and does not affect functionality.



8. (Optional) Click "Serial Monitor" to open the serial monitor.

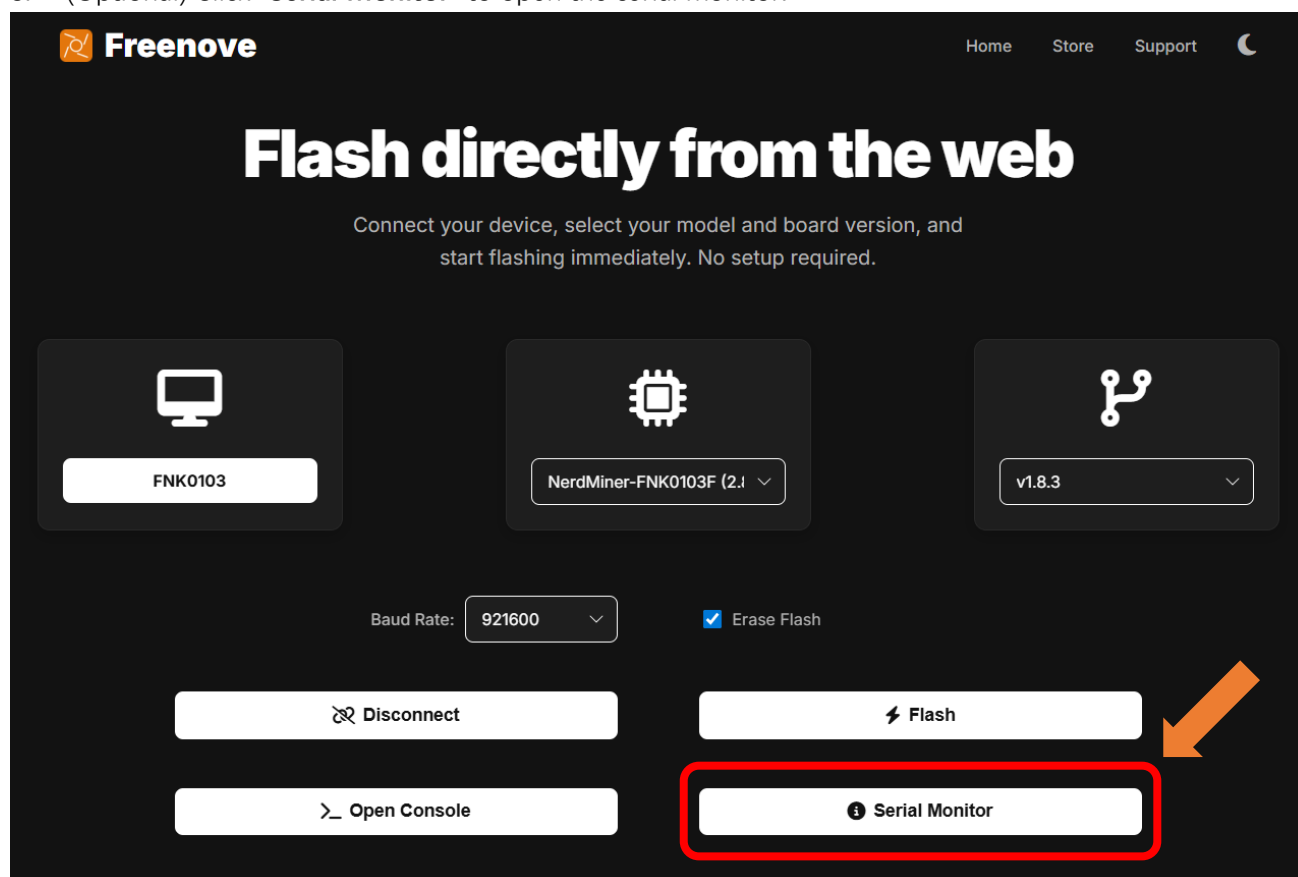

Set the baudrate to 115200, the serial monitor will output debugging information in real-time.

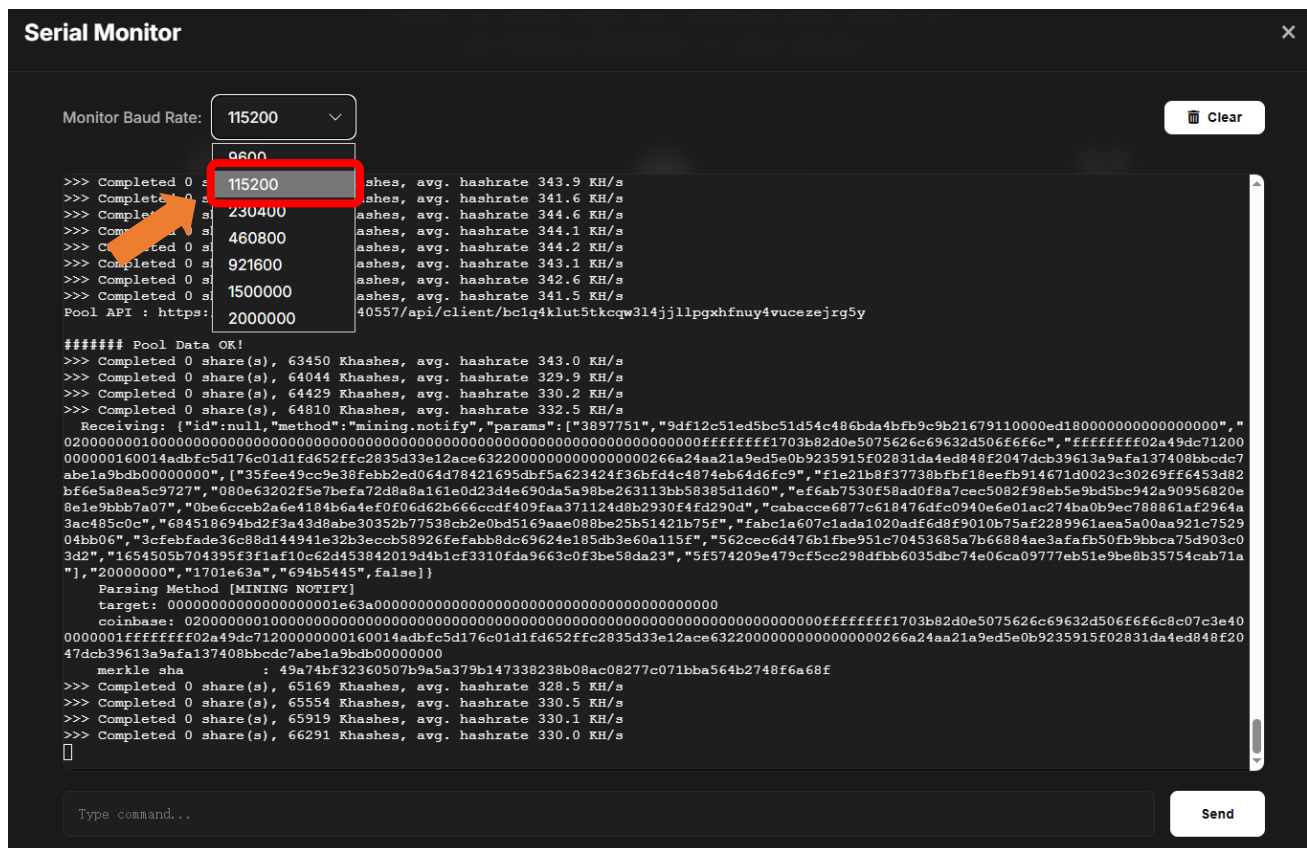

Wi-Fi Configuration


1. Connect the Freenove ESP32 Mini TV to your computer. If the firmware has not been flashed yet, please navigate back to the [Firmware Flashing Section](#) to do it.




2. Turn ON WLAN and connect to **MinerAP**

WiFi SSID: **MinerAP**

PASSWORD: **MineYourCoins**

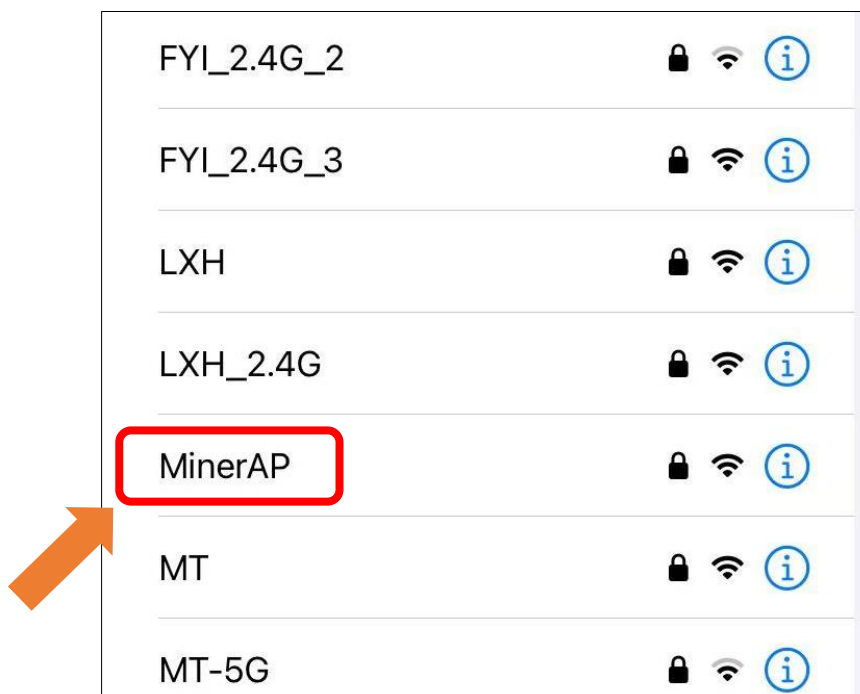


- Click "Configure WiFi"

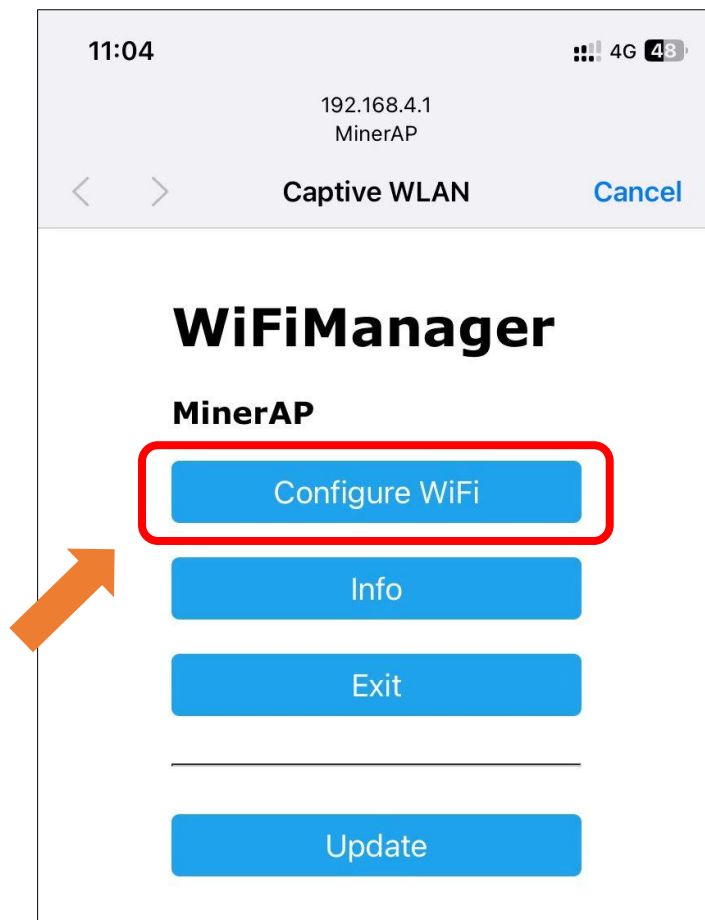

Note: If the page does not redirect automatically, please visit 192.168.4.1 in your browser.

- Select your network. Please note that ESP32 **only** supports 2.4GHz network.

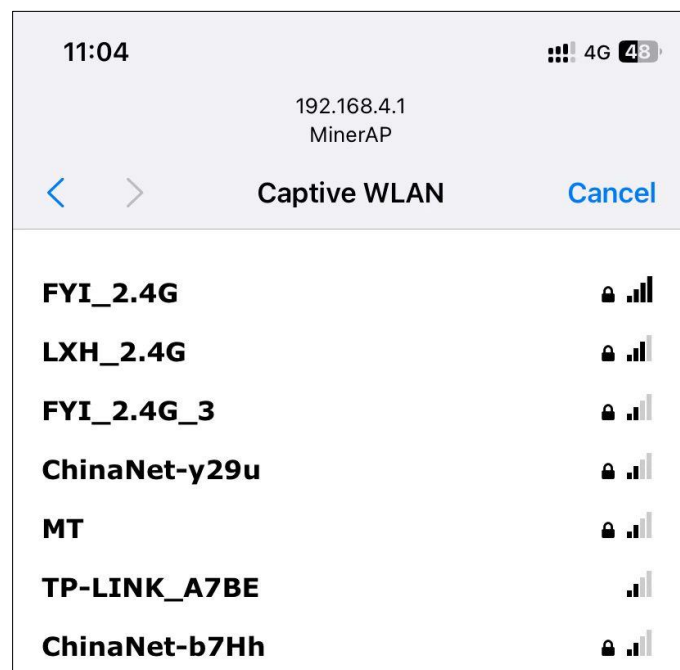

5. Configure device information.
6. If you do not have a BTC address yet, please refer to [Obtaining the BTC Receiving Address](#) Section to get it.
7. If the mining efficiency is unsatisfactory, you can switch to [other mining pools](#) as needed.

The screenshot shows the 'Captive WLAN' configuration interface on a mobile device. The status bar at the top displays the time 11:05, 4G signal, and 47% battery. The interface includes a title bar with navigation arrows, the IP address 192.168.4.1, the label 'MinerAP', and a 'Cancel' button. The configuration fields are as follows:

- SSID:** FYI_2.4G
- Password:** A field with 12 dots, highlighted with a red box. An orange callout bubble points to it with the text 'Input the correct WiFi password'.
- Show Password:** An unchecked checkbox.
- Pool url:** public-pool.io, highlighted with a red box.
- Pool port:** 21496, highlighted with a red box.
- Your BTC address:** bc1q4klut5tkcqw3l4jjllpgxhfnuy4vucezejrg5y, highlighted with a red box. An orange callout bubble points to it with the text 'Input your BTC address'.
- TimeZone fromUTC (-12/+12):** 8, highlighted with a red box. An orange callout bubble points to it with the text 'Configure the correct timezone'.


Below the fields is a 'Features' section with a checked checkbox for 'Save mining statistics to flash memory.' At the bottom are two large blue buttons labeled 'Save' and 'Refresh'.

Management Tool


Public Pool

When using the pool public-pool.io:21496, you can manage it via the web link <https://web.public-pool.io/#/>.

1. Open public-pool

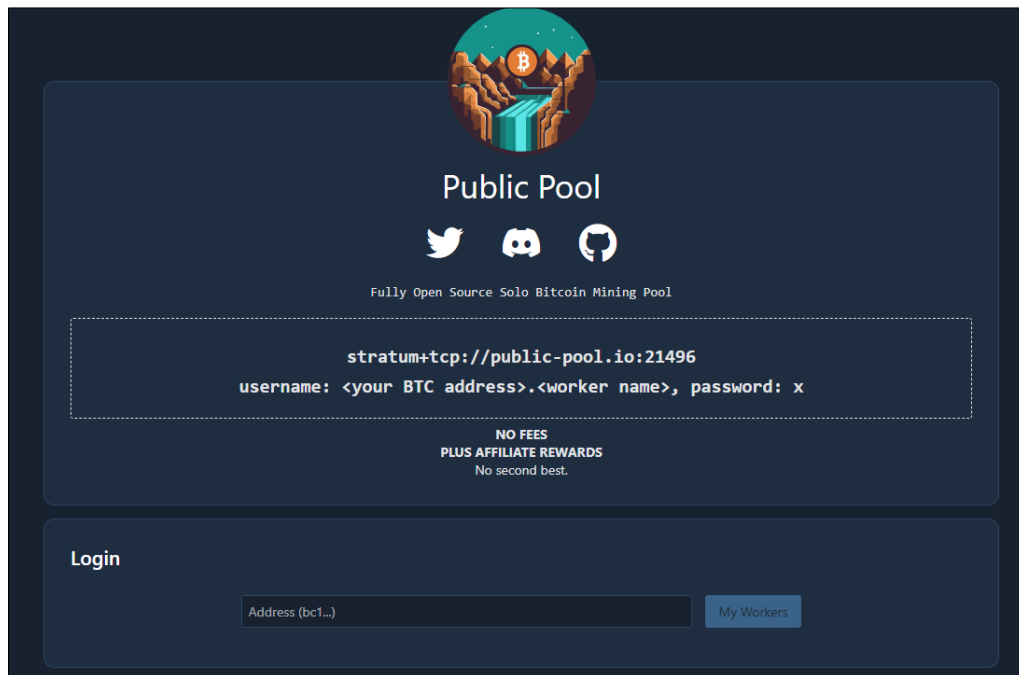

2. Enter your BTC receiving address, and click "My Workers".

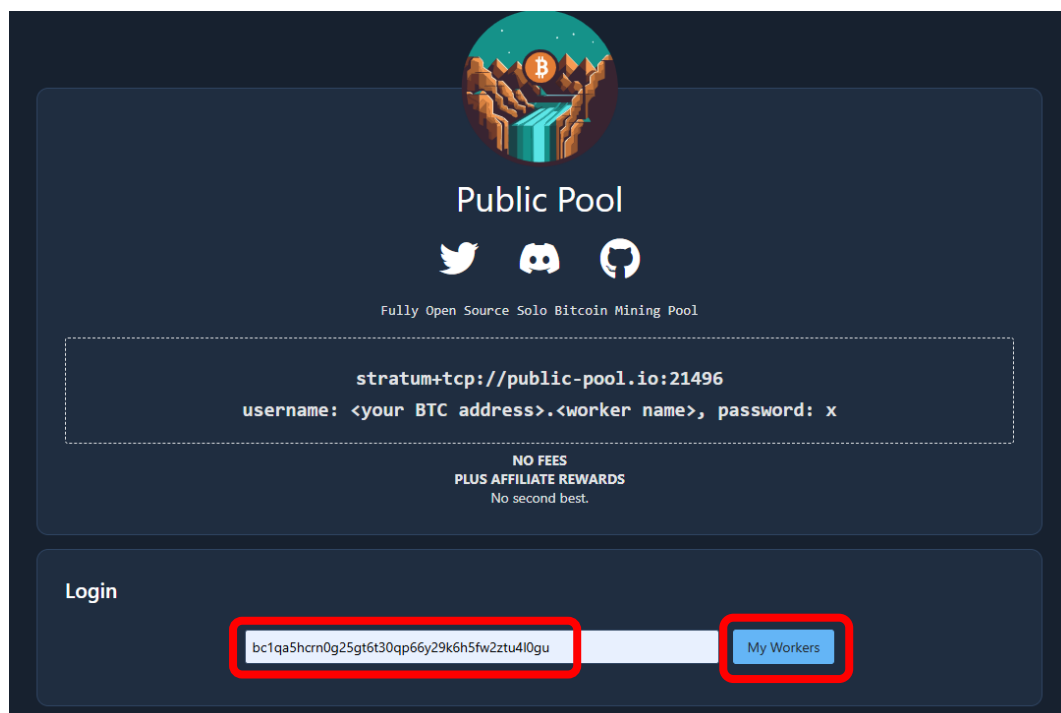

3. You can view the current working status of the worker.



Please note: This webpage only detects and manages miners currently working in the Public Pool that use your BTC address as the login or payout address. Once the pool is changed, this webpage will no longer be accessible for management.

NMMiner

This project utilizes Freenove ESP32 Mini TV and NMMiner to implement Bitcoin mining. It requires some programming background and a basic understanding of digital currencies.

Project Introduction

NMMiner (<https://github.com/NMminer1024/NMMiner>) is an excellent BTC mining firmware specifically designed for ESP32 development boards. It breaks away from the traditional mining requirements of massive electricity consumption and high hash rates by adopting a SOLO mining mode. In this mode, every computation has the chance to independently win the entire block reward. NMMiner supports all cryptocurrencies based on the SHA256d algorithm, such as **BTC, BCH, XEC, and DGB**. Freenove has successfully ported this project to run on the Freenove ESP32 Mini TV.

This tutorial will guide you through the process of running the project on the Freenove ESP32 Mini TV.

NMMiner offers two management tools:

1. **NMController Client**: Windows desktop application
2. **NMController Web**: A cross-platform web client designed with Python, compatible with both Windows and macOS systems.

Precautions

- **Cost**
 - NMMiner is currently a paid service. Each device requires a unique license for activation. Therefore, you will need to purchase a separate activation code for every development board you plan to use in order to complete the activation process.
- **Security Precautions**
 - Never disclose your wallet's private key or recovery phrase to anyone. The only information you need to provide is your public cryptocurrency receiving address.
- **Troubleshooting**
 - If you have followed the tutorial but are still unable to use the miner, please feel free to contact us for assistance. (support@freenove.com)

Compatibility Description

At the time of writing this guide, the Freenove ESP32 Mini TV is available in five different models. Although they vary in terms of screen drivers, resolutions, and screen sizes, all of them can be set up using this tutorial to learn how to use NMMiner.

Miner Compatibility

Provide a tutorial to show how to install the following miner firmware.



NerdMiner (Freenove version, free):
Fully compatible
(Pre-installed in the product)




NMMiner (2.99 USD per device):
Fully compatible
(Need to buy and install it yourself)

If you have any concerns, please feel free to contact us via support@freenove.com

How to Use

Firmware Flashing and Activating

1. Open the [NMMiner Flash ESPTool](#) interface, click to select the “nm-tv-154”.

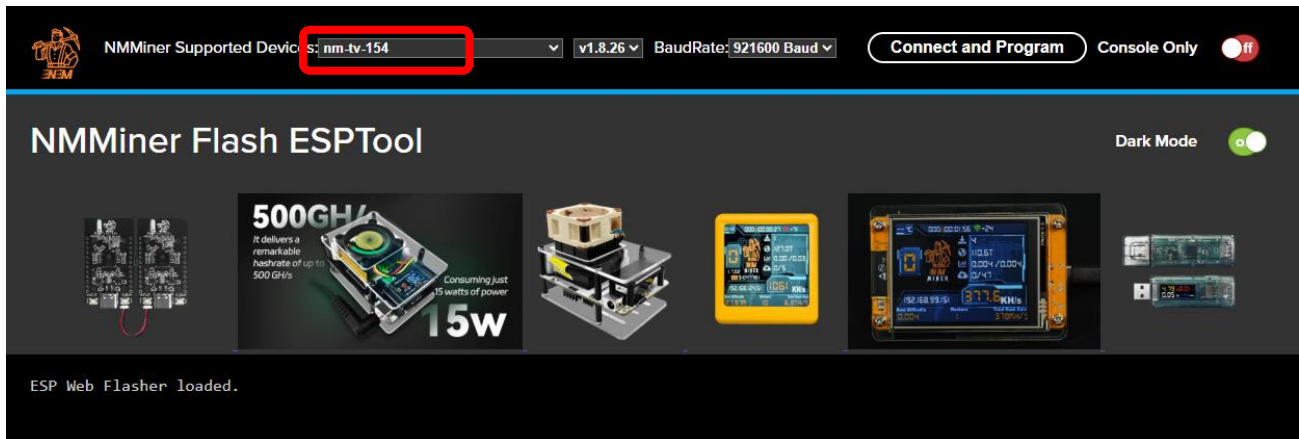

If you have any concerns, please feel free to contact us via support@freenove.com


2. Connect the **Freenove ESP32 Mini TV** to your computer.




3. Click “**Connect and Program**”, select the correct port in the pop-up window, and click “**Connect**”.

Please note:


- The port may vary among computers
- Generally, COM1 is not the serial port of the ESP32.

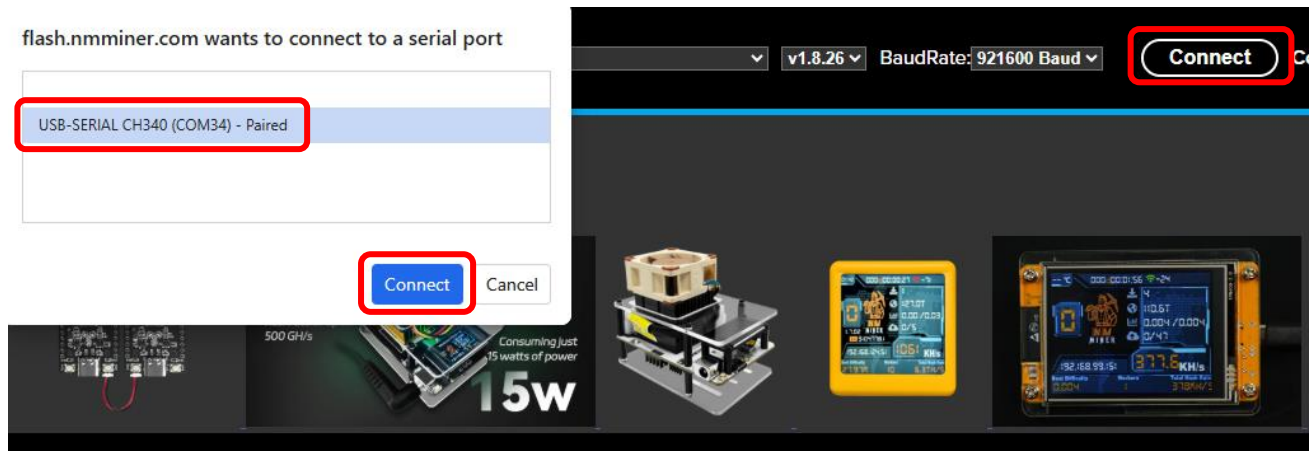


4. The firmware starts to flash into the Freenove ESP32 Mini TV. **Do NOT remove power supply during this process.**

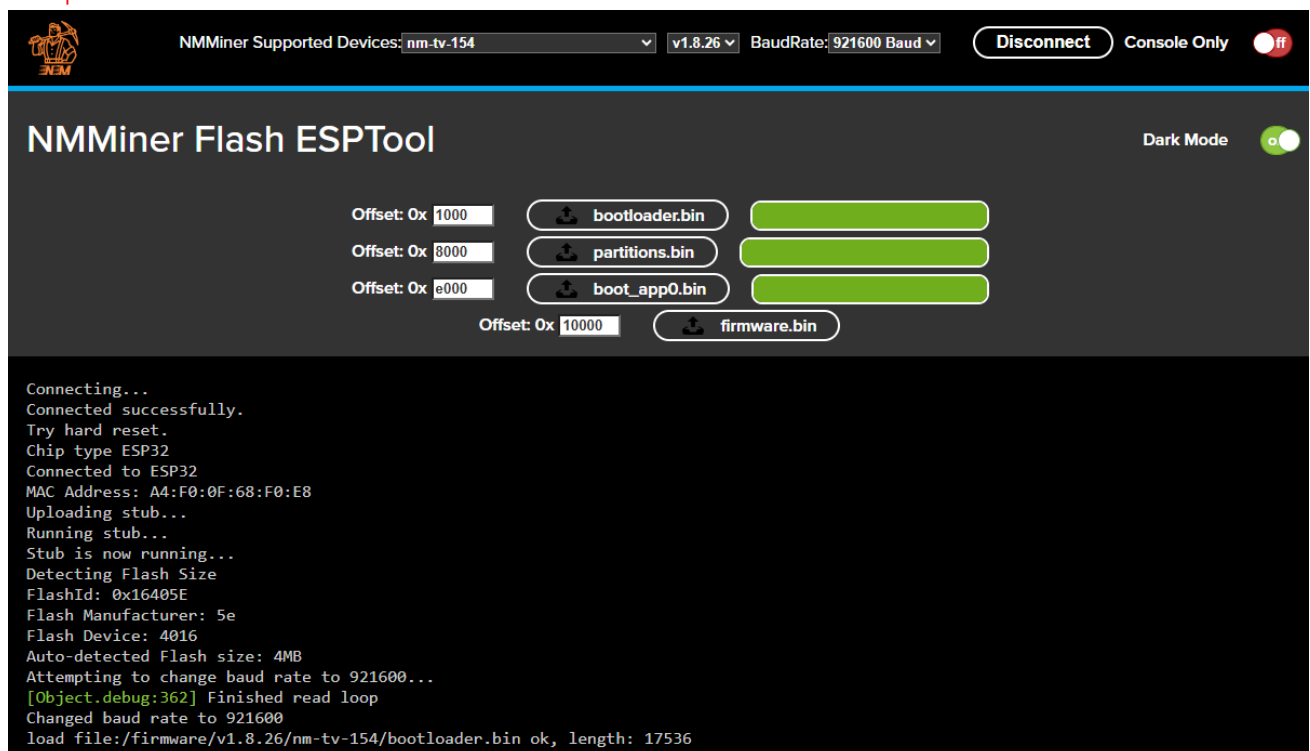

5. Click **"Get License Code"** after the firmware successfully flashes.

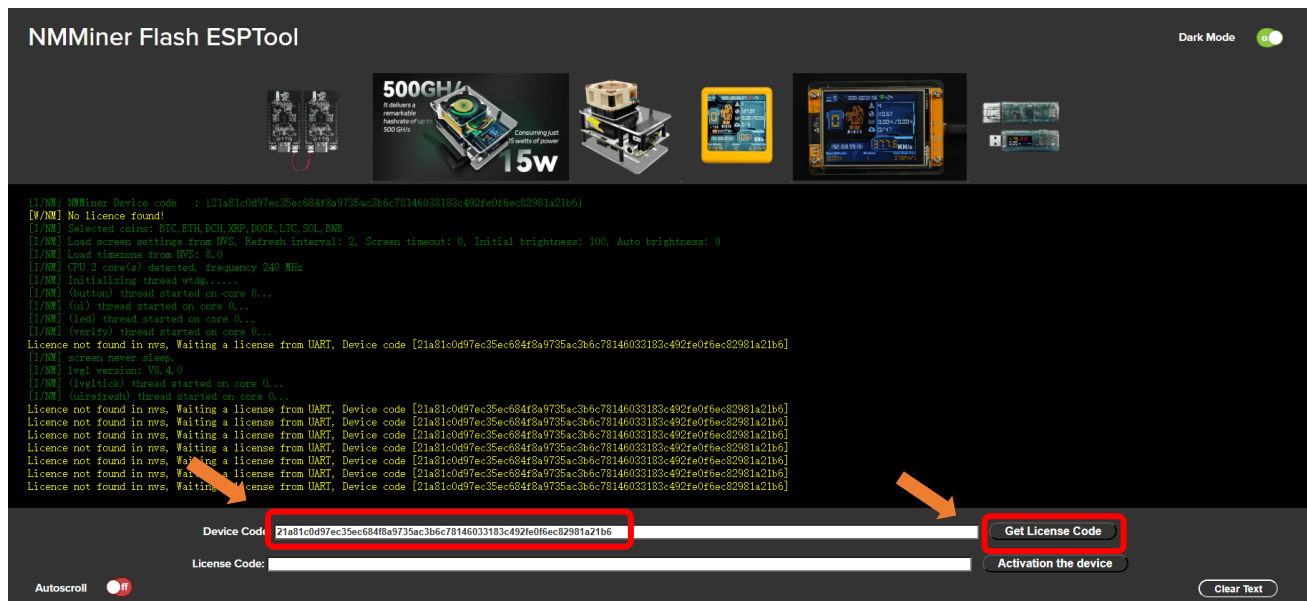


6. Click **"PayPal Activate"** to make payment.

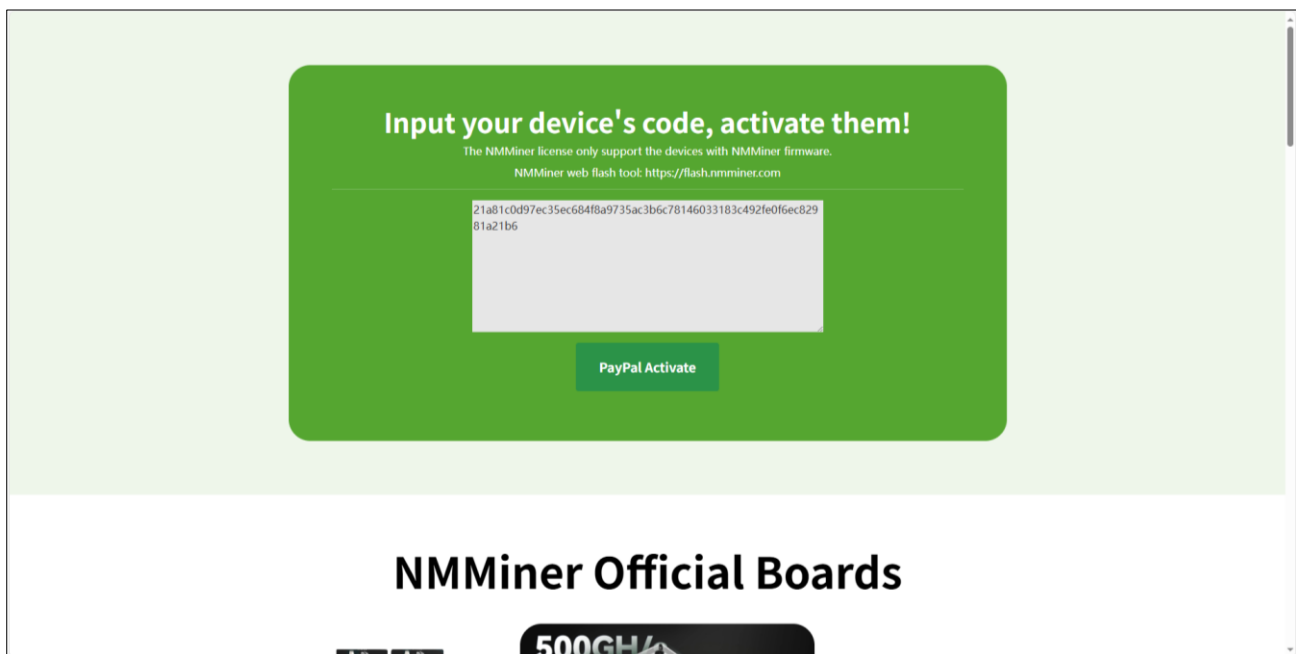


7. Please securely store the generated License (important). **If the License is lost, it will need to be repurchased.**

When generating the license, the website will automatically download a CSV file containing the License information. You may also save the current webpage URL, as it can be reopened later.

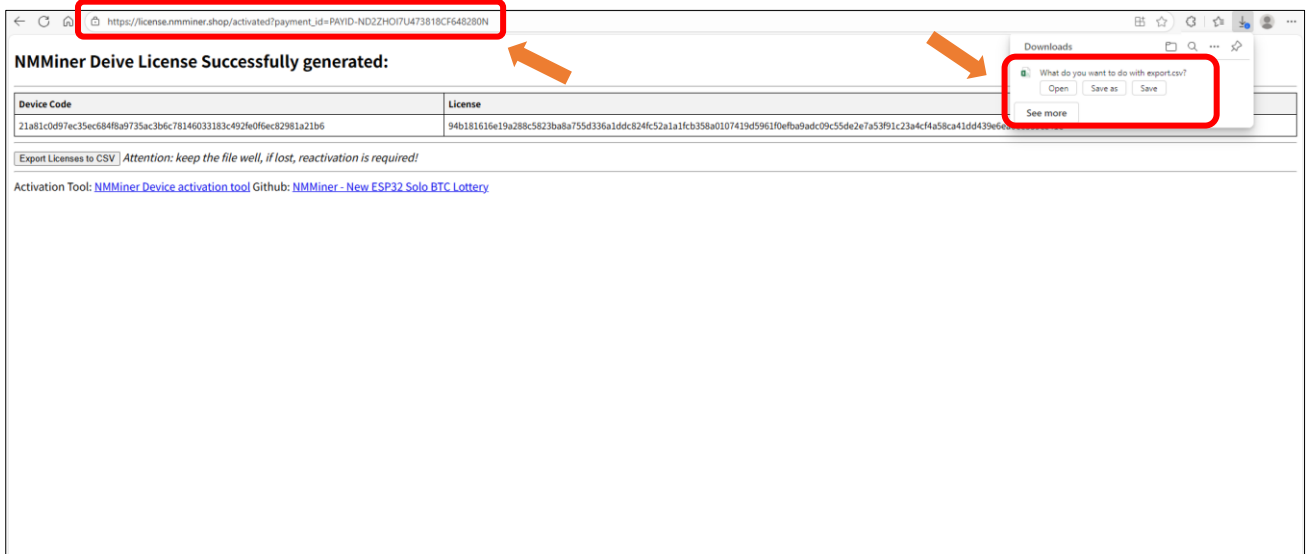

Please note: Each device requires a unique license code for activation. Therefore, you will need to purchase a separate activation code for every development board you plan to use in order to complete the activation process.

8. Enter the License Code and click "Activation the device".

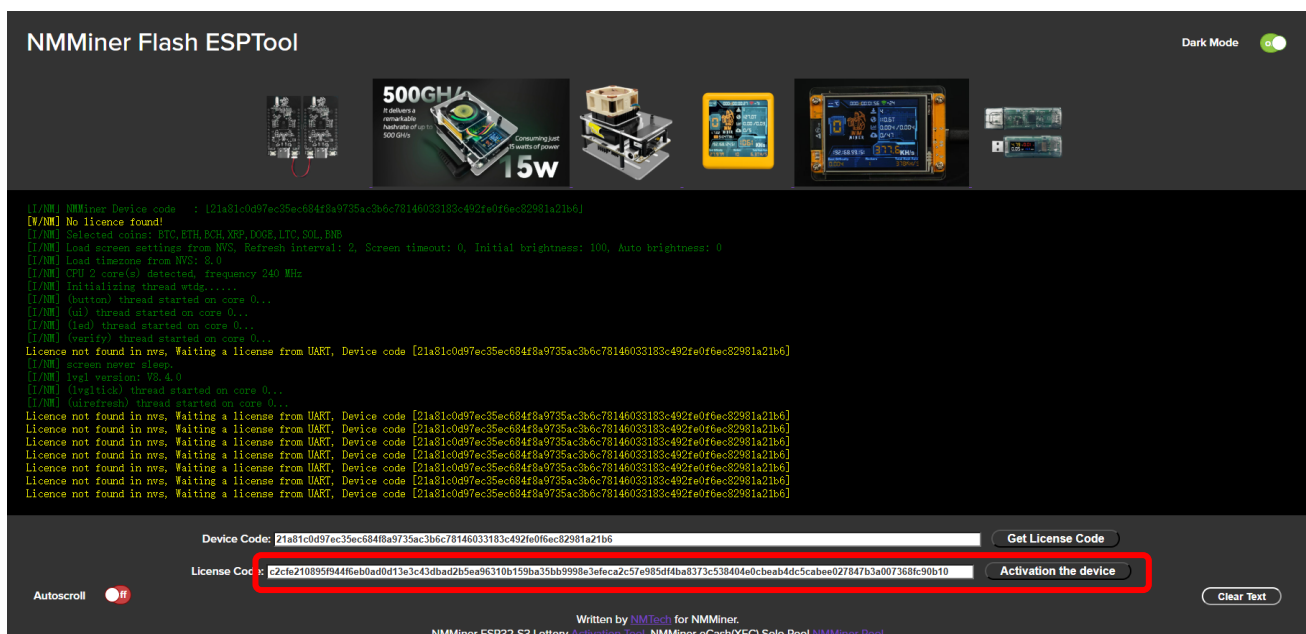

9. Now the device is successfully activated.

NMMiner Flash ESPTool
Dark Mode

```

License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
License not found in nvs, Waiting a license from UART, Device code [21a81c0d97ec35ec684f8a9735ac3b6c78146033183c492ef0fec82891a21b6]
activation code: e2cfre210895f944f6eb0ad0fd136c3d43bad25ea96310b159ba35bb99983efeca2c57e985dd4b48373c53940ed0cbaabddc5cabee027847b3a007368fc90b10
[!NM] License verification passed
[!NM] License saved to NVS
[VNM] Initializing WiFi, random delay: 4627 ms
[!NM] (connection) thread started on core 0...
[!NM] WiFi interface ready
    
```

Autoscroll ☒

WiFi SSID:

WiFi Password:

BTC Address:

Configure device

Clear info

[AutoScroll](#)
[Clear Text](#)

Written by NMTool for NMMiner.
 NMMiner ESP32 S3 Lottery Activation Tool, NMMiner eCash(XEC) Solo Pool [NMMiner.Pool](#)
 Contact us : [Telegram](#), [Github](#): [NMMiner](#), [Email](#): nmminer1024@gmail.com
 This tool reference: [Adafruit_WebSerial_ESPTool](#).


If you have any concerns, please feel free to contact us via support@freenove.com

Wi-Fi Configuration


1. Connect the Freenove ESP32 Mini TV to your computer. If the firmware has not been flashed yet, please navigate back to the [previous section](#) to do it.



2. Turn ON WLAN, locate and click “nmap-2.4g”.

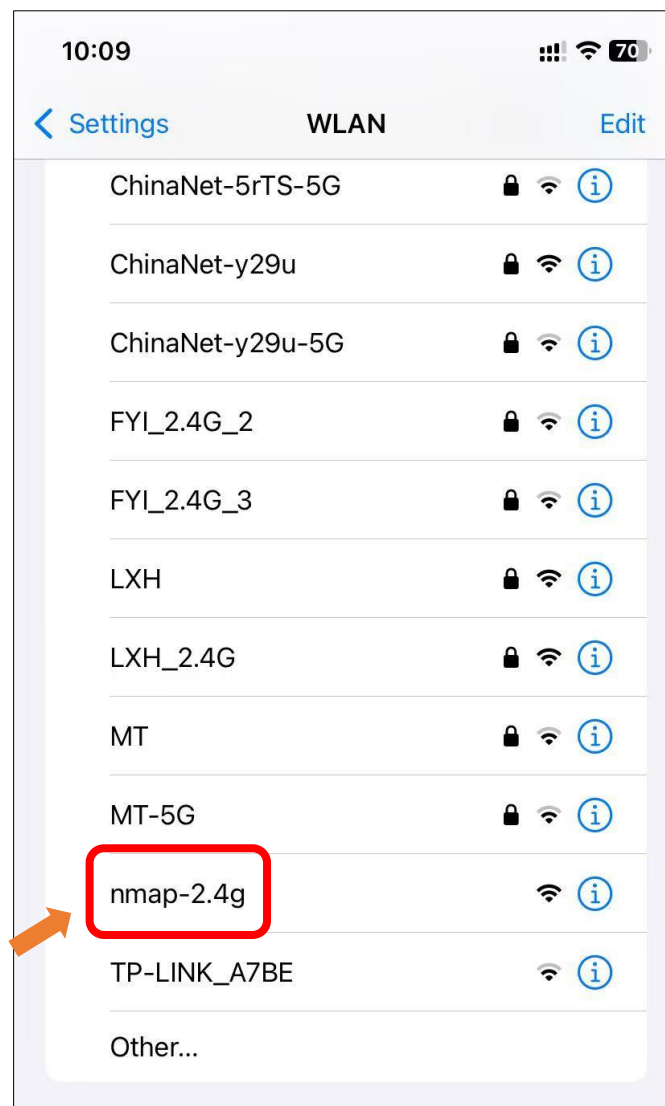

3. Wait for it to pop up the following interface, click “Configure WiFi”.

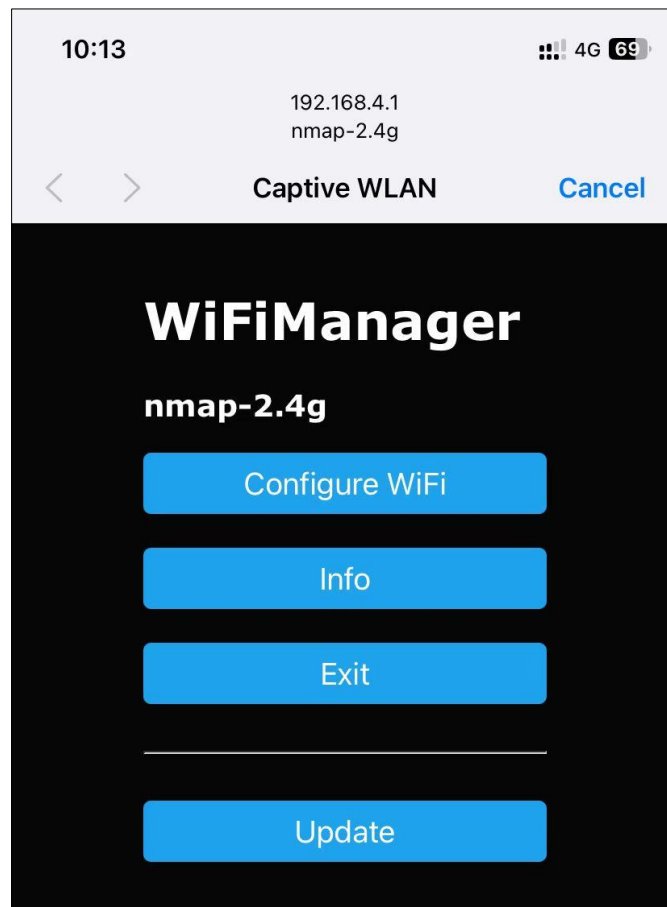


Note: If the page does not redirect automatically, please visit 192.168.4.1 in your browser.

4. Select your network. Please note that ESP32 **only** supports 2.4GHz network.



5. Enter the correct WiFi password.

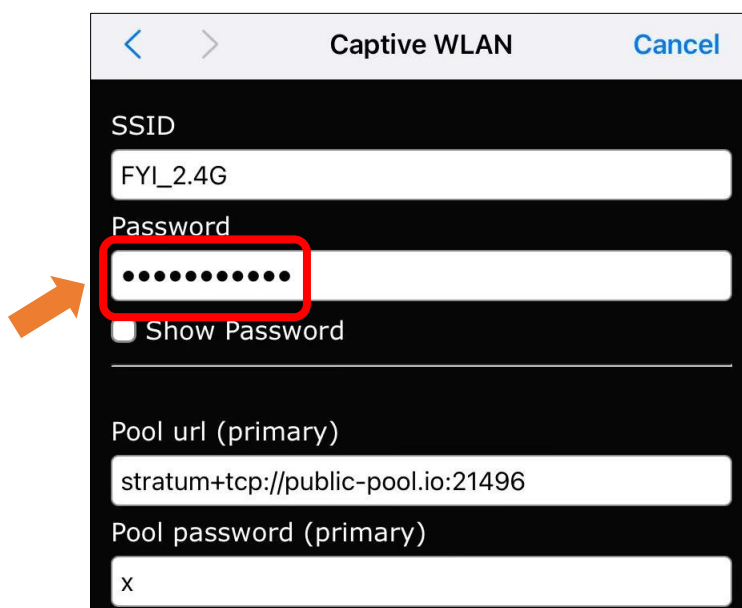

Captive WLAN Cancel

SSID
FYI_2.4G

Password
.....
☐ Show Password

Pool url (primary)
stratum+tcp://public-pool.io:21496

Pool password (primary)
x

6. Enter the mining pool information. If the mining efficiency is unsatisfactory, you can switch to [other mining pools](#) as needed.




SSID
FYI_2.4G

Password
.....
☐ Show Password

Pool url (primary)
stratum+tcp://public-pool.io:21496

Pool password (primary)
x

7. Enter the correct BTC address. If you do not have a BTC address yet, please refer to [Obtaining the BTC Receiving Address](#) Section to get it.

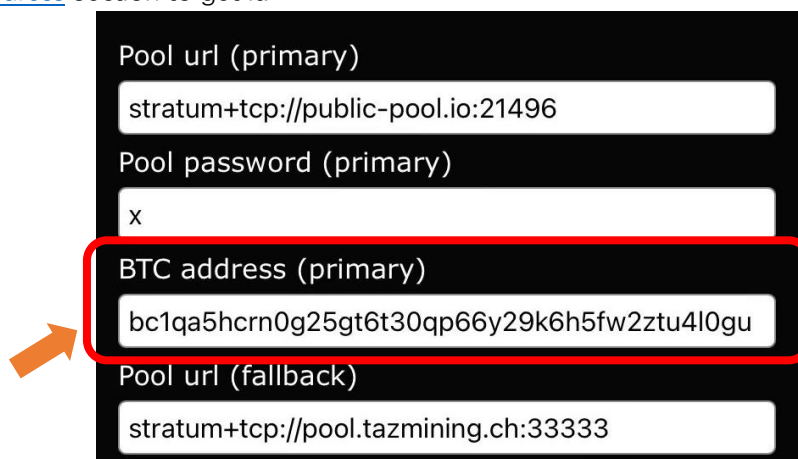


Pool url (primary)
stratum+tcp://public-pool.io:21496

Pool password (primary)
x

BTC address (primary)
bc1qa5hcrn0g25gt6t30qp66y29k6h5fw2ztu4l0gu

Pool url (fallback)
stratum+tcp://pool.tazmining.ch:33333

8. Enter the correct time zone.

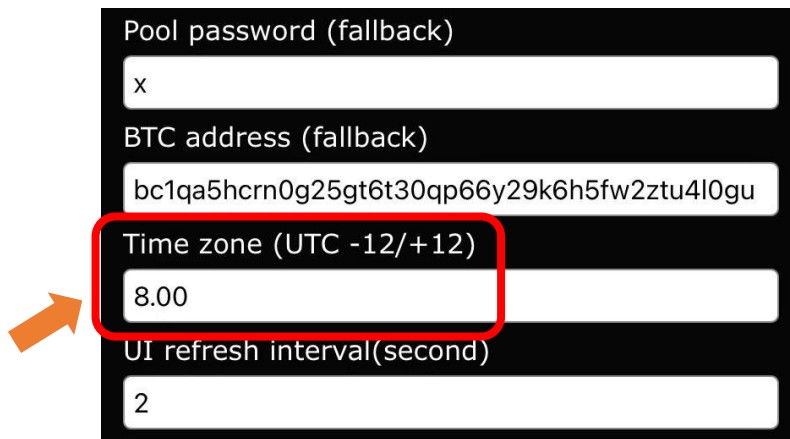

Pool password (fallback)
x


BTC address (fallback)
bc1qa5hcrn0g25gt6t30qp66y29k6h5fw2ztu4l0gu

Time zone (UTC -12/+12)
8.00

UI refresh interval(second)
2

An orange arrow points to the 'Time zone (UTC -12/+12)' field, which is highlighted with a red rectangle.

9. Click "Save" to save the configuration.

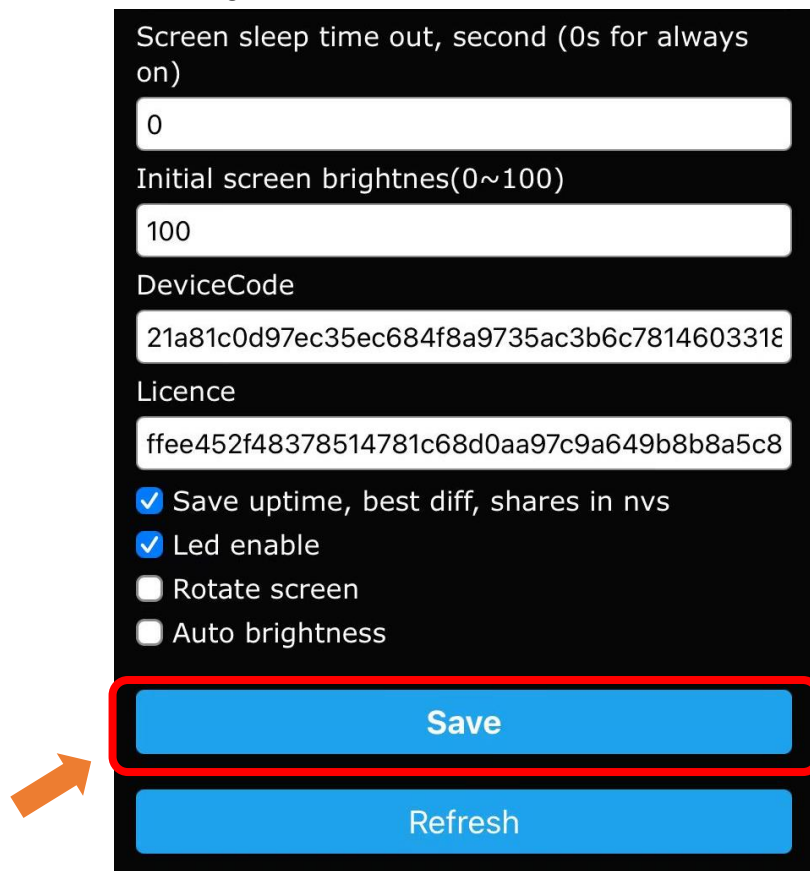

Screen sleep time out, second (0s for always on)
0

Initial screen brightness(0~100)
100

DeviceCode
21a81c0d97ec35ec684f8a9735ac3b6c7814603318

Licence
ffee452f48378514781c68d0aa97c9a649b8b8a5c8

☒ Save uptime, best diff, shares in nvs
☒ Led enable
☐ Rotate screen
☐ Auto brightness

Save

Refresh

An orange arrow points to the 'Save' button, which is highlighted with a red rectangle.

10. Now the NMMiner project begins to work.




Management Tools

NMController Client


Note:

- 1) NMController Client only works on Windows.
- 2) The NMController client, which is downloaded from NMMiner official, may trigger false positives from antivirus programs, incorrectly flagging it as a virus. If you do not trust it, you can use alternative methods provided in this document to manage your device.


1. Click to open the [NMMiner GitHub website](https://github.com/NMminer1024/NMMiner), click **Code** -> **Download ZIP**

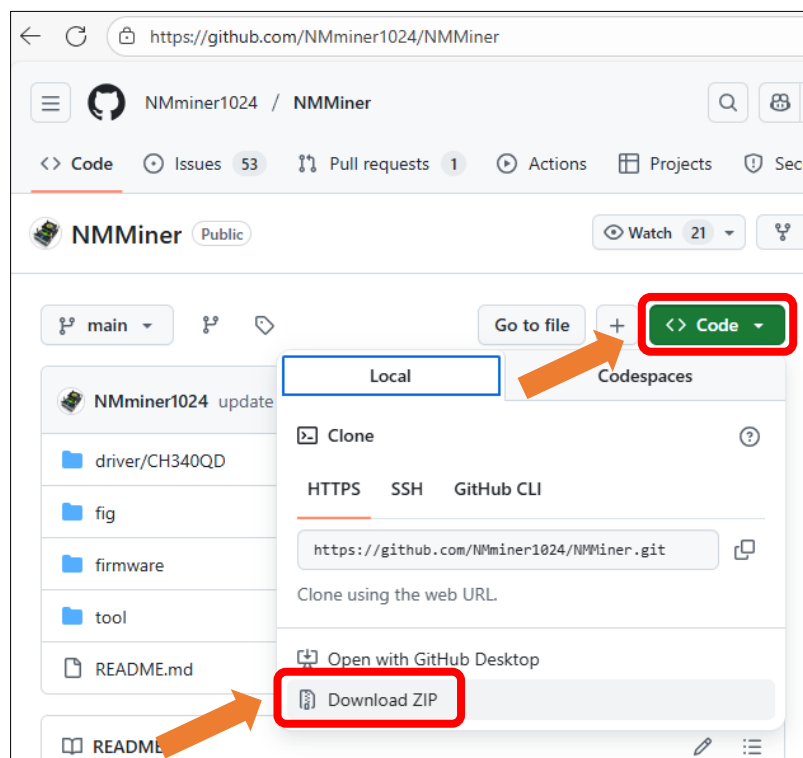


2. Extract the downloaded files, click **tool** -> **nmcontroller_client**, double click "NMControllerSetup_x64.msi" to open it.

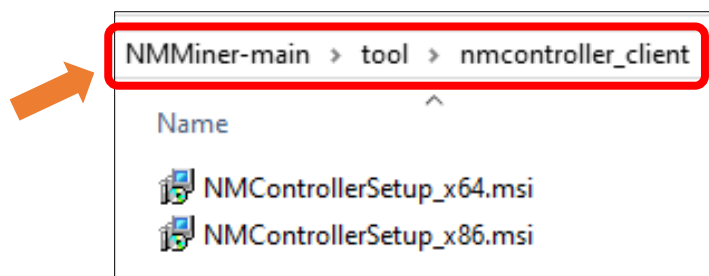


3. Click **"Next"**.

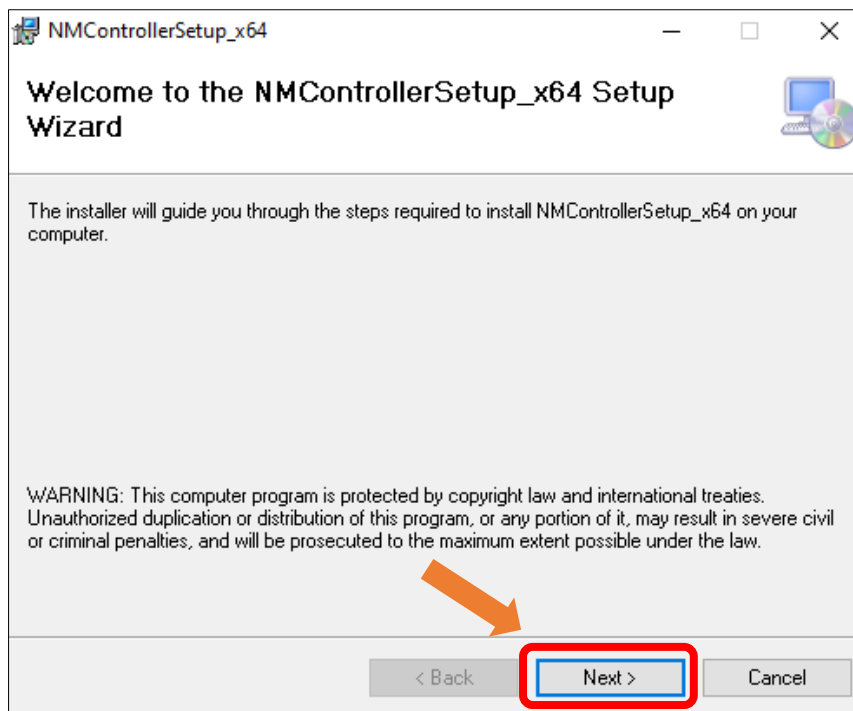

4. Click **"Browse"** to select the installation location, check **"Just me"**, and click **"Next"**.

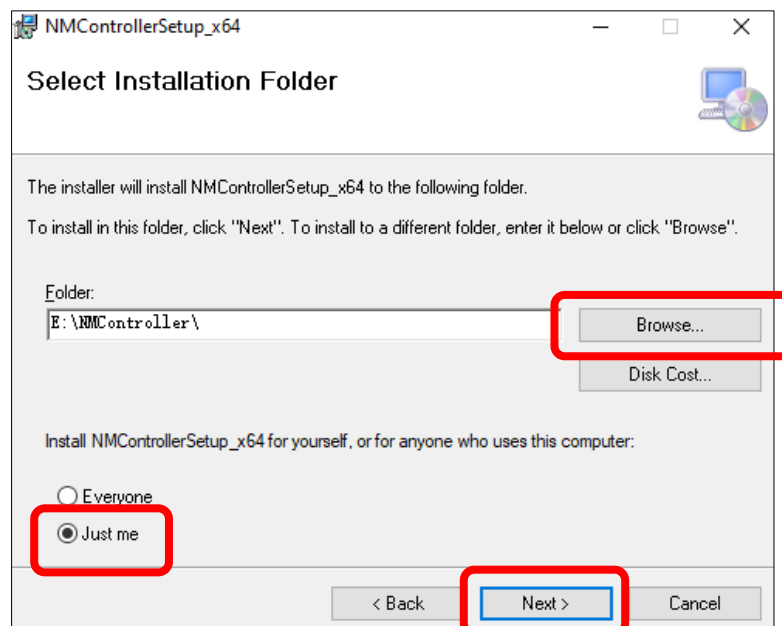

5. Close the window when the installation completes.

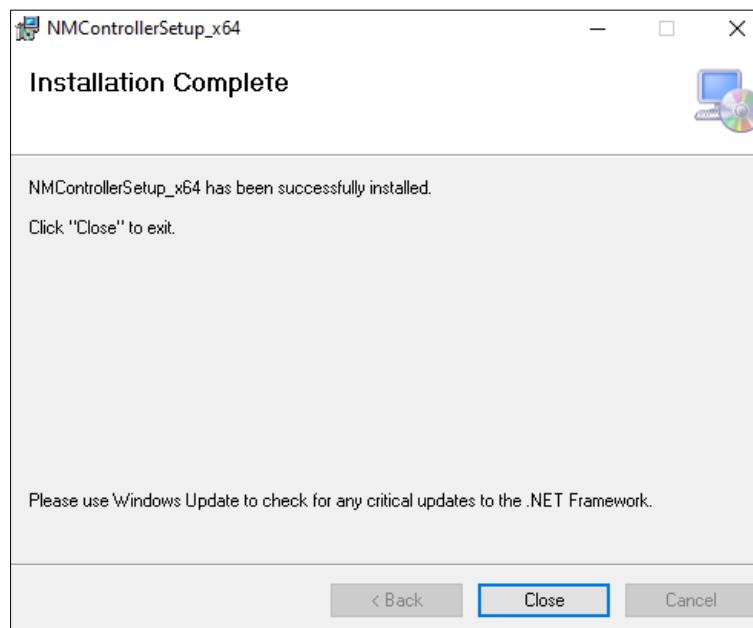

Open the installed NMController Client and you can see the current device data.


NMController v0.4.1												
IP	BoardType	HashRate	Share	Pool	NetDiff	LastDiff	BestDiff	Valid	Temp	RSSI(dBm)	FreeHeap	Version
192.168.1.26	cyd 2.8	999.55KH/s	0/162/100.0%	public-pool.io:21496	146.7T	0.010	23.99 23.99	0	0.0	-37	98.20	v1.8.20

If you have any concerns, please feel free to contact us via support@freenove.com


NMController Web

NMController Web: A cross-platform web client designed with Python, compatible with both Windows and macOS systems.

1. Click to open the [NMMiner GitHub website](https://github.com/NMminer1024/NMMiner), click **Code** -> **Download ZIP**

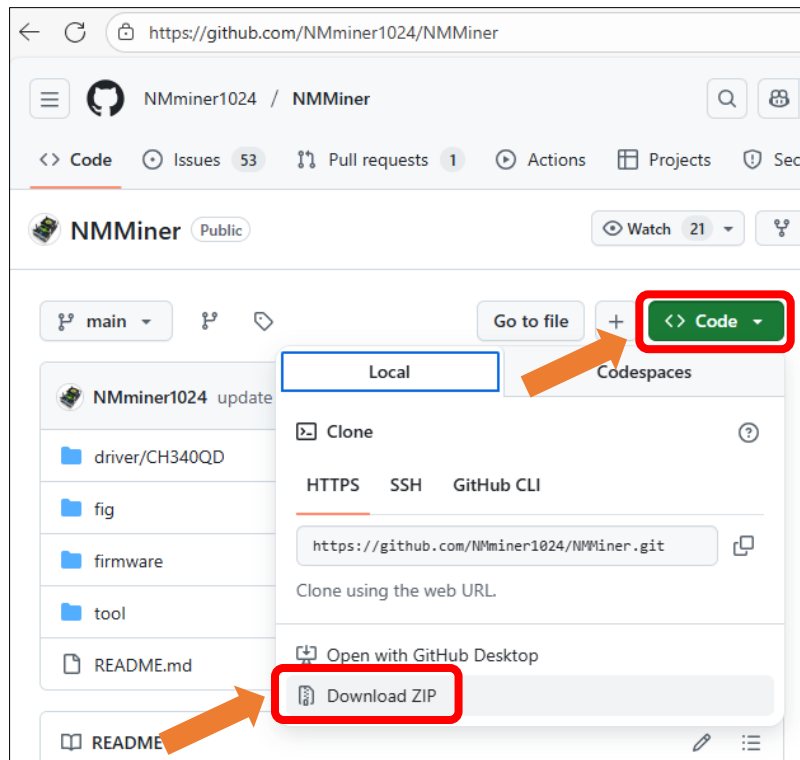

2. Extract the downloaded files, click **tool** -> **nmcontroller_web**, select the folder based on your computer's OS.

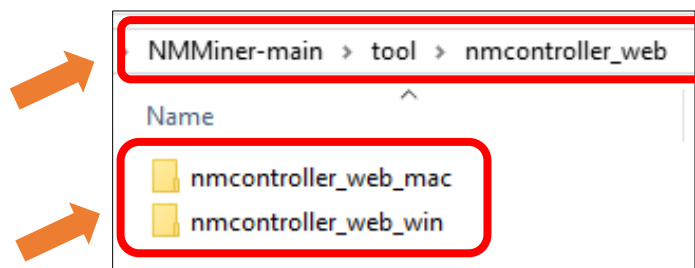

3. Double click to run the program.
 - (1) You can access the management interface by visiting <http://localhost:7877> on the current device.
 - (2) Devices in the same LAN can access the management interface by visiting <http://192.168.1.24:7877>

Notes:

- The following interface must NOT be closed when using NMController Web.
- The COM port may vary among devices. Please refer to the printed information for the correct port number.

```

  2025-10-21 16:03:22,056 [INFO] NM Centralized Monitor Server running...
  2025-10-21 16:03:22,056 [INFO] NMMiner firmware version v0.3.01 or later is required.
  2025-10-21 16:03:22,948 [INFO] The latest version of NMMiner is v1.8.20.
  2025-10-21 16:03:22,949 [INFO] NMMiner_Info Starting UDP listener...
  2025-10-21 16:03:22,950 [INFO] NMMiner_Info Listening on 0.0.0.0:12345
  2025-10-21 16:03:23,496 [INFO] [BtcInfoThread] BTC Price: $108069, Block Reward: 3.125 BTC, Reward Value: $337715.62
  2025-10-21 16:03:24,952 [INFO] Access the web monitor at http://192.168.1.24:7877 or http://localhost:7877
  2025-10-21 16:03:24,953 [INFO] Serving on http://0.0.0.0:7877

```

4. Access the corresponding address to open the management tool.

IP	Hash Rate	Share (Reject/Accept)	Last Diff	Best Diff	Valid	Temp	RSSI (dBm)	Free Heap	Version	Uptime	Last Seen
192.168.1.26	999.51KH/s	0/198 (100.0%)	0.011	23.99 23.99	0	0.0°C	-39	98.93	v1.8.20	1h45m	2s

* Latest firmware version is v1.8.20


Coingecko BTC/USD: \$108,069
Block Reward: 3.125 BTC (\$337,715.62)

© 2024 NMTech Copyright Reserved | [GitHub](#)

IP Address Management

In the NMMiner interface, there is an IP address displayed. Devices connected to the same local network can access this IP address to open the management interface.




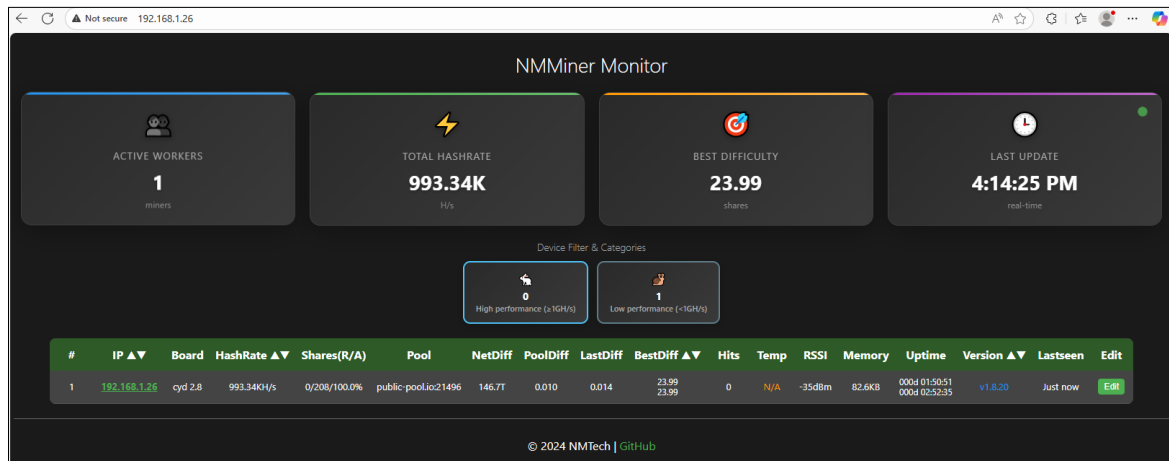


Public Pool

When the mining pool public-pool.io:21496 is selected, you can manage it via the web interface using the link (<https://web.public-pool.io/#/>).

1. Open public-pool

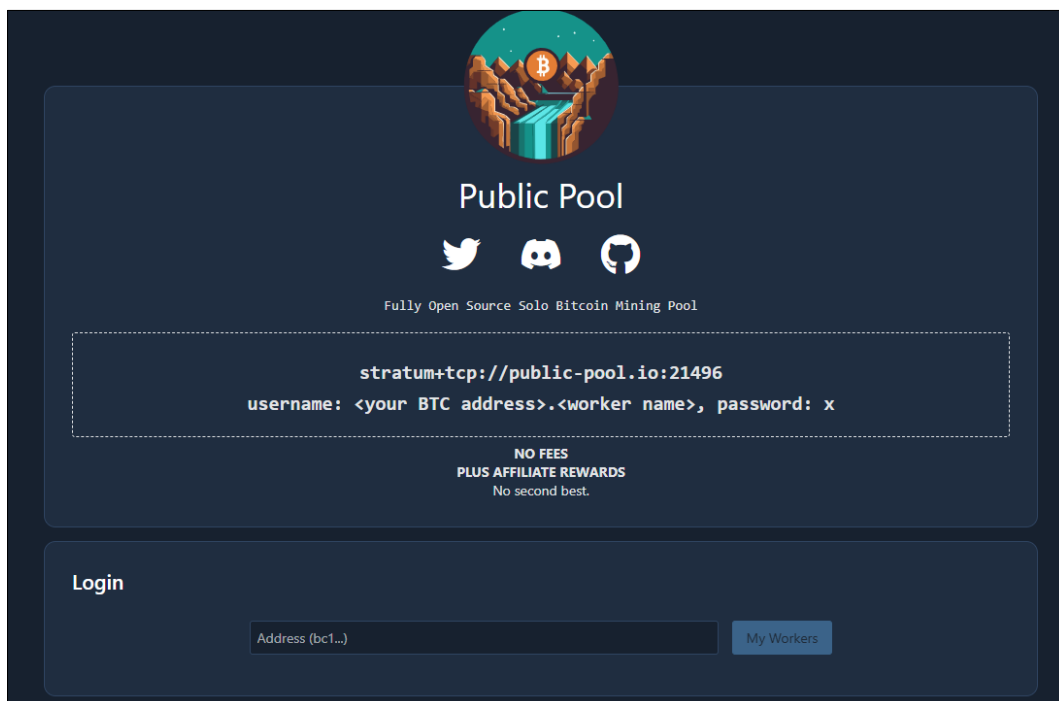

2. Enter BTC receiving address, and click "My Workers".

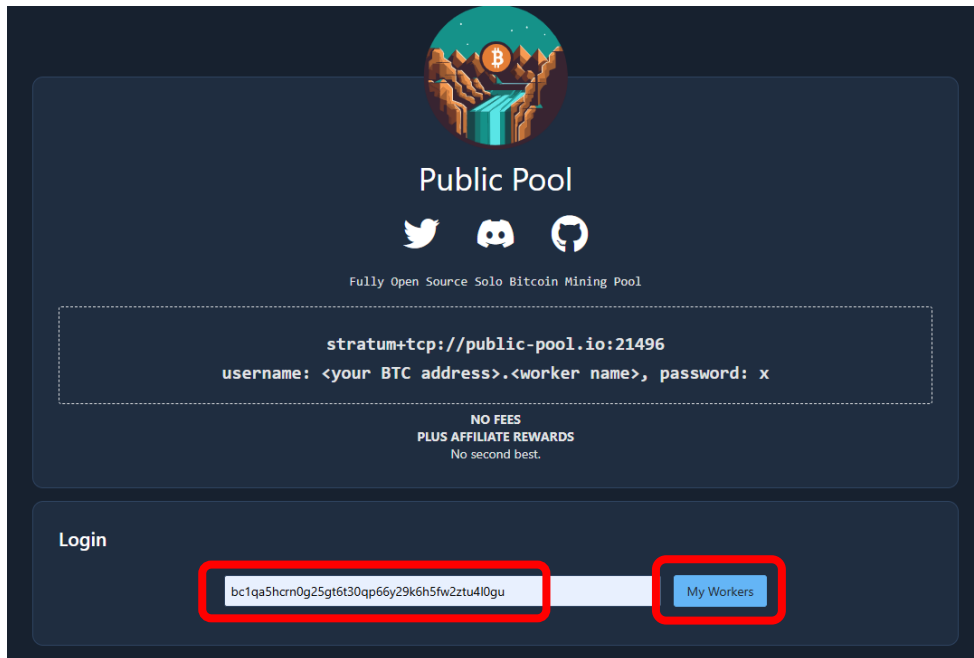

Public Pool

Fully Open Source Solo Bitcoin Mining Pool

stratum+tcp://public-pool.io:21496

username: <your BTC address>.<worker name>, password: x

NO FEES
PLUS AFFILIATE REWARDS
No second best.

Login

bc1qa5hcrn0g25gt6t30qp66y29k6h5fw2ztu4l0gu

My Workers

3. You can view the current working status of the worker.



Please note: This webpage only detects and manages miners currently working in the Public Pool that use your BTC address as the login or payout address. Once the pool is changed, this webpage will no longer be accessible for management.