


AirBox

Quick Start

A standalone indoor air & environment monitor. No app, account, or cloud - it serves its own dashboard on your local network.

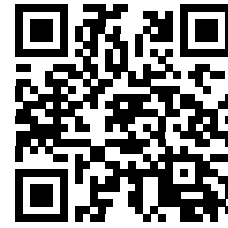

Scan for the full
guide & source

Set it up

- 1 **Power it on.** Plug in USB-C. The screen shows **WiFi Setup**, the network **AirBox-Setup**, and a QR code.
- 2 **Join the device.** On your phone, scan that QR to join the **AirBox-Setup** WiFi (open, no password). A setup page opens automatically. (If not, browse to <http://192.168.4.1>.)
- 3 **Hand it your WiFi.** Pick your **2.4 GHz** network, enter its password, tap **Connect**. The device reboots and joins.
- 4 **Open the dashboard.** On any device on the same WiFi, go to **<http://airbox.local>** (or the IP shown on the screen).

Reading the dashboard

Four live tiles - **Temperature, Humidity, Pressure, Air Quality (IAQ)** - each with a 12-hour trend. IAQ is a 0 to 500 index (lower = cleaner) and needs **24-48 h** to self-calibrate. The **Diagnostics** tab has sensor health, network info, and a **Download CSV** button (last 7 days). The **Settings** tab covers name, units, time zone, screen brightness / night mode.

Good to know

- Firmware updates happen in the browser at **<http://airbox.local/update>** (it asks for the update login provided with your unit).
- Enable **Night Mode** to blank or dim the screen on a schedule; the dashboard still works while the screen is off.

If something seems off

- **Can't reach airbox.local** - use the IP address shown on the device screen.
- **Changing WiFi / moving it** - Settings > Reconfigure WiFi, or hold the internal **BOOT** button ~3 s. (Air-quality calibration is preserved.)
- **Screen shows STALE** - a momentary sensor hiccup; it self-recovers, or power-cycle it.

Full guide, data details & source code: github.com/FrozenSection/airbox