
PollenBot TeleOp

The driver-controlled part of the match. On the Driver Hub pick **PollenBot** (TeleOp list). After autonomous it is already selected for you: just press INIT, then START.

PollenBot TeleOp: during the match

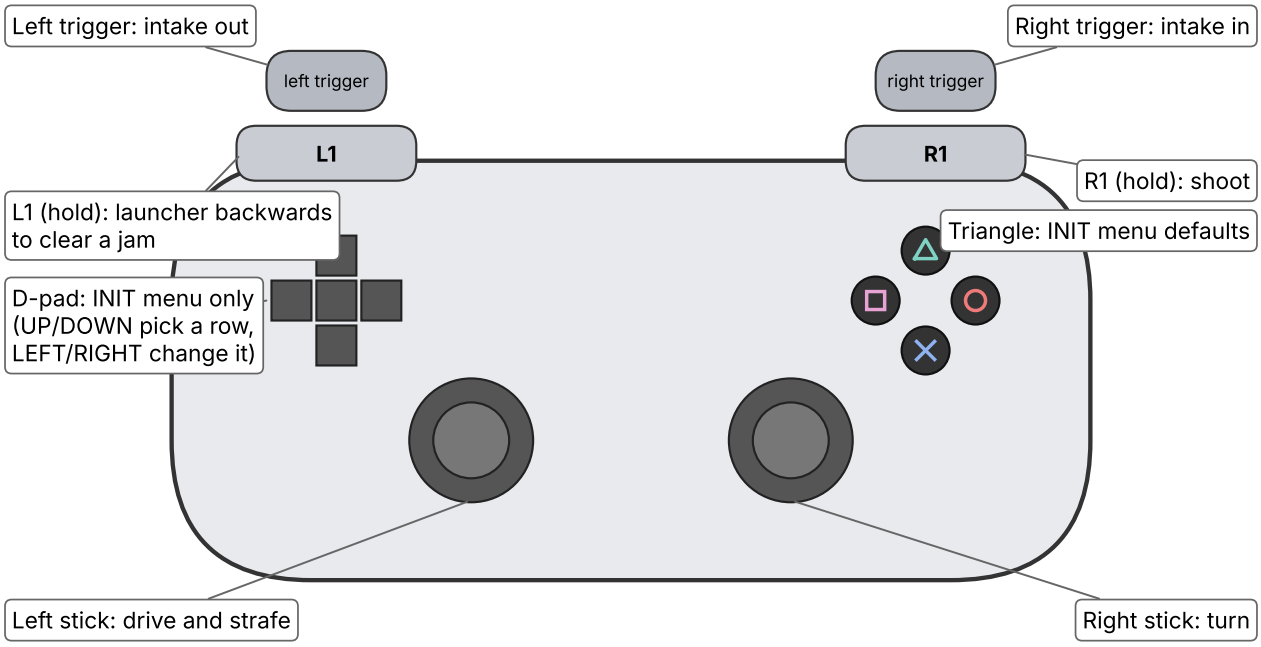

Driving and shooting

Control	What it does
Left stick	Drive forward/back and slide (strafe) left/right
Right stick	Turn
Right trigger	Intake in (squeeze harder = faster)
Left trigger	Intake out (spits pollen back out)
R1, hold	Shoot. The launcher spins up, then feeds by itself and keeps feeding until you let go.
L1, hold	**Unjam:** runs the launcher slowly backwards to push a stuck ball out. While you hold L1 nothing feeds, even if R1 is held too.

Shooting: hold R1 the whole time you want to shoot. Feeding starts as soon as the launcher is up to speed, or after 3 seconds at most. Let go of R1 to stop.

Jammed? Let go of R1. Hold L1 for a second or two. You can also squeeze the left trigger to push balls out of the intake. Let go of L1, then hold R1 to shoot again.

The INIT menu (before START)

You can change four settings before START. Usually leave them alone.

Row	Default	What it changes
Launcher ticks/s	1180	How fast the launcher spins (changes by 20)
Spin-up before feed	3.0 s	Longest wait before feeding starts
Agitator power while feeding	1.00	How hard the agitator pushes balls in
Drive power	100%	Lower it for slower, more careful driving

- **D-pad UP/DOWN:** pick a row (marked `>`). **D-pad LEFT/RIGHT:** change it. Tap and let go.
- **Triangle:** all back to the defaults. The screen says `Settings: DEFAULTS` or `CHANGED - check before START`.
- Settings stay until the robot app restarts, so **check the INIT screen before every match**.
- The screen should show **Build `pollen-odo-v6`**.

What the screen tells you during the match

Feed line says	Meaning
`off (hold R1; L1 = reverse to clear a jam)`	Not shooting
`spinning up`	R1 held, launcher getting up to speed
`FEEDING (started at 1.2 s: up to speed)`	Shooting
`FEEDING (... spin-up timer)` every time	Launcher never gets fully up to speed. Tell a programmer: check the battery and launcher cable.
`REVERSING launcher (L1) - no feed`	Unjamming

`(measured ~0: check launcher encoder cable)` next to the launcher speed means the launcher's encoder cable is loose. Shots will be weak or uneven: tell a programmer after the match.