
This manual describes the software, drivers and notes that must be installed to use the EPCE6/EP4CE10 development board. It is recommended that the user read this manual first when receiving the development board.

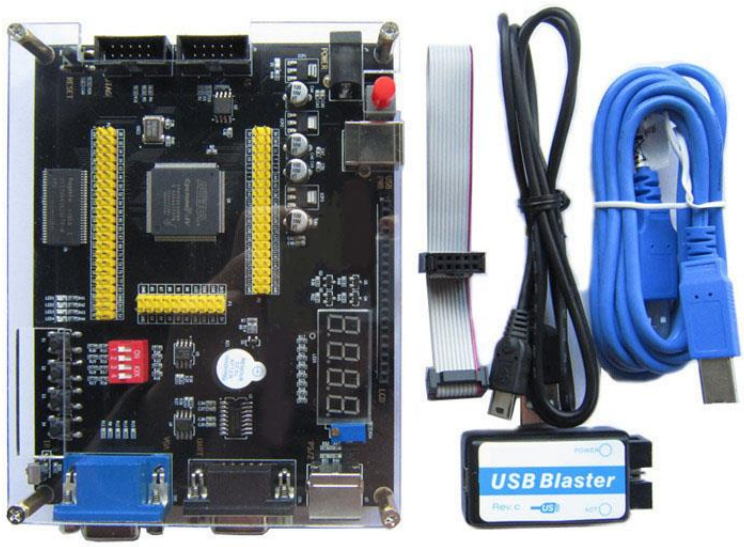


1. Software


1) Install 11.0_quartus_windows.exe first.

First unzip the software installation package to the root directory. It is required that there are no non-English characters in the directory, otherwise the installation will fail.

2) Then install 11.0_devices_windows.exe.

Cyclone IV must be installed, users can choose whether to install other series devices according to their own needs.

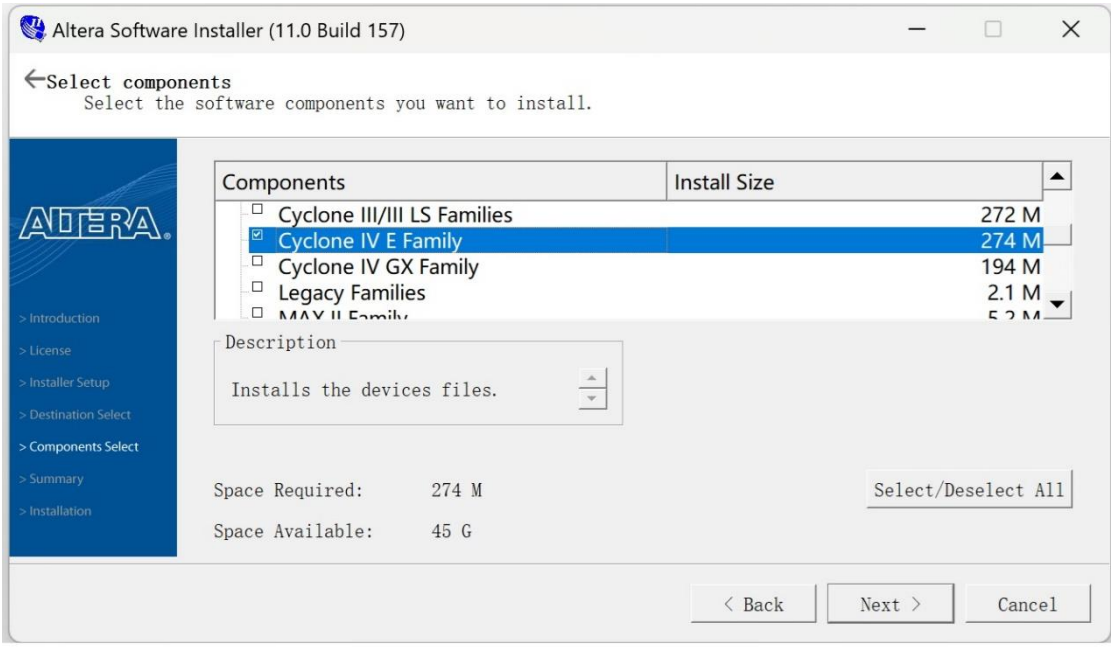

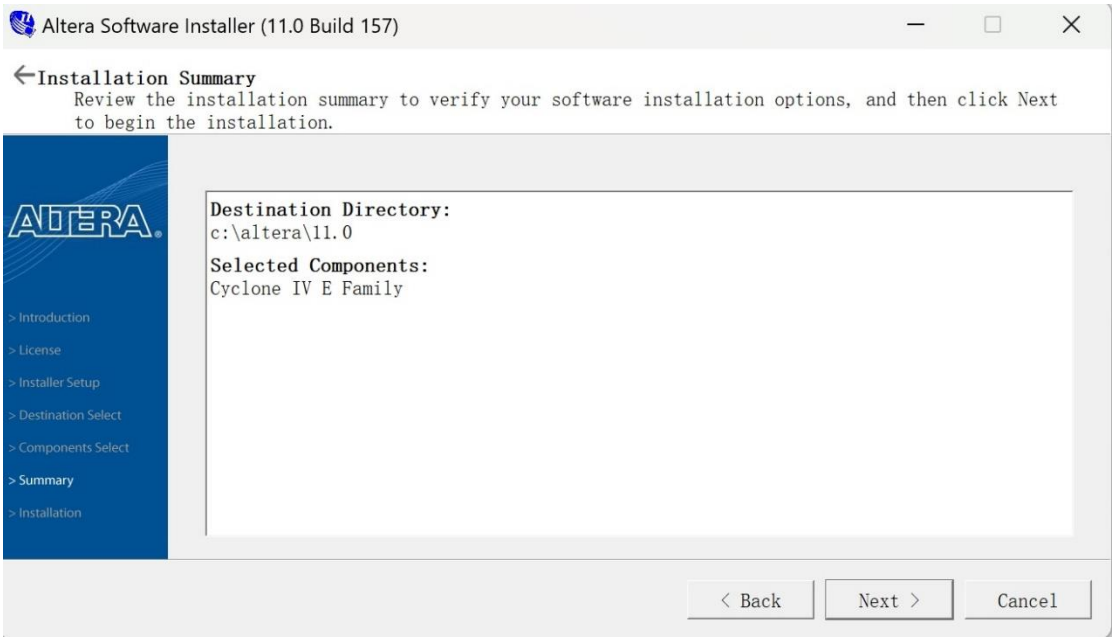


3) Quartus and NIOS software version must be consistent, and installed in the same directory, installation directory do not have spaces.

2. Install USB Blaster Driver

I would recommend using the usb blaster driver for quartus 11.0 or 13.0.
See ‘USB Blaster installation tutorial.pdf’ for installation instructions.

3. Power supply the Development Board

There are two ways to supply power for the development board: USB power supply or 5V power adapter power supply.
1) Press the switch button: USB power supply;
2) Lift the switch button: 5V power adapter power supply.
Usually a USB cable is used to power the development board, and when the power switch is pressed, the board will run the running light program(Factory-installed programme).

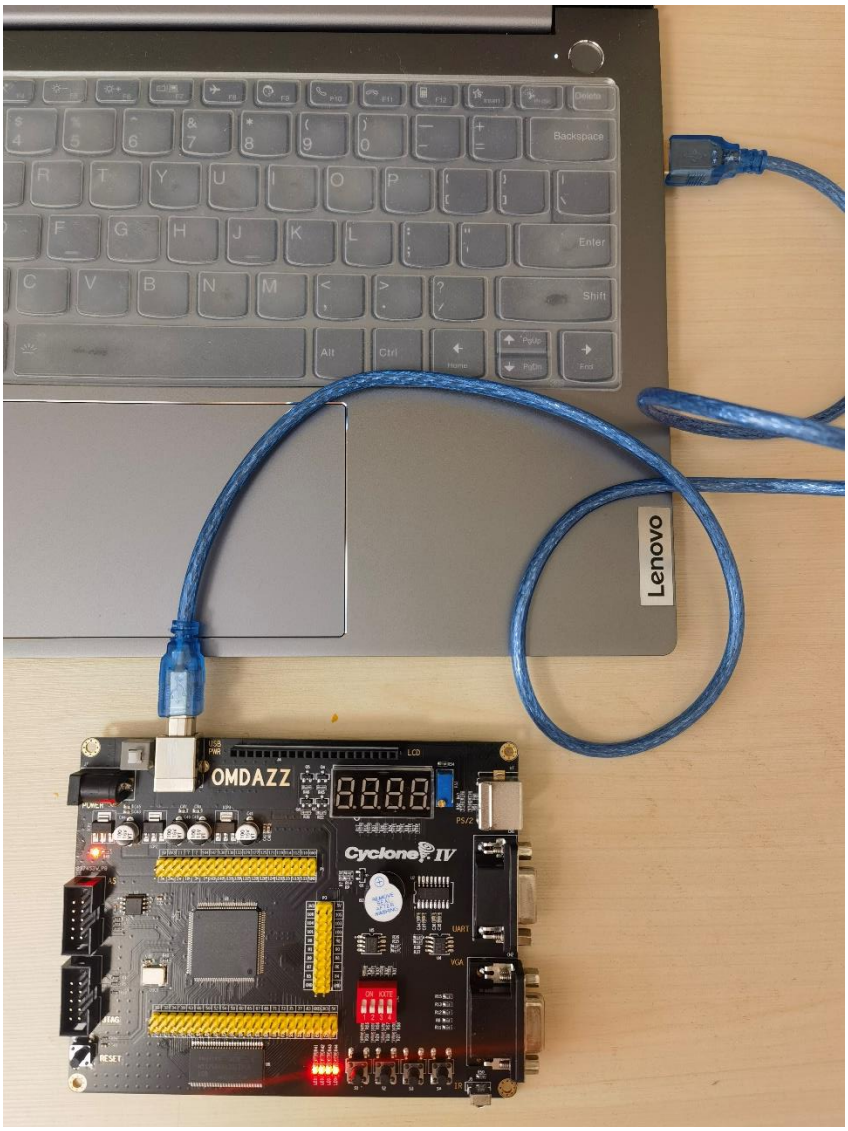

4. AS and JTAG


The development board with AS and JTAG Download Interface, don't pull or plug the JTAG/AS cable in charged state, charged pull or plug the JTAG/AS cable may cause fatal damage to the FPGA chip.
I recommend switching off the power first before unplugging the JTAG cable.


1) AS interface:


First copy the samples program we provided to the root directory. Do not include non-English characters in the path.


Use the AS interface to download the .pof file, the programme will not be lost when the development board is powered off.

The method is as follows:

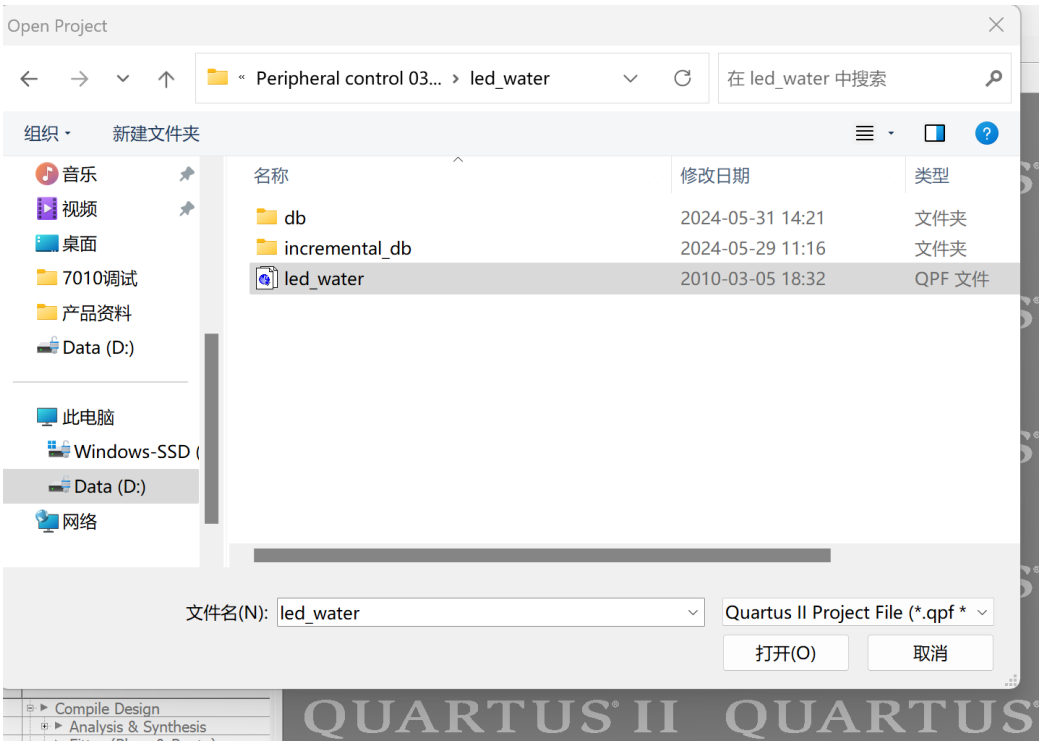

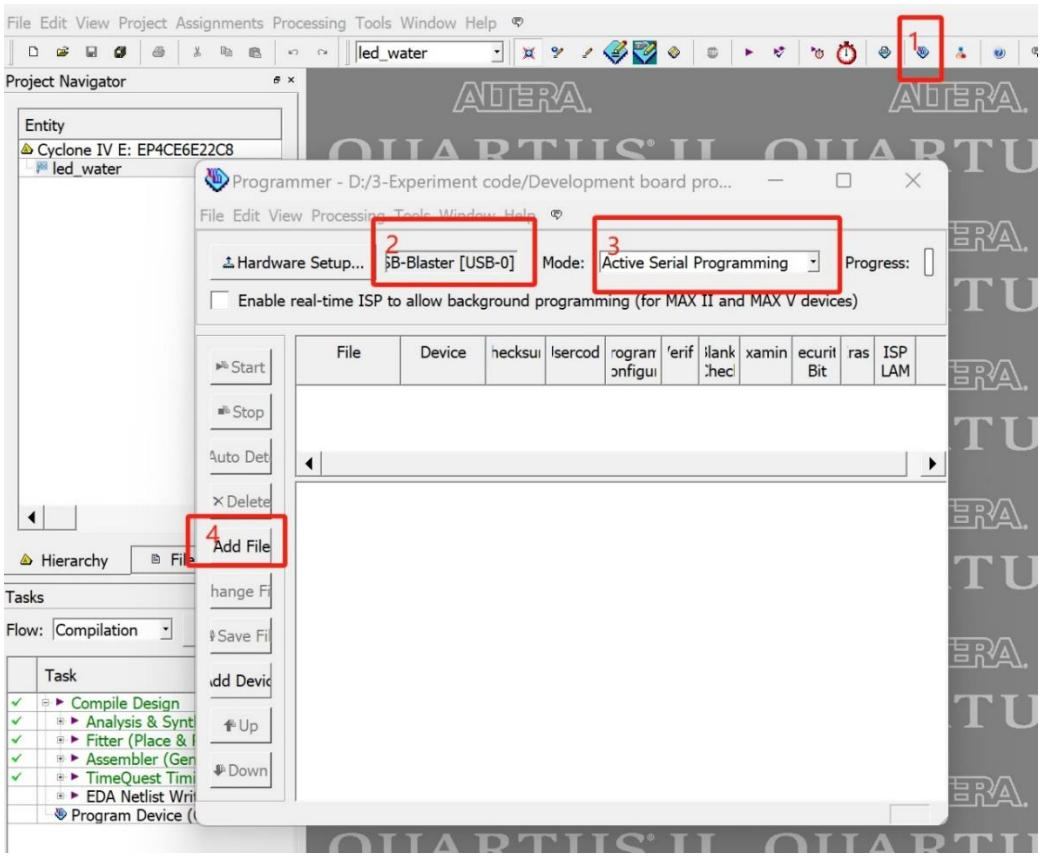

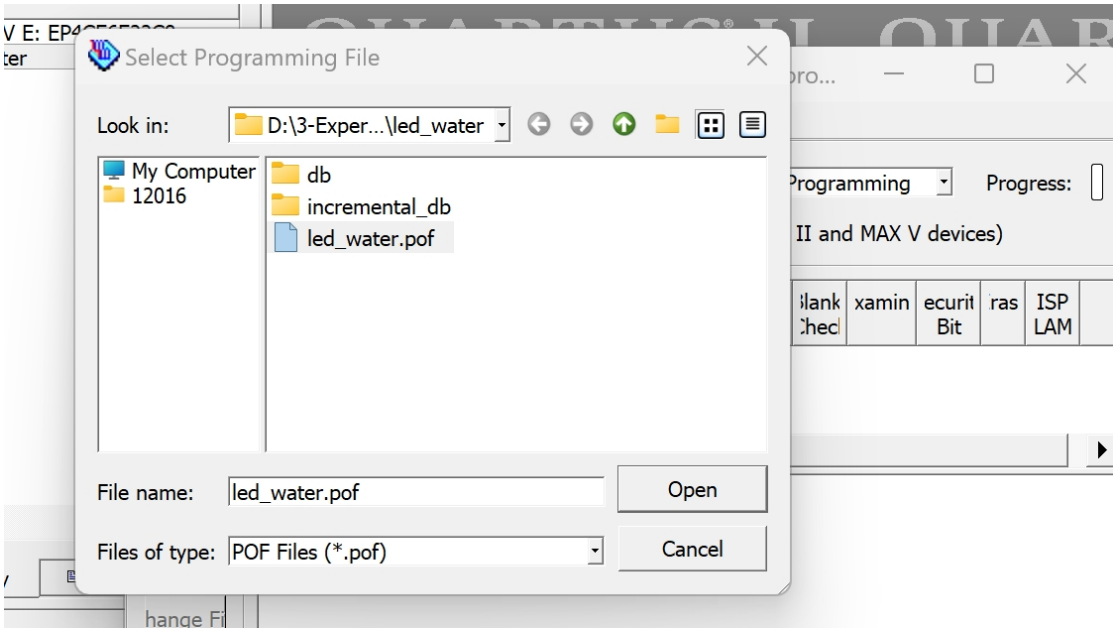


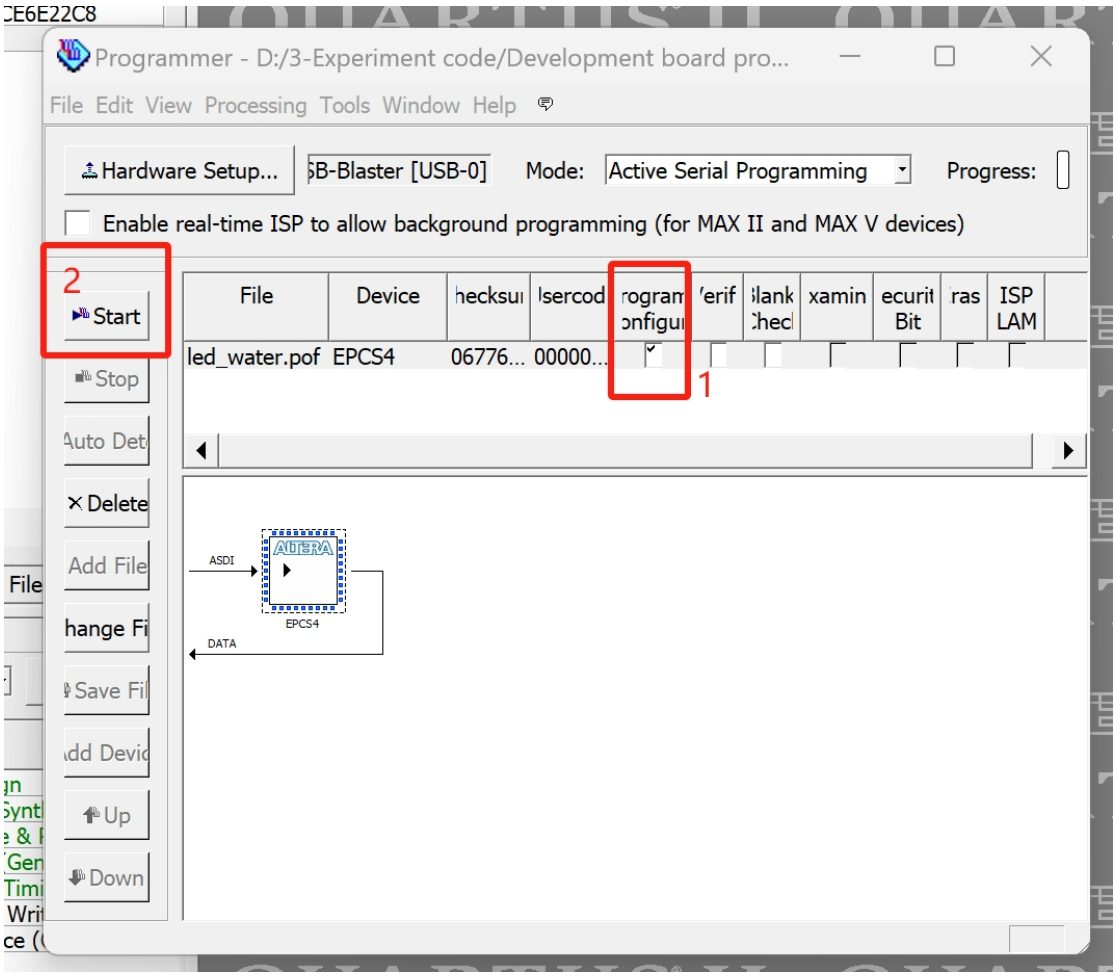

2) JTAG interface

SOF file is downloaded using the JTAG port, the program will be lost after

power-down.

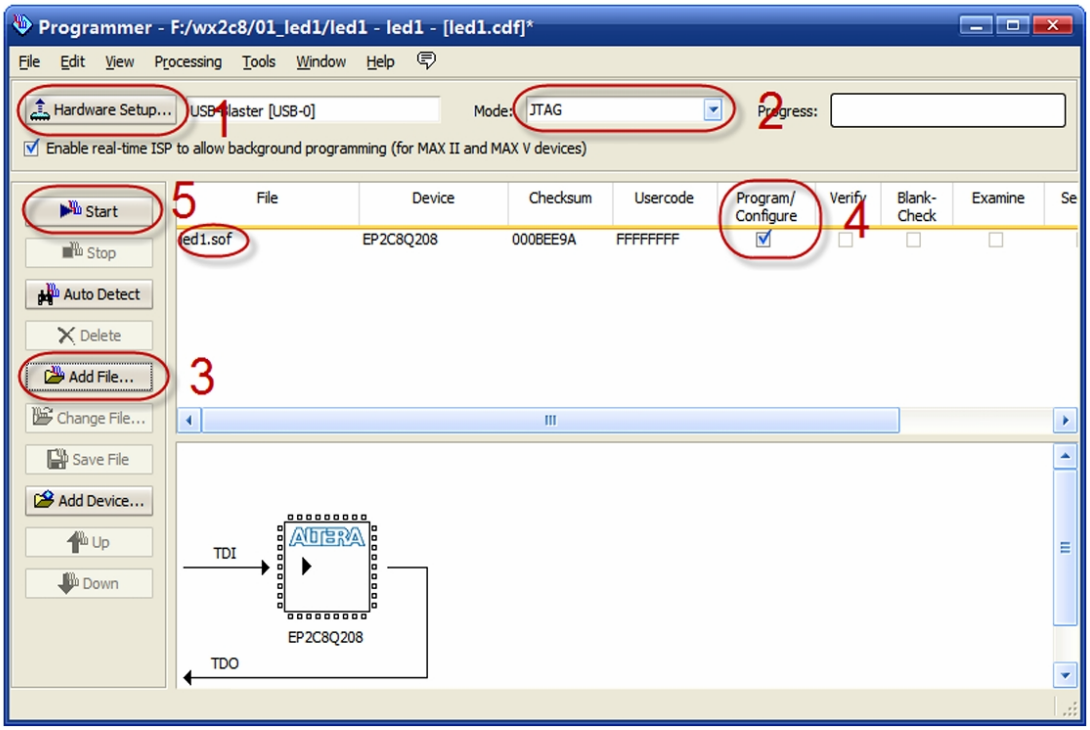
Programmer - F:/wx2c8/01_led1/led1 - led1 - [led1.cdf]*
File Edit View Processing Tools Window Help
Hardware Setup...
USB-Blaster [USB-0]
Mode: JTAG
Progress:
Enable real-time ISP to allow background programming (for MAX II and MAX V devices)
Start
Stop
Auto Detect
Delete
Add File...
Change File...
Save File
Add Device...
Up
Down
1
2
3
4
5
File
Device
Checksum
Usercode
Program/ Configure
Verify
Blank-Check
Examine
led1.sof
EP2C8Q208
000BEE9A
FFFFFFFF
TDI
TDO
EP2C8Q208


USB Blaster
OMDAZZ
Cyclone IV