

This article is a collection of problems that users may encounter while using the EP4CE6 development board. Thank you for your patience.

Q1. Where do I view the pinout information?

1) You can open the Excel “Development board pin information” in the “Schematic” folder to check the PIN information.

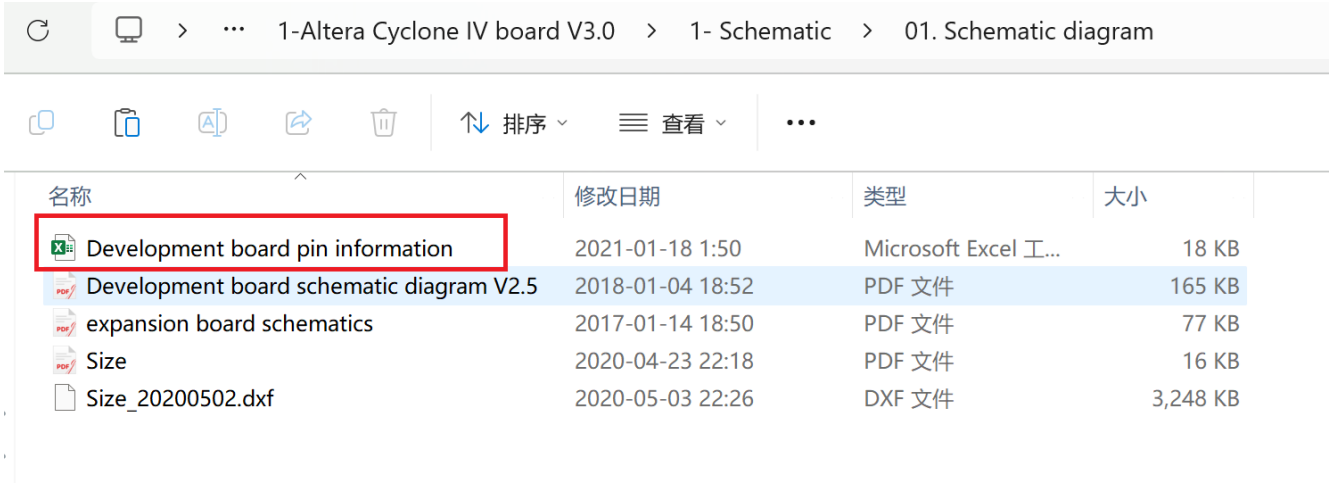

2) You can open a sample program and view the PIN information in the program.

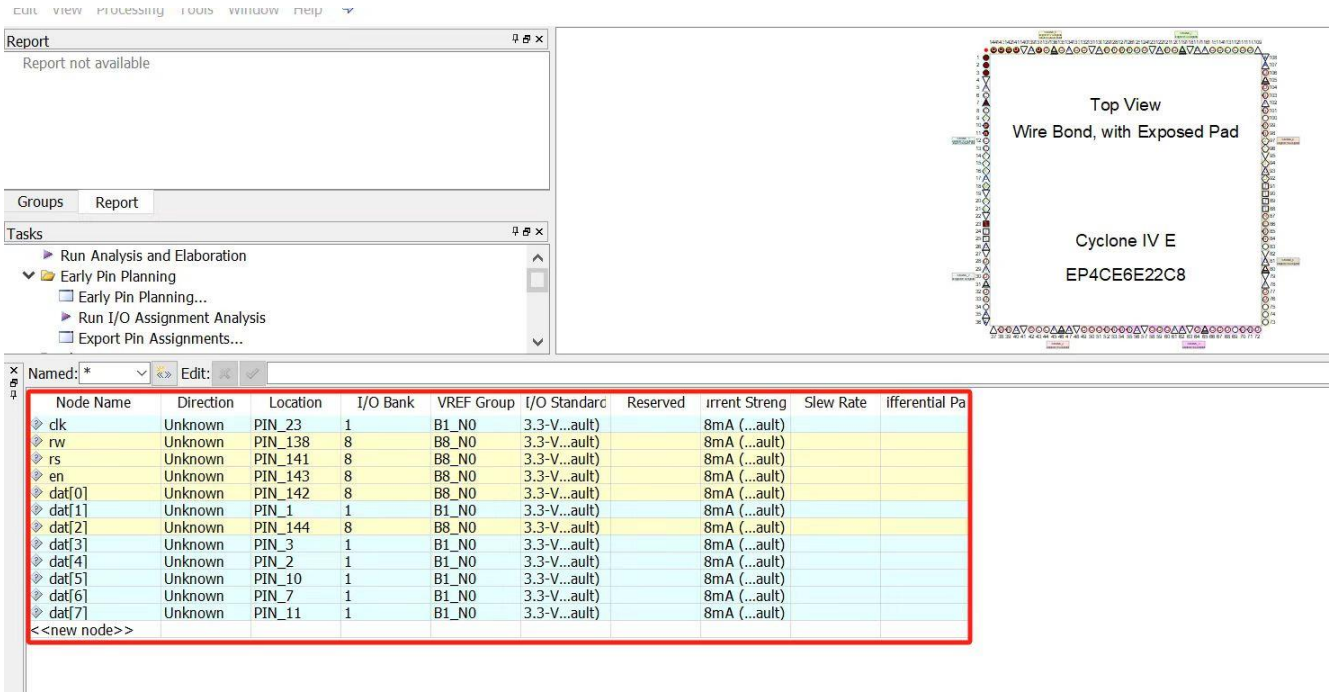

Q2. What software do I need to install before using the board?

1) Install 11.0_quartus_windows.exe first.

First unzip the software installation package to the root directory. It is required that there are no non-English characters in the directory, otherwise the installation will fail.

2) Then install 11.0_devices_windows.exe.

CycloneIV must be installed, users can choose whether to install other series devices according to their own needs.

3) Quartus and NIOS software version must be consistent, and installed in the same directory. The installation path is not allowed to contain spaces.

4) Install USB Blaster Driver.

Q3. Where can I find the drivers for USB Blaster?

After you install the Quartus software, the driver for the usb blaster will appear in the folder "\Quartus\drivers\usb-blaster" in the Quartus installation directory.

Q4. How do I install the USB Blaster driver?


Please follow the manual "USB Blaster installation tutorial".

If you are using Win10 system, you need to disable the forced digital signature function manually first. Because QuartusII software does not provide digital signature for usb blaster driver.

Q5. When using LCD12864 or LCD1602, no characters are visible.

The reason for the problem may be that the LCD backlight is too bright.

Adjusting the LCD backlight by rotating the potentiometer will solve the problem.

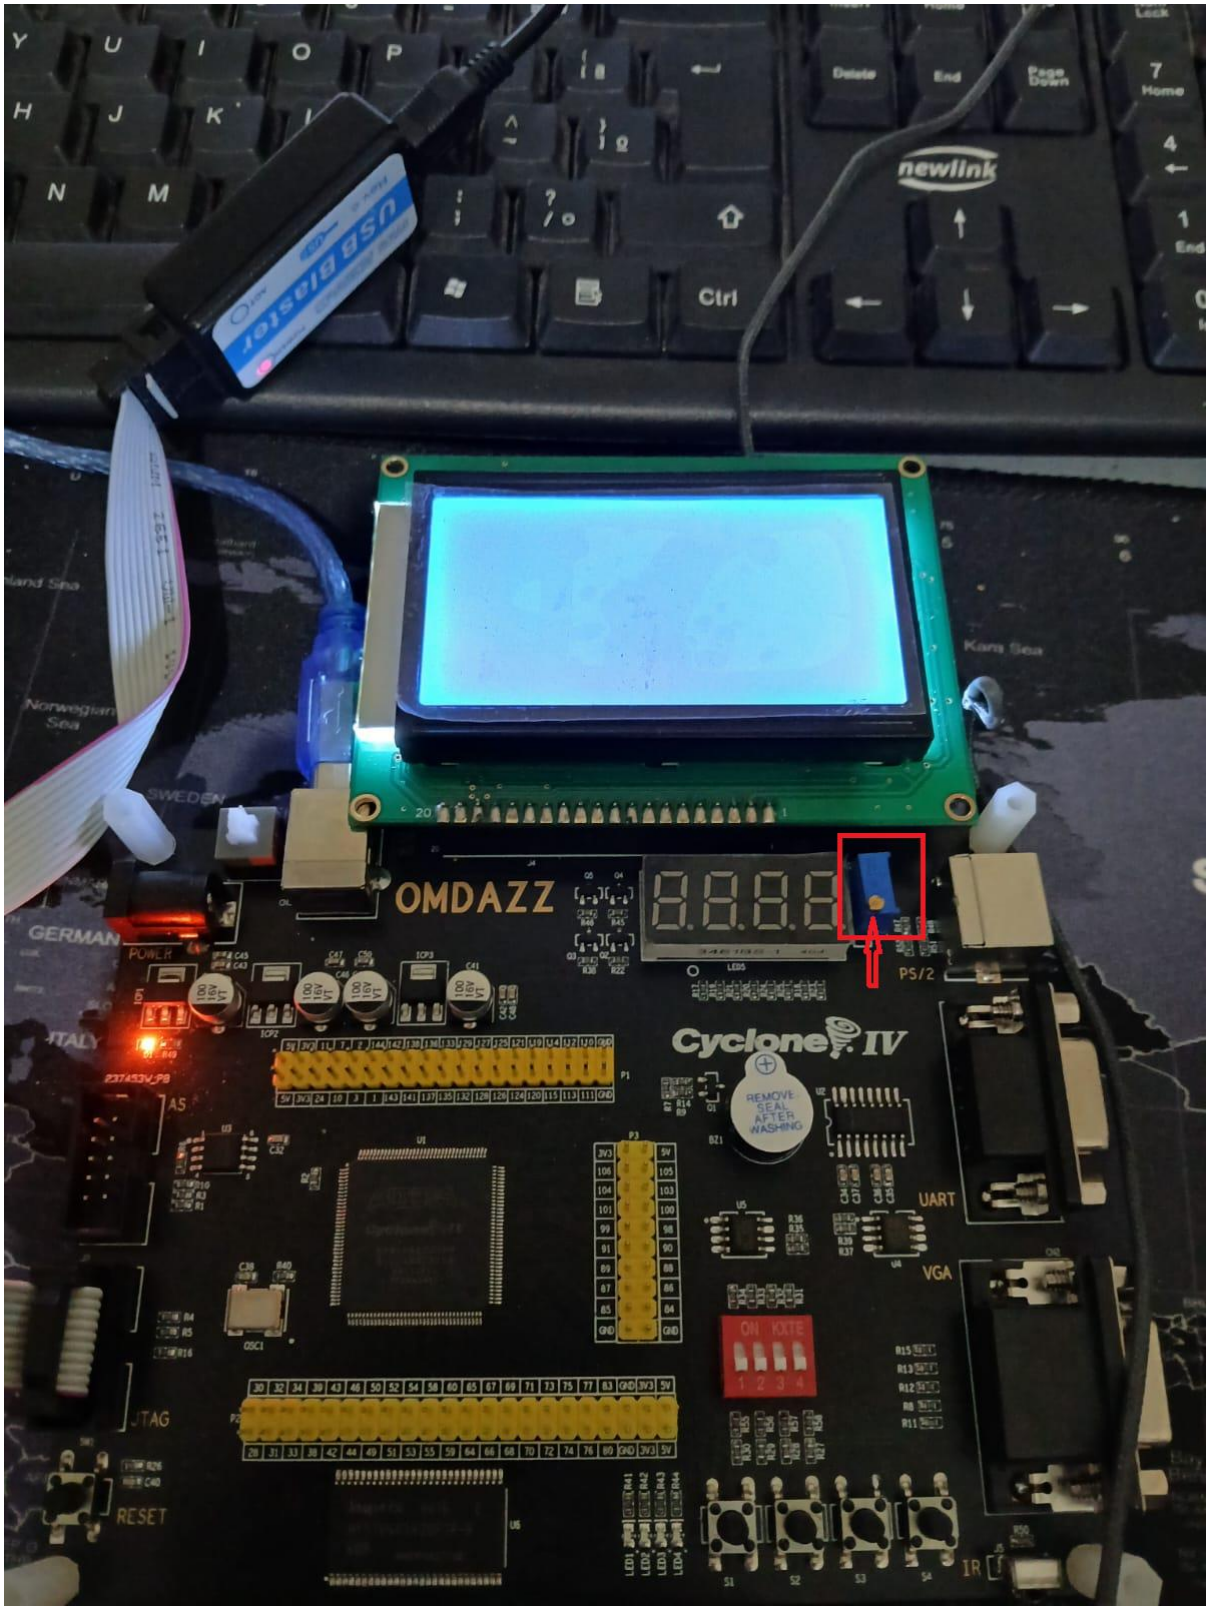
OMDAZZ
Cyclone IV
PS/2
UART
VGA
JTAG
RESET
POWER
REMOVE SEAL AFTER WASHING