




# μEZ emVNC README

*Covers the following products:*

SEGGER emVNC

μEZ

μEZGUIs

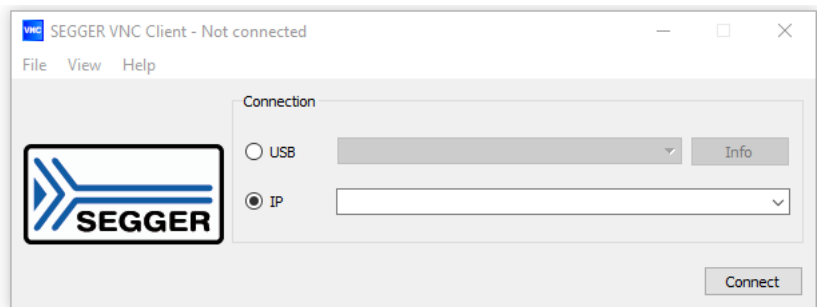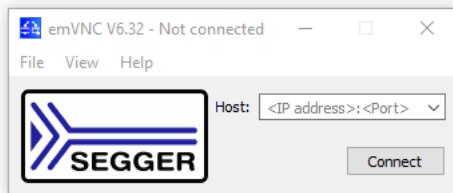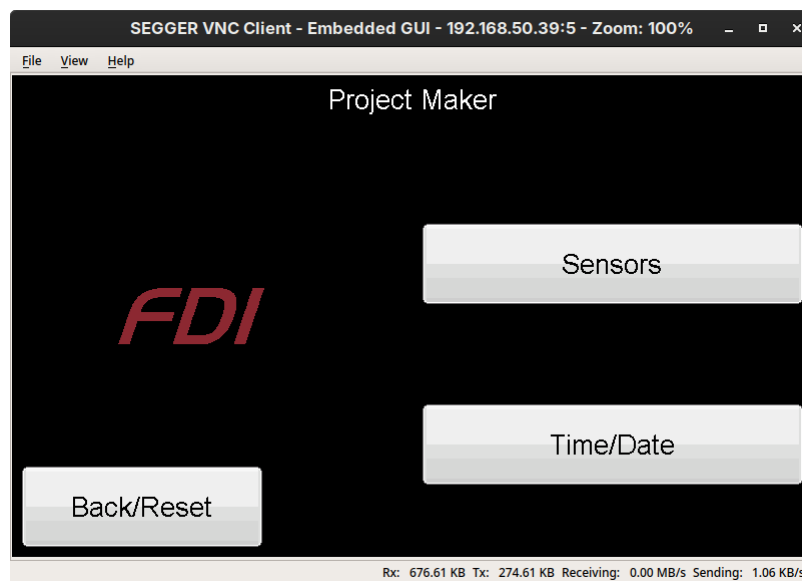

**FDI** *Future Designs, Inc.*  
*Your Development Partner*  
996 A Cleaner Way, Huntsville, AL 35805

Copyright ©2025, Future Designs, Inc., All Rights Reserved

## 1. Introduction

emVNC-Server (Virtual Network Computing) designed for embedded systems, allows the display and operation of an embedded system to be controlled by a client application on another computer through TCP/IP, or any other socket-like transport layer.

## 2. Useful links

Complete documentation is available within the uEZ release, and is also available from the following websites (please refer to the websites for the latest updates):

- emVNC-Server - <https://www.segger.com/user-interface/emvnc/>
- μEZ Source Code and version-matched emWin User's Manual - <https://sourceforge.net/projects/ueZ/>
- Future Designs Support Page - [https://www.teamfdi.com/uezgui\\_software/](https://www.teamfdi.com/uezgui_software/)

## 3. Documentation Folder

In each release of μEZ, there will be an emWin User's manual included, and in this User's Manual there is a chapter describing the VNC feature that is included with SEGGER emWin.

## 4. emVNC μEZ Folder

In each μEZ release, there is a SEGGER directory which contains the PC client executables for the NXP MCUs. In the executables folder, the VNC client is provided by NXP (emVNC.exe), which can be used with any NXP μEZGUIs. The file path to the folder where emVNC.exe is:  
“uEZ/Source/Library/GUI/SEGGER/emWin/Libraries/NXP/UtilityTools/”

## 5. VNC Functions and integration into project maker

Add the following c file to a project maker project: “uEZ/Source/Platform/emWin/emWinVnc.c”  
Enable networking in the project maker, then add the 2 required setup function calls to the project.

```
#define UEZ_ENABLE_TCPIP_STACK    1
```

The current functions implemented into uEZ to access the emWin VNC feature are:

- **setup\_emWin\_VNC\_Context(0);**
  - o This function is called from main and will setup the VNC context. Call this function in the GUI interface task after WindowManager\_Show\_Window() has setup the first window.
- **setup\_emWin\_VNC\_NetworkTask();**
  - o This function is called from NetworkStartup.c and will start the emWin VNC server task.
  - o Call the function after the network join and IP address initialization.

Once the initialization has completed, connect to the uEZGUI using **Host:** uEZGui\_IpAddress:5900

After the connection, the uEZGUI screen will show up in the VNC PC application. Using the mouse the menus of the uEZGUI can be navigated from the PC. Other networking demos and applications can be enabled simultaneously on other port numbers, such as enabling the FTP server on the uEZGUI so that the SD card and/or USB Flash drive files can be accessed from the PC.