



OPENQUAKE

calculate share explore



USER
INSTRUCTIONS



HAZARD
SCIENCE



RISK
SCIENCE

OPENQUAKE ENGINE USER INSTRUCTION MANUAL

Version 1.7.0

Hands-on-instructions on the different types of calculations you can carry out with the OpenQuake Engine software

OpenQuake: calculate, share, explore

The OpenQuake-engine User Instruction Manual

globalquakemodel.org/openquake

Authors

Helen Crowley¹, Damiano Monelli², Marco Pagani¹, Vitor Silva³, Graeme Weatherill³, Anirudh Rao³

¹ GEM Foundation
via Ferrata, 1
20133 Pavia
Italy

² GEM Model Facility
SED - ETHZ
Sonneggstrasse, 5
CH-8092 Zurich
Switzerland

³ GEM Model Facility
via Ferrata, 1
20133 Pavia
Italy

Email address for all the authors:

<name.surname>@globalquakemodel.org

Citation

Please cite this document as:

Crowley, H., Monelli, D., Pagani, M., Silva, V., Weatherill, G., and Rao, A. (2015). The OpenQuake-engine User Manual. *Global Earthquake Model (GEM) Technical Report 2015-12*. doi: 10.13117/GEM.OPENQUAKE.MAN.ENGINE.1.7/01, 180 pages.

Disclaimer

The OpenQuake-engine User Manual is distributed in the hope that it will be useful, but without any warranty: without even the implied warranty of merchantability or fitness for a particular purpose. While every precaution has been taken in the preparation of this document, in no event shall the authors of the Manual and the GEM Foundation be liable to any party for direct, indirect, special, incidental, or consequential damages, including lost profits, arising out of the use of information contained in this document or from the use of programs and source code that may accompany it, even if the authors and GEM Foundation have been advised of the possibility of such damage. The Manual provided hereunder is on as “as is” basis, and the authors and GEM Foundation have no obligations to provide maintenance, support, updates, enhancements, or modifications.

License

This Manual is distributed under the Creative Commons License Attribution- NonCommercial- ShareAlike 4.0 International ([CC BY-NC-SA 4.0](#)). You can download this Manual and share it with others as long as you provide proper credit, but you cannot change it in any way or use it commercially.

Contents

Preface	11
I Introduction	13
1 OpenQuake-engine Background	15
1.1 Running the OpenQuake-engine	15
1.2 Concurrent Computing with OpenQuake	18
II Hazard	21
2 Introduction to the Hazard Module	23
2.1 Source typologies	23
2.1.1 Source typologies for modelling distributed seismicity	24
2.1.1.1 <i>Point sources</i>	24
2.1.1.2 <i>Grid sources</i>	26
2.1.1.3 <i>Area sources</i>	27
2.1.2 Fault sources with floating ruptures	28
2.1.2.1 <i>Simple faults</i>	29
2.1.2.2 <i>Complex faults</i>	31
2.1.3 Fault sources without floating ruptures	33
2.1.3.1 <i>Characteristic faults</i>	33
2.2 Magnitude-frequency distributions	33
2.3 Magnitude-scaling relationships	36
2.3.1 Relationships for shallow earthquakes in active tectonic regions	36
2.4 Calculation workflows	36
2.4.1 Classical Probabilistic Seismic Hazard Analysis	36
2.4.2 Event-Based Probabilistic Seismic Hazard Analysis	37

2.4.3	Scenario based Seismic Hazard Analysis	37
3	Using the Hazard Module	39
3.1	Defining Logic Trees	39
3.1.1	Logic trees as described in the nrml schema	41
3.2	The Seismic Source System	45
3.2.1	The Seismic Source Logic Tree	45
3.2.2	The Seismic Source Model	47
3.3	The Ground Motion System	48
3.3.1	The Ground Motion Logic Tree	48
3.4	Configuration file	49
3.4.1	Classical PSHA	49
3.4.2	Seismic hazard disaggregation	52
3.4.3	Event based PSHA	53
4	Hazard Calculations and Results	55
4.1	Running OpenQuake-engine for hazard calculations	55
4.2	Exporting results from a hazard calculation	56
4.3	Description of hazard outputs	57
4.3.1	Outputs from Classical PSHA	57
4.3.2	Outputs from Hazard Disaggregation	59
4.3.3	Outputs from Event Based PSHA	61
5	Demonstrative Examples	65
5.1	Classical PSHA Demos	65
5.1.1	Classical PSHA with different source typologies	66
5.1.2	Classical PSHA with non trivial logic trees	70
5.2	Hazard Disaggregation Demos	77
5.3	Event Based PSHA Demos	78

III	Risk	83
6	Introduction to the Risk Module	85
6.1	Scenario Damage Assessment	86
6.2	Scenario Risk Assessment	87
6.3	Classical Probabilistic Seismic Damage Analysis	88
6.4	Classical Probabilistic Seismic Risk Analysis	89
6.5	Stochastic Event Based Probabilistic Seismic Risk Analysis	90
6.6	Retrofit Benefit-Cost Ratio Analysis	92
7	Risk Input Models	93
7.1	Exposure Models	93
7.2	Fragility Models	105
7.3	Consequence Models	110
7.4	Vulnerability Models	112
8	Using the Risk Module	117
8.1	Scenario Damage Calculator	118
8.2	Scenario Risk Calculator	128
8.3	Classical Probabilistic Seismic Damage Calculator	131
8.4	Classical Probabilistic Seismic Risk Calculator	133
8.5	Stochastic Event Based Probabilistic Seismic Risk Calculator	138
8.6	Retrofit Benefit-Cost Ratio Calculator	141
8.7	Exporting Risk Results	143

9	Risk Results	145
9.1	Scenario Damage Outputs	145
9.1.1	Scenario damage statistics	146
9.1.1.1	<i>Asset damage statistics</i>	146
9.1.1.2	<i>Taxonomy damage statistics</i>	148
9.1.1.3	<i>Total damage statistics</i>	150
9.1.2	Scenario collapse maps	150
9.1.3	Scenario consequence statistics	151
9.1.3.1	<i>Asset consequence statistics</i>	151
9.1.3.2	<i>Taxonomy consequence statistics</i>	152
9.1.3.3	<i>Total consequence statistics</i>	152
9.2	Scenario Risk Outputs	152
9.2.1	Scenario loss statistics	153
9.2.1.1	<i>Total loss statistics</i>	153
9.2.2	Scenario loss maps	153
9.3	Probabilistic Damage Outputs	155
9.3.1	Probabilistic damage distribution	155
9.4	Probabilistic Risk Outputs	155
9.4.1	Loss exceedance curves	155
9.4.2	Probabilistic loss maps	156
9.4.3	Stochastic event loss tables	158
9.5	Benefit-Cost Ratio Outputs	159
9.5.1	Retrofitting Benefit/cost ratio maps	159
10	Demonstrative Examples	161
10.1	Scenario Damage Demos	162
10.2	Scenario Risk Demos	163
10.3	Classical Probabilistic Seismic Damage Demos	164
10.4	Classical Probabilistic Seismic Risk Demos	164

10.5	Event Based Probabilistic Seismic Risk Demos	165
10.6	Retrofit Benefit-Cost Ratio Demos	166
Appendices		167
A	Ground Shaking Intensity Models	169
A.1	GMPEs for shallow earthquakes in active tectonic regions	169
A.2	GMPEs for subduction sources	170
A.3	GMPEs for stable continental regions	171
	Bibliography	173
	Index	177
	Glossary	179

Preface

The goal of this manual is to provide a comprehensive and transparent description of the features of the OpenQuake-engine (v1.7). This manual is designed to be readable by someone with basic understanding of Probabilistic Seismic Hazard and Risk Analysis, but no previous knowledge of the OpenQuake- engine is assumed.

The OpenQuake-engine is an effort promoted and actively developed by the Global Earthquake Model, a public-private partnership initiated by the Global Science Forum of the Organisation for Economic Co-operation and Development (OECD)¹.

The OpenQuake-engine is the result of an effort carried out jointly by the Information Technology and Scientific teams working at the GEM Secretariat. It is freely distributed under an Afferro GPL license (<http://www.gnu.org/licenses/agpl-3.0.html>).

¹A short description of the process promoted by OECD is available here:
<http://www.oecd.org/science/sci-tech/theglobalearthquakemodellgem.htm>

Part I

Introduction

1. OpenQuake-engine Background

OpenQuake-engine (oq-engine) is the seismic hazard and risk calculation software developed by the Global Earthquake Model. By following current standards in software developments like test-driven development and continuous integration, OpenQuake-engine aims at becoming an open, and community-driven tool for seismic hazard and risk analysis.

The source code of the OpenQuake-engine is available on a public web-based repository at the following address:

<http://github.com/gem/oq-engine>.

1.1 Running the OpenQuake-engine

An oq-engine analysis is launched from the command line of a terminal.

A schematic list of the options that can be used for the execution of the oq-engine can be obtained with the following command:

```
user@ubuntu:~\$ oq-engine --help
```

The result is the following:

```
usage: oq-engine [--help]
                  [--version]
                  [--log-file LOG_FILE]
                  [--log-level {debug,info,progress,warn,error,critical}]
                  [--no-distribute]
                  [--run CONFIG_FILE]
                  [--list-inputs INPUT_TYPE]
                  [--yes]
                  [--config-file CONFIG_FILE]
                  [--make-html-report YYYY-MM-DD|today]
                  [--lite]
                  [--upgrade-db]
```

```

[--version-db]
[--what-if-I-upgrade]
[--run-hazard CONFIG_FILE]
[--list-hazard-calculations]
[--delete-hazard-calculation HAZARD_CALCULATION_ID]
[--delete-uncompleted-calculations]
[--run-risk CONFIG_FILE]
[--hazard-output-id HAZARD_OUTPUT]
[--hazard-calculation-id HAZARD_CALCULATION_ID]
[--list-risk-calculations]
[--delete-risk-calculation RISK_CALCULATION_ID]
[--list-outputs CALCULATION_ID]
[--show-view CALCULATION_ID VIEW_NAME]
[--list-hazard-outputs CALCULATION_ID]
[--list-risk-outputs CALCULATION_ID]
[--exports EXPORT_FORMATS]
[--export-output OUTPUT_ID TARGET_DIR]
[--export-hazard-output OUTPUT_ID TARGET_DIR]
[--export-risk-output OUTPUT_ID TARGET_DIR]
[--export-outputs CALCULATION_ID TARGET_DIR]
[--export-stats CALCULATION_ID TARGET_DIR OUTPUT_TYPE]
[--export-hazard-outputs HAZARD_CALCULATION_ID TARGET_DIR]
[--export-risk-outputs RISK_CALCULATION_ID TARGET_DIR]
[--save-hazard-calculation HAZARD_CALCULATION_ID DUMP_DIR]
[--load-hazard-calculation DUMP_DIR]
[--load-curve CURVE_FILE]
[--list-imported-outputs]

```

OpenQuake Seismic Hazard and Risk Analysis Engine

optional arguments:

-h, --help show this help message and exit

General:

--version	Display version information
--log-file, -L LOG_FILE	Location to store log messages; if not specified, log messages will be printed to the console (to stderr)
--log-level, -l {debug,info,progress,warn,error,critical}	Defaults to "info"
--no-distribute, --nd	Disable calculation task distribution and run the computation in a single process. This is intended for use in debugging and profiling.
--run CONFIG_FILE	Run a job with the specified configuration file; you can also pass a comma-separated pair of files for hazard and risk
--list-inputs, --li INPUT_TYPE	List inputs of a specific input type

```
--yes, -y          Automatically answer "yes" when asked to confirm an
                  action
--config-file CONFIG_FILE
                  Custom openquake.cfg file, to override default
                  configurations
--make-html-report, -r YYYY-MM-DD|today
                  Build an HTML report of the computation at the given
                  date
--lite             Use lite version of the calculator, if possible

Database:
--upgrade-db       Upgrade the openquake database
--version-db        Show the current version of the openquake database
--what-if-I-upgrade Show what will happen to the openquake database if you
                     upgrade

Hazard:
--run-hazard, --rh CONFIG_FILE
                  Run a hazard job with the specified config file
--list-hazard-calculations, --lhc
                  List hazard calculation information
--delete-hazard-calculation, --dhc HAZARD_CALCULATION_ID
                  Delete a hazard calculation and all associated outputs
--delete-uncompleted-calculations, --duc
                  Delete all the uncompleted calculations

Risk:
--run-risk, --rr CONFIG_FILE
                  Run a risk job with the specified config file
--hazard-output-id, --ho HAZARD_OUTPUT
                  Use the desired hazard output as input for the risk
                  job
--hazard-calculation-id, --hc HAZARD_CALCULATION_ID
                  Use the desired hazard job as input for the risk job
--list-risk-calculations, --lrc
                  List risk calculation information
--delete-risk-calculation, --drc RISK_CALCULATION_ID
                  Delete a risk calculation and all associated outputs

Export:
--list-outputs, --lo CALCULATION_ID
                  List outputs for the specified calculation
--show-view, --sv CALCULATION_ID VIEW_NAME
                  Show a view of the specified calculation
--list-hazard-outputs, --lho CALCULATION_ID
                  List outputs for the specified calculation
                  [deprecated]
--list-risk-outputs, --lro CALCULATION_ID
                  List outputs for the specified calculation
```

```

        [deprecated]
--exports EXPORT_FORMATS
    Comma-separated string specifying the export formats,
    in order of priority
--export-output, --eo OUTPUT_ID TARGET_DIR
    Export the desired output to the specified directory
--export-hazard-output, --eh OUTPUT_ID TARGET_DIR
    Export the output to the specified directory
    [deprecated]
--export-risk-output, --er OUTPUT_ID TARGET_DIR
    Export the output to the specified directory
    [deprecated]
--export-outputs, --eos CALCULATION_ID TARGET_DIR
    Export all the calculation outputs to the specified
    directory
--export-stats, --es CALCULATION_ID TARGET_DIR OUTPUT_TYPE
    Export the statistical outputs to the specified
    directory
--export-hazard-outputs, --eho HAZARD_CALCULATION_ID TARGET_DIR
    Export all the outputs to the specified directory
    [deprecated]
--export-risk-outputs, --ero RISK_CALCULATION_ID TARGET_DIR
    Export all the outputs to the specified directory
    [deprecated]

Save/Load:
--save-hazard-calculation, --shc HAZARD_CALCULATION_ID DUMP_DIR
    Save a hazard calculation to a new created directory
--load-hazard-calculation DUMP_DIR
    Load a hazard calculation from a saved import. Only
    SES outputs currently supported.

Import:
--load-curve CURVE_FILE
    Load hazard curves from an XML file
--list-imported-outputs
    List outputs which were imported from a file, not
    calculated from a job

```

1.2 Concurrent Computing with OpenQuake

The OpenQuake-engine supports concurrent computing on both standalone computers and computer clusters.

The OpenQuake-engine works by splitting a computation into a number of tasks which are then processed in parallel. The user has the ability to control the splitting procedure, at least to a certain extent, by setting the parameter ‘concurrent_tasks’ in the job.ini file. The engine will try to produce a number of tasks close to ‘concurrent_tasks’: it could be more, it

could be less. The details of the algorithm used can change depending on the release of the engine and this is why they are not documented here. Instead, we will document how you can set the parameter to a sensible value.

For instance, suppose you have a standard PC with an i7 processor with 8 hyperthreaded cores, i.e. 4 real cores. You could set:

```
concurrent_tasks = 16
```

and then each hyperthreaded core would process around 2 tasks, which is a reasonable value. If your computation consumes a lot of memory, you could increase ‘concurrent_tasks’, thus producing more tasks of smaller size, requiring less memory.

If you don’t set the parameter, a default value is used. Currently the default is set to 8 times the number of cores in your controller machine. This default value for ‘concurrent_tasks’ is likely to change in the future and you should not rely on it if you are using a computer cluster. If you are not using a cluster, the default value should be a reasonable choice.

Now, suppose you have have a cluster with a controller node and 10 workers, each of which has 8 hyperthreaded cores, making for 80 cores in total. In this scenario you could set:

```
concurrent_tasks = 160
```

If you did not set the parameter, the default (assuming 8 cores on the controller machine) would be $8 * 8 = 64$ tasks, which is not enough. The number of available cores on the workers is 80, so 16 cores will remain unused. Our suggestion is to provide a value:

```
concurrent_tasks = 2 * number of (hyperthread) cores in the workers
```

or more, if the computation has memory issues. With more tasks, less memory is used, but more data is transferred and the computation becomes slower.

If ‘concurrent_tasks’ is set to zero, the parallelization is disabled and the job is executed by using a single core. This is useful when debugging errors.

Part II

Hazard

Source typologies

Source typologies for modelling distributed seismicity

Fault sources with floating ruptures

Fault sources without floating ruptures

Magnitude-frequency distributions

Magnitude-scaling relationships

Relationships for shallow earthquakes in active tectonic regions

Calculation workflows

Classical Probabilistic Seismic Hazard Analysis

Event-Based Probabilistic Seismic Hazard Analysis

Scenario based Seismic Hazard Analysis

2. Introduction to the Hazard Module

The hazard component of the OpenQuake-engine builds on top of the OpenQuake hazard library (`oq-hazardlib`), a Python-based library containing tools for PSHA calculations.

The web repository of this library is available at the following address:

<http://github.com/gem/oq-hazardlib>.

In this section we briefly illustrate the main properties of the hazard component of the OpenQuake-engine. In particular, we will describe the main typologies of sources supported and the main calculation workflows available.

2.1 Source typologies

An oq-engine seismic source input model contains a list of sources belonging to a finite set of possible typologies. Each source type is defined by a set of parameters - called source data - which are used to specify the source geometry and the properties of seismicity occurrence.

Currently the oq-engine supports the following source types:

- Sources for modelling distributed seismicity:
 - Point source - The elemental source type used to model distributed seismicity. Grid and area sources (described below) are different containers of point sources.
 - Area source - So far, the most frequently adopted source type in national and regional PSHA models.
 - Grid source - A replacement for area sources admitting spatially variable seismicity occurrence properties.
- Fault sources with floating ruptures:
 - Simple fault source - The simplest fault model in the OpenQuake-engine. This source is habitually used to describe shallow seismogenic faults.
 - Complex fault source - Often used to model subduction interface sources with a complex geometry.

- Fault sources with ruptures always covering the entire fault :
 - Characteristic fault source - A typology of source where ruptures always fill the entire fault surface.

The OpenQuake-engine contains some basic assumptions for the definition of these source typologies:

- In the case of area and fault sources, the seismicity is homogeneously distributed over the source;
- Seismicity temporal occurrence follows a Poissonian model.

2.1.1 Source typologies for modelling distributed seismicity

2.1.1.1 Point sources



Figure 2.1 – Single rupture

The point source is the elemental source type adopted in the OpenQuake-engine for modelling distributed seismicity. The OpenQuake-engine always performs calculations considering finite ruptures, even in the case of point sources.

These are the basic assumptions used to generate ruptures with point sources:

- Ruptures have a rectangular shape
- Rupture hypocenter is located in the middle of the rupture
- Ruptures are limited at the top and at the bottom by two planes parallel to the topographic surface and placed at two characteristic depths named upper and lower seismogenic depths, respectively (see Figure 2.1)

Source data

For the definition of a point source the following parameters are required (Figure 2.1 shows some of the parameters described below, together with an example of the surface of a generated rupture):

- The coordinates of the point (i.e. longitude and latitude) [decimal degrees]
- The upper and lower seismogenic depths [km]
- One magnitude-frequency distribution

- One magnitude-scaling relationship
- The rupture aspect ratio
- A distribution of nodal planes i.e. one (or several) instances of the following set of parameters:
 - strike [degrees]
 - dip [degrees]
 - rake [degrees]
- A magnitude independent depth distribution of hypocenters [km].

Figure 2.2 shows ruptures generated by a point source for a range of magnitudes. Each rupture is centered on the single hypocentral position admitted by this point source. Ruptures are created by conserving the area computed using the specified magnitude-area scaling relationship and the corresponding value of magnitude.



Figure 2.2 – Point source with multiple ruptures. Note the change in the aspect ratio once the rupture width fills the entire seismogenic layer.

Below we provide the excerpt of an .xml file used to describe the properties of a point source:

```

1 <pointSource id="1" name="point" tectonicRegion="Stable Continental Crust">
2   <pointGeometry>
3     <gml:Point>
4       <gml:pos>-122.0 38.0</gml:pos>
5     </gml:Point>
6     <upperSeismoDepth>0.0</upperSeismoDepth>
7     <lowerSeismoDepth>10.0</lowerSeismoDepth>
8   </pointGeometry>
9   <magScaleRel>WC1994</magScaleRel>
10  <ruptAspectRatio>0.5</ruptAspectRatio>
11  <truncGutenbergRichterMFD aValue="-3.5" bValue="1.0" minMag="5.0"
12    maxMag="6.5" />
13  <nodalPlaneDist>
14    <nodalPlane probability="0.3" strike="0.0" dip="90.0" rake="0.0" />
15    <nodalPlane probability="0.7" strike="90.0" dip="45.0" rake="90.0" />
```

```

16 </nodalPlaneDist>
17 <hypoDepthDist>
18     <hypoDepth probability="0.5" depth="4.0" />
19     <hypoDepth probability="0.5" depth="8.0" />
20 </hypoDepthDist>
21 </pointSource>

```

The red part shows the the parameters used to describe the geometry of the point source, the blue part is the description of the magnitude-frequency distribution, the green text shows the nodal plane distribution and the text in magenta illustrates the hypocentral depth distribution.

The text in black describes the parameters needed to generate the ruptures such as the magnitude-scaling relationship and the aspect ratio.

Note that in this example, ruptures occur on two possible nodal planes and two hypocentral depths. Figure 2.3 shows the ruptures generated by the point source specified above.

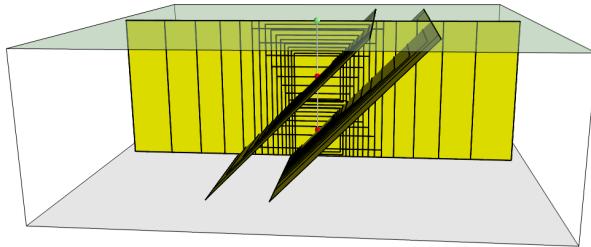


Figure 2.3 – Ruptures produced by the source created using the information in the example .xml file described at page 26.

2.1.1.2 Grid sources

A grid source is simply a collection of point sources distributed over a regular grid (usually equally spaced in longitude and latitude).

In probabilistic seismic hazard analysis a grid source can be considered a model alternative to area sources, since they both model distributed seismicity.

Grid sources are generally used to reproduce more faithfully the spatial pattern of seismicity depicted by the earthquakes occurred in the past; in some models (e.g. Petersen et al. (2008)) only events of low and intermediate magnitudes are considered.

Grid sources are generally computed using seismicity smoothing algorithms (Frankel, 1995; Woo, 1996, amongst many others).

The use of smoothing algorithms to produce grid sources brings some advantages compared to area sources, since (1) it removes most of the unavoidable degree of subjectivity due to the definition of the geometries of the area sources and (2) it produces a spatial

pattern of seismicity that is usually closer to what observed in the reality. Nevertheless, in many cases smoothing algorithms require an a-priori definition of some setup parameters that expose the calculation to a certain degree of partiality.

Grid sources are modeled in oq-engine simply as a set of point sources; in other words, a grid source is just a long list of point sources specified as described in the previous section (see page 24).

2.1.1.3 Area sources

Area sources are usually adopted to describe the seismicity occurring over wide areas where the identification and characterization - i.e. the unambiguous definition of position, geometry and seismicity occurrence parameters - of single fault structures is difficult.

From a computation standpoint, area sources are comparable to grid sources since they are both represented in the engine by a list of point sources.

The oq-engine using the source data parameters (see below) creates an equally spaced in distance grid of point sources where each point has the same seismicity occurrence properties (i.e. rate of events generated).

Below we provide a brief description of the parameters necessary to completely describe an area source.

Source data

- A polygon defining the external border of the area (i.e. a list of Longitude-Latitude [degrees] tuples) The current version of the OQ-engine doesn't support the definition of internal borders.
- The upper and lower seismogenic depths [km]
- One glsmfd
- One glsmsr
- The rupture aspect ratio
- A distribution of nodal planes i.e. one (or several) instances of the following set of parameters
 - strike [degrees]
 - dip [degrees]
 - rake [degrees]
- A magnitude independent depth distribution of hypocenters [km].

Below we provide the excerpt of an .xml file used to describe the properties of an area source:

```

1 <areaSource id="1" name="Quito" tectonicRegion="Active Shallow Crust">
2   <areaGeometry>
3     <gml:Polygon>
4       <gml:exterior>
5         <gml:LinearRing>
6           <gml:posList>
```

```

7           -122.5 37.5
8           -121.5 37.5
9           -121.5 38.5
10          -122.5 38.5
11      </gml:posList>
12      </gml:LinearRing>
13  </gml:exterior>
14 </gml:Polygon>
15 <upperSeismoDepth>0.0</upperSeismoDepth>
16 <lowerSeismoDepth>10.0</lowerSeismoDepth>
17 </areaGeometry>
18 <magScaleRel>PeerMSR</magScaleRel>
19 <ruptAspectRatio>1.5</ruptAspectRatio>
20 <incrementalMFD minMag="6.55" binWidth="0.1">
21   <occurRates>0.0010614989 8.8291627E-4 7.3437777E-4 6.108288E-4
22     5.080653E-4</occurRates>
23 </incrementalMFD>
24 <nodalPlaneDist>
25   <nodalPlane probability="0.3" strike="0.0" dip="90.0" rake="0.0"/>
26   <nodalPlane probability="0.7" strike="90.0" dip="45.0" rake="90.0"/>
27 </nodalPlaneDist>
28 <hypoDepthDist>
29   <hypoDepth probability="0.5" depth="4.0" />
30   <hypoDepth probability="0.5" depth="8.0" />
31 </hypoDepthDist>
32 </areaSource>

```

The red text describes the parameters used to describe the geometry of the area source; the blue part is the description of the magnitude-frequency distribution; the green text displays the nodal plane distribution; and the text in magenta illustrates the hypocentral depth distribution.

The text in gray describes the parameters required to generate the ruptures such as the magnitude-scaling relationship and the aspect ratio.

The ruptures generated by the area source described in the example above are controlled by two nodal planes and have hypocenters at localized at two distinct depths.

2.1.2 Fault sources with floating ruptures

Fault sources in the oq-engine are classified according to the method adopted to distribute ruptures over the fault surface. Two options are currently supported:

- With the first option, ruptures with a surface lower than the whole fault surface are floated so as to cover as much as possible homogeneously the fault surface. This model is compatible with all the supported magnitude-frequency distributions.
- With the second option, ruptures always fill the entire fault surface. This model is compatible with magnitude-frequency distributions similar to a characteristic model

(à la Schwartz and Coppersmith, 1984).

In this subsection we discuss the different fault source types that support floating ruptures. In the next subsection we will illustrate the fault typology available to model a characteristic rupturing behaviour.

2.1.2.1 Simple faults

Simple Faults are the most common source type used to model shallow faults; the “simple” adjective relates to the geometry description of the source which is obtained by projecting the fault trace (i.e. a polyline) along a characteristic dip direction.

The parameters used to create an instance of this source type are described in the following paragraph.

Source data

- A fault trace (usually a polyline). It is a list of longitude-latitude tuples [degrees]
- A frequency-magnitude distribution
- A magnitude-scaling relationship
- A representative value of the dip angle (specified following the Aki-Richards convention; see Aki and Richards (2002)) [degrees]
- Rake angle (specified following the Aki-Richards convention; see Aki and Richards (2002)) [degrees]
- Upper and lower depth values limiting the seismogenic interval [km]

For near-fault probabilistic seismic hazard analysis, two additional parameters are needed for characterising seismic sources:

- A hypocentre list. It is a list of the possible hypocentral positions, and the corresponding weights, e.g., `alongStrike="0.25" downDip="0.25" weight="0.25"`. Each hypocentral position is defined in relative terms using as a reference the upper left corner of the rupture and by specifying the fraction of rupture length and rupture width.
- A slip list. It is a list of the possible rupture slip directions [degrees], and their corresponding weights. The angle describing each slip direction is measured counter-clockwise using the fault strike direction as reference.

In near-fault PSHA calculations, the hypocentre list and the slip list are mandatory. The weights in each list must always sum to one. The available GMPE which currently supports the near-fault directivity PSHA calculation in OQ- engine is the ChiouYoungs2014NearFaultEffect GMPE developed by Chiou and Youngs (2014) (associated with an Active Shallow Crust tectonic region type).

Below we provide two examples of simple fault source files. The first is an excerpt of an xml file used to describe the properties of a simple fault source and the second example shows the excerpt of an xml file used to describe the properties of a simple fault source that can be used to perform a PSHA calculation taking into account directivity effects.

```
1 <areaSource id="1" name="Quito" tectonicRegion="Active Shallow Crust">
```

```

2 <areaGeometry>
3   <gml:Polygon>
4     <gml:exterior>
5       <gml:LinearRing>
6         <gml:posList>
7           -122.5 37.5
8           -121.5 37.5
9           -121.5 38.5
10          -122.5 38.5
11        </gml:posList>
12      </gml:LinearRing>
13    </gml:exterior>
14  </gml:Polygon>
15  <upperSeismoDepth>0.0</upperSeismoDepth>
16  <lowerSeismoDepth>10.0</lowerSeismoDepth>
17 </areaGeometry>
18 <magScaleRel>PeerMSR</magScaleRel>
19 <ruptAspectRatio>1.5</ruptAspectRatio>
20 <incrementalMFD minMag="6.55" binWidth="0.1">
21   <occurRates>0.0010614989 8.8291627E-4 7.3437777E-4 6.108288E-4
22   5.080653E-4</occurRates>
23 </incrementalMFD>
24 <nodalPlaneDist>
25   <nodalPlane probability="0.3" strike="0.0" dip="90.0" rake="0.0"/>
26   <nodalPlane probability="0.7" strike="90.0" dip="45.0" rake="90.0"/>
27 </nodalPlaneDist>
28 <hypoDepthDist>
29   <hypoDepth probability="0.5" depth="4.0" />
30   <hypoDepth probability="0.5" depth="8.0" />
31 </hypoDepthDist>
32 </areaSource>

```

Below is an excerpt of a simple fault source xml file for near-fault directivity PSHA calculations:

```

1 <simpleFaultSource id="1" name="Mount Diablo Thrust"
2   tectonicRegion="Active Shallow Crust">
3   <simpleFaultGeometry>
4     <gml:LineString>
5       <gml:posList>
6         -121.82290 37.73010
7         -122.03880 37.87710
8       </gml:posList>
9     </gml:LineString>
10    <dip>45.0</dip>
11    <upperSeismoDepth>10.0</upperSeismoDepth>
12    <lowerSeismoDepth>20.0</lowerSeismoDepth>
13 </simpleFaultGeometry>

```

```

14 <magScaleRel>WC1994</magScaleRel>
15 <ruptAspectRatio>1.5</ruptAspectRatio>
16 <incrementalMFD minMag="5.0" binWidth="0.1">
17   <occurRates>0.0010614989 8.8291627E-4 7.3437777E-4 6.108288E-4
18     5.080653E-4</occurRates>
19 </incrementalMFD>
20 <rake>30.0</rake>
21 <hypoList>
22   <hypo alongStrike="0.25" downDip="0.25" weight="0.25"/>
23   <hypo alongStrike="0.25" downDip="0.75" weight="0.25"/>
24   <hypo alongStrike="0.75" downDip="0.25" weight="0.25"/>
25   <hypo alongStrike="0.75" downDip="0.75" weight="0.25"/>
26 </hypoList>
27 <slipList>
28   <slip weight="0.333"> 0.0 </slip>
29   <slip weight="0.333"> 45.0 </slip>
30   <slip weight="0.334"> 90.0 </slip>
31 </slipList>
32 </simpleFaultSource>

```

As with the previous examples, the red text highlights the parameters used to specify the source geometry, the parameters in green describe the rupture mechanism, the text in blue describes the magnitude-frequency distribution and the gray text describes the rupture properties.

2.1.2.2 Complex faults

A complex fault differs from simple fault just by the way the geometry of the fault surface is defined and the fault surface is later created. The input parameters used to describe complex faults are, for the most part, the same used to describe the simple fault typology.

In case of complex faults the dip angle is not requested while the fault trace is substituted by two fault edges limiting at the top and bottom the fault surface. Additional curves lying over the fault surface can be specified to complement and refine the description of the fault surface geometry.

Usually, we use complex faults to model intraplate megathrust faults such as the big subduction structures active in the Pacific (Sumatra, South America, Japan) but this source typology can be used also to create - for example - listric fault sources with a realistic geometry.

```

1 <complexFaultSource id="1" name="Cascadia Megathrust"
2   tectonicRegion="Subduction Interface">
3   <complexFaultGeometry>
4     <faultTopEdge>
5       <gml:LineString>
6         <gml:posList>
7           -124.704 40.363 0.5493260E+01

```

```

8          -124.977  41.214  0.4988560E+01
9          -125.140  42.096  0.4897340E+01
10         </gml:posList>
11         </gml:LineString>
12       </faultTopEdge>
13       <intermediateEdge>
14         <gml:LineString>
15           <gml:posList>
16             -124.704  40.363  0.5593260E+01
17             -124.977  41.214  0.5088560E+01
18             -125.140  42.096  0.4997340E+01
19           </gml:posList>
20           </gml:LineString>
21         </intermediateEdge>
22         <intermediateEdge>
23           <gml:LineString>
24             <gml:posList>
25               -124.704  40.363  0.5693260E+01
26               -124.977  41.214  0.5188560E+01
27               -125.140  42.096  0.5097340E+01
28             </gml:posList>
29             </gml:LineString>
30           </intermediateEdge>
31         <faultBottomEdge>
32           <gml:LineString>
33             <gml:posList>
34               -123.829  40.347  0.2038490E+02
35               -124.137  41.218  0.1741390E+02
36               -124.252  42.115  0.1752740E+02
37             </gml:posList>
38             </gml:LineString>
39           </faultBottomEdge>
40         </complexFaultGeometry>
41       <magScaleRel>WC1994</magScaleRel>
42       <ruptAspectRatio>1.5</ruptAspectRatio>
43     <truncGutenbergRichterMFD aValue="-3.5" bValue="1.0" minMag="5.0"
44       maxMag="6.5" />
45     <rake>30.0</rake>
46   </complexFaultSource>
```

As with the previous examples, the red text highlights the parameters used to specify the source geometry, the parameters in green describe the rupture mechanism, the text in blue describes the magnitude-frequency distribution and the gray text describes the rupture properties.

2.1.3 Fault sources without floating ruptures

2.1.3.1 Characteristic faults

The characteristic fault source is a particular typology of fault created with the assumption that its ruptures will always cover the entire fault surface.

In this case, the fault surface can be represented either as a simple fault source surface or as a complex fault source surface or as a combination of rectangular ruptures as represented in Figure 2.4.

Source data

- The characteristic rupture surface is defined through one of the following options:
 - A list of rectangular ruptures
 - A simple fault source geometry
 - A complex fault source geometry
- A frequency-magnitude distribution.
- Rake angle (specified following the Aki-Richards convention; see Aki and Richards (2002)).
- Upper and lower depth values limiting the seismogenic interval.

2.2 Magnitude-frequency distributions

The magnitude-frequency distributions currently supported by the oq-engine are the following:

A discrete incremental magnitude-frequency distribution It is the simplest distribution supported. It is defined by the minimum value of magnitude (representing the mid point of the first bin) and the bin width. The distribution itself is simply a sequence of floats describing the annual number of events for different bins. The maximum magnitude admitted by this magnitude-frequency distribution is just the sum of the minimum magnitude and the product of the bin width by the number annual rate values.

Below we provide an example of the xml that should be incorporated in a seismic source description in order to define this Magnitude-Frequency Distribution (MFD). An additional example for this distribution can be also found at page 30.

```
<incrementalMFD minMag="5.05" binWidth="0.1">
  <occurRates>0.15 0.08 0.05 0.03 0.015</occurRates>
</incrementalMFD>
```

The magnitude-frequency distribution obtained with the above parameters is represented in Figure 2.5.

A double truncated Gutenberg-Richter distribution This distribution is described by means of a minimum `minMag` and maximum magnitude `maxMag` and by the a and b values of the Gutenberg-Richter relationship.



Figure 2.4 – Geometry of a multi-segmented characteristic fault composed of four rectangular ruptures as modelled in OpenQuake.

The syntax of the xml used to describe this magnitude-frequency distribution is rather compact as demonstrated in the following example:

```
<truncGutenbergRichterMFD aValue="5.0" bValue="1.0" minMag="5.0"
```

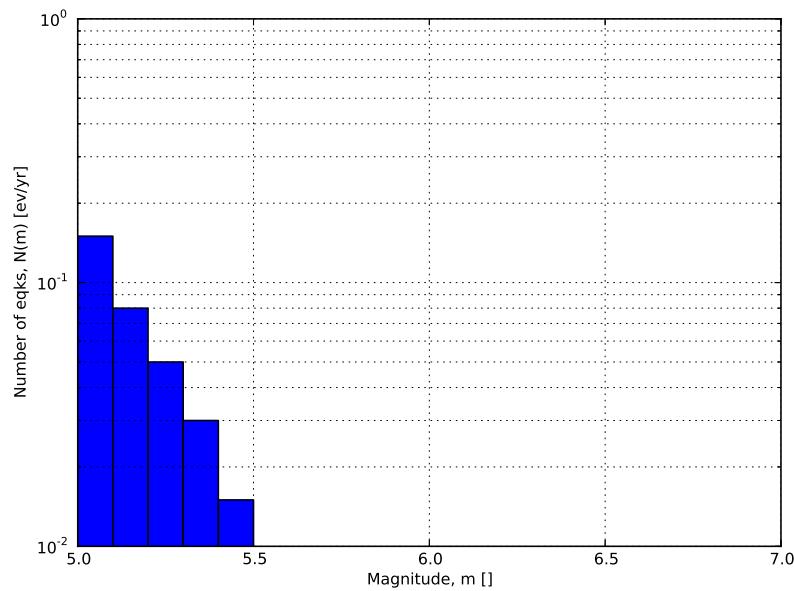


Figure 2.5 – Example of an incremental magnitude-frequency distribution.

```
maxMag="6.0" />
```

Figure 2.6 shows the magnitude-frequency distribution obtained using the parameters of the considered example.

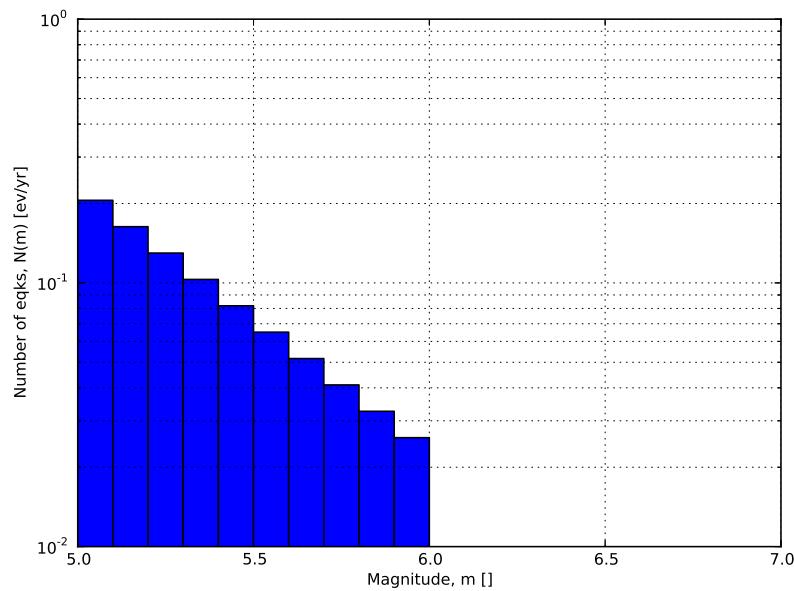


Figure 2.6 – Example of a double truncated Gutenberg-Richter magnitude-frequency distribution.

2.3 Magnitude-scaling relationships

2.3.1 Relationships for shallow earthquakes in active tectonic regions

We provide below a list of the magnitude-area scaling relationships implemented in the oq-hazardlib:

- Wells and Coppersmith, 1994 - One of the most well known magnitude scaling relationships, based on a global database of historical earthquake ruptures. The implemented relationship is the one linking magnitude to rupture area.

2.4 Calculation workflows

The hazard component of the OpenQuake-engine can compute seismic hazard using various approaches. Three types of analysis are currently supported:

- *Classical Probabilistic Seismic Hazard Analysis (PSHA)*, allowing calculation of hazard curves and hazard maps following the classical integration procedure (Cornell, 1968, McGuire (1976)) as formulated by Field et al., 2003.
- *Event-Based Probabilistic Seismic Hazard Analysis*, allowing calculation of ground-motion fields from stochastic event sets. Traditional results - such as hazard curves - can be obtained by post- processing the set of computed ground-motion fields.
- *Scenario Based Seismic Hazard Analysis (SSHA)*, allowing the calculation of ground motion fields from a single earthquake rupture scenario taking into account ground-motion aleatory variability.

Each workflow has a modular structure, so that intermediate results can be exported and analyzed. Each calculator can be extended independently of the others so that additional calculation options and methodologies can be easily introduced, without affecting the overall calculation workflow.

2.4.1 Classical Probabilistic Seismic Hazard Analysis

Input data for the classical Probabilistic Seismic Hazard Analysis (PSHA) consist of a PSHA input model provided together with calculation settings.

The main calculators used to perform this analysis are the following:

1. *Logic Tree Processor*

The Logic Tree Processor (LTP) takes as an input the PSHA Input Model and creates a Seismic Source Model. The LTP uses the information in the Initial Seismic Source Models and the Seismic Source Logic Tree to create a Seismic Source Input Model (i.e. a model describing geometry and activity rates of each source without any epistemic uncertainty).

Following a procedure similar to the one just described the Logic Tree Processor creates a Ground Motion model (i.e. a data structure that associates to each tectonic region considered in the calculation a Ground Motion Prediction Equation (GMPE)).

2. *Earthquake Rupture Forecast Calculator*

The produced Seismic Source Input Model becomes an input information for the Earthquake Rupture Forecast (ERF) calculator which creates a list earthquake ruptures admitted by the source model, each one characterized by a probability of occurrence over a specified time span.

3. Classical PSHA Calculator

The classical PSHA calculator uses the ERF and the Ground Motion model to compute hazard curves on each site specified in the calculation settings.

2.4.2 Event-Based Probabilistic Seismic Hazard Analysis

Input data for the Event-Based PSHA - as in the case of the Classical PSHA calculator - consists of a PSHA Input Model and a set of calculation settings.

The main calculators used to perform this analysis are:

1. Logic Tree Processor

The Logic Tree Processor works in the same way described in the description of the Classical PSHA workflow (see Section 2.4.1 at page 36).

2. Earthquake Rupture Forecast Calculator

The Earthquake Rupture Forecast Calculator was already introduced in the description of the PSHA workflow (see Section 2.4.1 at page 36).

3. Stochastic Event Set Calculator

The Stochastic Event Set Calculator generates a collection of stochastic event sets by sampling the ruptures contained in the ERF according to their probability of occurrence. A Stochastic Event Set (SES) thus represents a potential realisation of the seismicity (i.e. a list of ruptures) produced by the set of seismic sources considered in the analysis over the time span fixed for the calculation of hazard.

4. Ground Motion Field Calculator

The Ground Motion Field Calculator computes for each event contained in a Stochastic Event Set a realization of the geographic distribution of the shaking by taking into account the aleatory uncertainties in the ground- motion model. Eventually, the Ground Motion Field calculator can consider the spatial correlation of the ground-motion during the generation of the Ground Motion Field (GMF).

5. Event-based PSHA Calculator

The event-based PSHA calculator takes a (large) set of ground-motion fields representative of the possible shaking scenarios that the investigated area can experience over a (long) time span and for each site computes the corresponding hazard curve.

This procedure is computationally intensive and is not recommended for investigating the hazard over large areas.

2.4.3 Scenario based Seismic Hazard Analysis

In case of SSHA, the input data consist of a single earthquake rupture model and one or more ground-motion models. Using the Ground Motion Field Calculator, multiple realizations of

ground shaking can be computed, each realization sampling the aleatory uncertainties in the ground-motion model.

The main calculators used to perform this analysis are:

1. *Ground Motion Field Calculator*

The Ground Motion Field Calculator was already introduced during the description of the event based PSHA workflow (see Section 2.4.2 at page 37).

Defining Logic Trees

Logic trees as described in the nrml schema

The Seismic Source System

The Seismic Source Logic Tree

The Seismic Source Model

The Ground Motion System

The Ground Motion Logic Tree

Configuration file

Classical PSHA

Seismic hazard disaggregation

Event based PSHA

3. Using the Hazard Module

This Chapter summarises the structure of the information necessary to define a PSHA input model to be used with the OpenQuake-engine.

Input data for probabilistic based seismic hazard analysis (Classical, Event based, Disaggregation, and UHS) are organised into:

- A general configuration file.
- A file describing the Seismic Source System, that is the set of initial source models and associated epistemic uncertainties needed to model the seismic activity in the region of interest.
- A file describing the Ground Motion System, that is the set of ground motion prediction equations, per tectonic region type, needed to model the ground motion shaking in the region of interest.

Figure 3.1 summarises the structure of a PSHA input model for the OpenQuake-engine and the relationships between the different files.

3.1 Defining Logic Trees

The main components of a logic tree structure in the OpenQuake-engine are the following:

branch : the simplest component of a logic tree structure. A branch represent a possible interpretation of a value assignment for a specific type of uncertainty. It is fully described by the tuple (parameter or model, weight).

branching set : it is a key component in the logic tree structure used by the oq-engine. It groups a set of branches i.e. alternative interpretations of a parameter or a model.

Each branching set is defined by:

- An ID
- An uncertainty type (for a comprehensive list of the types of uncertainty currently supported see page 42)



Figure 3.1 – PSHA Input Model structure

- One or more branches

This set of uncertainties can be applied to the whole initial seismic source input model or just to a subset of seismic sources. The sum of the weights/probabilities assigned to the set of branches always correspond to one.

branching level : it is the largest container. It is not used in modelling uncertainty, but it is useful in maintaining a logic and an order in the structure of the tree.

Below we provide a simple schema illustrating the skeleton of xml file containing the description of a logic tree:

```

<logicTreeBranchingLevel branchingLevelID=ID>
    <logicTreeBranchSet branchSetID=ID
        uncertaintyType=TYPE>
        <logicTreeBranch>
            <uncertaintyModel>VALUE</uncertaintyModel>
            <uncertaintyWeight>WEIGHT</uncertaintyWeight>
        </logicTreeBranch>
    </logicTreeBranchSet>
</logicTreeBranchingLevel>
  
```

As it appears from this example, the structure of a logic tree is a set of nested elements. A schematic representation of the elemental components of a logic tree structure is provided in Figure 3.2. A branching level identifies the position where branching occurs while a branch set identifies a collection of branches (i.e. individual branches) whose weights sum to 1.



Figure 3.2 – Generic Logic Tree structure as described in terms of branching levels, branch sets, and individual branches.

3.1.1 Logic trees as described in the nrml schema

In the NRML schema, a logic tree structure is defined through the `logicTree` element:

```
<logicTree logicTreeID="ID">
  ...
</logicTree>
```

A `logicTree` contains as a sequence of `logicTreeBranchingLevel` elements. The position in the sequence of a `logicTreeBranchingLevel` specifies the level of the tree where it is located. That is, the first `logicTreeBranchingLevel` element in the sequence represents the first level in the tree, the second element the second level in the tree, and so on.

```
<logicTree logicTreeID="ID">
  <logicTreeBranchingLevel branchingLevelID="ID_1">
    ...
  </logicTreeBranchingLevel>
  <logicTreeBranchingLevel branchingLevelID="ID_2">
    ...
  </logicTreeBranchingLevel>
  ....
```

```

<logicTreeBranchingLevel branchingLevelID="ID_N">
    ...
</logicTreeBranchingLevel>
</logicTree>

```

There are no restrictions on the number of tree levels that can be defined.

A logicTreeBranchingLevel is defined as a sequence of logicTreeBranchSet elements where each logicTreeBranchSet defines a particular epistemic uncertainty inside a branching level.

A branch set has two required attributes: branchSetID and uncertaintyType. The latter defines the type of epistemic uncertainty this branch set is describing.

```

<logicTree logicTreeID="ID">
    ...
    <logicTreeBranchingLevel branchingLevelID="ID_#">
        <logicTreeBranchSet branchSetID="ID_1"
            uncertaintyType="UNCERTAINTY_TYPE">
            ...
        </logicTreeBranchSet>
        <logicTreeBranchSet branchSetID="ID_2"
            uncertaintyType="UNCERTAINTY_TYPE">
            ...
        </logicTreeBranchSet>
        ...
        <logicTreeBranchSet branchSetID="ID_N"
            uncertaintyType="UNCERTAINTY_TYPE">
            ...
        </logicTreeBranchSet>
    </logicTreeBranchingLevel>
    ...
</logicTree>

```

Possible values for the uncertaintyType attribute are:

- gmpeModel: indicates epistemic uncertainties on ground motion prediction equations
- sourceModel: indicates epistemic uncertainties on source models
- maxMagGRRelative: indicates relative (i.e. increments) epistemic uncertainties to be added (or subtracted, depending on the sign of the increment) to the Gutenberg-Richter maximum magnitude value.
- bGRRelative: indicates relative epistemic uncertainties to be applied to the Gutenberg-Richter b value.

- abGRAbsolute: indicates absolute (i.e. values used to replace original values) epistemic uncertainties on the Gutenberg-Richter a and b values.
- maxMagGraAbsolute: indicates (absolute) epistemic uncertainties on the Gutenberg-Richter maximum magnitude.

There are no restrictions on the number of branch sets that can be defined inside a branching level.

A branchSet is defined as a sequence of logicTreeBranch elements, each specified by an uncertaintyModel element (a string identifying an uncertainty model; the content of the string varies with the uncertaintyType attribute value of the branchSet element) and the uncertaintyWeight element (specifying the probability/weight associated to the uncertaintyModel):

```
<logicTree logicTreeID="ID">
  ...
    <logicTreeBranchingLevel branchingLevelID="ID_#">
      ...
        <logicTreeBranchSet branchSetID="ID_#"
          uncertaintyType="UNCERTAINTY_TYPE">
          <logicTreeBranch branchID="ID_1">
            <uncertaintyModel>
              UNCERTAINTY_MODEL
            </uncertaintyModel>
            <uncertaintyWeight>
              UNCERTAINTY_WEIGHT
            </uncertaintyWeight>
          </logicTreeBranch>
          ...
          <logicTreeBranch branchID="ID_N">
            <uncertaintyModel>
              UNCERTAINTY_MODEL
            </uncertaintyModel>
            <uncertaintyWeight>
              UNCERTAINTY_WEIGHT
            </uncertaintyWeight>
          </logicTreeBranch>
        </logicTreeBranchSet>
        ...
    </logicTreeBranchingLevel>
  ...
</logicTree>
```

```
</logicTree>
```

Depending on the `uncertaintyType` the content of the `<uncertaintyModel>` element changes:

- if `uncertaintyType="gmpeModel"`, the uncertainty model contains the name of a ground motion prediction equation (a list of available GMPEs are given in Appendix A), e.g.:

```
<uncertaintyModel>GMPE_NAME</uncertaintyModel>
```

- if `uncertaintyType="sourceModel"`, the uncertainty model contains the paths to a source model file, e.g.:

```
<uncertaintyModel>SOURCE_MODEL_FILE_PATH</uncertaintyModel>
```

- if `uncertaintyType="maxMagGRRelative"`, the uncertainty model contains the increment to be added (or subtracted, depending on the sign) to the Gutenberg-Richter maximum magnitude:

```
<uncertaintyModel>MAX_MAGNITUDE_INCREMENT</uncertaintyModel>
```

- if `uncertaintyType="bGRRelative"`, the uncertainty model contains the increment to be added (or subtracted, depending on the sign) to the Gutenberg-Richter b value:

```
<uncertaintyModel>B_VALUE_INCREMENT</uncertaintyModel>
```

- if `uncertaintyType="abGРАbsolute"`, the uncertainty model must contain one a and b pair:

```
<uncertaintyModel>A_VALUE B_VALUE</uncertaintyModel>
```

- if `uncertaintyType="maxMagGРАbsolute"`, the uncertainty model must contain one Gutenberg-Richter maximum magnitude value:

```
<uncertaintyModel>MAX_MAGNITUDE</uncertaintyModel>
```

There are no restrictions on the number of `logicTreeBranch` elements that can be defined in a `logicTreeBranchSet`, as long as the uncertainty weights sum to 1.0.

The `logicTreeBranchSet` element offers also a number of optional attributes allowing for complex tree definitions:

- `applyToBranches`: specifies to which `logicTreeBranch` elements (one or more), in the previous branching level, the branch set is linked to. The linking is established by defining the IDs of the branches to link to:

```
applyToBranches="branchID1 branchID2 .... branchIDN"
```

The default is the keyword ALL, which means that a branch set is by default linked to all branches in the previous branching level. By specifying one or more branches to which the branch set links to, non-symmetric logic trees can be defined.

- `applyToSources`: specifies to which source in a source model the uncertainty applies to. Sources are specified in terms of their IDs:

```
applyToSources="srcID1 srcID2 .... srcIDN"
```

- `applyToSourceType`: specifies to which source type the uncertainty applies to. Only one source typology can be defined (area, point, simpleFault, complexFault), e.g.:

```
applyToSources="area"
```

- `applyToTectonicRegionType`: specifies to which tectonic region type the uncertainty applies to. Only one tectonic region type can be defined (Active Shallow Crust, Stable Shallow Crust, Subduction Interface, Subduction IntraSlab, Volcanic), e.g.:

```
applyToTectonicRegionType="Active Shallow Crust"
```

3.2 The Seismic Source System

The Seismic Source System contains the model (or the models) describing position, geometry and activity of seismic sources of engineering importance for a set of sites as well as the possible epistemic uncertainties to be incorporated into the calculation of seismic hazard.

3.2.1 The Seismic Source Logic Tree

The structure of the Seismic Source Logic Tree consists of at least one branching level. This branching level is the one used to define the initial seismic source input model (or a number of initial seismic source models, see Figure 3.1).

The example provided below shows the simplest Seismic Source Logic Tree structure that can be defined in a PSHA input model for oq-engine. It's a logic tree with just one branching level containing one branch set with one branch used to define the initial seismic source model (its weight will be equal to one).

```
1 <?xml version="1.0" encoding="UTF-8"?>
2 <nrm1 xmlns:gml="http://www.opengis.net/gml"
3   xmlns="http://openquake.org/xmlns/nrml/0.4">
4   <logicTree logicTreeID="lt1">
```

```

5   <logicTreeBranchingLevel branchingLevelID="bl1">
6     <logicTreeBranchSet uncertaintyType="sourceModel"
7       branchSetID="bs1">
8       <logicTreeBranch branchID="b1">
9         <uncertaintyModel>seismic_source_model.xml
10        </uncertaintyModel>
11        <uncertaintyWeight>1.0</uncertaintyWeight>
12      </logicTreeBranch>
13    </logicTreeBranchSet>
14  </logicTreeBranchingLevel>
15 </logicTree>
16 </nrml>

```

The optional branching levels will contain rules that modify parameters of the sources in the initial seismic source model.

For example, if the epistemic uncertainties to be considered are source geometry and maximum magnitude, the modeller can create a logic tree structure with three initial seismic source models (each one exploring a different definition of the geometry of sources) and one branching level accounting for the epistemic uncertainty on the maximum magnitude.

Below we provide an example of such logic tree structure:

```

1  <?xml version="1.0" encoding="UTF-8"?>
2  <nrml xmlns:gml="http://www.opengis.net/gml"
3    xmlns="http://openquake.org/xmlns/nrml/0.4">
4    <logicTree logicTreeID="lt1">
5
6      <logicTreeBranchingLevel branchingLevelID="bl1">
7        <logicTreeBranchSet uncertaintyType="sourceModel"
8          branchSetID="bs1">
9          <logicTreeBranch branchID="b1">
10            <uncertaintyModel>seismic_source_model_A.xml
11            </uncertaintyModel>
12            <uncertaintyWeight>0.2</uncertaintyWeight>
13          </logicTreeBranch>
14          <logicTreeBranch branchID="b2">
15            <uncertaintyModel>seismic_source_model_B.xml
16            </uncertaintyModel>
17            <uncertaintyWeight>0.3</uncertaintyWeight>
18          </logicTreeBranch>
19          <logicTreeBranch branchID="b3">
20            <uncertaintyModel>seismic_source_model_C.xml
21            </uncertaintyModel>
22            <uncertaintyWeight>0.5</uncertaintyWeight>
23          </logicTreeBranch>

```

```

24      </logicTreeBranchSet>
25  </logicTreeBranchingLevel>
26
27  <logicTreeBranchingLevel branchingLevelID="bl2">
28    <logicTreeBranchSet branchSetID="bs21"
29      uncertaintyType="maxMagGRRelative">
30      <logicTreeBranch branchID="b211">
31        <uncertaintyModel>+0.0</uncertaintyModel>
32        <uncertaintyWeight>0.6</uncertaintyWeight>
33      </logicTreeBranch>
34      <logicTreeBranch branchID="b212">
35        <uncertaintyModel>+0.5</uncertaintyModel>
36        <uncertaintyWeight>0.4</uncertaintyWeight>
37      </logicTreeBranch>
38    </logicTreeBranchSet>
39  </logicTreeBranchingLevel>
40
41  </logicTree>
42 </nrml>

```

Note that the uncertainty on the maximum magnitude is specified in terms of relative increments with respect to the initial maximum magnitude defined for each source in the initial seismic source models.

3.2.2 The Seismic Source Model

The structure of the xml file representing the seismic source model corresponds to a list of sources, each one modelled using one out of the five typologies currently supported. Below we provide a schematic example of a seismic source model:

```

<sourceModel gml:id="ID">
  ...
  <areaSource gml:id="SOURCE_ID">
    <gml:name>SOURCE_NAME</gml:name>
    <tectonicRegion>TECT_REGION_TYPE</tectonicRegion>
    ...
  </areaSource>
  ...
  <pointSource gml:id="SOURCE_ID">
    <gml:name>SOURCE_NAME</gml:name>
    <tectonicRegion>TECT_REGION_TYPE</tectonicRegion>
    ...
  </pointSource>
  ...
  <simpleFaultSource gml:id="SOURCE_ID">

```

```

<gml:name>SOURCE_NAME</gml:name>
<tectonicRegion>TECT_REGION_TYPE</tectonicRegion>
...
</simpleFaultSource>
...
<complexFaultSource gml:id="SOURCE_ID">
    <gml:name>SOURCE_NAME</gml:name>
    <tectonicRegion>TECT_REGION_TYPE</tectonicRegion>
...
</complexFaultSource>
...
</sourceModel>
```

3.3 The Ground Motion System

The Ground Motion System defines the models and the possible epistemic uncertainties related to ground motion modelling to be incorporated into the calculation.

3.3.1 The Ground Motion Logic Tree

The structure of the ground-motion logic tree consists of a list of ground motion prediction equations for each tectonic region used to characterise the sources in the PSHA input model.

The example below shows a simple ground-motion logic tree. This logic tree assumes that all the sources in the PSHA input model belong to “Active Shallow Crust” and uses for calculation the Chiou and Youngs (2008) GMPE.

```

1  <?xml version="1.0" encoding="UTF-8"?>
2  <nrmr xmlns:gml="http://www.opengis.net/gml"
3      xmlns="http://openquake.org/xmlns/nrml/0.4">
4      <logicTree logicTreeID='lt1'>
5          <logicTreeBranchingLevel branchingLevelID="bl1">
6              <logicTreeBranchSet uncertaintyType="gmpeModel"
7                  branchSetID="bs1"
8                  applyToTectonicRegionType="Active Shallow Crust">
9
10             <logicTreeBranch branchID="b1">
11                 <uncertaintyModel>
12                     ChiouYoungs2008
13                 </uncertaintyModel>
14                 <uncertaintyWeight>1.0</uncertaintyWeight>
15             </logicTreeBranch>
16
17         </logicTreeBranchSet>
18     </logicTreeBranchingLevel>
```

```

19  </logicTree>
20  </nrm1>
```

3.4 Configuration file

The configuration file is the primary file controlling both the definition of the input model as well as parameters governing the calculation. We illustrate in the following different examples of the configuration file addressing different typologies of seismic hazard calculation.

3.4.1 Classical PSHA

In the following we describe the overall structure and the most typical parameters of a configuration file to be used for the computation of a seismic hazard map using a classical PSHA methodology.

Calculation type and model info

```

1 [general]
2 description = A demo OpenQuake-engine .ini file for classical PSHA
3 calculation_mode = classical
4 random_seed = 1024
```

In this section the user specifies the following parameters:

- **description**: a parameter that can be used to designate the model
- **calculation_mode**: it is used to set the kind of calculation. In this case it corresponds to **classical**. Alternative options for the **calculation_mode** are described later in this manual.
- **random_seed**: is used to control the random generator so that when Monte Carlo procedures are used calculations are replicable (if the same **random_seed** is used you get exactly the same results).

Geometry of the area (or the sites) where hazard is computed

This section is used to specify where the hazard will be computed. Two options are available:

The first option is to define a polygon (usually a rectangle) and a distance (in km) to be used to discretize the polygon area. The polygon is defined by a list of longitude-latitude tuples.

An example is provided below:

```

5 [geometry]
6 region = 10.0 43.0, 12.0 43.0, 12.0 46.0, 10.0 46.0
7 region_grid_spacing = 10.0
```

The second option allows the definition of a number of sites where the hazard will be computed. An example is provided below:

```
5 [geometry]
6 sites = 10.0 43.0, 12.0 43.0, 12.0 46.0, 10.0 46.0
```

If the list of sites is too long the user can specify the name of a csv file as shown below:

```
5 [geometry]
6 sites_csv = <name_of_the_csv_file>
```

The format of the csv file containing the list of sites is a sequence of points (one per row) specified in terms of the longitude, latitude tuple. An example is provided below:

```
1 179.0,90.0
2 178.0,89.0
3 177.0,88.0
```

Logic tree sampling

The oq-engine provides two options for processing the whole logic tree structure. The first option uses Montecarlo sampling; the user in this case specifies a number of realizations.

In the second option all the possible realizations are created. Below we provide an example for the latter option. In this case we set the `number_of_logic_tree_samples` to 0. oq-engine will perform a complete enumeration of all the possible paths from the roots to the leaves of the logic tree structure.

```
9 [logic_tree]
10 number_of_logic_tree_samples = 0
```

If the seismic source logic tree and the ground motion logic tree do not contain epistemic uncertainties the engine will create a single PSHA input.

Generation of the earthquake rupture forecast

```
11 [erf]
12 rupture_mesh_spacing = 5
13 width_of_mfd_bin = 0.1
14 area_source_discretization = 10
```

This section of the configuration file is used to specify the level of discretization of the mesh representing faults, the grid used to delineate the area sources and, the magnitude-frequency distribution. Note that the smaller is the mesh spacing (or the bin width) the larger are (1) the precision in the calculation and (2) the computation demand.

Parameters describing site conditions

```

17 [site_params]
18 reference_vs30_type = measured
19 reference_vs30_value = 760.0
20 reference_depth_to_2pt5km_per_sec = 5.0
21 reference_depth_to_1pt0km_per_sec = 100.0

```

In this section the user specifies local soil conditions. The simplest solution is to define uniform site conditions (i.e. all the sites have the same characteristics).

Alternatively it is possible to define spatially variable soil properties in a separate file; the engine will then assign to each investigation location the values of the closest point used to specify site conditions.

```

17 [site_params]
18 site_model_file = site_model.xml

```

The file containing the site model has the following structure:

```

<?xml version="1.0" encoding="utf-8"?>
<nrmrl xmlns:gml="http://www.opengis.net/gml"
         xmlns="http://openquake.org/xmlns/nrml/0.4">
    <siteModel>
        <site lon="10.0" lat="40.0" vs30="800.0"
              vs30Type="inferred"
              z1pt0="19.367196734" z2pt5="0.588625072259" />
        <site lon="10.1" lat="40.0" vs30="800.0"
              vs30Type="inferred"
              z1pt0="19.367196734" z2pt5="0.588625072259" />
        <site lon="10.2" lat="40.0" vs30="800.0"
              vs30Type="inferred"
              z1pt0="19.367196734" z2pt5="0.588625072259" />
        <site lon="10.3" lat="40.0" vs30="800.0"
              vs30Type="inferred"
              z1pt0="19.367196734" z2pt5="0.588625072259" />
        <site lon="10.4" lat="40.0" vs30="800.0"
              vs30Type="inferred"
              z1pt0="19.367196734" z2pt5="0.588625072259" />
        ...
    </siteModel>
</nrmrl>

```

If the closest available site with soil conditions is at a distance greater than 5 km from the investigation location, a warning is generated.

Calculation configuration

```

22 [calculation]
23 source_model_logic_tree_file = source_model_logic_tree.xml
24 gsim_logic_tree_file = gmpe_logic_tree.xml
25 investigation_time = 50.0
26 intensity_measure_types_and_levels = {"PGA": [0.005, ..., 2.13]}
27 truncation_level = 3
28 maximum_distance = 200.0

```

This section of the oq-engine configuration file specifies the parameters that are relevant for the calculation of hazard. These include the names of the two files containing the Seismic Source System and the Ground Motion System, the duration of the time window used to compute the hazard, the ground motion intensity measure types and levels for which the probability of exceedence will be computed, the level of truncation of the Gaussian distribution of the logarithm of ground motion used in the calculation of hazard and the maximum integration distance (i.e. the distance within which sources will contribute to the computation of the hazard).

Output

```

32 [output]
33 export_dir = outputs/
34 # given the specified 'intensity_measure_types_and_levels'
35 quantile_hazard_curves =
36 poes_hazard_maps = 0.1

```

The final section of the configuration file is the one that contains the parameters controlling the types of output to be produced.

3.4.2 Seismic hazard disaggregation

In this section we describe the structure of the configuration file to be used to complete a seismic hazard disaggregation. Since only a few parts of the standard configuration file need to be changed we can use the description given in Section 3.4.1 at page 49 as a reference and we emphasize herein major differences.

Calculation type and model info

```

[general]
description = A demo .ini file for PSHA disaggregation
calculation_mode = disaggregation
random_seed = 1024

```

The calculation mode parameter in this case is set as disaggregation.

Geometry of the area (or the sites) where hazard is computed

```
[geometry]
sites = 11.0 44.5
```

In the section it is necessary to specify the geographic coordinates of the site (or sites) where the disaggregation will be performed.

Disaggregation parameters

```
[disaggregation]
poes_disagg = 0.02, 0.1
mag_bin_width = 1.0
distance_bin_width = 25.0
coordinate_bin_width = 1.5
num_epsilon_bins = 3
```

With the disaggregation settings shown above we'll disaggregate the intensity measure levels with 10% and 2% probability of exceedance using the `investigation_time` and the intensity measure types defined in the “Calculation configuration” section of the OpenQuake configuration file (see page 51).

The parameters `mag_bin_width`, `distance_bin_width`, `coordinate_bin_width` control the level of discretization of the disaggregation matrix computed. `num_epsilon_bins` indicates the number of bins used to represent the contributions provided by different values of `epsilon`.

If the user is interested in a specific type of disaggregation, we suggest to use a very coarse gridding for the parameters that are not necessary. For example, if the user is interested in a magnitude-distance disaggregation, we suggest the use of very large value for the `coordinate_bin_width` and to set `num_epsilon_bins` equal to 1.

3.4.3 Event based PSHA

In the following we describe the sections of the configuration file that are required to complete event based PSHA calculations

Calculation type and model info

This part is almost identical to the corresponding one described in Section 3.4.1. Note the setting of the `calculation_mode` parameter which now corresponds to `event_based`.

```
1 [general]
2 description = A demo OpenQuake-engine .ini file for classical PSHA
3 calculation_mode = event_based
4 random_seed = 1024
```

Event based parameters

This section is used to specify the number of stochastic event sets to be generated for each logic tree realisation (each stochastic event set represents a potential realisation of seismicity during the `investigation_time` specified in the `calculation_configuration` part). Additionally, in this section the user can specify the spatial correlation model to be used in case for the generation of ground motion fields.

```
[event_based_params]
ses_per_logic_tree_path = 5
ground_motion_correlation_model = JB2009
ground_motion_correlation_params = "vs30_clustering": True
```

The acceptable flags for the parameter `vs30_clustering` are `False` and `True`, with a capital F and T respectively. 0 and 1 are also acceptable flags.

Output

This part substitutes the `Output` part described in the configuration file example described in the Section 3.4.1 at page 49.

```
[output]
export_dir = /tmp/xxx
ground_motion_fields = true
# post-process ground motion fields into hazard curves,
# given the specified 'intensity_measure_types_and_levels'
hazard_curves_from_gmfs = true
mean_hazard_curves = true
quantile_hazard_curves = 0.15, 0.5, 0.85
poes_hazard_maps = 0.1, 0.2
```

[Running OpenQuake-engine for hazard calculations](#)

[Exporting results from a hazard calculation](#)

Description of hazard outputs

[Outputs from Classical PSHA](#)

[Outputs from Hazard Disaggregation](#)

[Outputs from Event Based PSHA](#)

4. Hazard Calculations and Results

In this Chapter we provide a description of the main commands available for running hazard with the oq-engine and the file formats used to represent the results of the analyses.

A general introduction on the use of OpenQuake-engine is provided in Section 1.1 at page 15. The reader is invited to consult this part before diving into the following sections.

4.1 Running OpenQuake-engine for hazard calculations

The execution of a hazard analysis using the OpenQuake-engine is straightforward. Below we provide an example of the simplest command that can be used to launch a hazard calculation. It consists in the invocation of oq-engine together with the `--rh` option which stands for “run hazard” and the name of a configuration file (in the example below it corresponds to `job.ini`):

```
user@ubuntu:~$ oq-engine --rh job.ini
```

The amount of information prompted during the execution of the analysis can be controlled through the `--log-level` flag as shown in the example below:

```
user@ubuntu:~$ oq-engine --rh job.ini --log-level debug
```

In this example we ask the engine to provide an extensive amount of information (usually not justified for a standard analysis). Alternative options are: `debug`, `info`, `progress`, `warn`, `error`, `critical`.

4.2 Exporting results from a hazard calculation

There are two alternative ways to get results from the OpenQuake-engine: directly through the calculation or by exporting them from the internal oq-engine database once a calculation is completed.

The first option is defined at the OpenQuake-engine invocation through the flag `--exports xml`, as shown in the example below:

```
user@ubuntu:~$ oq-engine --rh job.ini --exports xml
```

The second option allows the user to export the computed results or just a subset of them whenever they want. In order to obtain the list of results of the hazard calculations stored in the oq-engine database the user can utilize the following command:

```
user@ubuntu:~$ oq-engine --lhc
```

The execution of this command will produce a list similar to the one provided below (the numbers in red are the calculations IDs):

```
user@ubuntu:~$ oq-engine --lhc
calc_id | num_jobs | latest_job_status | last_update | description
1 | 1 | failed | 2013-03-01 09:49:34 | Classical PSHA
2 | 1 | successful | 2013-03-01 09:49:56 | Classical PSHA
3 | 1 | failed | 2013-03-01 10:24:04 | Classical PSHA
4 | 1 | failed | 2013-03-01 10:28:16 | Classical PSHA
5 | 1 | failed | 2013-03-01 10:30:04 | Classical PSHA
6 | 1 | successful | 2013-03-01 10:31:53 | Classical PSHA
7 | 1 | failed | 2013-03-09 08:15:14 | Classical PSHA
8 | 1 | successful | 2013-03-09 08:18:04 | Classical PSHA
```

Subsequently the user can get the list of result stored for a specific hazard analysis as in the example below (note that the number in blue emphasizes the result ID):

```
user@ubuntu:~$ oq-engine --lho <calc_id>
id | output_type | name
3 | hazard_curve | hc-rlz-6
```

and finally extract an xml file for a specific hazard result:

```
user@ubuntu:~$ oq-engine --eh <result_id> <path_to_the_output_folder>
```

4.3 Description of hazard outputs

The results generated by the OpenQuake-engine are fundamentally of two distinct typologies differentiated by the presence (or absence) of epistemic uncertainty in the PSHA input model.

When epistemic uncertainty is incorporated into the calculation, the OpenQuake-engine calculators (e.g. Classical PSHA, Event Based PSHA, Disaggregation, UHS) produce a set of results (i.e. hazard curves, ground motion fields, disaggregation matrices, UHS, for each logic-tree realisation) which reflects epistemic uncertainties introduced in the PSHA input model.

For each logic tree sample, results are computed and stored. Calculation of results statistics (mean, standard deviation, quantiles) are supported by all the calculators, with the exception of the disaggregation calculator.

4.3.1 Outputs from Classical PSHA

By default, the classical PSHA calculator computes and stores hazard curves for each logic tree sample considered.

When the PSHA input model doesn't contain epistemic uncertainties the results is a set of hazard curves (one for each investigated site). The command below illustrates how is possible to retrieve the group of hazard curves obtained for a calculation with a given identifier `<calc_id>` (see Section 4.2 for an explanation about how to obtain the list of calculations performed with their corresponding ID):

```
user@ubuntu:~$ oq-engine --lho <calc_id>
id | output_type | name
3 | hazard_curve | hc-rlz-6
```

In this case the oq-engine computed a group of hazard curves with result ID equal to 3. On the contrary, if the parameter `number_of_logic_tree_samples` in the configuration file is different than zero, then N hazard curves files are generated. The example below shows this case:

```
user@ubuntu:~$ oq-engine --lho <calc_id>
id | output_type | name
5 | hazard_curve | hc-rlz-10
6 | hazard_curve | hc-rlz-7
7 | hazard_curve | hc-rlz-8
8 | hazard_curve | hc-rlz-9
9 | hazard_curve | hc-rlz-11
10 | hazard_curve | hc-rlz-12
```

If we export from the database the hazard curves contained in one of the items above using the following command:

```
user@ubuntu:~$ oq-engine --eh <output_id> <output_directory>
```

we obtain a nrml formatted file as represented in the example in the inset below:

```
<?xml version='1.0' encoding='UTF-8'?>
<nrmr xmlns:gml="http://www.opengis.net/gml"
      xmlns="http://openquake.org/xmlns/nrml/0.4">
  <hazardCurves sourceModelTreePath="b1|b212"
    gsimTreePath="b2" IMT="PGA" investigationTime="50.0">
    <IMLs>0.005 0.007 0.0098 ... 1.09 1.52 2.13</IMLs>
    <hazardCurve>
      <gml:Point>
        <gml:pos>10.0 45.0</gml:pos>
      </gml:Point>
      <poEs>1.0 1.0 1.0 ... 0.000688359310522 0.0 0.0</poEs>
    </hazardCurve>
    ...
    <hazardCurve>
      <gml:Point>
        <gml:pos>lon lat</gml:pos>
      </gml:Point>
      <poEs>poe1 poe2 ... poeN</poEs>
    </hazardCurve>
  </hazardCurves>
</nrmr>
```

Notwithstanding the intuitiveness of this file, let's have a brief overview of the information included.

The overall content of this file is a list of hazard curves, one for each investigated site, computed using a PSHA input model representing one possible realisation obtained using the complete logic tree structure.

The attributes of the `hazardCurves` element (see text in red) specify the path of the logic tree used to create the seismic source model (`sourceModelTreePath`) and the ground motion model (`gsimTreePath`) plus the intensity measure type and the investigation time used to compute the probability of exceedance.

The `IMLs` element (in green in the example) contains the values of shaking used by the engine to compute the probability of exceedance in the investigation time. For each site this file contains a `hazardCurve` element which has the coordinates (longitude and latitude in decimal degrees) of the site and the values of the probability of exceedance for all the intensity measure levels specified in the `IMLs` element.

If in the configuration file the calculation of mean hazard curves and hazard curves

corresponding to one or several percentiles have been specified, the list of outputs that we should expect from the OpenQuake-engine corresponds to:

```
user@ubuntu:~$ oq-engine --lho <calc_id>
id | output_type | name
17 | hazard_curve | hc-rlz-17
18 | hazard_curve | hc-rlz-18
19 | hazard_curve | hc-rlz-13
20 | hazard_curve | hc-rlz-14
21 | hazard_curve | hc-rlz-15
22 | hazard_curve | hc-rlz-16
23 | hazard_curve | quantile(0.5)-curves-PGA
24 | hazard_map | hazard-map(0.1)-PGA-rlz-17
25 | hazard_map | hazard-map(0.1)-PGA-rlz-18
26 | hazard_map | hazard-map(0.1)-PGA-rlz-13
27 | hazard_map | hazard-map(0.1)-PGA-rlz-14
28 | hazard_map | hazard-map(0.1)-PGA-rlz-15
29 | hazard_map | hazard-map(0.1)-PGA-rlz-16
30 | hazard_map | hazard-map(0.1)-PGA-quantile(0.5)
```

In this example the oq-engine produced hazard curves and hazard maps for six logic tree realisations plus median hazard curves and the median hazard map (both highlighted in red).

The following inset shows a sample of the nrml file used to describe a hazard map:

```
<?xml version='1.0' encoding='UTF-8'?>
<nrml xmlns:gml="http://www.opengis.net/gml"
      xmlns="http://openquake.org/xmlns/nrml/0.4">
  <hazardMap sourceModelTreePath="b1" gsimTreePath="b1"
              IMT="PGA" investigationTime="50.0" poE="0.1">
    <node lon="119.596690957" lat="21.5497682591" iml="0.204569990197"/>
    <node lon="119.596751048" lat="21.6397004197" iml="0.212391638188"/>
    <node lon="119.596811453" lat="21.7296325803" iml="0.221407505615"/>
    ...
  </hazardMap>
</nrml>
```

4.3.2 Outputs from Hazard Disaggregation

The oq-engine output of a disaggregation analysis corresponds to the combination of a hazard curve and a multidimensional matrix containing the results of the disaggregation.

The example below shows the list of disaggregation results obtained for four logic tree realisations.

For each realisation, disaggregation has been completed for two intensity measure levels corresponding to different probabilities of exceedence in the specified investigation time.

```
user@ubuntu:~$ oq-engine --lho <calc_id>
id | output_type | name
19 | hazard_curve | hc-rlz-3
20 | hazard_curve | hc-rlz-3
21 | hazard_curve | hc-rlz-4
22 | hazard_curve | hc-rlz-4
23 | disagg_matrix | disagg(0.02)-rlz-3-SA(0.025)-POINT(10.1 40.1)
24 | disagg_matrix | disagg(0.1)-rlz-3-SA(0.025)-POINT(10.1 40.1)
25 | disagg_matrix | disagg(0.02)-rlz-3-PGA-POINT(10.1 40.1)
26 | disagg_matrix | disagg(0.1)-rlz-3-PGA-POINT(10.1 40.1)
27 | disagg_matrix | disagg(0.02)-rlz-4-SA(0.025)-POINT(10.1 40.1)
28 | disagg_matrix | disagg(0.1)-rlz-4-SA(0.025)-POINT(10.1 40.1)
29 | disagg_matrix | disagg(0.02)-rlz-4-PGA-POINT(10.1 40.1)
30 | disagg_matrix | disagg(0.1)-rlz-4-PGA-POINT(10.1 40.1)
```

In the following inset we show an example of the nrml file used to represent the different disaggregation matrices (highlighted in red) produced by OpenQuake-engine:

```
<?xml version='2.0' encoding='UTF-8'?>
<nrml xmlns:gml="http://www.opengis.net/gml"
       xmlns="http://openquake.org/xmlns/nrml/0.4">
  <disaggMatrices sourceModelTreePath="b1" gsimTreePath="b1" IMT="PGA"
    investigationTime="50.0" lon="10.1" lat="40.1"
    magBinEdges="5.0, 6.0, 7.0, 8.0"
    distBinEdges="0.0, 25.0, 50.0, 75.0, 100.0"
    lonBinEdges="9.0, 10.5, 12.0"
    latBinEdges="39.0, 40.5"
    pdfBinEdges="-3.0, -1.0, 1.0, 3.0"
    tectonicRegionTypes="Active Shallow Crust">
    <disaggMatrix type="Mag" dims="3" poE="0.1"
      iml="0.033424622602">
      <prob index="0" value="0.987374744394"/>
      <prob index="1" value="0.704295394366"/>
      <prob index="2" value="0.0802318409498"/>
    </disaggMatrix>
    <disaggMatrix type="Dist" dims="4" poE="0.1"
      iml="0.033424622602">
      <prob index="0" value="0.700851969171"/>
      <prob index="1" value="0.936680387051"/>
```

```

<prob index="2" value="0.761883595568"/>
<prob index="3" value="0.238687565571"/>
</disaggMatrix>
<disaggMatrix type="TRT" dims="1" poE="0.1"
    iml="0.033424622602">
    <prob index="0" value="0.996566187011"/>
</disaggMatrix>
<disaggMatrix type="Mag,Dist" dims="3,4" poE="0.1"
    iml="0.033424622602">
    <prob index="2,3" value="0.0"/>
</disaggMatrix>
<disaggMatrix type="Mag,Dist,pdf" dims="3,4,3" poE="0.1"
    iml="0.033424622602">
    <prob index="0,0,0" value="0.0785857271425"/>
    ...
</disaggMatrix>
<disaggMatrix type="Lon,Lat" dims="2,1" poE="0.1"
    iml="0.033424622602">
    <prob index="0,0" value="0.996566187011"/>
    <prob index="1,0" value="0.0"/>
</disaggMatrix>
<disaggMatrix type="Mag,Lon,Lat" dims="3,2,1" poE="0.1"
    iml="0.033424622602">
    <prob index="0,0,0" value="0.987374744394"/>
    <prob index="0,1,0" value="0.0"/>
    <prob index="1,0,0" value="0.704295394366"/>
    <prob index="1,1,0" value="0.0"/>
    <prob index="2,0,0" value="0.0802318409498"/>
    <prob index="2,1,0" value="0.0"/>
</disaggMatrix>
<disaggMatrix type="Lon,Lat,TRT" dims="2,1,1" poE="0.1"
    iml="0.033424622602">
    <prob index="0,0,0" value="0.996566187011"/>
    <prob index="1,0,0" value="0.0"/>
</disaggMatrix>
</disaggMatrices>
</nrml>

```

4.3.3 Outputs from Event Based PSHA

The Event Based PSHA calculator computes and stores stochastic event sets and the corresponding ground motion fields.

This calculator can also produce hazard curves and hazard maps exactly in the same way as done using the Classical PSHA calculator.

The inset below shows an example of the list of results provided by the oq-engine at the end of an event-based PSHA calculation:

```
user@ubuntu:~$ oq-engine --lho <calc_id>
id | output_type | name
31 | ses | ses-coll-rlz-19
32 | gmf | gmf-rlz-19
33 | ses | ses-coll-rlz-20
34 | gmf | gmf-rlz-20
35 | hazard_curve | hazard-curve-rlz-19-SA(0.1)
36 | hazard_curve | hazard-curve-rlz-20-SA(0.1)
37 | hazard_curve | hazard-curve-rlz-19-PGA
38 | hazard_curve | hazard-curve-rlz-20-PGA
39 | hazard_curve | mean curve for SA(0.1)
40 | hazard_curve | quantile curve (poe >= 0.15) for imt SA(0.1)
41 | hazard_curve | quantile curve (poe >= 0.50) for imt SA(0.1)
42 | hazard_curve | quantile curve (poe >= 0.85) for imt SA(0.1)
43 | hazard_curve | mean curve for PGA
44 | hazard_curve | quantile curve (poe >= 0.15) for imt PGA
45 | hazard_curve | quantile curve (poe >= 0.50) for imt PGA
46 | hazard_curve | quantile curve (poe >= 0.85) for imt PGA
```

This list in the inset above contains two sets of stochastic events (in red) and two sets of ground motion fields (in blue).

The whole group of stochastic event set and ground motion fields can be exported immediately using the results with id 35 and 25, respectively.

Below is an example showing a nrml file containing a collection of stochastic event sets (2 ruptures):

```
<?xml version='1.0' encoding='UTF-8'?>
<nrmrl xmlns:gml="http://www.opengis.net/gml"
         xmlns="http://openquake.org/xmlns/nrml/0.4">
  <stochasticEventSetCollection sourceModelTreePath="b1"
    gsimTreePath="b1">
    <stochasticEventSet id="12" investigationTime="50.0">
      <rupture id="533" magnitude="4.55" strike="90.0" dip="90.0"
                rake="90.0" tectonicRegion="Active Shallow Crust">
        <planarSurface>
          <topLeft lon="12.233903801" lat="43.256198599"
                    depth="11.3933265259"/>
          <topRight lon="12.263958243" lat="43.2562025344"
                     depth="11.3933265259"/>
          <bottomLeft lon="12.233903801" lat="43.256198599"
                      depth="12.6066734741"/>
```

```

<bottomRight lon="12.263958243" lat="43.2562025344"
              depth="12.6066734741"/>
</planarSurface>
</rupture>
<rupture id="535" magnitude="4.65" strike="135.0" dip="90.0"
          rake="90.0" tectonicRegion="Active Shallow Crust">
<planarSurface>
  <topLeft lon="11.45858812" lat="42.7429056814"
            depth="11.3208667302"/>
  <topRight lon="11.4822820715" lat="42.7256333907"
            depth="11.3208667302"/>
  <bottomLeft lon="11.45858812" lat="42.7429056814"
            depth="12.6791332698"/>
  <bottomRight lon="11.4822820715" lat="42.7256333907"
            depth="12.6791332698"/>
</planarSurface>
</rupture>
</stochasticEventSet>
</stochasticEventSetCollection>
</nrml>

```

The text in red shows the part which describes the id of the generated stochastic event set and the investigation time covered.

The text in green emphasises the portion of the text used to describe a rupture. The information provided describes entirely the geometry of the rupture as well as its rupturing properties (e.g. rake, magnitude).

This is an example of a nrml file containing one ground motion field:

```

<?xml version='1.0' encoding='UTF-8'?>
<nrml xmlns:gml="http://www.opengis.net/gml"
      xmlns="http://openquake.org/xmlns/nrml/0.4">
  <gmfCollection sourceModelTreePath="b1" gsimTreePath="b1">
    <gmfSet investigationTime="50.0" stochasticEventSetId="12">
      <gmf IMT="PGA" ruptureId="533">
        <node gmv="0.0105891230432" lon="11.1240023202"
              lat="43.5107462335"/>
        <node gmv="0.00905803920023" lon="11.1241875202"
              lat="43.6006783941"/>
        <node gmv="0.00637664420977" lon="11.1243735810"
              lat="43.6906105547"/>
        <node gmv="0.00476533134789" lon="11.1245605075"
              lat="43.7805427153"/>
        <node gmv="0.00452594698469" lon="11.1247483046"
              lat="43.8704748759"/>
    </gmfSet>
  </gmfCollection>
</nrml>

```

```
...
<node gmv="0.00017301076646" lon="11.3782630185"
      lat="44.5129482397"/>
</gmf>
</gmfSet>
</gmfCollection>
</nrml>
```

Classical PSHA Demos

Classical PSHA with different source typologies

Classical PSHA with non trivial logic trees

Hazard Disaggregation Demos

Event Based PSHA Demos

5. Demonstrative Examples

A number of hazard calculation demos are provided with the oq-engine installation, showing different examples of input and configuration files, for different use cases.

This is the list of demos which illustrate how to use the oq-engine for various seismic hazard analysis:

- AreaSourceClassicalPSHA
- CharacteristicFaultSourceCase1ClassicalPSHA
- CharacteristicFaultSourceCase2ClassicalPSHA
- CharacteristicFaultSourceCase3ClassicalPSHA
- ComplexFaultSourceClassicalPSHA
- Disaggregation
- EventBasedPSHA
- LogicTreeCase1ClassicalPSHA
- LogicTreeCase2ClassicalPSHA
- LogicTreeCase3ClassicalPSHA
- PointSourceClassicalPSHA
- SimpleFaultSourceClassicalPSHA

5.1 Classical PSHA Demos

A number of demos have been designed to show how to perform a classical PSHA calculation using the different available source typologies and how to define non-trivial logic trees. It should be noted that the input files that will be illustrated are valid not only for a classical PSHA calculation but also for event based and disaggregation analysis.

All the classical PSHA demos illustrating the different source typologies (all demos but the ones about Logic Tree definition) share the same GSIM logic tree file, which for clarity is provided below.

Since this logic tree consideres only one tectonic region (i.e. Active Shallow Crust) all the seismic sources will belong be considered active shallow crust sources.

```

<?xml version="1.0" encoding="UTF-8"?>

<nrml xmlns:gml="http://www.opengis.net/gml"
       xmlns="http://openquake.org/xmlns/nrml/0.4">
  <logicTree logicTreeID='lt1'>

    <logicTreeBranchingLevel branchingLevelID="bl1">
      <logicTreeBranchSet
        uncertaintyType="gmpeModel"
        applyToTectonicRegionType="Active Shallow Crust"
        branchSetID="bs1">

        <logicTreeBranch branchID="b1">
          <uncertaintyModel>
            BooreAtkinson2008
          </uncertaintyModel>
          <uncertaintyWeight>1.0</uncertaintyWeight>
        </logicTreeBranch>

      </logicTreeBranchSet>
    </logicTreeBranchingLevel>

  </logicTree>
</nrml>
```

5.1.1 Classical PSHA with different source typologies

This section discusses the following examples:

- AreaSourceClassicalPSHA
- CharacteristicFaultSourceCase1ClassicalPSHA
- CharacteristicFaultSourceCase2ClassicalPSHA
- CharacteristicFaultSourceCase3ClassicalPSHA
- ComplexFaultSourceClassicalPSHA
- PointSourceClassicalPSHA
- SimpleFaultSourceClassicalPSHA

The configuration file (see below) is defined to compute hazard curves for several intensity measure types (PGV, PGA and Spectral acceleration at different periods), hazard maps and uniform hazard spectra for different probabilities of exceedance:

```
[general]
description = ...
calculation_mode = classical
random_seed = 23

[geometry]
region = ...
region_grid_spacing = 5.0

[logic_tree]
number_of_logic_tree_samples = 0

[erf]
rupture_mesh_spacing = 2
width_of_mfd_bin = 0.1
area_source_discretization = 5.0

[site_params]
reference_vs30_type = measured
reference_vs30_value = 600.0
reference_depth_to_2pt5km_per_sec = 5.0
reference_depth_to_1pt0km_per_sec = 100.0

[calculation]
source_model_logic_tree_file = source_model_logic_tree.xml
gsim_logic_tree_file = gmpe_logic_tree.xml
investigation_time = 50.0
intensity_measure_types_and_levels ={  
    "PGV": [2, 4, 6 ,8, 10, ...],  
    "PGA": [0.005, 0.007, ...],  
    "SA(0.025)": [...],  
    "SA(0.05)": [...],  
    "SA(0.1)": [...],  
    "SA(0.2)": [...],  
    "SA(0.5)": [...],  
    "SA(1.0)": [...],  
    "SA(2.0)": [...]}  
truncation_level = 3  
maximum_distance = 200.0
```

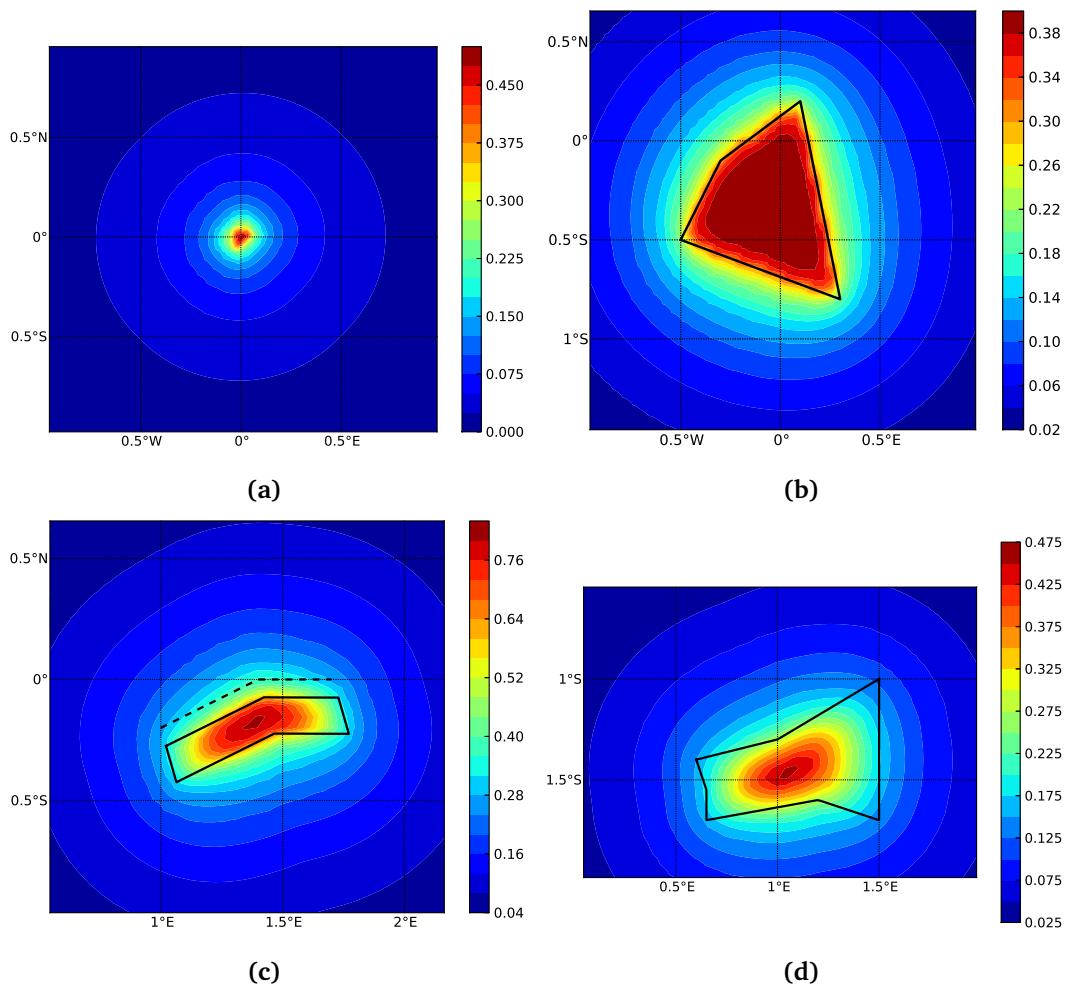


Figure 5.1 – Hazard maps (for PGA, 10% in 50 years) as obtained from the different oq-engine source typologies. (a) Point Source. (b) Area source. The solid black line represents the area boundary. (c) Simple Fault Source. The dashed line represents the fault trace, while the solid line the fault surface projection. (d) Complex Fault Source. The solid line represent the fault surface projection (d)

```
[output]
export_dir = ...
mean_hazard_curves = false
quantile_hazard_curves =
hazard_maps = true
uniform_hazard_spectra = true
poes = 0.1 0.02
```

Hazard maps for the different demos are shown in Figure 5.1 and Figure 5.2.



Figure 5.2 – Hazard maps (for PGA, 10% in 50 years) as obtained from characteristic fault sources with simple fault geometry (e), complex fault geometry (f), and collection of planar surfaces (g)

5.1.2 Classical PSHA with non trivial logic trees

Three demos are provided to illustrate how the logic tree formalism can be used to express epistemic uncertainties in seismic hazard analysis.

LogicTreeCase1ClassicalPSHA shows an example of logic tree defining two alternative source models, with sources belonging to two different tectonic region types, and with two alternative GMPEs for each tectonic region type. The source model logic tree is therefore defined in the following way:

```

<?xml version="1.0" encoding="UTF-8"?>
<nrmr xmlns:gml="http://www.opengis.net/gml"
      xmlns="http://openquake.org/xmlns/nrml/0.4">
  <logicTree logicTreeID="lt1">

    <logicTreeBranchingLevel branchingLevelID="bl1">

      <logicTreeBranchSet uncertaintyType="sourceModel"
                           branchSetID="bs1">
        <logicTreeBranch branchID="b1">
          <uncertaintyModel>
            source_model_1.xml
          </uncertaintyModel>
          <uncertaintyWeight>0.5</uncertaintyWeight>
        </logicTreeBranch>
        <logicTreeBranch branchID="b2">
          <uncertaintyModel>
            source_model_2.xml
          </uncertaintyModel>
          <uncertaintyWeight>0.5</uncertaintyWeight>
        </logicTreeBranch>
      </logicTreeBranchSet>

    </logicTreeBranchingLevel>

  </logicTree>
</nrmr>
```

The two source models are defined in two separate files: `source_model_1.xml` and `source_model_2.xml` each one associated to a corresponding weight (0.5 for both).

The GSIM logic tree file contains the following structure:

```
<?xml version="1.0" encoding="UTF-8"?>

<nrmrl xmlns:gml="http://www.opengis.net/gml"
         xmlns="http://openquake.org/xmlns/nrml/0.4">
    <logicTree logicTreeID='lt1'>

        <logicTreeBranchingLevel branchingLevelID="bl1">
            <logicTreeBranchSet uncertaintyType="gmpeModel"
                applyToTectonicRegionType="Active Shallow Crust"
                branchSetID="bs1">
                <logicTreeBranch branchID="b11">
                    <uncertaintyModel>
                        BooreAtkinson2008
                    </uncertaintyModel>
                    <uncertaintyWeight>0.5</uncertaintyWeight>
                </logicTreeBranch>
                <logicTreeBranch branchID="b12">
                    <uncertaintyModel>
                        ChiouYoungs2008
                    </uncertaintyModel>
                    <uncertaintyWeight>0.5</uncertaintyWeight>
                </logicTreeBranch>
            </logicTreeBranchSet>
        </logicTreeBranchingLevel>

        <logicTreeBranchingLevel branchingLevelID="bl2">
            <logicTreeBranchSet uncertaintyType="gmpeModel"
                applyToTectonicRegionType="Stable Continental Crust"
                branchSetID="bs2">
                <logicTreeBranch branchID="b21">
                    <uncertaintyModel>
                        ToroEtAl2002</uncertaintyModel>
                    <uncertaintyWeight>0.5</uncertaintyWeight>
                </logicTreeBranch>
                <logicTreeBranch branchID="b22">
                    <uncertaintyModel>
                        Campbell2003</uncertaintyModel>
                    <uncertaintyWeight>0.5</uncertaintyWeight>
                </logicTreeBranch>
            </logicTreeBranchSet>
        </logicTreeBranchingLevel>
    </logicTree>
```

```

        </logicTreeBranchSet>
    </logicTreeBranchingLevel>

    </logicTree>
</nrml>

```

The source model contains sources belonging to Active Shallow Crust and Stable Continental Crust, therefore the GSIM logic tree defines two branching levels, one for each considered tectonic region type. Moreover for each tectonic region a branch set with two GMPEs is defined: Boore and Atkinson 2008 and Chiou and Youngs 2008 for Active Shallow Crust and Toro et al. 2003 and Campbell 2003 for Stable Continental Crust. By processing the above logic tree files using the logic tree path enumeration mode (enabled by setting in the configuration file `number_of_logic_tree_samples = 0`) hazard results are computed for 8 logic tree paths (2 source models x 2 GMPEs for Active x 2 GMPEs for Stable).

LogicTreeCase2ClassicalPSHA defines a single source model consisting of only two sources (area and simple fault) belonging to different tectonic region types (Active Shallow Crust and Stable Continental Region) and both characterized by a truncated Gutenberg-Richter distribution. The logic tree defines uncertainties for G-R a and b values (three possible pairs for each source), maximum magnitude (three values for each source) and uncertainties on the GMPEs for each tectonic region type (two GMPE per region type).

To accommodate such a structure the GSIM logic tree is defined in the following way:

```

<?xml version="1.0" encoding="UTF-8"?>
<nrml xmlns:gml="http://www.opengis.net/gml"
       xmlns="http://openquake.org/xmlns/nrml/0.4">
    <logicTree logicTreeID="lt1">

        <logicTreeBranchingLevel branchingLevelID="bl1">
            <logicTreeBranchSet uncertaintyType="sourceModel"
                                branchSetID="bs1">
                <logicTreeBranch branchID="b11">
                    <uncertaintyModel>
                        source_model.xml
                    </uncertaintyModel>
                    <uncertaintyWeight>1.0</uncertaintyWeight>
                </logicTreeBranch>
            </logicTreeBranchSet>
        </logicTreeBranchingLevel>

        <logicTreeBranchingLevel branchingLevelID="bl2">

```

```
<logicTreeBranchSet uncertaintyType="abGRAbsolute"
    applyToSources="1"
    branchSetID="bs21">
    <logicTreeBranch branchID="b21">
        <uncertaintyModel>4.6 1.1</uncertaintyModel>
        <uncertaintyWeight>0.333</uncertaintyWeight>
    </logicTreeBranch>
    <logicTreeBranch branchID="b22">
        <uncertaintyModel>4.5 1.0</uncertaintyModel>
        <uncertaintyWeight>0.333</uncertaintyWeight>
    </logicTreeBranch>
    <logicTreeBranch branchID="b23">
        <uncertaintyModel>4.4 0.9</uncertaintyModel>
        <uncertaintyWeight>0.334</uncertaintyWeight>
    </logicTreeBranch>
</logicTreeBranchSet>
</logicTreeBranchingLevel>

<logicTreeBranchingLevel branchingLevelID="bl3">
    <logicTreeBranchSet uncertaintyType="abGRAbsolute"
        applyToSources="2"
        branchSetID="bs31">
        <logicTreeBranch branchID="b31">
            <uncertaintyModel>3.3 1.0</uncertaintyModel>
            <uncertaintyWeight>0.333</uncertaintyWeight>
        </logicTreeBranch>
        <logicTreeBranch branchID="b32">
            <uncertaintyModel>3.2 0.9</uncertaintyModel>
            <uncertaintyWeight>0.333</uncertaintyWeight>
        </logicTreeBranch>
        <logicTreeBranch branchID="b33">
            <uncertaintyModel>3.1 0.8</uncertaintyModel>
            <uncertaintyWeight>0.334</uncertaintyWeight>
        </logicTreeBranch>
    </logicTreeBranchSet>
</logicTreeBranchingLevel>

<logicTreeBranchingLevel branchingLevelID="bl4">
    <logicTreeBranchSet uncertaintyType="maxMagGRAbsolute">
```


```

        applyToSources="1"
        branchSetID="bs41">
    <logicTreeBranch branchID="b41">
        <uncertaintyModel>7.0</uncertaintyModel>
        <uncertaintyWeight>0.333</uncertaintyWeight>
    </logicTreeBranch>
    <logicTreeBranch branchID="b42">
        <uncertaintyModel>7.3</uncertaintyModel>
        <uncertaintyWeight>0.333</uncertaintyWeight>
    </logicTreeBranch>
    <logicTreeBranch branchID="b43">
        <uncertaintyModel>7.6</uncertaintyModel>
        <uncertaintyWeight>0.334</uncertaintyWeight>
    </logicTreeBranch>
</logicTreeBranchSet>
</logicTreeBranchingLevel>

<logicTreeBranchingLevel branchingLevelID="bl5">
    <logicTreeBranchSet uncertaintyType="maxMagGRAbsolute"
        applyToSources="2"
        branchSetID="bs51">
        <logicTreeBranch branchID="b51">
            <uncertaintyModel>7.5</uncertaintyModel>
            <uncertaintyWeight>0.333</uncertaintyWeight>
        </logicTreeBranch>
        <logicTreeBranch branchID="b52">
            <uncertaintyModel>7.8</uncertaintyModel>
            <uncertaintyWeight>0.333</uncertaintyWeight>
        </logicTreeBranch>
        <logicTreeBranch branchID="b53">
            <uncertaintyModel>8.0</uncertaintyModel>
            <uncertaintyWeight>0.334</uncertaintyWeight>
        </logicTreeBranch>
    </logicTreeBranchSet>
</logicTreeBranchingLevel>

</logicTree>
</nrml>
```

The first branching level defines the source model. For each source, two branching

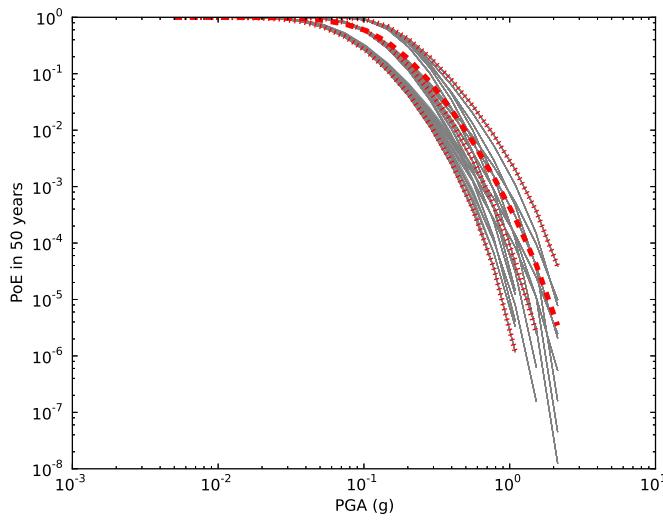

(a)

Figure 5.3 – Hazard curves as obtained from the LogicTreeCase2 demo. Solid gray lines represent individual hazard curves from the different logic tree path (a total of 324 curves). The red dashed line represents the mean hazard curve, while the red dotted lines depict the quantile levels (0.15, 0.5, 0.95).

levels are created, one defining uncertainties on G-R a and b values (defined by setting uncertaintyType="abGRAbsolute") and G-R maximum magnitude (uncertaintyType="maxMagGRAbsolute").

It is important to notice that each branch set is applied to a specific source by defining the attribute applyToSources, followed by the source ID. The GSIM logic tree file is the same as used for LogicTreeCase1ClassicalPSHA. By setting in the configuration file number_of_logic_tree_samples = 0, hazard results are obtained for 324 paths (1 source model x 3 (a, b) pairs for source 1 x 3 (a, b) pairs for source 2 x 3 max magnitude values for source 1 x 3 max magnitude values for source 2 x 2 GMPEs for Active Shallow Crust X 2 GMPEs for Stable Continental Crust), see Figure 5.3.

LogicTreeCase3ClassicalPSHA illustrates an example of logic tree defining relative uncertainties on G-R maximum magnitude and b value. A single source model is considered containing two sources belonging to different tectonic region types and both characterized by a G-R magnitude frequency distribution. The source model logic tree is as follows:

```
<?xml version="1.0" encoding="UTF-8"?>
<nrmrl xmlns:gml="http://www.opengis.net/gml"
         xmlns="http://openquake.org/xmlns/nrml/0.4">
    <logicTree logicTreeID="lt1">

        <logicTreeBranchingLevel branchingLevelID="bl1">
            <logicTreeBranchSet uncertaintyType="sourceModel"
                                branchSetID="bs1">
```

```
<logicTreeBranch branchID="b11">
    <uncertaintyModel>
        source_model.xml
    </uncertaintyModel>
    <uncertaintyWeight>1.0</uncertaintyWeight>
</logicTreeBranch>
</logicTreeBranchSet>
</logicTreeBranchingLevel>

<logicTreeBranchingLevel branchingLevelID="bl2">
    <logicTreeBranchSet uncertaintyType="bGRRelative"
        branchSetID="bs21">
        <logicTreeBranch branchID="b21">
            <uncertaintyModel>+0.1</uncertaintyModel>
            <uncertaintyWeight>0.333</uncertaintyWeight>
        </logicTreeBranch>
        <logicTreeBranch branchID="b22">
            <uncertaintyModel>0.0</uncertaintyModel>
            <uncertaintyWeight>0.333</uncertaintyWeight>
        </logicTreeBranch>
        <logicTreeBranch branchID="b23">
            <uncertaintyModel>-0.1</uncertaintyModel>
            <uncertaintyWeight>0.334</uncertaintyWeight>
        </logicTreeBranch>
    </logicTreeBranchSet>
</logicTreeBranchingLevel>

<logicTreeBranchingLevel branchingLevelID="bl3">
    <logicTreeBranchSet uncertaintyType="maxMagGRRelative"
        branchSetID="bs31">
        <logicTreeBranch branchID="b31">
            <uncertaintyModel>0.0</uncertaintyModel>
            <uncertaintyWeight>0.333</uncertaintyWeight>
        </logicTreeBranch>
        <logicTreeBranch branchID="b32">
            <uncertaintyModel>+0.5</uncertaintyModel>
            <uncertaintyWeight>0.333</uncertaintyWeight>
        </logicTreeBranch>
        <logicTreeBranch branchID="b33">
```

```
<uncertaintyModel>+1.0</uncertaintyModel>
<uncertaintyWeight>0.334</uncertaintyWeight>
</logicTreeBranch>
</logicTreeBranchSet>
</logicTreeBranchingLevel>

</logicTree>
</nrml>
```

After the first branching level defining the source model, two additional branching levels are defined, one defining relative uncertainties on b value (bGRRelative applied consistently to all sources in the source model) and the second uncertainties on maximum magnitude (maxMagGRRelative). Similar to the other cases, two GMPEs are considered for each tectonic region type and therefore the total number of logic tree path is 36 (1 source model x 3 b value increments x 3 maximum magnitude increments x 2 GMPE for Active x 2 GMPEs for Stable).

5.2 Hazard Disaggregation Demos

An example of disaggregation calculation is given considering a source model consisting of two sources (area and simple fault) belonging to two different tectonic region types.

The calculation is defined with the following configuration file:

```
[general]
description = ...
calculation_mode = disaggregation
random_seed = 23

[geometry]
sites = 0.5 -0.5

[logic_tree]
number_of_logic_tree_samples = 0

[erf]
rupture_mesh_spacing = 2
width_of_mfd_bin = 0.1
area_source_discretization = 5.0

[site_params]
```

```

reference_vs30_type = measured
reference_vs30_value = 600.0
reference_depth_to_2pt5km_per_sec = 5.0
reference_depth_to_1pt0km_per_sec = 100.0

[calculation]
source_model_logic_tree_file = source_model_logic_tree.xml
gsim_logic_tree_file = gmpe_logic_tree.xml
investigation_time = 50.0
intensity_measure_types_and_levels = "PGA": [...]
truncation_level = 3
maximum_distance = 200.0

[disaggregation]
poes_disagg = 0.1
mag_bin_width = 1.0
distance_bin_width = 10.0
coordinate_bin_width = 0.2
num_epsilon_bins = 3

[output]
export_dir = ...

```

Disaggregation matrices are computed for a single site (located between the two sources) for a ground motion value corresponding to a probability value equal to 0.1 (poes_disagg = 0.1). Magnitude values are classified in one magnitude unit bins (mag_bin_width = 1.0), distances in bins of 10 km (distance_bin_width = 10.0), coordinates in bins of 0.2 degrees (coordinate_bin_width = 0.2). 3 epsilon bins are considered (num_epsilon_bins = 3).

5.3 Event Based PSHA Demos

A demo showing an example of Event Based PSHA calculation is provided with the following configuration file:

```

[general]
description = Event Based PSHA using Area Source
calculation_mode = event_based
random_seed = 23

```

```
[geometry]
sites = 0.5 -0.5

[logic_tree]
number_of_logic_tree_samples = 0

[erf]
rupture_mesh_spacing = 2
width_of_mfd_bin = 0.1
area_source_discretization = 5.0

[site_params]
reference_vs30_type = measured
reference_vs30_value = 600.0
reference_depth_to_2pt5km_per_sec = 5.0
reference_depth_to_1pt0km_per_sec = 100.0

[calculation]
source_model_logic_tree_file = source_model_logic_tree.xml
gsim_logic_tree_file = gmpe_logic_tree.xml
investigation_time = 50.0
intensity_measure_types_and_levels = "PGA": [...]
truncation_level = 3
maximum_distance = 200.0

[event_based_params]
ses_per_logic_tree_path = 100
ground_motion_correlation_model =
ground_motion_correlation_params =

[output]
export_dir = ...
ground_motion_fields = true
hazard_curves_from_gmfs = true
mean_hazard_curves = false
quantile_hazard_curves =
hazard_maps = true
poes = 0.1
```

The source model consist of one source (area). 100 stochastic event sets are generated

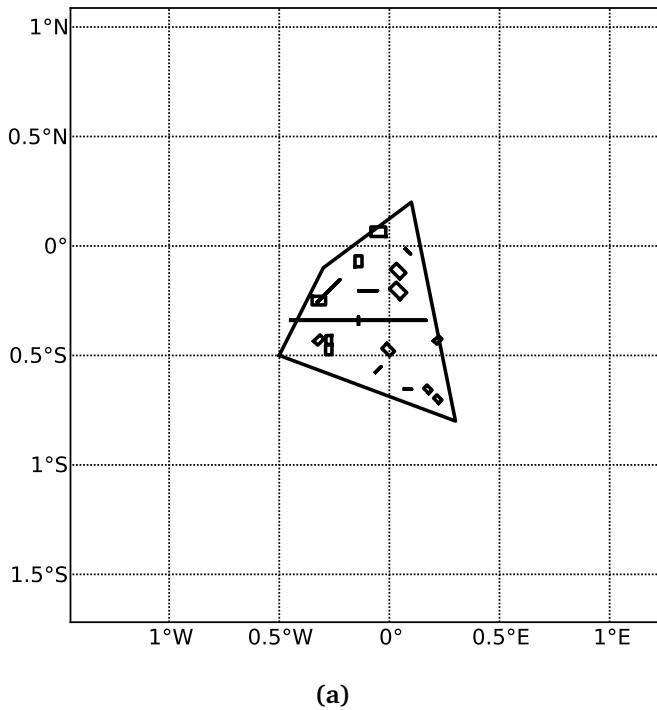


Figure 5.4 – A stochastic event set generated with the event based PSHA demo. The area source defines a nodal plane distribution which distributes events among vertical and dipping (50 degrees) faults with equal weights. Vertical ruptures are then distributed equally in the range 0-180 degrees while the dipping ones in the range 0-360, both with a step of 45 degrees.

(ses_per_logic_tree_path = 100) (an example can be seen in Figure 5.4). Ground motion fields are computed (ground_motion_fields = true, Figure 5.5) and also hazard curves from ground motion fields are extracted (hazard_curves_from_gmfss = true). The corresponding hazard maps for 0.1 probability are also calculated (hazard_maps = true)



Figure 5.5 – Ground motion fields (PGA) with no spatial correlations (a) and with spatial correlation (b)

Part III

Risk

Scenario Damage Assessment

Scenario Risk Assessment

Classical Probabilistic Seismic Damage Analysis

Classical Probabilistic Seismic Risk Analysis

Stochastic Event Based Probabilistic Seismic Risk Analysis

Retrofit Benefit-Cost Ratio Analysis

6. Introduction to the Risk Module

The seismic risk results are calculated using the OpenQuake risk library (oq-risklib), an open-source suite of tools for seismic risk assessment and loss estimation. This library is written in the Python programming language and available in the form of a “developers” release at the following location: <http://github.com/gem/oq-risklib>.

The risk component of the OpenQuake-engine can compute both scenario-based and probabilistic seismic damage and risk using various approaches. The following types of analysis are currently supported:

- **Scenario Damage Assessment**, for the calculation of damage distribution statistics for a portfolio of buildings from a single earthquake rupture scenario taking into account aleatory and epistemic ground-motion variability.
- **Scenario Risk Assessment**, for the calculation of individual asset and portfolio loss statistics due to a single earthquake rupture scenario taking into account aleatory and epistemic ground-motion variability. Correlation in the vulnerability of different assets of the same typology can also be taken into consideration.
- **Classical Probabilistic Seismic Damage Analysis**, for the calculation of damage state probabilities over a specified time period, and probabilistic collapse maps, starting from the hazard curves computed following the classical integration procedure (Cornell, 1968, McGuire (1976)) as formulated by Field et al., 2003.
- **Classical Probabilistic Seismic Risk Analysis**, for the calculation of loss curves and loss maps, starting from the hazard curves computed following the classical integration procedure (Cornell, 1968, McGuire (1976)) as formulated by Field et al., 2003.
- **Stochastic Event Based Probabilistic Seismic Risk Analysis**, for the calculation of event loss tables starting from stochastic event sets. Other results such as loss-exceedance curves, probabilistic loss maps, average annual losses, and insured loss statistics can be obtained by post- processing the event loss tables.

- **Retrofit Benefit-Cost Ratio Analysis**, which is useful in estimating the net-present value of the potential benefits of performing retrofitting for a portfolio of assets (in terms of decreased losses in seismic events), measured relative to the upfront cost of retrofitting.

Each calculation workflow has a modular structure, so that intermediate results can be exported and analyzed. Moreover, each calculator can be extended independently of the others so that additional calculation options and methodologies can be easily introduced, without affecting the overall calculation workflow. Each workflow is described in more detail in the following sections.

6.1 Scenario Damage Assessment

The scenario damage calculator computes damage distribution statistics for all assets in a given exposure model for a single specified earthquake rupture. Damage distribution statistics include the mean and standard deviation of damage fractions for different damage states. This calculator requires the definition of a finite rupture model, an exposure model and a fragility model; the main results are the damage distribution statistics per asset, aggregated damage distribution statistics per taxonomy, aggregated damage distribution statistics for the region, and collapse maps, which contain the spatial distribution of the number or area of collapsed buildings throughout the region of interest.

The rupture characteristics—i.e. the magnitude, hypocenter and fault geometry—are modelled as deterministic in the scenario calculators. Multiple realizations of different possible ground motion fields (GMFs) due to the single rupture are generated, taking into consideration both the inter-event variability of ground motions, and the intra-event residuals obtained from a spatial correlation model for ground motion residuals. The use of logic trees allows for the consideration of uncertainty in the choice of a ground motion model for the given tectonic region.

As an alternative to computing the GMFs with OpenQuake, users can also provide their own sets of GMFs as input to the scenario damage calculator.

For each GMF realization, damage fractions (the fraction of buildings in each damage state) are estimated for every asset in the exposure model using the provided fragility model, and finally the damage distribution statistics (i.e., the mean damage fractions and standard deviation of damage fractions for all damage states) across all realizations are calculated. The calculator also provides aggregated damage distribution statistics for the portfolio, such as mean damage fractions and standard deviation of damage fractions for each taxonomy in the exposure model, and the mean damage fractions and standard deviation of damage fractions for the entire region of study.

The required input files required for running a scenario damage calculation and the resulting output files are depicted in Figure 6.1.

Starting with OpenQuake-engine v1.7, consequence model files can also be provided



Figure 6.1 – Scenario Damage Calculator input/output structure.

as inputs for a scenario damage calculation in addition to fragility models files, in order to estimate consequences based on the calculated damage distribution. The user may provide one consequence model file corresponding to each loss type (amongst structural, nonstructural, contents, and business interruption) for which a fragility model file is provided. Whereas providing a fragility model file for at least one loss type is mandatory for running a Scenario Damage calculation, providing corresponding consequence model files is optional.

6.2 Scenario Risk Assessment

The scenario risk calculator computes loss statistics for all assets in a given exposure model for a single specified earthquake rupture. Loss statistics include the mean and standard deviation of ground-up losses and insured losses for each loss type considered in the analysis. Loss statistics can currently be computed for five different loss types using this calculator: structural losses, nonstructural losses, contents losses, downtime losses, and occupant fatalities. This calculator requires the definition of a finite rupture model, an exposure model and a vulnerability model for each loss type considered; the main results are the loss statistics per asset and mean loss maps.

The rupture characteristics—i.e. the magnitude, hypocenter and fault geometry—are modelled as deterministic in the scenario calculators. Multiple realizations of different possible ground motion fields (GMFs) due to the single rupture are generated, taking into consideration both the inter-event variability of ground motions, and the intra-event residuals obtained from a spatial correlation model for ground motion residuals. The use of logic trees allows for the consideration of uncertainty in the choice of a ground motion model for the given tectonic region.

As an alternative to computing the GMFs with OpenQuake, users can also provide their own sets of GMFs as input to the scenario risk calculator.

For each GMF realization, a loss ratio is sampled for every asset in the exposure model using the provided probabilistic vulnerability model, taking into consideration the correlation model for vulnerability of different assets of a given taxonomy. Finally loss statistics, i.e., the mean loss and standard deviation of loss for both ground-up losses and insured losses across all realizations, are calculated for each asset. Mean loss maps are also generated by this calculator, describing the mean ground-up losses and mean insured losses caused by the scenario event for the different assets in the exposure model.

The required input files required for running a scenario risk calculation and the resulting output files are depicted in Figure 6.2.



Figure 6.2 – Scenario Risk Calculator input/output structure.

6.3 Classical Probabilistic Seismic Damage Analysis

The classical PSHA-based damage calculator integrates the fragility functions for an asset with the seismic hazard curve at the location of the asset, to give the expected damage distribution for the asset within a specified time period. The calculator requires the definition of an exposure model, a fragility model for each taxonomy represented in the exposure model, and hazard curves calculated in the region of interest. The main results of this calculator are the expected damage distribution for each asset, which describe the probability of the asset being in different damage states, and collapse maps for the region, which describe the probability of collapse for different assets in the portfolio over the specified time period. Damage distribution aggregated by taxonomy or of the total portfolio (considering all assets in the exposure model) can not be extracted using this calculator, as the spatial correlation of the ground motion residuals is not taken into consideration.

The hazard curves required for this calculator can be calculated by the OpenQuake engine for all asset locations in the exposure model using the classical PSHA approach (Cornell, 1968; McGuire, 1976).

The required input files required for running a classical probabilistic damage calculation and the resulting output files are depicted in Figure 6.3.



Figure 6.3 – Classical PSHA-based Damage Calculator input/output structure.

6.4 Classical Probabilistic Seismic Risk Analysis

The classical PSHA-based risk calculator convolves through numerical integration, the probabilistic vulnerability functions for an asset with the seismic hazard curve at the location of the asset, to give the loss distribution for the asset within a specified time period. The calculator requires the definition of an exposure model, a vulnerability model for each loss type of interest with vulnerability functions for each taxonomy represented in the exposure model, and hazard curves calculated in the region of interest. Loss curves and loss maps can currently be calculated for five different loss types using this calculator: structural losses, nonstructural losses, contents losses, downtime losses, and occupant fatalities. The main results of this calculator are loss exceedance curves for each asset, which describe the probability of exceedance of different loss levels over the specified time period, and loss maps for the region, which describe the loss values that have a given probability of exceedance over the specified time

Unlike the probabilistic event-based risk calculator, an aggregate loss curve (considering all assets in the exposure model) can not be extracted using this calculator, as the correlation of the ground motion residuals and vulnerability uncertainty is not taken into consideration in this calculator.

The hazard curves required for this calculator can be calculated by the OpenQuake engine for all asset locations in the exposure model using the classical PSHA approach (Cornell, 1968; McGuire, 1976). The use of logic-trees allows for the consideration of model uncertainty in the choice of a ground motion prediction equation for the different tectonic region types in the region. Unlike what was described in the previous calculator, a total

loss curve (considering all assets in the exposure model) can not be extracted using this calculator, as the correlation of the ground motion residuals and vulnerability uncertainty is not taken into consideration.

The required input files required for running a classical probabilistic risk calculation and the resulting output files are depicted in Figure 6.4.



Figure 6.4 – Classical PSHA-based Risk Calculator input/output structure.

6.5 Stochastic Event Based Probabilistic Seismic Risk Analysis

This calculator employs an event-based Monte Carlo simulation approach to probabilistic risk assessment in order to estimate the loss distribution for individual assets and aggregated loss distribution for a spatially distributed portfolio of assets within a specified time period. The calculator requires the definition of an exposure model, a vulnerability model for each loss type of interest with vulnerability functions for each taxonomy represented in the exposure model, and a set of ground motion fields representative of the seismicity of the region over the specified time period. Loss curves and loss maps can currently be calculated for five different loss types using this calculator: structural losses, nonstructural losses, contents losses, downtime losses, and occupant fatalities. The main results of this calculator are loss exceedance curves for each asset, which describe the probability of exceedance of different loss levels over the specified time period, and loss maps for the region, which describe the loss values that have a given probability of exceedance over the specified time period. Aggregate loss exceedance curves can be also be produced using this calculator; these describe the probability of exceedance of different loss levels for all assets in the portfolio. Finally, event loss tables can be produced using this calculator; these tables describe the total loss across the portfolio for each seismic event in the stochastic event set.

This calculator relies on the probabilistic event-based hazard calculator, which simulates the seismicity of the chosen time period T by producing a *stochastic event set* (also known as

a *synthetic catalog*). For each rupture generated by a source, the number of occurrences in the given time span T is simulated by sampling the corresponding probability distribution as given by $P_{rup}(k|T)$. A stochastic event set is therefore a *sample* of the full population of ruptures as defined by a seismic source model. Each rupture is present zero, one or more times, depending on its probability. Symbolically, we can define a stochastic event set (*SES*) as:

$$SES(T) = \{k \times rup, k \sim P_{rup}(k|T) \quad \forall rup \text{ in } Src \quad \forall Src \text{ in } SSM\} \quad (6.1)$$

where k , the number of occurrences, is a random sample of $P_{rup}(k|T)$, and $k \times rup$ means that rupture rup is repeated k times in the stochastic event set.

For each rupture or event in the stochastic event sets, a spatially correlated ground motion field (GMF) realisation is generated, taking into consideration both the inter-event variability of ground motions, and the intra-event residuals obtained from a spatial correlation model for ground motion residuals. The use of logic trees allows for the consideration of uncertainty in the choice of a seismic source model, and in the choice of GMPE models for the different tectonic regions.

For each GMF realization, a loss ratio is sampled for every asset in the exposure model using the provided probabilistic vulnerability model, taking into consideration the correlation model for vulnerability of different assets of a given taxonomy. Finally loss exceedance curves are computed for both ground-up losses and insured losses.

The required input files required for running a probabilistic stochastic event-based risk calculation and the resulting output files are depicted in Figure 6.5



Figure 6.5 – Probabilistic Event-based Risk Calculator input/output structure.

6.6 Retrofit Benefit-Cost Ratio Analysis

This calculator represents a decision-support tool for deciding whether the employment of retrofitting measures to a collection of existing buildings is advantageous from an economical point of view. For this assessment, the expected losses considering the original and retrofitted configuration of the buildings are estimated, and the economic benefit due to the better seismic design is divided by the retrofitting cost, leading to the benefit/cost ratio. These loss curves are computed using the previously described Classical PSHA- based Risk calculator. The output of this calculator is a benefit/cost ratio for each asset, in which a ratio above one indicates that employing a retrofitting intervention is economically viable.

In Figure 6.6, the input/output structure for this calculator is depicted.



Figure 6.6 – Retrofitting Benefit/Cost Ratio Calculator input/output structure.

For further information regarding the theoretical background of the methodologies used for each calculator, users are referred to the OpenQuake- engine Book (Risk).

7. Risk Input Models

The following sections describe the basic inputs required for a risk calculation, including exposure models, fragility models, consequence models, and vulnerability models. In addition, each risk calculator also requires the appropriate hazard inputs computed in the region of interest. Hazard inputs include hazard curves for the classical probabilistic damage and risk calculators, ground motion fields for the scenario damage and risk calculators, or stochastic event sets for the probabilistic event based calculators.

7.1 Exposure Models

All risk calculators in the OpenQuake-engine require an exposure model that needs to be provided in the NRML format. The information included in an exposure model comprises a metadata section listing general information about the exposure, followed by a cost conversions section that describes how the different areas, costs, and occupancies for the assets will be specified, followed by data regarding each individual asset in the portfolio.

A minimal exposure model comprising a single asset is shown in the example below:

```

1  <?xml version='1.0' encoding='UTF-8'?>
2  <nrml xmlns:gml="http://www.opengis.net/gml"
3      xmlns="http://openquake.org/xmlns/nrml/0.5">
4
5  <exposureModel id="exposure_example"
6      category="buildings"
7      taxonomySource="GEM_Building_Taxonomy_2.0">
8      <description>Exposure Model Example</description>
9
10     <conversions>
11         <costTypes>
12             <costType name="structural" type="per_area" unit="USD" />
13         </costTypes>
14         <area type="per_asset" unit="SQM" />
15     </conversions>
16
17     <assets>
18         <asset id="a1" taxonomy="Adobe" number="5" area="100" >
19             <location lon="-122.000" lat="38.113" />
20             <costs>
21                 <cost type="structural" value="10000" />
22             </costs>
23             <occupancies>
24                 <occupancy occupants="20" period="day" />
25             </occupancies>
26         </asset>
27     </assets>
28
29 </exposureModel>
30
31 </nrml>
```

Let us take a look at each of the sections in the above example file in turn. The first part of the file contains the metadata section:

```

5  <exposureModel id="exposure_example"
6      category="buildings"
7      taxonomySource="GEM_Building_Taxonomy_2.0">
8      <description>Exposure Model Example</description>
```

The information in the metadata section is common to all of the assets in the portfolio and needs to be incorporated at the beginning of every exposure model file. There are a number of parameters that compose the metadata section, which is intended to provide general information regarding the assets within the exposure model. These parameters are described below:

- **id:** a unique key used to identify the exposure model
- **category:** an optional string used to define the type of assets being stored (e.g:

- buildings, lifelines)
- **taxonomySource**: an optional attribute used to define the taxonomy being used to classify the assets
 - **description**: a brief string with further information about the exposure model

Next, let us look at the part of the file describing the area and cost conversions:

```

10 <conversions>
11   <costTypes>
12     <costType name="structural" type="per_area" unit="USD" />
13   </costTypes>
14   <area type="per_asset" unit="SQM" />
15 </conversions>
```

Notice that the **costType** element defines a **name**, a **type**, and a **unit** attribute.

The NRML schema for the exposure model allows the definition of a structural cost, a nonstructural components cost, a contents cost, and a business interruption or downtime cost for each asset in the portfolio. Thus, the valid values for the **name** attribute of the **costType** element are the following:

- **structural**: used to specify the structural replacement cost of assets
- **nonstructural**: used to specify the replacement cost for the nonstructural components of assets
- **contents**: used to specify the contents replacement cost
- **business_interruption**: used to specify the cost that will be incurred per unit time that a damaged asset remains closed following an earthquake

The exposure model shown in the example above defines only the structural values for the assets. However, multiple cost types can be defined for each asset in the same exposure model.

The **unit** attribute of the **costType** element is used for specifying the currency unit for the corresponding cost type. Note that the OpenQuake-engine itself is agnostic to the currency units; the **unit** is thus a descriptive attribute which is used by OpenQuake-engine to annotate the results of a risk assessment. This attribute can be set to any valid Unicode string.

The **type** attribute of the **costType** element specifies whether the costs will be provided as an aggregated value for an asset, or per building or unit comprising an asset, or per unit area of an asset. The valid values for the **type** attribute of the **costType** element are the following:

- **aggregated**: indicates that the replacement costs will be provided as an aggregated value for each asset
- **per_asset**: indicates that the replacement costs will be provided per building or unit comprising each asset
- **per_area**: indicates that the replacement costs will be provided per unit area for

each asset

If the costs are to be specified `per_area` for any of the `costTypes`, the `area` element will also need to be defined in the conversions section. The `area` element defines a type, and a unit attribute.

The `unit` attribute of the `area` element is used for specifying the units for the area of an asset. The OpenQuake-engine itself is agnostic to the area units; the `unit` is thus a descriptive attribute which is used by the OpenQuake-engine to annotate the results of a risk assessment. This attribute can be set to any valid Unicode string.

The `type` attribute of the `area` element specifies whether the area will be provided as an aggregated value for an asset, or per building or unit comprising an asset. The valid values for the `type` attribute of the `area` element are the following:

- `aggregated`: indicates that the area will be provided as an aggregated value for each asset
- `per_asset`: indicates that the area will be provided per building or unit comprising each asset

The way the information about the characteristics of the assets in an exposure model are stored can vary strongly depending on how and why the data was compiled. As an example, if national census information is used to estimate the distribution of assets in a given region, it is likely that the number of buildings within a given geographical area will be used to define the dataset, and will be used for estimating the number of collapsed buildings for a scenario earthquake. On the other hand, if simplified methodologies based on proxy data such as population distribution are used to develop the exposure model, then it is likely that the built up area or economic cost of each building typology will be directly derived, and will be used for the estimation of economic losses.

Finally, let us look at the part of the file describing the set of assets in the portfolio to be used in seismic damage or risk calculations:

```

17 <assets>
18   <asset id="a1" taxonomy="Adobe" number="5" area="100" >
19     <location lon="-122.000" lat="38.113" />
20     <costs>
21       <cost type="structural" value="10000" />
22     </costs>
23     <occupancies>
24       <occupancy occupants="20" period="day" />
25     </occupancies>
26   </asset>
27 </assets>
```

Each asset definition involves specifying a set of mandatory and optional attributes concerning the asset. The following set of attributes can be assigned to each asset based on the current schema for the exposure model:

- **id:** mandatory; a unique key used to identify the given asset, which is used by the OpenQuake-engine to relate each asset with its associated results.
- **taxonomy:** mandatory; specifies the building typology of the given asset. The taxonomy strings can be user-defined, or based on an existing classification scheme such as the GEM Taxonomy, PAGER, or EMS-98.
- **number:** mandatory; the number of independent units or individual structures comprising a given asset
- **location:** mandatory; specifies the longitude (between -180° to 180°) and latitude (between -90° to 90 °) of the given asset, both specified in decimal degrees¹.
- **area:** area of the asset, at a given location. As mentioned earlier, the area is a mandatory attribute only if any one of the costs for the asset is specified per unit area.
- **costs:** specifies a set of costs for the given asset. The replacement value for different cost types must be provided on separate lines within the **costs** element. As shown in the example above, each cost entry must define the type and the value. Currently supported valid options for the cost type are: **structural**, **nonstructural**, **contents**, and **business_interruption**.
- **occupancies:** mandatory only for probabilistic or scenario damage calculations. Each entry within this element specifies the number of occupants for the asset for a particular period of the day. As shown in the example above, each occupancy entry must define the period and the occupants. Currently supported valid options for the period are: **day**, **transit**, and **night**. Currently, the number of occupants for an asset can only be provided as an aggregated value for the asset.

For the purposes of performing a retrofitting benefit/cost analysis, it is also necessary to define the retrofitting cost (**reco**). The combination between the possible options in which these three attributes can be defined leads to four ways of storing the information about the assets. For each of these cases a brief explanation and example is provided in this section.

Example 1

This example illustrates an exposure model in which the aggregated cost (structural, non-structural, contents and business interruption) of the buildings of each taxonomy for a set of locations is directly provided. Thus, in order to indicate how the various costs will be defined, the following information needs to be stored in the exposure model file:

¹Within the OpenQuake-engine, longitude and latitude coordinates are internally rounded to a precision of 5 digits after the decimal point.

```

8   <description>
9     Exposure model with aggregated replacement costs for each asset
10    </description>
11    <conversions>
12      <costTypes>
13        <costType name="structural" type="aggregated" unit="USD" />
14        <costType name="nonstructural" type="aggregated" unit="USD" />
15        <costType name="contents" type="aggregated" unit="USD" />
16        <costType name="business_interruption" type="aggregated" unit="USD/month"/>
17      </costTypes>
18    </conversions>

```

In this case, the cost type of each component has been defined as aggregated. Once the way in which each cost is going to be defined has been established, the values for each asset can be stored according to the following format:

```

19  <assets>
20    <asset id="a1" number="2" taxonomy="Adobe" >
21      <location lon="-122.000" lat="38.113" />
22      <costs>
23        <cost type="structural" value="20000" />
24        <cost type="nonstructural" value="30000" />
25        <cost type="contents" value="10000" />
26        <cost type="business_interruption" value="4000" />
27      </costs>
28    </asset>
29  </assets>

```

Each asset is uniquely identified by its `id`, (e.g. loss exceedance curves). Then, a pair of coordinates (latitude and longitude) for a location where the asset is assumed to exist is defined. Each asset must be classified according to a taxonomy, so that the OpenQuake-engine is capable of employing the appropriate vulnerability function or fragility function in the risk calculations. Finally, the cost values of each type are stored within the `costs` attribute. In this example, the aggregated value for all units (within a given asset) at each location is provided directly, so there is no need to define other attributes such as `number` or `area`. This mode of representing an exposure model is probably the simplest one.

Example 2

In this example an exposure model containing the number of units (buildings) and the associated costs per unit of each building typology is presented.

```

8   <description>
9     Exposure model with replacement costs per building for each asset
10    </description>
11    <conversions>
12      <costTypes>
13        <costType name="structural" type="per_asset" unit="USD" />
14        <costType name="nonstructural" type="per_asset" unit="USD" />
15        <costType name="contents" type="per_asset" unit="USD" />
16        <costType name="business_interruption" type="per_asset" unit="USD/month"/>
17      </costTypes>
18    </conversions>

```

For this case, the cost type has been set to `per_asset`. Then, the information from each asset can be stored following the format below:

```

19  <assets>
20    <asset id="a1" number="2" taxonomy="Adobe" >
21      <location lon="-122.000" lat="38.113" />
22      <costs>
23        <cost type="structural" value="7500" />
24        <cost type="nonstructural" value="11250" />
25        <cost type="contents" value="3750" />
26        <cost type="business_interruption" value="1500" />
27      </costs>
28    </asset>
29  </assets>

```

In this example, the various costs for each asset is not provided directly, as happened in the previous example. In order to carry out the risk calculations in which the economic cost of each asset is required, the OpenQuake-engine multiplies, for each asset, the number of units (buildings) by the “per asset” replacement cost. Note that in this case, there is no need to specify the attribute `area`.

Example 3

This example is comprised of an exposure model containing the built up area of each building typology for a set of locations, and the associated costs are provided per unit area.

```

8   <description>
9     Exposure model with replacement costs per unit area;
10    and areas provided as aggregated values for each asset
11  </description>
12  <conversions>
13    <area type="aggregated" unit="SQM" />
14    <costTypes>
15      <costType name="structural" type="per_area" unit="USD" />
16      <costType name="nonstructural" type="per_area" unit="USD" />
17      <costType name="contents" type="per_area" unit="USD" />
18      <costType name="business_interruption" type="per_area" unit="USD/month"/>
19    </costTypes>
20  </conversions>

```

In order to compile an exposure model with this structure, it is required to set the cost type to `per_area`. In addition, it is also necessary to specify if the area that is being stored represents the aggregated area of number of units within an asset, or the average area of a single unit. In this particular case, the area that is being stored is the aggregated built up area per asset, and thus this attribute was set to `aggregated`.

```

21  <assets>
22    <asset id="a1" number="2" area="1000" taxonomy="Adobe" >
23      <location lon="-122.000" lat="38.113" />
24      <costs>
25        <cost type="structural" value="5" />
26        <cost type="nonstructural" value="7.5" />
27        <cost type="contents" value="2.5" />
28        <cost type="business_interruption" value="1" />
29      </costs>
30    </asset>
31  </assets>

```

Once again, the OpenQuake-engine needs to carry out some calculations in order to compute the different costs per asset. In this case, this value is computed by multiplying the aggregated built up area of each building typology by the associated cost per unit of area. Notice that in this case, there is no need to specify the attribute `number`.

Example 4

This example is comprised of an exposure model containing the number of buildings for each location, the average built up area per building unit and the associated costs per unit area.

```

8   <description>
9     Exposure model with replacement costs per unit area;
10    and areas provided per building for each asset
11  </description>
12  <conversions>
13    <area type="per_asset" unit="SQM" />
14    <costTypes>
15      <costType name="structural" type="per_area" unit="USD" />
16      <costType name="nonstructural" type="per_area" unit="USD" />
17      <costType name="contents" type="per_area" unit="USD" />
18      <costType name="business_interruption" type="per_area" unit="USD/month"/>
19    </costTypes>
20  </conversions>

```

Similarly to what was described in the previous example, the various costs type also need to be establish as `per_area`, but the type of area is now defined as `per_asset`.

```

21  <assets>
22    <asset id="a1" number="3" area="400" taxonomy="Adobe" >
23      <location lon="-122.000" lat="38.113" />
24      <costs>
25        <cost type="structural" value="10" />
26        <cost type="nonstructural" value="15" />
27        <cost type="contents" value="5" />
28        <cost type="business_interruption" value="2" />
29      </costs>
30    </asset>
31  </assets>

```

In this example, the OpenQuake-engine will make use of all the parameters to estimate the various costs of each asset, by multiplying the number of buildings by its average built up area, and then by the respective cost per unit of area.

Example 5

In this example, additional information will be included, which is required for other risk analysis besides loss estimation, such as the calculation of insured losses or benefit/cost analysis. For the former assessment, it is necessary to establish how the insured limit and deductible is going to be define, according to the format below.

```

8   <description>
9     Exposure model with relative insurance limits and deductibles
10    </description>
11    <conversions>
12      <area type="per_asset" unit="SQM" />
13      <costTypes>
14        <costType name="structural" type="per_asset" unit="USD" />
15        <costType name="nonstructural" type="per_asset" unit="USD" />
16        <costType name="contents" type="per_asset" unit="USD" />
17        <costType name="business_interruption" type="per_asset" unit="USD/month" />
18      </costTypes>
19      <insuranceLimit isAbsolute="false"/>
20      <deductible isAbsolute="false"/>
21    </conversions>

```

In this example, both the insurance limit and the deductible were defined as a fraction of the costs, by setting the attribute `isAbsolute` to `false`. Then, for each type of cost, the limit and deductible value can be stored for each asset.

```

22  <assets>
23    <asset id="a1" number="1" area="100" taxonomy="Adobe" >
24      <location lon="-122.000" lat="38.113" />
25      <costs>
26        <cost type="structural" value="10000" deductible="0.1" insuranceLimit="0.8" />
27        <cost type="nonstructural" value="15000" />
28        <cost type="contents" value="5000" />
29        <cost type="business_interruption" value="2000" />
30      </costs>
31    </asset>
32  </assets>

```

On the other hand, a user could define one or both of these parameters as the absolute threshold, by setting the aforementioned attribute to `true`. This is shown in the example file below:

```
1  <?xml version='1.0' encoding='UTF-8'?>
2  <nrmr xmlns:gml="http://www.opengis.net/gml"
3      xmlns="http://openquake.org/xmlns/nrml/0.4">
4
5  <exposureModel id="exposure_example"
6      category="buildings"
7      taxonomySource="GEM_Building_Taxonomy_2.0">
8
9  <description>
10     Exposure model with absolute insurance limits and deductibles
11 </description>
12 <conversions>
13     <area type="per_asset" unit="SQM" />
14     <costTypes>
15         <costType name="structural" type="per_area" unit="USD" />
16         <costType name="nonstructural" type="per_area" unit="USD" />
17         <costType name="contents" type="per_area" unit="USD" />
18         <costType name="business_interruption" type="per_area" unit="USD/month"/>
19     </costTypes>
20     <insuranceLimit isAbsolute="true"/>
21     <deductible isAbsolute="true"/>
22 </conversions>
23 <assets>
24     <asset id="a1" number="2" area="1000" taxonomy="Adobe" >
25         <location lon="-122.000" lat="38.113" />
26         <costs>
27             <cost type="structural" value="5" deductible="1" insuranceLimit="4"/>
28             <cost type="nonstructural" value="7.5" />
29             <cost type="contents" value="2.5" />
30             <cost type="business_interruption" value="1" />
31         </costs>
32     </asset>
33 </assets>
34 </exposureModel>
35 </nrmr>
```

Moreover, in order to perform a benefit/cost assessment, it is also fundamental to indicate the retrofitting cost. This parameter is handled in the same manner as the structural cost, and it should be stored according to the following structure:

```

1  <?xml version='1.0' encoding='UTF-8'?>
2  <nrmr xmlns:gml="http://www.opengis.net/gml"
3      xmlns="http://openquake.org/xmlns/nrml/0.5">
4
5  <exposureModel id="exposure_example"
6      category="buildings"
7      taxonomySource="GEM_Building_Taxonomy_2.0">
8      <description>Exposure model illustrating retrofit costs</description>
9      <conversions>
10     <costTypes>
11         <costType name="structural" type="aggregated" unit="USD" />
12     </costTypes>
13     </conversions>
14     <assets>
15         <asset id="a1" taxonomy="Adobe" number="1" >
16             <location lon="-122.000" lat="38.113" />
17             <costs>
18                 <cost type="structural" value="10000" retrofit="2000" />
19             </costs>
20         </asset>
21     </assets>
22 </exposureModel>
23
24 </nrmr>
```

Despite the fact that for the demonstration of how the insurance parameters and retrofitting cost can be stored the per building type of cost structure described in Example 1 was used, it is important to mention that any of the other cost storing approaches can also be employed (Examples 2–4).

Example 6

The OpenQuake-engine is also capable of estimating human losses, based on a number of occupants within an asset, at a certain time of the day. This example describes how this parameter is defined for each asset. In addition, this example also serves the purpose of presenting an exposure model in which three cost types have been defined following different structures.

As previously mentioned, in this example only three costs are being stored, and each one follows a different approach. The **structural** cost is being defined as the aggregate replacement cost for all of the buildings comprising the asset (Example 1), the **nonstructural** value is defined as the replacement cost per unit area where the area is defined per building comprising the asset (Example 4), and the **contents** and **business_interruption** values are provided per building comprising the asset (Example 2). The occupants at different times of the day are also provided as aggregated values for all of the buildings comprising the asset.

```

1  <?xml version='1.0' encoding='UTF-8'?>
2  <nrml xmlns:gml="http://www.opengis.net/gml"
3      xmlns="http://openquake.org/xmlns/nrml/0.5">
4
5  <exposureModel id="exposure_example"
6      category="buildings"
7      taxonomySource="GEM_Building_Taxonomy_2.0">
8      <description>Exposure model example with occupants</description>
9      <conversions>
10         <costTypes>
11             <costType name="structural" type="aggregated" unit="USD" />
12             <costType name="nonstructural" type="per_area" unit="USD" />
13             <costType name="contents" type="per_asset" unit="USD" />
14             <costType name="business_interruption" type="per_asset" unit="USD/month" />
15         </costTypes>
16         <area type="per_asset" unit="SQM" />
17     </conversions>
18     <assets>
19         <asset id="a1" taxonomy="Adobe" number="5" area="200" >
20             <location lon="-122.000" lat="38.113" />
21             <costs>
22                 <cost type="structural" value="20000" />
23                 <cost type="nonstructural" value="15" />
24                 <cost type="contents" value="2400" />
25                 <cost type="business_interruption" value="1500" />
26             </costs>
27             <occupancies>
28                 <occupancy occupants="6" period="day" />
29                 <occupancy occupants="10" period="transit" />
30                 <occupancy occupants="20" period="night" />
31             </occupancies>
32         </asset>
33     </assets>
34 </exposureModel>
35
36 </nrml>
```

Scripts to convert an exposure model in CSV format or as Excel or ASCII files into NRML are also under development, and can be found at the OpenQuake platform at the following address: https://platform.openquake.org/risk_input_preparation_toolkit/.

7.2 Fragility Models

This section describes the schema currently used to store fragility models, which are required for the Scenario Damage Calculator and the Classical Probabilistic Seismic Damage Calculator. A fragility model defines a set of fragility functions, describing the probability of exceeding a set of limit, or damage, states. These fragility function can be defined in two ways: discrete

or continuous.

For discrete fragility functions, sets of probabilities of exceedance (one set per limit state) are defined for a list of intensity measure levels, as illustrated in Figure 7.1.



Figure 7.1 – Graphical representation of a discrete fragility model

The fragility functions can also be defined as continuous functions, through the use of cumulative lognormal distribution functions. In Figure 7.2, a continuous fragility model is presented.

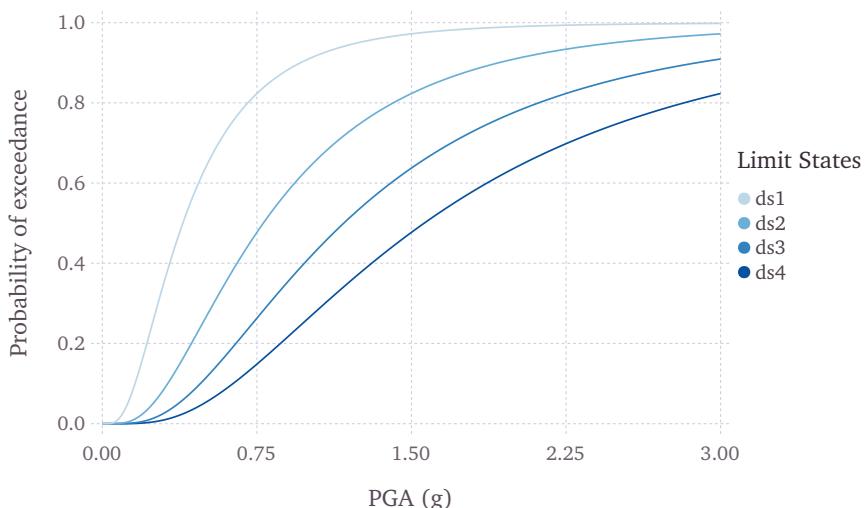


Figure 7.2 – Graphical representation of a continuous fragility model

An example fragility model comprising one discrete fragility function and one continuous fragility function is shown below:

```

1  <?xml version='1.0' encoding='UTF-8'?>
2  <nrmrl xmlns="http://openquake.org/xmlns/nrml/0.5">
3
4  <fragilityModel id="fragility_example"
5      assetCategory="buildings"
6      lossCategory="structural">
7
8      <description>Fragility Model Example</description>
9      <limitStates>slight moderate extensive complete</limitStates>
10
11     <fragilityFunction id="Woodframe_TwoStorey" format="discrete">
12         <imls imt="PGA" noDamageLimit="0.05">0.005 0.2 0.4 0.6 0.8 1.0 1.2</imls>
13         <poes ls="slight">0.00 0.01 0.15 0.84 0.99 1.00 1.00</poes>
14         <poes ls="moderate">0.00 0.00 0.01 0.12 0.35 0.57 0.74</poes>
15         <poes ls="extensive">0.00 0.00 0.00 0.08 0.19 0.32 0.45</poes>
16         <poes ls="complete">0.00 0.00 0.00 0.06 0.17 0.26 0.35</poes>
17     </fragilityFunction>
18
19     <fragilityFunction id="RC_LowRise" format="continuous" shape="logncdf">
20         <imls imt="SA(0.3)" noDamageLimit="0.05" minIML="0.0" maxIML="5.0"/>
21         <params ls="slight" mean="0.50" stddev="0.10"/>
22         <params ls="moderate" mean="1.00" stddev="0.40"/>
23         <params ls="extensive" mean="1.50" stddev="0.90"/>
24         <params ls="complete" mean="2.00" stddev="1.60"/>
25     </fragilityFunction>
26
27 </fragilityModel>
28
29 </nrmrl>

```

The initial portion of the schema contains general information that describes some general aspects of the fragility model.

- **id:** a unique key used to identify the fragility model
- **assetCategory:** an optional string used to specify the type of assets for which fragility functions will be defined in this file (e.g: buildings, lifelines)
- **lossCategory:** valid strings for this attribute are “structural”, “nonstructural”, “contents”, and “business_interruption”
- **description:** a brief string with further information about the exposure model

```

4  <fragilityModel id="fragility_example"
5      assetCategory="buildings"
6      lossCategory="structural">
7
8      <description>Fragility Model Example</description>
9      <limitStates>slight moderate extensive complete</limitStates>

```

The information in the metadata section is common to all of the functions in the fragility model and needs to be included at the beginning of every fragility model file. The parameters are described below:

- **description:** a brief string with further information about the fragility model, for example, which building typologies are covered or the source of the functions in the fragility model
- **limitStates:** this field is used to define the number and nomenclature of each limit state. Four limit states are employed in the example above, but it is possible to use any number of discrete states, as long as a fragility curve is always defined for each limit state. The limit states must be provided as a set of strings separated by whitespaces between each limit state. Please ensure that there is no whitespace within the name of any individual limit state.

In order to perform probabilistic or scenario damage calculations, it is necessary to define a fragility function for each building typology present in the exposure model. The fragility functions can be defined using either a discrete or a continuous format, and the fragility model file can include a mix of both types of fragility functions.

The following snippet from the above fragility model example file defines a discrete fragility function:

```

11 <fragilityFunction id="Woodframe_TwoStorey" format="discrete">
12   <imls imt="PGA" noDamageLimit="0.05">0.005 0.2 0.4 0.6 0.8 1.0 1.2</imls>
13   <poes ls="slight">0.00 0.01 0.15 0.84 0.99 1.00 1.00</poes>
14   <poes ls="moderate">0.00 0.00 0.01 0.12 0.35 0.57 0.74</poes>
15   <poes ls="extensive">0.00 0.00 0.00 0.08 0.19 0.32 0.45</poes>
16   <poes ls="complete">0.00 0.00 0.00 0.06 0.17 0.26 0.35</poes>
17 </fragilityFunction>
```

The following attributes are needed to define a discrete fragility function:

- **id:** a unique key used to identify the taxonomy for which the function is being defined. This key is used to relate the fragility function with the relevant asset in the exposure model.
- **format:** for discrete fragility functions, this attribute should be set to “discrete”
- **imls:** this attribute specifies the list of intensity levels for which the limit state probabilities of exceedance will be defined. In addition, it is also necessary to define the intensity measure type (imt). Optionally, a noDamageLimit can be specified, which defines the intensity level below which the probability of exceedance for all limit states is taken to be zero.
- **poes:** this field is used to define the probabilities of exceedance (poes) for each limit state for this fragility function. It is also necessary to specify which limit state the exceedance probabilities are being defined for using the attribute ls. The probabilities of exceedance for each limit state must be provided on a separate line; and the number of exceedance probabilities for each limit state defined by the poes attribute must

be equal to the number of intensity levels defined by the attribute `imls`. Finally, the number and names of the limit states in each fragility function must be equal to the number of limit states defined earlier in the metadata section of the fragility model using the attribute `limitStates`.

The following snippet from the above fragility model example file defines a continuous fragility function:

```

19 <fragilityFunction id="RC_LowRise" format="continuous" shape="logncdf">
20   <imls imt="SA(0.3)" noDamageLimit="0.05" minIML="0.0" maxIML="5.0"/>
21   <params ls="slight" mean="0.50" stddev="0.10"/>
22   <params ls="moderate" mean="1.00" stddev="0.40"/>
23   <params ls="extensive" mean="1.50" stddev="0.90"/>
24   <params ls="complete" mean="2.00" stddev="1.60"/>
25 </fragilityFunction>
```

The following attributes are needed to define a continuous fragility function:

- `id`: a unique key used to identify the taxonomy for which the function is being defined. This key is used to relate the fragility function with the relevant asset in the exposure model.
- `format`: for continuous fragility functions, this attribute should be set to “`continuous`”
- `shape`: for continuous fragility functions using the lognormal cumulative distribution, this attribute should be set to “`logncdf`”. At present, only the lognormal cumulative distribution function can be used for representing continuous fragility functions.
- `imls`: this element specifies various aspects related to the intensity measure used by the fragility function. The range of intensity levels for which the continuous fragility functions are valid are specified using the attributes `minIML` and `maxIML`. In addition, it is also necessary to define the intensity measure type `imt`. Optionally, a `noDamageLimit` can be specified, which defines the intensity level below which the probability of exceedance for all limit states is taken to be zero.
- `params`: this field is used to define the parameters of the continuous curve for each limit state for this fragility function. For a lognormal cumulative distribution function, the two parameters required to specify the function are the mean and standard deviation of the intensity level. These parameters are defined for each limit state using the attributes `mean` and `stddev` respectively. The attribute `ls` specifies the limit state for which the parameters are being defined. The parameters for each limit state must be provided on a separate line. The number and names of the limit states in each fragility function must be equal to the number of limit states defined earlier in the metadata section of the fragility model using the attribute `limitStates`.

Several methodologies to derive fragility functions are currently being evaluated by Global Earthquake Model (GEM) and have been included as part of the Risk Modeller’s Toolkit, the code for which can be found on a public repository at GitHub at the following address: <http://github.com/gemscienctools/rmtk>.

Scripts to convert fragility functions in CSV format or as Excel or ASCII files into NRML are also under development, and can be found at the OpenQuake platform at the following address: https://platform.openquake.org/risk_input_preparation_toolkit/.

7.3 Consequence Models

Starting from OpenQuake-engine v1.7, the Scenario Damage calculator also accepts consequence models in addition to fragility models, in order to estimate consequences based on the calculated damage distribution. The user may provide one consequence model file corresponding to each loss type (amongst structural, nonstructural, contents, and business interruption) for which a fragility model file is provided. Whereas providing a fragility model file for at least one loss type is mandatory for running a Scenario Damage calculation, providing corresponding consequence model files is optional.

This section describes the schema currently used to store consequence models, which are optional inputs for the Scenario Damage Calculator. A consequence model defines a set of consequence functions, describing the distribution of the loss (or consequence) ratio conditional on a set of discrete limit (or damage) states. These consequence function can be currently defined in OpenQuake-engine by specifying the parameters of the continuous distribution of the loss ratio for each limit state specified in the fragility model for the corresponding loss type, for each taxonomy defined in the exposure model.

An example consequence model is shown below:

```

1  <?xml version='1.0' encoding='utf-8'?>
2  <nrm1 xmlns="http://openquake.org/xmlns/nrml/0.5">
3
4  <consequenceModel id="consequence_example"
5      assetCategory="buildings"
6      lossCategory="structural">
7
8      <description>Consequence Model Example</description>
9      <limitStates>slight moderate extensive complete</limitStates>
10
11     <consequenceFunction id="RC_LowRise" dist="LN">
12         <params ls="slight" mean="0.04" stddev="0.00"/>
13         <params ls="moderate" mean="0.16" stddev="0.00"/>
14         <params ls="extensive" mean="0.32" stddev="0.00"/>
15         <params ls="complete" mean="0.64" stddev="0.00"/>
16     </consequenceFunction>
17
18 </consequenceModel>
19
20 </nrm1>
```

The initial portion of the schema contains general information that describes some general aspects of the consequence model. The information in this metadata section is common to

all of the functions in the consequence model and needs to be included at the beginning of every consequence model file. The parameters are described below:

- **id**: a unique key used to identify the consequence model
- **assetCategory**: an optional string used to specify the type of assets for which fragility functions will be defined in this file (e.g: buildings, lifelines)
- **lossCategory**: valid strings for this attribute are “structural”, “nonstructural”, “contents”, and “business_interruption”
- **description**: a brief string with further information about the consequence model, for example, which building typologies are covered or the source of the functions in the consequence model
- **limitStates**: this field is used to define the number and nomenclature of each limit state. Four limit states are employed in the example above, but it is possible to use any number of discrete states, as long as a fragility curve is always defined for each limit state. The limit states must be provided as a set of strings separated by whitespaces between each limit state. Please ensure that there is no whitespace within the name of any individual limit state.

```

4 <consequenceModel id="consequence_example"
5   assetCategory="buildings"
6   lossCategory="structural">
7
8   <description>Consequence Model Example</description>
9   <limitStates>slight moderate extensive complete</limitStates>
```

The following snippet from the above consequence model example file defines a consequence function using a lognormal distribution to model the uncertainty in the consequence ratio for each limit state:

```

11 <consequenceFunction id="RC_LowRise" dist="LN">
12   <params ls="slight" mean="0.04" stddev="0.00"/>
13   <params ls="moderate" mean="0.16" stddev="0.00"/>
14   <params ls="extensive" mean="0.32" stddev="0.00"/>
15   <params ls="complete" mean="0.64" stddev="0.00"/>
16 </consequenceFunction>
```

The following attributes are needed to define a consequence function:

- **id**: a unique key used to identify the taxonomy for which the function is being defined. This key is used to relate the consequence function with the relevant asset in the exposure model.
- **dist**: for vulnerability function which use a continuous distribution to model the uncertainty in the conditional loss ratios, this attribute should be set to either “LN” if using the lognormal distribution, or to “BT” if using the Beta distribution ².

²Note that in OpenQuake-engine v1.7, the uncertainty in the consequence ratios is ignored, and only the

- **params**: this field is used to define the parameters of the continuous distribution used for modelling the uncertainty in the loss ratios for each limit state for this consequence function. For a lognormal distribution, the two parameters required to specify the function are the mean and standard deviation of the consequence ratio. These parameters are defined for each limit state using the attributes `mean` and `stddev` respectively. The attribute `ls` specifies the limit state for which the parameters are being defined. The parameters for each limit state must be provided on a separate line. The number and names of the limit states in each consequence function must be equal to the number of limit states defined in the corresponding fragility model using the attribute `limitStates`.

7.4 Vulnerability Models

In this section, the NRML schema for the vulnerability model is described in detail. In order to do so, a graphical representation of a vulnerability model (mean loss ratio for a set of intensity measure levels) is illustrated in Figure 7.3.

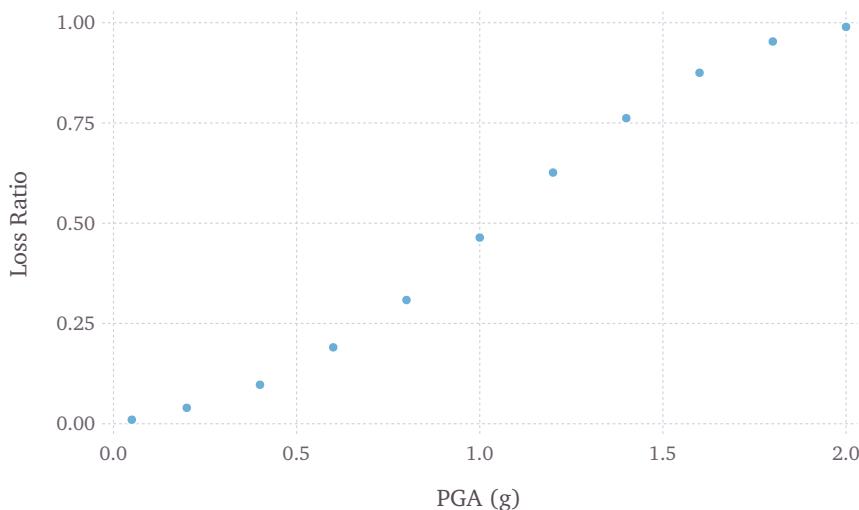


Figure 7.3 – Graphical representation of a vulnerability model.

Note that although the uncertainty for each loss ratio is not represented in Figure 7.3, it can be considered in the input NRML file, by means of a coefficient of variation per loss ratio and a probabilistic distribution, which can currently be set to lognormal (LN) or Beta (BT). An example of a vulnerability function that models the uncertainty in the loss ratio at different intensity levels using a lognormal distribution is illustrated below in Figure 7.4.

An example vulnerability model comprising three vulnerability functions is shown below.

mean consequence ratios for the set of limit states is considered when computing the consequences from the damage distribution. Consideration of the uncertainty in the consequence ratios will be included in future releases of the OpenQuake-engine.



Figure 7.4 – Graphical representation of a vulnerability function that models the uncertainty in the loss ratio using a lognormal distribution. The mean loss ratios and coefficients of variation are illustrated for a set of intensity levels.

This vulnerability model contains one function that uses the lognormal distribution to represent the uncertainty in the loss ratio at different intensity levels, one function that uses the Beta distribution, and one function that is defined using a discrete probability mass distribution.

```

1  <?xml version='1.0' encoding='utf-8'?>
2  <nrml xmlns="http://openquake.org/xmlns/nrml/0.5">
3
4  <vulnerabilityModel id="vulnerability_example"
5      assetCategory="buildings"
6      lossCategory="structural">
7
8      <description>vulnerability model</description>
9
10     <vulnerabilityFunction id="W1_Res_LowCode" dist="LN">
11         <imls imt="PGA">0.005 0.15 0.4 0.6 0.8 1.0 1.2 1.4 1.6 1.8 2.0</imls>
12         <meanLRs>0.01 0.04 0.10 0.20 0.33 0.50 0.67 0.80 0.90 0.96 0.99</meanLRs>
13         <covLRs>0.03 0.12 0.24 0.32 0.38 0.40 0.38 0.32 0.24 0.12 0.03</covLRs>
14     </vulnerabilityFunction>
15
16
17     <vulnerabilityFunction id="S1_Res_HighCode" dist="BT">
18         <imls imt="SA(0.3)">0.05 0.2 0.4 0.6 0.8 1.0 1.2 1.4 1.6 1.8 2.0</imls>
19         <meanLRs>0.01 0.03 0.07 0.15 0.24 0.37 0.50 0.60 0.67 0.72 0.75</meanLRs>
20         <covLRs>0.03 0.12 0.24 0.32 0.38 0.40 0.38 0.32 0.24 0.12 0.03</covLRs>
21     </vulnerabilityFunction>
22
23
24     <vulnerabilityFunction id="ATC13_URM_Res" dist="PM">
25         <imls imt="MMI">6 7 8 9 10 11 12</imls>
26         <probabilities lr="0.000">0.95 0.49 0.30 0.14 0.03 0.01 0.00</probabilities>
27         <probabilities lr="0.005">0.03 0.38 0.40 0.30 0.10 0.03 0.01</probabilities>
28         <probabilities lr="0.050">0.02 0.08 0.16 0.24 0.30 0.10 0.01</probabilities>
29         <probabilities lr="0.200">0.00 0.02 0.08 0.16 0.26 0.30 0.03</probabilities>
30         <probabilities lr="0.450">0.00 0.02 0.03 0.10 0.18 0.30 0.18</probabilities>
31         <probabilities lr="0.800">0.00 0.01 0.02 0.04 0.10 0.18 0.39</probabilities>
32         <probabilities lr="1.000">0.00 0.01 0.01 0.02 0.03 0.08 0.38</probabilities>
33     </vulnerabilityFunction>
34
35 </vulnerabilityModel>
36
37 </nrml>
```

The initial portion of the schema contains general information that describes some general aspects of the vulnerability model. The information in this metadata section is common to all of the functions in the vulnerability model and needs to be included at the beginning of every vulnerability model file. The parameters are described below:

- **id**: a unique key used to identify the vulnerability model
- **assetCategory**: an optional string used to specify the type of assets for which vulnerability functions will be defined in this file (e.g: buildings, lifelines)
- **lossCategory**: valid strings for this attribute are “structural”, “nonstructural”, “con-

- tents”, “business_interruption”, and “occupants”
- **description:** a brief string with further information about the vulnerability model, for example, which building typologies are covered or the source of the functions in the vulnerability model

```

4 <vulnerabilityModel id="vulnerability_example"
5   assetCategory="buildings"
6   lossCategory="structural">
7
8   <description>vulnerability model</description>
```

In order to perform probabilistic or scenario risk calculations, it is necessary to define a vulnerability function for each building typology present in the exposure model. The vulnerability functions require the user to specify the distribution of the loss ratio for a set of intensity levels. The loss ratio distributions can be defined using either a discrete or a continuous format, and the vulnerability model file can include a mix of both types of vulnerability functions. It is also possible to define a vulnerability function using a set of deterministic loss ratios corresponding to a set of intensity levels (i.e., ignoring the uncertainty in the conditional loss ratios).

The following snippet from the above vulnerability model example file defines a vulnerability function modelling the uncertainty in the conditional loss ratios using a (continuous) lognormal distribution:

```

10 <vulnerabilityFunction id="W1_Res_LowCode" dist="LN">
11   <imls imt="PGA">0.005 0.15 0.4 0.6 0.8 1.0 1.2 1.4 1.6 1.8 2.0</imls>
12   <meanLRs>0.01 0.04 0.10 0.20 0.33 0.50 0.67 0.80 0.90 0.96 0.99</meanLRs>
13   <covLRs>0.03 0.12 0.24 0.32 0.38 0.40 0.38 0.32 0.24 0.12 0.03</covLRs>
14 </vulnerabilityFunction>
```

The following attributes are needed to define a vulnerability function which uses a continuous distribution to model the uncertainty in the conditional loss ratios:

- **id:** a unique key used to identify the taxonomy for which the function is being defined. This key is used to relate the vulnerability function with the relevant asset in the exposure model.
- **dist:** for vulnerability function which use a continuous distribution to model the uncertainty in the conditional loss ratios, this attribute should be set to either “LN” if using the lognormal distribution, or to “BT” if using the Beta distribution.
- **imls:** this attribute specifies the list of intensity levels for which the parameters of the conditional loss ratio distributions will be defined. In addition, it is also necessary to define the intensity measure type (imt).
- **meanLRs:** this field is used to define the mean loss ratios for this vulnerability function for each of the intensity levels defined by the attribute imls. The number of mean loss ratios defined by the meanLRs attribute must be equal to the number of intensity

levels defined by the attribute `imls`.

- `covLRs`: this field is used to define the coefficient of variation for the conditional distribution of the loss ratios for this vulnerability function for each of the intensity levels defined by the attribute `imls`. The number of coefficients of variation of loss ratios defined by the `covLRs` attribute must be equal to the number of intensity levels defined by the attribute `imls`. The uncertainty in the conditional loss ratios can be ignored by setting all of the `covLRs` for a given vulnerability function to zero.

Several methodologies to derive vulnerability functions are currently being evaluated by GEM and have been included as part of the Risk Modeller's Toolkit, the code for which can be found on a public repository at GitHub at the following address <http://github.com/gemscienctools/rmtk>.

Scripts to convert vulnerability functions in CSV format or as Excel or ASCII files into NRML are also under development, and can be found at the OpenQuake platform at the following address: https://platform.openquake.org/risk_input_preparation_toolkit/.

[Scenario Damage Calculator](#)

[Scenario Risk Calculator](#)

[Classical Probabilistic Seismic Damage Calculator](#)

[Classical Probabilistic Seismic Risk Calculator](#)

[Stochastic Event Based Probabilistic Seismic Risk Calculator](#)

[Retrofit Benefit-Cost Ratio Calculator](#)

[Exporting Risk Results](#)

8. Using the Risk Module

This Chapter summarises the structure of the information necessary to define the different input data to be used with the OpenQuake-engine risk calculators. Input data for scenario-based and probabilistic seismic damage and risk analysis using OpenQuake-engine are organised into:

- An exposure model file in the NRML format, as described in Section 7.1.
- A file describing the vulnerability model (Section 7.4) for loss calculations, or a file describing the fragility model (Section 7.2) for damage calculations. Optionally, a file describing the consequence model (Section 7.3) can also be provided in order to calculate losses from the estimated damage distributions.
- A general calculation configuration file.
- Hazard inputs. These include hazard curves for the classical probabilistic damage and risk calculators, ground motion fields for the scenario damage and risk calculators, or stochastic event sets for the probabilistic event based calculators. As of OpenQuake-engine v1.7, in general, there are five different ways in which hazard calculation parameters or results can be provided to the OpenQuake-engine in order to run the subsequent risk calculations:
 - Use a single configuration file for running the hazard and risk calculations sequentially
 - Use separate configuration files for running the hazard and risk calculations sequentially
 - Use a configuration file for the risk calculation along with all hazard outputs from a previously completed, compatible OpenQuake-engine hazard calculation
 - Use a configuration file for the risk calculation along with a specific hazard output from a previously completed, compatible OpenQuake-engine hazard calculation
 - Use a configuration file for the risk calculation along with hazard input files in

the OpenQuake NRML format

The file formats for exposure, fragility, consequence, and vulnerability models have been described earlier in Chapter 6. The configuration file is the primary file that provides the OpenQuake-engine information regarding both the definition of the input models (e.g. exposure, site parameters, fragility, consequence, or vulnerability models) as well as the parameters governing the risk calculation.

Information regarding the configuration file for running hazard calculations using OpenQuake-engine can be found in Section 3.4. Some initial parameters of the configuration file common to all of the risk calculators are presented below. The remaining parameters that are specific to each risk calculator are discussed in subsequent sections.

```

1 [general]
2   description = Example risk calculation
3   calculation_mode = scenario_risk
4
5 [exposure]
6   exposure_file = exposure_model.xml
7
8 [vulnerability]
9   structural_vulnerability_file = structural_vulnerability_model.xml

```

- **description**: a parameter that can be used to include some information about the type of calculations that are going to be performed.
- **calculation_mode**: this parameter specifies the type of calculation to be run. Valid options for the `calculation_mode` for the risk calculators are: `scenario_damage`, `scenario_risk`, `classical_damage`, `classical_risk`, `event_based_risk`, and `classical_bcr`.
- **exposure_file**: this parameter is used to specify the path to the exposure model file.

Depending on the type of risk calculation, other parameters besides the aforementioned ones may need to be provided. We illustrate in the following sections different examples of the configuration file for the different risk calculators.

8.1 Scenario Damage Calculator

For this calculator, the parameter `calculation_mode` should be set to `scenario_damage`.

Example 1

This example illustrates a scenario damage calculation which uses a single configuration file to first compute the ground motion fields for the given rupture model and then calculate damage distribution statistics based on the ground motion fields. A minimal job configuration file required for running a scenario damage calculation is shown below:

```

job.ini

1 [general]
2 description = Scenario damage using a single config file
3 calculation_mode = scenario_damage
4
5 [exposure]
6 exposure_file = exposure_model.xml
7
8 [rupture]
9 rupture_model_file = rupture_model.xml
10 rupture_mesh_spacing = 2.0
11
12 [site_params]
13 site_model_file = site_model.xml
14
15 [hazard_calculation]
16 random_seed = 42
17 truncation_level = 3.0
18 maximum_distance = 200.0
19 gsim = BooreAtkinson2008
20 number_of_ground_motion_fields = 1000
21 ground_motion_correlation_model = JB2009
22 ground_motion_correlation_params = {"vs30_clustering": True}
23
24 [fragility]
25 structural_fragility_file = structural_fragility_model.xml

```

The general parameters `description` and `calculation_mode`, and `exposure_file` have already been described earlier. The other parameters seen in the above example configuration file are described below:

- `rupture_model_file`: a parameter used to define the path to the earthquake rupture model file describing the scenario event.
- `rupture_mesh_spacing`: a parameter used to specify the mesh size (in km) used by OpenQuake-engine to discretize the rupture. Note that the smaller the mesh spacing, the greater will be (1) the precision in the calculation and (2) the computational demand.
- `structural_fragility_file`: a parameter used to define the path to the structural fragility model file.

In this case, the ground motion fields will be computed at each of the locations of the assets in the exposure model. Ground motion fields will be generated for each of the intensity measure types found in the provided set of fragility models. The above calculation can be run using the command line:

```
user@ubuntu:~\$ oq-engine --run job.ini
```

After the calculation is completed, a message similar to the following will be displayed:

```
Calculation 2680 completed in 13 seconds. Results:  
id | output_type | name  
5069 | datastore | dmg_by_asset_and_collapse_map  
5070 | datastore | dmg_by_taxon  
5071 | datastore | dmg_total
```

Note that one or more of the following parameters can be used in the same job configuration file to provide the corresponding fragility model files:

- `structural_fragility_file`: a parameter used to define the path to a structural fragility model file
- `nonstructural_fragility_file`: a parameter used to define the path to a non-structural fragility model file
- `contents_fragility_file`: a parameter used to define the path to a contents fragility model file
- `business_interruption_fragility_file`: a parameter used to define the path to a business interruption fragility model file

It is important that the `lossCategory` parameter in the metadata section for each provided fragility model file (“structural”, “nonstructural”, “contents”, or “business_interruption”) should match the loss type defined in the configuration file by the relevant keyword above.

Example 2

This example illustrates a scenario damage calculation which uses separate configuration files for the hazard and risk parts of a scenario damage assessment. The first configuration file contains input models and parameters required for the computation of the ground motion fields due to a given rupture. The second configuration file contains input models and parameters required for the calculation of the damage distribution for a portfolio of assets due to the ground motion fields.

```

1          job_hazard.ini
2
3 [general]
4   description = Scenario hazard example
5   calculation_mode = scenario
6
7 [rupture]
8   rupture_model_file = rupture_model.xml
9   rupture_mesh_spacing = 2.0
10
11 [sites]
12   sites_csv = sites.csv
13
14 [site_params]
15   site_model_file = site_model.xml
16
17 [hazard_calculation]
18   random_seed = 42
19   truncation_level = 3.0
20   maximum_distance = 200.0
21   gsim = BooreAtkinson2008
22   intensity_measure_types = PGA, SA(0.3)
23   number_of_ground_motion_fields = 1000
24   ground_motion_correlation_model = JB2009
25   ground_motion_correlation_params = {"vs30_clustering": True}

```

```

1          job_damage.ini
2
3 [general]
4   description = Scenario damage example
5   calculation_mode = scenario_damage
6
7 [exposure]
8   exposure_file = exposure_model.xml
9
10 [boundaries]
11   region_constraint = -123.0 38.3, -121.0 38.3, -121.0 36.5, -123.0 36.5
12
13 [hazard]
14   asset_hazard_distance = 20
15
16 [fragility]
17   structural_fragility_file = structural_fragility_model.xml

```

Now, the above calculations described by the two configuration files “job_hazard.ini” and “job_damage.ini” can be run sequentially using the command line as follows:

```
user@ubuntu:~\$ oq-engine --run job_hazard.ini,job_damage.ini
```

The hazard and risk calculations can also be run separately. In that case, the calculation id for the hazard calculation or the output id for the specific ground motion fields output generated by the hazard calculation should be provided to the OpenQuake-engine while

running the risk calculation using the options `--hazard-calculation-id` (or `--hc`) and `--hazard-output-id` (or `--ho`) respectively. This is shown below:

```
user@ubuntu:~\$ oq-engine --run job_hazard.ini
```

In this example, the set of intensity measure types for which the ground motion fields should be generated is specified explicitly in the configuration file using the parameter `intensity_measure_types`. If the hazard calculation outputs are intended to be used as inputs for a subsequent scenario damage or risk calculation, the set of intensity measure types specified here must include all intensity measure types that are used in the fragility or vulnerability models for the subsequent damage or risk calculation.

In the configuration file illustrated above, the list of sites at which the ground motion values will be computed is provided in a CSV file, specified using the `sites_csv` parameter. The sites used for the hazard calculation need not be the same as the locations of the assets in the exposure model used for the following risk calculation. In such cases, it is recommended to set a reasonable search radius (in km) using the `asset_hazard_distance` parameter for the OpenQuake-engine to look for available hazard values, as shown in the `job_damage.ini` example file above.

The only new parameters introduced in this example are the `region_constraint` and `asset_hazard_distance` parameters, which are described below; all other parameters have already been described in earlier examples.

- `region_constraint`: this is an optional parameter, applicable only to risk calculations, which defines the polygon that will be used for filtering the assets from the exposure model. Assets outside of this region will not be considered in the risk calculations. This region is defined using pairs of coordinates that indicate the vertices of the polygon, which should be listed in the Well-known text (WKT) format:

`region_constraint = lon_1 lat_1, lon_2 lat_2, ..., lon_n lat_n`

For each point, the longitude is listed first, followed by the latitude, both in decimal degrees. The list of points defining the polygon can be provided either in a clockwise or counter-clockwise direction.

If the `region_constraint` is not provided, all assets in the exposure model are considered for the risk calculation.

This parameter is useful in cases where the exposure model covers a region larger than the one that is of interest in the current calculation.

- `asset_hazard_distance`: this parameter indicates the maximum allowable distance between an asset and the closest hazard input. Hazard inputs can include hazard curves or ground motion intensity values. If no hazard input site is found within the radius defined by the `asset_hazard_distance`, the asset is skipped and a message is provided mentioning the id of the asset that is affected by this issue.

If multiple hazard input sites are found within the radius defined by the this parameter, the hazard input site with the shortest distance from the asset location is associated

with the asset. It is possible that the associated hazard input site might be located outside the polygon defined by the `region_constraint`.

After the hazard calculation is completed, a message similar to the one below will be displayed in the terminal:

```
Calculation 2681 completed in 4 seconds. Results:  
id | output_type | name  
5072 | datastore | gmfs
```

In the example above, the calculation id of the hazard calculation is 2681. There is only one output from this calculation, i.e., the ground motion fields. The output id for the gmfs generated by the above calculation is 5027.

The risk calculation for computing the damage distribution statistics for the portfolio of assets can now be run using either:

```
user@ubuntu:~\$ oq-engine --run job_damage.ini --hc 2681
```

or

```
user@ubuntu:~\$ oq-engine --run job_damage.ini --ho 5072
```

After the calculation is completed, a message similar to the one listed above in Example 1 will be displayed.

In order to retrieve the calculation id of a previously run hazard calculation, the option `--list-hazard-calculations` (or `--lhc`) can be used to display a list of all previously run hazard calculations:

```
job_id | status | last_update | description  
2609 | successful | 2015-12-01 14:14:14 | Mid Nepal earthquake  
...  
2681 | successful | 2015-12-12 10:00:00 | Scenario hazard example
```

The option `--list-outputs` (or `--lo`) can be used to display a list of all outputs generated during a particular calculation. For instance,

```
user@ubuntu:~\$ oq-engine --lo 2681
```

will produce the following display:

```
id | output_type | name  
5072 | datastore | gmfs
```

Example 3

This example illustrates a scenario damage calculation which uses a file listing a precomputed set of ground motion fields. These ground motion fields can be computed using the OpenQuake-engine or some other software. The ground motion fields can be provided in the NRML format as presented in Section 4.3.3. The damage distribution is computed based on the provided ground motion fields.

```
job.ini
1 [general]
2 description = Scenario damage example using user-defined ground motion fields
3 calculation_mode = scenario_damage
4
5 [hazard]
6 gmfs_file = gmfs.xml
7
8 [exposure]
9 exposure_file = exposure_model.xml
10
11 [fragility]
12 structural_fragility_file = structural_fragility_model.xml
```

- `gmfs_file`: a parameter used to define the path to the ground motion fields file in the NRML format

The above calculation can be run using the command line:

```
user@ubuntu:~\$ oq-engine --run job.ini
```

Example 4

This example illustrates a scenario damage calculation which uses two GMPEs instead of only one. Currently, the set of GMPEs to be used for a scenario calculation can be specified using a logic tree file, as demonstrated in 3.3.1. As of OpenQuake-engine v1.7, the weights in the logic tree are ignored, and a set of GMFs will be generated for each GMPE in the logic tree file. Correspondingly, damage distribution statistics will be generated for each set of GMF.

The file shown below lists the two GMPEs to be used for the hazard calculation:

```
gsim_logic_tree.xml
1 <?xml version='1.0' encoding='utf-8'?>
2 <nrmr xmlns:gml="http://www.opengis.net/gml"
3   xmlns="http://openquake.org/xmlns/nrml/0.5">
4
5 <logicTree logicTreeID="lt1">
6   <logicTreeBranchingLevel branchingLevelID="bl1">
7     <logicTreeBranchSet uncertaintyType="gmpeModel"
8       branchSetID="bs1"
9         applyToTectonicRegionType="Active Shallow Crust">
10
11    <logicTreeBranch branchID="b1">
12      <uncertaintyModel>BooreAtkinson2008</uncertaintyModel>
13      <uncertaintyWeight>0.75</uncertaintyWeight>
14    </logicTreeBranch>
15
16    <logicTreeBranch branchID="b2">
17      <uncertaintyModel>ChiouYoungs2008</uncertaintyModel>
18      <uncertaintyWeight>0.25</uncertaintyWeight>
19    </logicTreeBranch>
20
21  </logicTreeBranchSet>
22 </logicTreeBranchingLevel>
23 </logicTree>
24
25 </nrmr>
```

The only change that needs to be made in the hazard job configuration file is to replace the `gsim` parameter with `gsim_logic_tree_file`, as demonstrated in the file below:

```

job_hazard.ini

1 [general]
2 description = Scenario hazard example using multiple GMPEs
3 calculation_mode = scenario
4
5 [rupture]
6 rupture_model_file = rupture_model.xml
7 rupture_mesh_spacing = 2.0
8
9 [sites]
10 sites_csv = sites.csv
11
12 [site_params]
13 site_model_file = site_model.xml
14
15 [hazard_calculation]
16 random_seed = 42
17 truncation_level = 3.0
18 maximum_distance = 200.0
19 gsim_logic_tree_file = gsim_logic_tree.xml
20 intensity_measure_types = PGA, SA(0.3)
21 number_of_ground_motion_fields = 1000
22 ground_motion_correlation_model = JB2009
23 ground_motion_correlation_params = {"vs30_clustering": True}

```

Example 5

This example illustrates a scenario damage calculation which specifies fragility models for calculating damage to structural and nonstructural components of structures, and also specifies consequence model files for calculation of the corresponding losses.

A minimal job configuration file required for running a scenario damage calculation is shown below:

```

job.ini

1 [general]
2   description = Scenario damage and consequences
3   calculation_mode = scenario_damage
4
5 [exposure]
6   exposure_file = exposure_model.xml
7
8 [rupture]
9   rupture_model_file = rupture_model.xml
10  rupture_mesh_spacing = 2.0
11
12 [site_params]
13  site_model_file = site_model.xml
14
15 [hazard_calculation]
16  random_seed = 42
17  truncation_level = 3.0
18  maximum_distance = 200.0
19  gsim = BooreAtkinson2008
20  number_of_ground_motion_fields = 1000
21  ground_motion_correlation_model = JB2009
22  ground_motion_correlation_params = {"vs30_clustering": True}
23
24 [fragility]
25  structural_fragility_file = structural_fragility_model.xml
26  nonstructural_fragility_file = nonstructural_fragility_model.xml
27
28 [consequence]
29  structural_consequence_file = structural_consequence_model.xml
30  nonstructural_consequence_file = nonstructural_consequence_model.xml

```

Note that one or more of the following parameters can be used in the same job configuration file to provide the corresponding consequence model files:

- `structural_consequence_file`: a parameter used to define the path to a structural consequence model file
- `nonstructural_consequence_file`: a parameter used to define the path to a nonstructural consequence model file
- `contents_consequence_file`: a parameter used to define the path to a contents consequence model file
- `business_interruption_consequence_file`: a parameter used to define the path to a business interruption consequence model file

It is important that the `lossCategory` parameter in the metadata section for each provided consequence model file (“structural”, “nonstructural”, “contents”, or “business_interruption”) should match the loss type defined in the configuration file by the relevant keyword above.

The above calculation can be run using the command line:

```
user@ubuntu:~\$ oq-engine --run job.ini
```

After the calculation is completed, a message similar to the following will be displayed:

```
Calculation 1579 completed in 37 seconds. Results:  
id | output_type | name  
8990 | datastore | csq_by_asset  
8991 | datastore | csq_by_taxon  
8992 | datastore | csq_total  
8993 | datastore | dmg_by_asset_and_collapse_map  
8994 | datastore | dmg_by_taxon  
8995 | datastore | dmg_total
```

8.2 Scenario Risk Calculator

In order to run this calculator, the parameter `calculation_mode` needs to be set to `scenario_risk`.

Most of the job configuration parameters required for running a scenario risk calculation are the same as those described in the previous section for the scenario damage calculator. The remaining parameters specific to the scenario risk calculator are illustrated through the examples below.

Example 1

This example illustrates a scenario risk calculation which uses a single configuration file to first compute the ground motion fields for the given rupture model and then calculate loss statistics for structural losses, nonstructural losses, and insured structural losses, based on the ground motion fields. The job configuration file required for running this scenario risk calculation is shown below:

```

1   _____ job.ini _____
2 [general]
3 description = Scenario risk using a single config file
4 calculation_mode = scenario_risk
5
6 [exposure]
7 exposure_file = exposure_model.xml
8
9 [rupture]
10 rupture_model_file = rupture_model.xml
11 rupture_mesh_spacing = 2.0
12
13 [site_params]
14 site_model_file = site_model.xml
15
16 [hazard_calculation]
17 random_seed = 42
18 truncation_level = 3.0
19 maximum_distance = 200.0
20 gsim = BooreAtkinson2008
21 number_of_ground_motion_fields = 1000
22 ground_motion_correlation_model = JB2009
23 ground_motion_correlation_params = {"vs30_clustering": True}
24
25 [vulnerability]
26 structural_vulnerability_file = structural_vulnerability_model.xml
27 nonstructural_vulnerability_file = nonstructural_vulnerability_model.xml
28
29 [risk_calculation]
30 master_seed = 24
31 asset_correlation = 0.7
32
33 [risk_outputs]
34 insured_losses = true

```

Whereas a scenario damage calculation requires one or more fragility and/or consequence models, a scenario risk calculation requires the user to specify one or more vulnerability model files. Note that one or more of the following parameters can be used in the same job configuration file to provide the corresponding vulnerability model files:

- `structural_vulnerability_file`: this parameter is used to specify the path to the structural vulnerability model file
- `nonstructural_vulnerability_file`: this parameter is used to specify the path to the nonstructuralvulnerability model file
- `contents_vulnerability_file`: this parameter is used to specify the path to the contents vulnerability model file
- `business_interruption_vulnerability_file`: this parameter is used to spec-

- **occupants_vulnerability_file:** this parameter is used to specify the path to the occupants vulnerability model file

It is important that the `lossCategory` parameter in the metadata section for each provided vulnerability model file (“structural”, “nonstructural”, “contents”, “business_interruption”, or “occupants”) should match the loss type defined in the configuration file by the relevant keyword above.

The remaining new parameters introduced in this example are the following:

- **master_seed:** this parameter is used to control the random number generator in the loss ratio sampling process. If the same `master_seed` is defined at each calculation run, the same random loss ratios will be generated, thus allowing reproducibility of the results.
- **asset_correlation:** if the uncertainty in the loss ratios has been defined within the vulnerability model, users can specify a coefficient of correlation that will be used in the Monte Carlo sampling process of the loss ratios, between the assets that share the same taxonomy. If the `asset_correlation` is set to one, the loss ratio residuals will be perfectly correlated. On the other hand, if this parameter is set to zero, the loss ratios will be sampled independently. Any value between zero and one will lead to increasing levels of correlation. If this parameter is not defined, the OpenQuake-engine will assume zero correlation in the vulnerability.
- **insured_losses:** this parameter specifies whether insured losses should be calculated; the default value of this parameter is `false`. In order for the OpenQuake-engine to be able to compute insured losses, the insurance limits and deductibles must be listed for each asset in the exposure model, as described in Example 5 in 7.1.

In this case, the ground motion fields will be computed at each of the locations of the assets in the exposure model and for each of the intensity measure types found in the provided set of vulnerability models. The above calculation can be run using the command line:

```
user@ubuntu:~\$ oq-engine --run job.ini
```

After the calculation is completed, a message similar to the following will be displayed:

```
Calculation 2735 completed in 10 seconds. Results:
  id | output_type | name
 5328 | datastore | agglosses-rlzs
 5329 | datastore | loss_map-rlzs
```

All of the different ways of running a scenario damage calculation as illustrated through the examples of the previous section are also applicable to the scenario risk calculator, though the examples are not repeated here.

8.3 Classical Probabilistic Seismic Damage Calculator

In order to run this calculator, the parameter `calculation_mode` needs to be set to `classical_damage`.

Most of the job configuration parameters required for running a classical probabilistic damage calculation are the same as those described in the section for the scenario damage calculator. The remaining parameters specific to the classical probabilistic damage calculator are illustrated through the examples below.

Example 1

This example illustrates a classical probabilistic damage calculation which uses a single configuration file to first compute the hazard curves for the given source model and ground motion model and then calculate damage distribution statistics based on the hazard curves. A minimal job configuration file required for running a classical probabilistic damage calculation is shown below:

```
1           job.ini
2
3 [general]
4   description = Classical probabilistic damage using a single config file
5   calculation_mode = classical_damage
6
7 [exposure]
8   exposure_file = exposure_model.xml
9
10 [erf]
11   width_of_mfd_bin = 0.1
12   rupture_mesh_spacing = 2
13   area_source_discretization = 20
14
15 [site_params]
16   site_model_file = site_model.xml
17
18 [logic_trees]
19   source_model_logic_tree_file = source_model_logic_tree.xml
20   gsim_logic_tree_file = gsim_logic_tree.xml
21   number_of_logic_tree_samples = 0
22
23 [hazard_calculation]
24   random_seed = 42
25   investigation_time = 1
26   truncation_level = 3.0
27   maximum_distance = 200.0
28
29 [fragility]
30   structural_fragility_file = structural_fragility_model.xml
```

The general parameters `description` and `calculation_mode`, and `exposure_file` have already been described earlier in Section 8.1. The parameters related to the hazard

curves computation have been described earlier in Section 3.4.1.

In this case, the hazard curves will be computed at each of the locations of the assets in the exposure model, for each of the intensity measure types found in the provided set of fragility models. The above calculation can be run using the command line:

```
user@ubuntu:~\$ oq-engine --run job.ini
```

After the calculation is completed, a message similar to the following will be displayed:

```
Calculation 2741 completed in 12 seconds. Results:
  id |      output_type | name
 5359 | Damage Per Asset | Damage distribution for hazard=5357
```

Example 2

This example illustrates a classical probabilistic damage calculation which uses separate configuration files for the hazard and risk parts of a classical probabilistic damage assessment. The first configuration file contains input models and parameters required for the computation of the hazard curves. The second configuration file contains input models and parameters required for the calculation of the probabilistic damage distribution for a portfolio of assets based on the hazard curves and fragility models.

```
job_hazard.ini
1 [general]
2   description = Classical probabilistic hazard
3   calculation_mode = classical
4
5 [sites]
6   region = -123.0 38.3, -121.0 38.3, -121.0 36.5, -123.0 36.5
7   region_grid_spacing = 0.5
8
9 [erf]
10  width_of_mfd_bin = 0.1
11  rupture_mesh_spacing = 2
12  area_source_discretization = 20
13
14 [site_params]
15  site_model_file = site_model.xml
16
17 [logic_trees]
18  source_model_logic_tree_file = source_model_logic_tree.xml
19  gsim_logic_tree_file = gsim_logic_tree.xml
20  number_of_logic_tree_samples = 0
21
22 [hazard_calculation]
23  random_seed = 42
24  investigation_time = 1
25  truncation_level = 3.0
26  maximum_distance = 200.0
```

```

1      job_damage.ini
2      [general]
3      description = Classical probabilistic damage example
4      calculation_mode = classical_damage
5
6      [exposure]
7      exposure_file = exposure_model.xml
8
9      [hazard]
10     asset_hazard_distance = 20
11
12     [fragility]
13     structural_fragility_file = structural_fragility_model.xml
14
15     [risk_calculation]
16     risk_investigation_time = 50
      steps_per_interval = 4

```

Now, the above calculations described by the two configuration files “job_hazard.ini” and “job_damage.ini” can be run sequentially or separately, as illustrated in Example 2 in Section 8.1. The new parameters introduced in the above example configuration file are described below:

- **risk_investigation_time**: an optional parameter that can be used in probabilistic damage or risk calculations where the period of interest for the risk calculation is different from the period of interest for the hazard calculation. If this parameter is not explicitly set, the OpenQuake-engine will assume that the risk calculation is over the same time period as the preceding hazard calculation.
- **steps_per_interval**: an optional parameter that can be used to specify whether discrete fragility functions in the fragility models should be discretized further, and if so, how many intermediate steps to use for the discretization. Setting `steps_per_interval = n` will result in the OpenQuake-engine discretizing the discrete fragility models using $(n - 1)$ interpolation steps between each pair of intensity level, poe points. The default value of this parameter is one, implying no interpolation.

8.4 Classical Probabilistic Seismic Risk Calculator

In order to run this calculator, the parameter `calculation_mode` needs to be set to `classical_risk`.

Most of the job configuration parameters required for running a classical probabilistic risk calculation are the same as those described in the previous section for the classical probabilistic damage calculator. The remaining parameters specific to the classical probabilistic risk calculator are illustrated through the examples below.

Example 1

This example illustrates a classical probabilistic risk calculation which uses a single configuration file to first compute the hazard curves for the given source model and ground motion model and then calculate loss exceedance curves and maps based on the hazard curves. A minimal job configuration file required for running a classical probabilistic risk calculation is shown below:

```
job.ini
1 [general]
2 description = Classical probabilistic risk using a single config file
3 calculation_mode = classical_risk
4
5 [exposure]
6 exposure_file = exposure_model.xml
7
8 [erf]
9 width_of_mfd_bin = 0.1
10 rupture_mesh_spacing = 2
11 area_source_discretization = 20
12
13 [site_params]
14 site_model_file = site_model.xml
15
16 [logic_trees]
17 source_model_logic_tree_file = source_model_logic_tree.xml
18 gsim_logic_tree_file = gsim_logic_tree.xml
19 number_of_logic_tree_samples = 0
20
21 [hazard_calculation]
22 random_seed = 42
23 investigation_time = 1
24 truncation_level = 3.0
25 maximum_distance = 200.0
26
27 [vulnerability]
28 structural_vulnerability_file = structural_vulnerability_model.xml
29 nonstructural_vulnerability_file = structural_vulnerability_model.xml
30
31 [risk_outputs]
32 insured_losses = true
```

Apart from the calculation mode, the only difference with the example job configuration file shown in Example 1 of Section 8.3 is the use of a vulnerability model instead of a fragility model.

As with the Scenario Risk calculator, it is possible to specify one or more vulnerability model files in the same job configuration file, using the parameters:

- `structural_vulnerability_file`,

- nonstructural_vulnerability_file,
- contents_vulnerability_file,
- business_interruption_vulnerability_file, and/or
- occupants_vulnerability_file

It is important that the lossCategory parameter in the metadata section for each provided vulnerability model file (“structural”, “nonstructural”, “contents”, “business_interruption”, or “occupants”) should match the loss type defined in the configuration file by the relevant keyword above.

In this case, the hazard curves will be computed at each of the locations of the assets in the exposure model, for each of the intensity measure types found in the provided set of vulnerability models. The above calculation can be run using the command line:

```
user@ubuntu:~\$ oq-engine --run job.ini
```

After the calculation is completed, a message similar to the following will be displayed:

```
Calculation 2749 completed in 24 seconds. Results:  
id | output_type | name  
5373 | Loss Curve | loss curves. type=structural, hazard=5371  
5374 | Loss Curve | loss curves. type=nonstructural, hazard=5371  
5375 | Loss Curve | insured loss curves. type=structural hazard=5371
```

Example 2

This example illustrates a classical probabilistic risk calculation which uses separate configuration files for the hazard and risk parts of a classical probabilistic risk assessment. The first configuration file contains input models and parameters required for the computation of the hazard curves. The second configuration file contains input models and parameters required for the calculation of the loss exceedance curves and probabilistic loss maps for a portfolio of assets based on the hazard curves and vulnerability models.

```
job_hazard.ini  
1 [general]  
2   description = Classical probabilistic hazard  
3   calculation_mode = classical  
4  
5 [sites]  
6   region = -123.0 38.3, -121.0 38.3, -121.0 36.5, -123.0 36.5  
7   region_grid_spacing = 0.5  
8  
9 [erf]  
10  width_of_mfd_bin = 0.1  
11  rupture_mesh_spacing = 2  
12  area_source_discretization = 20  
13  
14 [site_params]  
15  site_model_file = site_model.xml  
16  
17 [logic_trees]  
18  source_model_logic_tree_file = source_model_logic_tree.xml  
19  gsim_logic_tree_file = gsim_logic_tree.xml  
20  number_of_logic_tree_samples = 0  
21  
22 [hazard_calculation]  
23  random_seed = 42  
24  investigation_time = 1  
25  truncation_level = 3.0  
26  maximum_distance = 200.0
```

```

job_risk.ini

1 [general]
2 description = Classical probabilistic risk
3 calculation_mode = classical_risk
4
5 [exposure]
6 exposure_file = exposure_model.xml
7
8 [hazard]
9 asset_hazard_distance = 20
10
11 [vulnerability]
12 structural_vulnerability_file = structural_vulnerability_model.xml
13 nonstructural_vulnerability_file = nonstructural_vulnerability_model.xml
14
15 [risk_calculation]
16 risk_investigation_time = 50
17 lrem_steps_per_interval = 2
18
19 [risk_outputs]
20 quantile_loss_curves = 0.15, 0.50, 0.85
21 conditional_loss_poes = 0.02, 0.10

```

Now, the above calculations described by the two configuration files “job_hazard.ini” and “job_risk.ini” can be run sequentially or separately, as illustrated in Example 2 in Section 8.1. The new parameters introduced in the above example configuration file are described below:

- `lrem_steps_per_interval`: this parameter controls the number of intermediate values between consecutive loss ratios (as defined in the vulnerability model) that are considered in the risk calculations. A larger number of loss ratios than those defined in each vulnerability function should be considered, in order to better account for the uncertainty in the loss ratio distribution. If this parameter is not defined in the configuration file, the OpenQuake-engine assumes the `lrem_steps_per_interval` to be equal to 5. More details are provided in the OpenQuake-engine Book (Risk).
- `quantile_loss_curves`: this parameter can be used to request the computation of quantile loss curves for computations involving nontrivial logic trees. The quantiles for which the loss curves should be computed must be provided as a comma separated list. If this parameter is not included in the configuration file, quantile loss curves will not be computed.
- `conditional_loss_poes`: this parameter can be used to request the computation of probabilistic loss maps, which give the loss levels exceeded at the specified probabilities of exceedance over the time period specified by `risk_investigation_time`. The probabilities of exceedance for which the loss maps should be computed must be provided as a comma separated list. If this parameter is not included in the configuration file, probabilistic loss maps will not be computed.

8.5 Stochastic Event Based Probabilistic Seismic Risk Calculator

The parameter `calculation_mode` needs to be set to `event_based_risk` in order to use this calculator.

Most of the job configuration parameters required for running a stochastic event based risk calculation are the same as those described in the previous sections for the scenario risk calculator and the classical probabilistic risk calculator. The remaining parameters specific to the stochastic event based risk calculator are illustrated through the example below.

Example 1

This example illustrates a stochastic event based risk calculation which uses a single configuration file to first compute the stochastic event sets and ground motion fields for the given source model and ground motion model, and then calculate event loss tables, loss exceedance curves and probabilistic loss maps for structural losses, nonstructural losses, and insured structural losses, based on the ground motion fields. The job configuration file required for running this stochastic event based risk calculation is shown below:

```
job.ini
1 [general]
2   description = Stochastic event based risk using a single job file
3   calculation_mode = event_based_risk
4
5 [exposure]
6   exposure_file = exposure_model.xml
7
8 [site_params]
9   site_model_file = site_model.xml
10
11 [erf]
12   width_of_mfd_bin = 0.1
13   rupture_mesh_spacing = 2.0
14   area_source_discretization = 10
15
16 [logic_trees]
17   source_model_logic_tree_file = source_model_logic_tree.xml
18   gsim_logic_tree_file = gsim_logic_tree.xml
19
20 [correlation]
21   ground_motion_correlation_model = JB2009
22   ground_motion_correlation_params = {"vs30_clustering": True}
23
24 [hazard_calculation]
25   random_seed = 24
26   truncation_level = 3
27   maximum_distance = 200.0
28   investigation_time = 1
29   number_of_logic_tree_samples = 0
30   ses_per_logic_tree_path = 100000
31
32 [vulnerability]
33   structural_vulnerability_file = structural_vulnerability_model.xml
34   nonstructural_vulnerability_file = nonstructural_vulnerability_model.xml
35
36 [risk_calculation]
37   master_seed = 42
38   risk_investigation_time = 50
39   asset_correlation = 0.0
40   loss_curve_resolution = 10
41   loss_ratios = {"structural": [0.00010, 0.00016, 0.00025, 0.00040, 0.00065,
42     0.0010, 0.0016, 0.0025, 0.0040, 0.0065, 0.010, 0.016, 0.025, 0.040, 0.065,
43     0.10, 0.16, 0.25, 0.40, 0.65, 1.0], "nonstructural": [0.00010, 0.00016,
44     0.00025, 0.00040, 0.00065, 0.0010, 0.0016, 0.0025, 0.0040, 0.0065, 0.010,
45     0.016, 0.025, 0.040, 0.065, 0.10, 0.16, 0.25, 0.40, 0.65, 1.0]}
46
47 [risk_outputs]
48   avg_losses = true
49   insured_losses = true
50   asset_loss_table = true
51   quantile_loss_curves = 0.15, 0.50, 0.85
52   conditional_loss_poes = 0.02, 0.10
```

Similar to that the procedure described for the Scenario Risk calculator, a Monte Carlo sampling process is also employed in this calculator to take into account the uncertainty in the conditional loss ratio at a particular intensity level. Hence, the parameters `asset_correlation` and `master_seed` may be defined as previously described for the Scenario Risk calculator in Section 8.2. This calculator is also capable of estimating insured losses and therefore, setting the `insured_losses` attribute to `true` will generate all results (loss tables, loss curves, loss maps) for insured losses as well. The parameter “`risk_investigation_time`” specifies the time period for which the event loss tables and loss exceedance curves will be calculated, similar to the Classical Probabilistic Risk calculator. If this parameter is not provided in the risk job configuration file, the time period used is the same as that specified in the hazard calculation using the parameter “`investigation_time`”.

The new parameters introduced in this example are described below:

- `loss_curve_resolution`: this parameter specifies the number of points on the aggregate loss curve. The loss levels on the aggregate loss curve are obtained by dividing the interval between the minimum and maximum portfolio losses in the portfolio loss table into ‘n’ equispaced intervals, where ‘n’ is the value specified for the `loss_curve_resolution`. If this parameter is not set, the OpenQuake-engine uses a default value of 20 for the `loss_curve_resolution`.
- `loss_ratios`: this parameter specifies the set of loss ratios at which the individual asset loss curves will be computed. If `loss_ratios` is not set in the configuration file, the individual asset loss curves will not be computed; and only the aggregate loss curve for the portfolio of assets will be computed.
- `avg_losses`: this boolean parameter specifies whether the average asset losses over the time period “`risk_investigation_time`” should be computed. The default value of this parameter is `false`.

$$\begin{aligned} \text{average_loss} = & \sum(\text{event_losses}) \\ & \div (\text{hazard_investigation_time} \times \text{ses_per_logic_tree_path}) \\ & \times \text{risk_investigation_time} \end{aligned}$$

- `asset_loss_table`: this boolean parameter specifies whether the individual asset event loss tables should be saved to the datastore. The default value of this parameter is `false`.

The above calculation can be run using the command line:

```
user@ubuntu:~\$ oq-engine --run job.ini
```

Computation of the loss tables, loss curves, and average losses for each individual asset in the exposure model can be resource intensive, and thus these outputs are not generated by default, unless instructed to by using the parameters described above.

8.6 Retrofit Benefit-Cost Ratio Calculator

As previously explained, this calculator uses loss exceedance curves which are calculated using the Classical Probabilistic risk calculator. In order to run this calculator, the parameter `calculation_mode` needs to be set to `classical_bcr`.

Most of the job configuration parameters required for running a classical retrofit benefit-cost ratio calculation are the same as those described in the previous section for the classical probabilistic risk calculator. The remaining parameters specific to the classical retrofit benefit-cost ratio calculator are illustrated through the examples below.

Example 1

This example illustrates a classical probabilistic retrofit benefit-cost ratio calculation which uses a single configuration file to first compute the hazard curves for the given source model and ground motion model, then calculate loss exceedance curves based on the hazard curves using both the original vulnerability model and the vulnerability model for the retrofitted structures, then calculate the reduction in average annual losses due to the retrofits, and finally calculate the benefit-cost ratio for each asset. A minimal job configuration file required for running a classical probabilistic retrofit benefit-cost ratio calculation is shown below:

```

job.ini

1 [general]
2 description = Classical cost-benefit analysis using a single config file
3 calculation_mode = classical_bcr
4
5 [exposure]
6 exposure_file = exposure_model.xml
7
8 [erf]
9 width_of_mfd_bin = 0.1
10 rupture_mesh_spacing = 2
11 area_source_discretization = 20
12
13 [site_params]
14 site_model_file = site_model.xml
15
16 [logic_trees]
17 source_model_logic_tree_file = source_model_logic_tree.xml
18 gsim_logic_tree_file = gsim_logic_tree.xml
19 number_of_logic_tree_samples = 0
20
21 [hazard_calculation]
22 random_seed = 42
23 investigation_time = 1
24 truncation_level = 3.0
25 maximum_distance = 200.0
26
27 [vulnerability]
28 structural_vulnerability_file = structural_vulnerability_model.xml
29 structural_vulnerability_retrofitted_file = retrofit_vulnerability_model.xml
30
31 [risk_calculation]
32 interest_rate = 0.05
33 asset_life_expectancy = 50
34 lrem_steps_per_interval = 1

```

The new parameters introduced in the above example configuration file are described below:

- `vulnerability_retrofitted_file`: this parameter is used to specify the path to the vulnerability model file containing the vulnerability functions for the retrofitted asset
- `interest_rate`: this parameter is used in the calculation of the present value of potential future benefits by discounting future cash flows
- `asset_life_expectancy`: this variable defines the life expectancy or design life of the assets, and is used as the time-frame in which the costs and benefits of the retrofit will be compared

The above calculation can be run using the command line:

```
user@ubuntu:~\$ oq-engine --run job.ini
```

After the calculation is completed, a message similar to the following will be displayed:

```
Calculation 2776 completed in 25 seconds. Results:
id | output_type | name
5422 | Benefit-cost ratio distribution | BCR Map. type=structural, hazard=5420
```

8.7 Exporting Risk Results

To obtain a list of all risk calculations that have been previously run (successfully or unsuccessfully), or are currently running, the following command can be employed:

```
user@ubuntu:~\$ oq-engine --list-risk-calculations
```

or simply:

```
user@ubuntu:~\$ oq-engine --lrc
```

Which will display a list of risk calculations as presented below.

job_id	status	last_update	description
1	successful	2015-12-02 08:50:30	Scenario damage example
2	failed	2015-12-03 09:56:17	Scenario risk example
3	successful	2015-12-04 10:45:32	Scenario risk example
4	successful	2015-12-04 10:48:33	Classical risk example

Then, in order to display a list of the risk outputs from a given job, the following command can be used:

```
user@ubuntu:~\$ oq-engine --list-outputs <risk_calculation_id>
```

or simply:

```
user@ubuntu:~\$ oq-engine --lo <risk_calculation_id>
```

which will display a list of outputs for the calculation requested, as presented below:

```
Calculation 4 results:
id | output_type | name
29 | loss_curve | loss curves. type=structural, hazard=32
30 | loss_map | loss maps. type=structural poe=0.1, hazard=32
```

Then, in order to export all of the risk calculation outputs in the appropriate xml format, the following command can be used:

```
user@ubuntu:~\$ oq-engine --export-outputs <risk_calculation_id> <output_directory>
```

or simply:

```
user@ubuntu:~\$ oq-engine --eos <risk_calculation_id> <output_directory>
```

If, instead of exporting all of the outputs from a particular calculation, only particular output files need to be exported, this can be achieved by using the --export-output option

and providing the id of the required output:

```
user@ubuntu:~\$ oq-engine --export-output <risk_output_id> <output_directory>
```

or simply:

```
user@ubuntu:~\$ oq-engine --eo <risk_output_id> <output_directory>
```

Scenario Damage Outputs

- Scenario damage statistics
- Scenario collapse maps
- Scenario consequence statistics

Scenario Risk Outputs

- Scenario loss statistics
- Scenario loss maps

Probabilistic Damage Outputs

- Probabilistic damage distribution

Probabilistic Risk Outputs

- Loss exceedance curves
- Probabilistic loss maps
- Stochastic event loss tables

Benefit-Cost Ratio Outputs

- Retrofitting Benefit/cost ratio maps

9. Risk Results

This following sections describe the different output files produced by the risk calculators.

9.1 Scenario Damage Outputs

The Scenario Damage Calculator produces the following set of output files for all loss types (amongst “structural”, “nonstructural”, “contents”, or “business_interruption”) for which a fragility model file was provided in the configuration file:

1. `dmg_dist_per_asset`: this file contains the damage distribution statistics for each of the individual assets defined in the exposure model that fall within the `region_constraint` and have a computed GMF value available within the defined `asset_hazard_distance`. For each asset, the mean number of buildings (`mean`) and associated standard deviation (`stddev`) of the number of buildings in each damage state are listed in this file.
2. `dmg_dist_per_taxonomy`: this file contains the aggregated damage distribution statistics for each of the taxonomies defined in the exposure model. For each taxonomy, the mean number of buildings (`mean`) and associated standard deviation (`stddev`) of the number of buildings in each damage state are listed in this file.
3. `dmg_dist_total`: this file contains the aggregated damage distribution statistics for the entire portfolio of assets defined in the exposure model. The mean (`mean`) and associated standard deviation (`stddev`) of the total number of buildings in each damage state are listed in this file.
4. `collapse_map`: this file contains mean (`mean`) and associated standard deviation (`stddev`) of the number of buildings in the ultimate limit state for all assets at each of the unique locations in the exposure model.

In addition to the above output files which are produced for all Scenario Damage calculations, the following set of output files for all loss types (amongst “structural”, “nonstructural”, “contents”, or “business_interruption”) for which a consequence model file was also provided

in the configuration file:

5. `csq_by_asset`: this file contains the scenario consequence statistics for each of the individual assets defined in the exposure model that fall within the `region_constraint` and have a computed GMF value available within the defined `asset_hazard_distance`. For each asset, the mean consequences (`mean`) and associated standard deviation (`stddev`) are listed in this file.
6. `csq_by_taxon`: this file contains the aggregated scenario consequence statistics for each of the taxonomies defined in the exposure model. For each taxonomy, the mean consequences (`mean`) and associated standard deviation (`stddev`) are listed in this file.
7. `csq_total`: this file contains the aggregated scenario consequence statistics for the entire portfolio of assets defined in the exposure model. The mean consequences (`mean`) and associated standard deviation (`stddev`) are listed in this file.

If the calculation involves multiple GMPEs as described in Example 4 in Section 8.1, separate output files are generated for each of the above outputs, for each of the different GMPEs used in the calculation.

These different output files for Scenario Damage calculations are described in more detail in the following subsections.

9.1.1 Scenario damage statistics

9.1.1.1 Asset damage statistics

This output contains the damage distribution statistics for each of the individual assets defined in the exposure model that fall within the `region_constraint` and have a computed GMF value available within the defined `asset_hazard_distance`. An example output file for structural damage is shown in the file snippet below:

```

<?xml version="1.0" encoding="utf-8"?>
<nrmrl
xmlns="http://openquake.org/xmlns/nrml/0.5"
xmlns:gml="http://www.opengis.net/gml"
>
  <dmgDistPerAsset>
    <damageStates>
      no_damage slight moderate extensive complete
    </damageStates>
    <DDNode>
      <gml:Point>
        <gml:pos>
          -122.57 38.113
        </gml:pos>
      </gml:Point>
      <asset assetRef="a3">
        <damage ds="no_damage" mean="7.1795E-01" stddev="1.2221E-01"/>
        <damage ds="slight" mean="2.5959E-01" stddev="9.5708E-02"/>
        <damage ds="moderate" mean="2.2447E-02" stddev="3.1015E-02"/>
        <damage ds="extensive" mean="3.9972E-06" stddev="1.8029E-05"/>
        <damage ds="complete" mean="1.7999E-26" stddev="1.1334E-25"/>
      </asset>
    </DDNode>

    ...
    <DDNode>
      <gml:Point>
        <gml:pos>
          -121.886 38.113
        </gml:pos>
      </gml:Point>
      <asset assetRef="a7">
        <damage ds="no_damage" mean="2.9778E-01" stddev="1.3390E-01"/>
        <damage ds="slight" mean="3.6392E-01" stddev="7.9219E-02"/>
        <damage ds="moderate" mean="3.0590E-01" stddev="1.5269E-01"/>
        <damage ds="extensive" mean="3.2343E-02" stddev="7.8265E-02"/>
        <damage ds="complete" mean="3.4134E-05" stddev="3.2795E-04"/>
      </asset>
    </DDNode>
  </dmgDistPerAsset>
</nrmrl>

```

The key fields in the above output file are the following:

- **damageStates**: this field serves the purposes of storing the set of damage states, as defined in the fragility model employed in the calculations
- **DDNode**: this attribute is used to store the damage distribution of a number of assets,

at a given location (defined within the attribute `gml:Point`). For each asset, the mean number of buildings (`mean`) and associated standard deviation (`stddev`) of the number of buildings in each damage state are listed.

9.1.1.2 Taxonomy damage statistics

The Scenario Damage calculator also estimates the expected total number of buildings of a certain taxonomy in each damage state. This distribution of damage per building taxonomy is depicted in the following example output file snippet:

```

1  <?xml version="1.0" encoding="utf-8"?>
2  <nrmrl
3  xmlns="http://openquake.org/xmlns/nrml/0.5"
4  xmlns:gml="http://www.opengis.net/gml"
5  >
6  <dmgDistPerTaxonomy>
7  <damageStates>
8      no_damage slight moderate extensive complete
9  </damageStates>
10 <DDNode>
11     <taxonomy>
12         wood
13     </taxonomy>
14     <damage ds="no_damage" mean="1.4548E+00" stddev="3.4801E-01"/>
15     <damage ds="slight" mean="1.2070E+00" stddev="2.0861E-01"/>
16     <damage ds="moderate" mean="1.0288E+00" stddev="2.5993E-01"/>
17     <damage ds="extensive" mean="2.9099E-01" stddev="3.0502E-01"/>
18     <damage ds="complete" mean="1.8247E-02" stddev="7.8220E-02"/>
19 </DDNode>
20 <DDNode>
21     <taxonomy>
22         concrete
23     </taxonomy>
24     <damage ds="no_damage" mean="1.0078E+00" stddev="3.5099E-01"/>
25     <damage ds="slight" mean="2.9329E-01" stddev="5.4491E-02"/>
26     <damage ds="moderate" mean="2.5675E-01" stddev="7.9949E-02"/>
27     <damage ds="extensive" mean="1.8173E-01" stddev="7.7708E-02"/>
28     <damage ds="complete" mean="2.6039E-01" stddev="1.9921E-01"/>
29 </DDNode>
30 <DDNode>
31     <taxonomy>
32         steel
33     </taxonomy>
34     <damage ds="no_damage" mean="4.2150E-01" stddev="1.9680E-01"/>
35     <damage ds="slight" mean="7.6996E-02" stddev="2.0042E-02"/>
36     <damage ds="moderate" mean="2.2407E-01" stddev="3.7714E-02"/>
37     <damage ds="extensive" mean="1.2628E-01" stddev="5.5348E-02"/>
38     <damage ds="complete" mean="1.5114E-01" stddev="1.2089E-01"/>
39 </DDNode>
40 </dmgDistPerTaxonomy>
41 </nrmrl>
```

In the damage distribution per taxonomy, each DDNode contains the statistics of the number of buildings in each damage state, belonging to a given building class as specified by the taxonomy attribute.

9.1.1.3 Total damage statistics

Finally, a total damage distribution output file is also generated, which contains the mean and standard deviation of the total number of buildings in each damage state, as illustrated in the example file below.

```
1  <?xml version="1.0" encoding="utf-8"?>
2  <nrmrl
3  xmlns="http://openquake.org/xmlns/nrml/0.5"
4  xmlns:gml="http://www.opengis.net/gml"
5  >
6  <totalDmgDist>
7  <damageStates>
8      no_damage slight moderate extensive complete
9  </damageStates>
10 <damage ds="no_damage" mean="5.6572E+03" stddev="1.0439E+03"/>
11 <damage ds="slight" mean="7.4325E+02" stddev="5.2130E+02"/>
12 <damage ds="moderate" mean="3.3043E+02" stddev="2.8045E+02"/>
13 <damage ds="extensive" mean="8.6711E+01" stddev="1.2493E+02"/>
14 <damage ds="complete" mean="1.8231E+02" stddev="2.3540E+02"/>
15 </totalDmgDist>
16 </nrmrl>
```

9.1.2 Scenario collapse maps

Collapse maps are part of the Scenario Damage calculator outputs. These results provide the spatial distribution of the number of the buildings in the ultimate limit state throughout the area of interest. An example snippet from an output file depicting a collapse map for structural damage is presented below.

```

<?xml version="1.0" encoding="utf-8"?>
<nrmrl
xmlns="http://openquake.org/xmlns/nrml/0.5"
xmlns:gml="http://www.opengis.net/gml"
>
  <collapseMap>
    <CMNode>
      <gml:Point>
        <gml:pos>
          -122.57 38.113
        </gml:pos>
      </gml:Point>
      <cf assetRef="a3" mean="4.0578E-20" stdDev="2.7091E-19"/>
      <cf assetRef="a2" mean="4.2933E-02" stdDev="5.1818E-02"/>
    </CMNode>
    <CMNode>
      <gml:Point>
        <gml:pos>
          -122.0 38.225
        </gml:pos>
      </gml:Point>
      <cf assetRef="a6" mean="1.6218E-01" stdDev="1.4466E-01"/>
    </CMNode>
    ...
    <CMNode>
      <gml:Point>
        <gml:pos>
          -121.886 38.113
        </gml:pos>
      </gml:Point>
      <cf assetRef="a7" mean="9.0050E-06" stdDev="8.8179E-05"/>
    </CMNode>
  </collapseMap>
</nrmrl>

```

The results for a number of assets at a given location are stored within the field CMNode. This field is associated with a location (defined within the gml:Point attribute) and it contains the mean number of buildings in the ultimate limit state (mean) and the corresponding standard deviation (stdDev) for each asset (identified by the parameter assetRef).

9.1.3 Scenario consequence statistics

9.1.3.1 Asset consequence statistics

This output contains the consequences statistics for each of the individual assets defined in the exposure model that fall within the region_constraint and have a computed GMF value available within the defined asset_hazard_distance. An example output file for structural damage consequences is shown in Table 9.1.

asset_ref	lon	lat	nonstructural-mean	nonstructural-stddev
a3	-122.57000	38.11300	428.29	281.49
a2	-122.11400	38.11300	1220.84	1111.4
a5	-122.00000	37.91000	1390.59	859.1
a4	-122.00000	38.00000	2889.04	1663.33
a1	-122.00000	38.11300	3191.3	1707.41
a6	-122.00000	38.22500	3310.62	2069.87
a7	-121.88600	38.11300	1415.19	845.83

Table 9.1 – Example of a scenario asset consequences output file

The output file lists consequence statistics for all loss types (amongst “structural”, “non-structural”, “contents”, or “business_interruption”) for which a consequence model file was also provided in the configuration file in addition to the corresponding fragility model file.

9.1.3.2 Taxonomy consequence statistics

The Scenario Damage calculator also estimates the expected total consequences for buildings of a certain taxonomy, as depicted in the sample output shown in Table 9.2.

taxonomy	contents-mean	contents-stddev	structural-mean	structural-stddev
concrete	6425.37	2965.17	1338.30	1661.46
steel	4531.46	2821.97	597.90	743.71
wood	2889.04	1663.33	334.09	386.80

Table 9.2 – Example of a scenario taxonomy consequences output file

9.1.3.3 Total consequence statistics

Finally, a total consequences output file is also generated, which contains the mean and standard deviation of the total consequences for the selected scenario, as illustrated in the example shown in Table .

contents-mean	contents-stddev	structural-mean	structural-stddev
13845.87	6517.61	2270.29	2440.90

Table 9.3 – Example of a scenario total consequences output file

9.2 Scenario Risk Outputs

The Scenario Risk Calculator produces the following set of output files for all loss types (amongst “structural”, “nonstructural”, “contents”, “occupants”, or “business_interruption”) for which a vulnerability model file was provided in the configuration file:

1. `agg_loss`: this file contains the aggregated scenario loss statistics for the entire portfolio of assets defined in the exposure model. The mean (`mean`) and standard deviation (`stddev`) of the total loss for the portfolio of assets are listed in this file.
2. `loss_map`: this file contains mean (`mean`) and associated standard deviation (`stddev`) of the scenario loss for all assets at each of the unique locations in the exposure model.

If the calculation involves multiple GMPEs, separate output files are generated for each of the above outputs, for each of the different GMPEs used in the calculation.

These different output files for Scenario Risk calculations are described in more detail in the following subsections.

9.2.1 Scenario loss statistics

9.2.1.1 Total loss statistics

This output is always produced for a Scenario Risk calculation and comprises a mean total loss and associated standard deviation for the selected earthquake rupture. These results are stored in a comma separate value (.csv) file as illustrated in the example shown in Table .

LossType	Unit	Mean	Standard Deviation
structural	USD	8717775315.66	2047771108.36

Table 9.4 – Example of a scenario total loss output file

The important attributes in a scenario total loss statistics output file are described below:

- **LossType**: the type of losses that are being stored. This parameter is taken from the vulnerability model that was used in the loss calculations (e.g. fatalities, economic loss).
- **Unit**: this attribute defines the units in which the losses are being measured (e.g. EUR).
- **Mean**: the mean total loss across the portfolio of assets for the selected earthquake rupture.
- **Standard Deviation**: the standard deviation of the total loss across the portfolio of assets for the selected earthquake rupture.

9.2.2 Scenario loss maps

A scenario loss map contains the spatial distribution of the losses throughout the region of interest. The scenario loss map comprises a mean loss and respective standard deviation for each asset for the selected earthquake rupture, as shown in the example file below.

```

<?xml version="1.0" encoding="utf-8"?>
<nrmrl
xmlns="http://openquake.org/xmlns/nrml/0.5"
xmlns:gml="http://www.opengis.net/gml"
>
  <lossMap
    gsimTreePath="b1"
    investigationTime="None"
    lossType="nonstructural"
    poE="None"
    unit="USD"
  >
    <node>
      <gml:Point>
        <gml:pos>
          -122.57 38.113
        </gml:pos>
      </gml:Point>
      <loss assetRef="a3" mean="455.43" stdDev="184.14"/>
      <loss assetRef="a2" mean="2769.42" stdDev="2801.90"/>
    </node>
    ...
    <node>
      <gml:Point>
        <gml:pos>
          -122.0 38.225
        </gml:pos>
      </gml:Point>
      <loss assetRef="a6" mean="8286.74" stdDev="5219.20"/>
    </node>
    <node>
      <gml:Point>
        <gml:pos>
          -121.886 38.113
        </gml:pos>
      </gml:Point>
      <loss assetRef="a7" mean="1301.43" stdDev="1171.17"/>
    </node>
  </lossMap>
</nrmrl>

```

The important attributes in a scenario loss map are described below:

- **lossCategory**: the type of losses that are being stored. This parameter is taken from the vulnerability model that was used in the loss calculations (e.g. fatalities, economic loss).
- **unit**: this attribute defines the units in which the losses are being measured (e.g. EUR).

- **node:** each loss map comprises various nodes, each node possibly containing a number of assets. The location of the node is defined by a latitude and longitude in decimal degrees within the field `gml:Point`. The mean loss (`mean`) and associated standard deviation (`stdDev`) for each asset (identified by the parameter `assetRef`) is stored in the `loss` field.

9.3 Probabilistic Damage Outputs

9.3.1 Probabilistic damage distribution

The Classical PSHA-based Damage calculator provides the expected damage distribution per asset as a csv file, as illustrated below:

```
asset_ref, no_damage, slight, moderate, extreme, complete
a1, 4.4360E-06, 6.3482E-03, 3.4851E-01, 4.7628E-01, 1.6884E-01
a2, 1.0391E-05, 9.1856E-03, 3.7883E-01, 4.6140E-01, 1.5056E-01
.
.
.
a998, 6.9569E-02, 6.4106E+00, 7.4108E+01, 5.7563E+01, 1.7848E+01
a999, 1.2657E-01, 8.1294E+00, 7.6249E+01, 5.4701E+01, 1.6792E+01
```

9.4 Probabilistic Risk Outputs

9.4.1 Loss exceedance curves

Loss exceedance curves can be calculated using the Classical PSHA-based Risk or Probabilistic Event-based Risk calculators, and they provide the probability of exceeding a set of levels of loss, within a given time span (or investigation interval). Similarly to what has been described for the probabilistic loss maps, also here it is necessary to define the parameters `investigationTime`, `sourceModelTreePath`, `gsimTreePath` and `unit`. Then, the set of loss exceedance curves are stored as presented in the following example.

```
<?xml version="1.0" encoding="UTF-8"?>
<nrml xmlns:gml="http://www.opengis.net/gml"
<lossCurves investigationTime="50" sourceModelTreePath="b1"
  gsimTreePath="b1" unit="EUR">
  <lossCurve assetRef="a1">
    <gml:Point>
      <gml:pos>83.31 29.46</gml:pos>
    </gml:Point>
    <poE> 0.970 0.297 0.137 0.019 0.005 0.001</poE>
```

```

<losses> 235 477 989 4102 7444 15631</losses>
<lossRatios> 0.02 0.03 0.06 0.26 0.48 1.0</lossRatios>
</lossCurve>
...
<lossCurve assetRef="a999">
  <gml:Point>
    <gml:pos>83.33 28.71</gml:pos>
  </gml:Point>
  <poE> 0.99 0.714 0.112 0.020 0.004 0.001</poE>
  <losses>58 402 819 3664 8001 13540</losses>
  <lossRatios> 0.02 0.04 0.07 0.32 0.59 1.0</lossRatios>
</lossCurve>
</lossCurves>
</nrml>

```

Each `lossCurve` is associated with a location (defined within the `gml:Point` attribute) and a reference to the asset (`assetRef`) whose loss is being represented. Then, three lists of values are stored: the probabilities of exceedance (`poE`), levels of absolute loss (`losses`) and percentages of loss (`lossRatios`).

9.4.2 Probabilistic loss maps

A loss map contains the spatial distribution of the losses throughout the region of interest. This result can be produced by the Scenario Risk calculator (representing the losses from a single event), or from the Probabilistic Event-based Risk or Classical PSHA-based Risk calculators (representing the expected losses from probabilistic seismic hazard). In the former case, the loss map is comprised of a mean loss and respective standard deviation for each asset, whilst for the latter, a single value is provided, representing the expected loss for a given return period (or probability of exceedance for a certain time span, or investigation interval). In the following example, a loss map due to a single earthquake is presented.

```

<?xml version="1.0" encoding="UTF-8"?>
<nrml xmlns:gml="http://www.opengis.net/gml"
       xmlns="http://openquake.org/xmlns/nrml/0.5">
  <lossMap lossCategory="buildings" unit="EUR">
    <node>
      <gml:Point>
        <gml:pos>83.31 29.46</gml:pos>
      </gml:Point>
      <loss assetRef="a1" mean="53.3" stdDev="109.25"/>
      <loss assetRef="a2" mean="386.0" stdDev="695.7"/>
    </node>
  </lossMap>
</nrml>

```

```

        loss assetRef="a3" mean="303.1" stdDev="447.4"/>
        loss assetRef="a4" mean="298.9" stdDev="453.7"/>
    
```

</node>

...

<node>

```

        <gml:Point>
            <gml:pos>83.33 28.71</gml:pos>
        </gml:Point>
        loss assetRef="a997" mean="277.3" stdDev="100.8"/>
        loss assetRef="a998" mean="219.6" stdDev="123.5"/>
        loss assetRef="a999" mean="576.3" stdDev="210.9"/>
    
```

</node>

</lossMap>

</nrml>

- **lossCategory**: the type of losses that are being stored. This parameter is taken from the vulnerability model that was used in the loss calculations (e.g. fatalities, economic loss);
- **unit**: this attribute is used to define the units in which the losses are being measured (e.g. EUR);
- **node**: each loss map is comprised by various nodes, each node possibly containing a number of assets. The location of the node is defined by a latitude and longitude in decimal degrees within the field `gml:Point`. The mean loss (`mean`) and associated standard deviation (`stdDev`) for each asset (identified by the parameter `assetRef`) is stored in the `loss` field.

For the probabilistic loss maps (expected losses for a given return period), a set of additional parameters need to be considered as depicted in the following example.

```

<?xml version="1.0" encoding="UTF-8"?>
<nrml xmlns:gml="http://www.opengis.net/gml"
       xmlns="http://openquake.org/xmlns/nrml/0.5">
    <lossMap investigationTime="50" poE="0.1" sourceModelTreePath="b1"
               gsimTreePath="b1" lossCategory="buildings" unit="EUR">
        <node>
            <gml:Point>
                <gml:pos>83.31 29.46</gml:pos>
            </gml:Point>
            loss assetRef="a1" value="696.1"/>
            loss assetRef="a2" value="4201.4"/>
            loss assetRef="a3" value="2666.0"/>
        
```

```

        loss assetRef="a4" value="1291.8"/>
</node>
...
<node>
    <gml:Point>
        <gml:pos>83.33 28.71</gml:pos>
    </gml:Point>
    loss assetRef="a997" value="4077.3"/>
    loss assetRef="a998" value="2466.4"/>
    loss assetRef="a999" value="4434.5"/>
</node>
</lossMap>
</nrml>

```

- investigationTime: time span used to compute the probability of exceedance;
- poE: parameter specifying the probability of exceedance (e.g. 0.1);
- sourceModelTreePath: this is a parameter indicating the path used to create the seismic source model;
- gsimTreePath: this parameter designates the ground motion model;
- node: this attribute follows an identical structure as seen in the previous example, but only a single loss (value) is provided per asset.

9.4.3 Stochastic event loss tables

Unlike what was described for the other outputs, the event loss tables are exported using a comma separated value (.csv) file format. In this structure, each row contains the rupture id, magnitude and aggregated loss (sum of the losses from the collection of assets within the region of interest), for each event within the stochastic event sets. The following example depicts an example of this output.

Rupture	Magnitude	Aggregate Loss
1,8.25	,79197	
2,8.25	,74478	
3,7.75	,46458	
4,7.75	,45153	
5,7.75	,42569	
6,8.25	,40649	
7,7.75	,38868	
8,7.75	,37707	
9,7.75	,37141	
...		

The asset event loss tables provide calculated losses for each of the assets in the exposure model, for each event within the stochastic event sets. In these tables, each row contains the rupture id, the asset id, magnitude and asset loss. Note that only assets that sustain nonzero losses in a rupture are listed in the asset event loss table. An example of this output type is provided below:

```
Rupture, Asset, Magnitude, Loss
col=00|ses=0239|src=1727-356|rup=001-01, asset_10, 4.7, 13785407.3791
col=00|ses=0239|src=1727-356|rup=001-01, asset_11, 4.7, 17124507.6341
col=00|ses=0239|src=1727-356|rup=001-01, asset_12, 4.7, 16654913.6026
.
.
.
col=01|ses=6905|src=1120-2|rup=011-01, asset_53, 6.7, 18506576.0384
col=01|ses=6905|src=1120-2|rup=011-01, asset_58, 6.7, 12095498.7066
```

9.5 Benefit-Cost Ratio Outputs

9.5.1 Retrofitting Benefit/cost ratio maps

Ratio maps from the Retrofitting Benefit/Cost Ratio calculator require loss exceedance curves, which can be calculated using the Classical PSHA-based Risk calculator. For this reason, the parameters `sourceModelTreePath` and `gsimTreePath` are also included in this NRML schema, so the whole calculation process can be traced back. The results for each asset are stored as depicted below:

```
<?xml version="1.0" encoding="UTF-8"?>
<nrml xmlns:gml="http://www.opengis.net/gml"
       xmlns="http://openquake.org/xmlns/nrml/0.5">
  <bcrMap interestRate="0.05" assetLifeExpectancy="50.0">
    sourceModelTreePath="b1" gsimTreePath="b1" unit="EUR">
      <node>
        <gml:Point>
          <gml:pos>83.31 29.46</gml:pos>
        </gml:Point>
        <bcr assetRef="a1" ratio="1.96" aalOrig="1466.9"
              aalRetr="253.0"/>
        <bcr assetRef="a2" ratio="2.33" aalOrig="937.9"
              aalRetr="215.7"/>
        <bcr assetRef="a3" ratio="1.32" aalOrig="492.0"
              aalRetr="83.7"/>
```

```

<bcr assetRef="a4" ratio="0.76" aalOrig="294.1"
      aalRetr="57.9"/>
</node>
...
<node>
  <gml:Point>
    <gml:pos>83.33 28.71</gml:pos>
  </gml:Point>
  <bcr assetRef="a997" ratio="0.84" aalOrig="18323.1"
        aalRetr="7340.7"/>
  <bcr assetRef="a998" ratio="1.36" aalOrig="152027.6"
        aalRetr="29123.5"/>
  <bcr assetRef="a999" ratio="0.83" aalOrig="60727.3"
        aalRetr="12676.1"/>
</node>
</bcrMap>
</nrml>

```

- **interestRate**: this parameter represents the inflation rate of the economic value of the assets;
- **assetLifeExpectancy**: a parameter specifying the life expectancy (or design life) of the assets considered for the calculations;
- **node**: this schema follows the same node structure already presented for the loss maps, however, instead of losses for each asset, the benefit/cost ratio (**ratio**), the average annual loss considering the original vulnerability (**aalOrig**) and the average annual loss for the retrofitted (**aalRetr**) configuration of the assets are provided.

Scenario Damage Demos

Scenario Risk Demos

Classical Probabilistic Seismic Damage Demos

Classical Probabilistic Seismic Risk Demos

Event Based Probabilistic Seismic Risk Demos

Retrofit Benefit-Cost Ratio Demos

10. Demonstrative Examples

The following sections describe the set of demos that have been compiled to demonstrate some of the features and usage of the risk calculators of the OpenQuake-engine. These demos can be found in a public repository in GitHub at the following link: <https://github.com/gem/oq-risklib/tree/master/demos/risk>. Furthermore, a folder containing all of these demonstrative examples is provided when an OATS (OpenQuake Alpha Testing Service) account is requested, and it is also part of the OpenQuake-engine virtual image package.

These examples are purely demonstrative and are not intended to represent accurately the seismicity, vulnerability or exposure characteristics of the region of interest, but simply to provide example input files that can be used as a starting point for users planning to employ the OpenQuake-engine in seismic risk and loss estimation studies.

It is also noted that in the demonstrative examples presented in this section, illustrations about the various messages from the engine displayed in the command line interface are presented. These messages often contain information about the calculation id and output id, which will certainly be different for each user.

Following is the list of demos which illustrate how to use the oq-engine for various scenario-based and probabilistic seismic risk analyses:

- ClassicalBCR
- ClassicalDamage
- ClassicalRisk
- EventBasedRisk
- ScenarioDamage
- ScenarioDamageCsq
- ScenarioRisk

These seven demos use Nepal as the region of interest. An example exposure model has been developed for this region, comprising 9,144 assets distributed amongst 2,221

locations (due to the existence of more than one asset at the same location). A map with the distribution of the number of buildings throughout Nepal is presented in Figure 10.1.

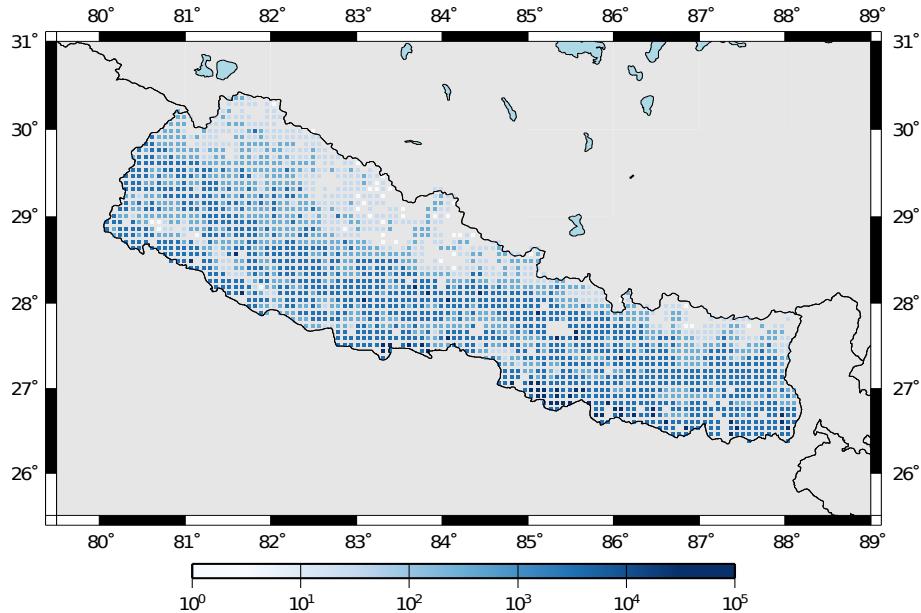


Figure 10.1 – Distribution of number of buildings in Nepal.

The building portfolio was organised into four classes for the rural areas (adobe, dressed stone, unreinforced fired brick, wooden frames), and five classes for the urban areas (the aforementioned typologies, in addition to reinforced concrete buildings). For each one of these building typologies, vulnerability functions and fragility functions were collected from the literature. These input models are only for demonstrative purposes and for further information about the building characteristics of Nepal, users are advised to contact the National Society for Earthquake Technology of Nepal (NSET - <http://www.nset.org.np/>).

The following sections include instructions not only on how to run the risk calculations, but also on how to produce the necessary hazard inputs. Thus, each demo comprises the configuration file, exposure model and fragility or vulnerability models fundamental for the risk calculations. Each demo folder also a configuration file and the input models to produce the relevant hazard inputs.

10.1 Scenario Damage Demos

The same rupture described in the Scenario Risk demo was used for this demo. The workflow to produce the set of ground motion fields described in the previous section is also valid herein. Then, to run the Scenario Damage demo, users should move to the folder where the required files have been placed and employ following command:

```
user@ubuntu:~$ oq-engine --run job_damage.ini --hazard-output-id 20
```

and the following outputs will be produced:

```
Calculation 12 results:  
id | output_type | name  
23 | collapse_map | Collapse Map per Asset  
24 | dmg_dist_per_asset | Damage Distribution per Asset  
25 | dmg_dist_per_taxonomy | Damage Distribution per Taxonomy  
26 | dmg_dist_total | Damage Distribution Total
```

10.2 Scenario Risk Demos

A rupture of magnitude 7 Mw in the central part of Nepal was considered within this demo. The characteristics of this rupture (geometry, dip, rake, hypocentre, upper and lower seismogenic depth) have been defined in the `rupture.xml` file, whilst the hazard calculation settings have been established on the `job_hazard.ini` file. In order to calculate the set of ground motion fields due to this rupture, users should navigate to the folder where the demo files are located, and use the following command:

```
user@ubuntu:~$ oq-engine --run job_hazard.ini
```

which will produce the following hazard result:

```
Calculation 10 results:  
id | output_type | name  
20 | gmf_scenario | gmf_scenario
```

Then, this hazard input can be used for the risk calculations using the following command:

```
user@ubuntu:~$ oq-engine --run job_risk.ini --hazard-output-id 20
```

leading to the following results:

```
Calculation 11 results:  
id | output_type | name  
21 | aggregate_loss | Aggregate Loss type=structural  
22 | loss_map | loss maps. type=structural
```

10.3 Classical Probabilistic Seismic Damage Demos

The same hazard input as described in the Classical PSHA-based Risk demo was used for this demo. Thus, the workflow to produce the set of hazard curves described in 10.4 is also valid herein. Then, to run the Classical PSHA-based Damage demo, users should navigate to the folder containing the demo input models and configuration files and employ the following command:

```
user@ubuntu:~$ oq-engine --run job_hazard.ini
```

which will produce the following sample hazard output:

Calculation 5 results:		
id	output_type	name
420	Hazard Curve	Hazard Curve rlz-102-PGA
419	Hazard Curve (multiple imts)	hc-multi-imt-rlz-102

In this demo, the damage distribution for each asset in the exposure model is produced. The following command launches the risk calculations:

```
user@ubuntu:~$ oq-engine --run job_risk.ini --hazard-output-id 419
```

and the following sample outputs are obtained:

Calculation 6 results:		
id	output_type	name
421	Damage Per Asset	Damage distribution for hazard=419

10.4 Classical Probabilistic Seismic Risk Demos

The seismic source model developed within the Global Seismic Hazard Assessment Program (GSHAP) was used with the Chiou and Youngs, 2008 ground motion prediction equation to produce the hazard input for this demo. No uncertainties are considered in the seismic source model and since only one GMPE is being considered, there will be only one possible path in the logic tree. Therefore, only one set seismic hazard curves will be produced. To do so, the following command needs to be employed:

```
user@ubuntu:~$ oq-engine --run job_hazard.ini
```

which will produce the following hazard output:

```
Calculation 13 results:  
id | output_type | name  
27 | hazard_curve | hc-rlz-70
```

In this demo, loss exceedance curves for each asset and two probabilistic loss maps (for probabilities of exceedance of 1% and 10%) are produced. The following command launches these risk calculations:

```
user@ubuntu:~$ oq-engine --run job_risk.ini --hazard-output-id 27
```

and the following outputs are expected:

```
Calculation 14 results:  
id | output_type | name  
28 | loss_curve | loss curves. type=structural, hazard=27  
29 | loss_map | loss maps. type=structural poe=0.1, hazard=27  
30 | loss_map | loss maps. type=structural poe=0.01, hazard=27
```

10.5 Event Based Probabilistic Seismic Risk Demos

This demo uses the same probabilistic seismic hazard assessment (PSHA) model described in the previous example. However, instead of hazard curves, sets of ground motion fields are required. To trigger the hazard calculations the following command needs to be used:

```
user@ubuntu:~$ oq-engine --run job_hazard.ini
```

and the following results are expected:

```
Calculation 15 results:  
id | output_type | name  
414 | Ground Motion Field | GMF rlz-101  
412 | Stochastic Event Set | SES Collection 0  
413 | Stochastic Event Set | SES Collection 1
```

Again, since there is only one branch in the logic tree, only one set of ground motion fields will be used in the risk calculations, which can be launched through the following command:

```
user@ubuntu:~$ oq-engine --run job_risk.ini --hc 15
```

leading to the following outputs:

```
Calculation 16 results:  
id | output_type | name  
415 | Event Loss Table | Event Loss Table type=structural, hazard=414  
416 | Event Loss Asset | Event Loss Asset type=structural, hazard=414  
417 | Loss Curve | loss curves. type=structural, hazard=414  
418 | Aggregate Loss Curve | aggregate loss curves. loss_type=structural  
hazard=414||gmf||GMF rlz-101
```

10.6 Retrofit Benefit-Cost Ratio Demos

The loss exceedance curves used within this demo are produced using the Classical PSHA-based Risk calculator. Thus, the process to produce the seismic hazard curves described in the respective section (10.4) can be employed here. Then, the risk calculations can be initiated using the following command:

```
user@ubuntu:~$ oq-engine --run job_bcr.ini --hazard-output-id 27
```

which should produce the following output:

```
Calculation 17 results:  
id | output_type | name  
37 | bcr_distribution | BCR Distribution for hazard 27
```

Appendices

A. Ground Shaking Intensity Models

We provide below a list of the ground motion prediction equations implemented in the oq-hazardlib. All the implemented GMPE use moment magnitude as the reference magnitude. For each GMPE, the oq-engine name, a short description, and the corresponding reference are given.

A.1 Ground motion prediction equations for shallow earthquakes in active tectonic regions

- AbrahamsonSilva2008

A ground motion prediction equation developed in the context of the NGA West project¹. The model is applicable to magnitudes 5.0-8.5, distances 0-200 km, and spectral periods 0-10 sec (Abrahamson and Silva, 2008).

- AkkarBommer2010

A ground motion prediction equation developed using mostly data from Europe and the Middle East. The dataset used to derive these equations contains events with moment magnitude between 5.0 and 7.6 and distances up to 100 km (Akkar and Bommer, 2010).

- AkkarCagnan2010

A ground motion prediction equation for shallow earthquakes in active tectonic regions developed using data from the Turkish strong-motion database. Equations are valid for a distance range of 0–200 km and are derived for moment magnitudes between 5.0 and 7.6 (Akkar and Çağnan, 2010).

- BooreAtkinson2008

A ground motion prediction equation for shallow earthquakes in active tectonic regions developed in the context of the NGA West project. The model is applicable to magnitude

¹<http://peer.berkeley.edu/ngawest>

in the range 5.0-8.0, distances < 200 km, and spectral periods 0-10 (Boore and Atkinson, 2008).

- CauzziFaccioli2008

A ground motion prediction equation derived from global data base of shallow crustal earthquakes (vast majority coming from Japan) with magnitudes in range 5-7.2 and distances < 150.0 (Cauzzi and Faccioli, 2008).

- ChiouYoungs2008

A ground motion prediction equation for shallow earthquakes in active tectonic regions developed in the context of the NGA West². The model is supposed to be applicable for magnitude in range 4.0-8.5 (if strike-slip), 4.0-8.0 (if normal or reverse) and distances 0-200 km.

- FaccioliEtAl2010

Based on the same functional form of Cauzzi and Faccioli, 2008 but using closest distance to the rupture instead of hypocentral distance (Faccioli et al., 2010)

- SadighEtAl1997

A ground motion prediction based primarily on strong motion data from California and applicable for magnitude in range 4.0-8.0 and distances < 100 km (Sadigh et al., 1997).

- ZhaoEtAl2006Asc

A ground motion prediction equation for active shallow crust events developed using mostly Japanese strong ground motion recordings (Zhao et al., 2006).

A.2 Ground motion prediction equations for subduction sources

- AtkinsonBoore2003SInter, AtkinsonBoore2003SSlab

Ground motion prediction equations for subduction interface and in-slab events obtained using a global dataset of subduction earthquakes with moment magnitude between 5.0 and 8.3 (Atkinson and Boore, 2003).

- LinLee2008SInter, LinLee2008SSlab

Ground motion prediction equations for subduction interface and in-slab events created using strong motion data included in the Taiwanese database (Lin and Lee, 2008).

- YoungsEtAl1997SInter, YoungsEtAl1997SSlab

One of the most well known ground motion prediction equations for subduction earthquakes. Published in 1997, is still currently used for the calculation of the ground motion in subduction tectonic environments. This GMPE covers events of moment magnitude greater than 5.0 occurred at a distance between 5 and 500 km. The source-site distance metric is the closest distance between the site and rupture (r_{rup}). (Youngs et al., 1997)

- ZhaoEtAl2006SInter, ZhaoEtAl2006SSlab

² <http://peer.berkeley.edu/ngawest>

Ground motion prediction equations for subduction interface and in-slab developed using mostly Japanese strong ground motion recordings (Zhao et al., 2006).

A.3 Ground motion prediction equations for stable continental regions

- AtkinsonBoore2006

A ground motion prediction equation for Eastern North America derived from a stochastic finite fault model (Atkinson and Boore, 2006).

- Campbell2003

Ground motion prediction equation calibrated for Eastern North America applicable for events with magnitude greater than 5.0 and distances < 70 km (Campbell and Bozorgnia, 2003).

- ToroEtAl2002

Ground motion prediction equation for rock sites in central and eastern North America based on the prediction of a stochastic ground-motion model. The model is applicable for magnitudes in range 5.0-8.0 and distances in 1-500 km (Toro, 2002).

Bibliography

Books

Aki, K. and P. G. Richards (2002). *Quantitative Seismology*. Sausalito, California: University Science Books (cited on pages 29, 33).

Articles

- Abrahamson, N. A. and W. Silva (2008). "Summary of the Abrahamson & Silva NGA Ground-Motion Relations". In: *Earthquake Spectra* 24.1, pages 67–97 (cited on page 169).
- Akkar, S. and J. J. Bommer (2010). "Empirical equations for the prediction of PGS, PGV, and spectral accelerations in Europe, the Mediterranean Region, and the Middle East". In: *Seismological Research Letters* 81.2, pages 195–206. doi: [10.1785/gssrl.81.2.195](https://doi.org/10.1785/gssrl.81.2.195) (cited on page 169).
- Akkar, S. and Z. Çağnan (2010). "A Local Ground-Motion Predictive Model for Turkey, and Its Comparison with Other Regional and Global Ground-Motion Models". In: *Bulletin of the Seismological Society of America* 100.6, pages 2978–2995 (cited on page 169).
- Atkinson, G. M. and D. M. Boore (2003). "Empirical Ground-Motion Relations for Subduction-Zone Earthquakes and Their Application to Cascadia and Other Regions". In: *Bulletin of the Seismological Society of America* 93.4, pages 1703–1729 (cited on page 170).
- Atkinson, G. M. and D. M. Boore (2006). "Earthquake Ground-Motion Prediction Equations for Eastern North America". In: *Bulletin of the Seismological Society of America* 96.6, pages 2181–2205 (cited on page 171).
- Boore, D. M. and G. M. Atkinson (2008). "Ground-Motion Prediction Equations for the Average Horizontal Component of PGA, PGV, and 5%-Damped PSA at Spectral Periods between 0.01 s and 10.0 s". In: *Earthquake Spectra* 24.1, pages 99–138 (cited on page 170).
- Campbell, K. W. and Y. Bozorgnia (2003). "Updated Near-Source Ground-Motion (Attenuation) Relations for the Horizontal and Vertical Components of Peak Ground Acceleration and Acceleration Response Spectra". In: *Bulletin of the Seismological Society of America* 93, pages 314–331 (cited on page 171).
- Cauzzi, C. and E. Faccioli (2008). "Broadband (0.05 s to 20 s) prediction of displacement response spectra based on worldwide digital records". In: *Journal of Seismology* 12, pages 453–475 (cited on page 170).
- Chiou, B. S.-J. and R. R. Youngs (2008). "An NGA Model for the Average Horizontal Component of Peak Ground Motion and Response Spectra". In: *Earthquake Spectra* 24, pages 173–215 (cited on pages 48, 164).

- Chiou, B. S.-J. and R. R. Youngs (2014). "Update of the Chiou and Youngs NGA model for the average horizontal component of peak ground motion and response spectra". In: *Earthquake Spectra* 30.3, pages 1117–1153 (cited on page 29).
- Cornell, C. A. (1968). "Engineering Seismic Risk Analysis". In: *Bulletin of the Seismological Society of America* 58, pages 1583–1606 (cited on pages 36, 85, 88, 89).
- Field, E. H., T. H. Jordan, and C. A. Cornell (2003). "OpenSHA - A developing Community-Modeling Environment for Seismic Hazard Analysis". In: *Seismological Research Letters* 74, pages 406–419 (cited on pages 36, 85).
- Frankel, A. (1995). "Mapping Seismic Hazard in the Central and Eastern United States". In: *Seismological Research Letters* 66.4, pages 8–21 (cited on page 26).
- Lin, P-S. and C.-T. Lee (2008). "Ground-Motion Attenuation Relationships for Subduction-Zone Earthquakes in Northeastern Taiwan". In: *Bulletin of the Seismological Society of America* 98, pages 220–240 (cited on page 170).
- Sadigh, K., C.-Y. Chang, J. Egan, F. Makdisi, and R. R. Youngs (1997). "Attenuation relationships for shallow crustal earthquakes based on California strong motion data". In: *Seismological Research Letters* 68, pages 180–189 (cited on page 170).
- Schwartz, D. P. and K. J. Coppersmith (1984). "Fault Behaviour and Characteristic Earthquakes: Examples from the Wasatch and San Andreas fault zones". In: *Journal of Geophysical Research* 89.B7, pages 5681–5698 (cited on page 29).
- Wells, D. L. and K. J. Coppersmith (1994). "New Empirical Relationships among Magnitude, Rupture Length, Rupture Width, Rupture Area, and Surface Displacement". In: *Bulletin of the Seismological Society of America* 84.4, pages 974–1002 (cited on page 36).
- Woo, G. (1996). "Kernel Estimation Methods for Seismic Hazard Area Source Modeling". In: *Bulletin of the Seismological Society of America* 86.2, pages 353–362 (cited on page 26).
- Youngs, R., S. Chiou, W. Silva, and J. R. Humphrey (1997). "Strong Ground Motion Attenuation Relationships for Subduction Zone Earthquakes". In: *Seismological Research Letters* 68, pages 58–73 (cited on page 170).
- Zhao, J. X., J. Zhang, A. Asano, Y. Oyono, T. Oouchi, T. Takahashi, H. Ogawa, K. Irikura, H. K. Thio, P. G. Somerville, Y. Fukushima, and Y. Fukushima (2006). "Attenuation Relations of Strong Ground Motion in Japan Using Site Classification Based on Predominant Period". In: *Bulletin of the Seismological Society of America* 96, pages 898–913. doi: [10.1785/0120050122](https://doi.org/10.1785/0120050122) (cited on pages 170, 171).

Other Sources

- Faccioli, E., A. Bianchini, and M. Villani (2010). "New ground motion prediction equations for $T > 1$ s and their influence on seismic hazard assessment". In: *Proceedings of the University of Tokyo Symposium on Long-Period Ground Motion and Urban Disaster Mitigation* (cited on page 170).

- McGuire, K. K. (1976). *FORTRAN computer program for seismic risk analysis*. Open-File report 76-67. 102 pages. United States Department of the Interior, Geological Survey (cited on pages 36, 85, 88, 89).
- Petersen, M. D., A. D. Frankel, S. C. Harmsen, C. S. Mueller, K. M. Haller, R. L. Wheeler, R. L. Wesson, Y. Yzeng, O. S. Boys, D. M. Perkins, N. Luco, E. H. Field, C. J. Wills, and K. S. Rukstales (2008). *Documentation for the 2008 Update of the United States National Seismic Hazard Maps*. Open File Report 2008-1128. U.S. Department of the Interior, U.S. Geological Survey (cited on page 26).
- Toro, G. R. (2002). “Modification of the Toro Et Al. (1997) Attenuation Equations for Large Magnitudes and Short Distances”. url: http://riskeng.com/PDF/atten_toro_extended.pdf (cited on page 171).

Index

- Area source, *see* Source type
- Characteristic fault, *see* Source type
- Complex fault, *see* Source type
- Grid source, *see* Source type
- Input
 - Configuration file, 47
 - Hazard, 49
 - Ground motion logic tree, 48
 - Ground motion system, 48
- OpenQuake-engine
 - hazard, 23
 - Hazard calculation workflows, 36
 - Classical PSHA, 36
 - Event-based PSHA, 37
 - Scenario-based SHA, 37
 - risk, 85
 - Risk calculation workflows
 - Classical Probabilistic Seismic Damage Analysis, 88
 - Classical Probabilistic Seismic Risk Analysis, 89
- Event-Based Probabilistic Seismic Risk Analysis, 90
- Retrofit Benefit-Cost Ratio Analysis, 92
- Scenario Damage Assessment, 86
- Scenario Risk Assessment, 87
- Point source, *see* Source type
- Running OpenQuake
 - hazard, 55
 - introduction, 15
- Simple fault, *see* Source type
- Source type, 23
 - area, 27
 - fault
 - characteristic, 33
 - complex geometry, 31
 - simple geometry, 29
 - grid, 26
 - point, 24

Glossary

List of Acronyms

r_{rup}

closest distance between the site and rupture.

GEM

Global Earthquake Model.

GMF

Ground Motion Field.

GMPE

Ground Motion Prediction Equation.

MFD

Magnitude-Frequency Distribution.

oq-engine

OpenQuake-engine.

oq-hazardlib

OpenQuake hazard library.

PSHA

Probabilistic Seismic Hazard Analysis.

SSHA

Scenario Based Seismic Hazard Analysis.

List of Terms

area source

A source type usually adopted to model distributed seismicity. In an area source the seismicity occurrence rate is assumed uniform over the source area; this produces an hazard pattern with a plateau of constant hazard inside the polygon delimiting the area source and values of hazard that tend to decrease as we move away from the border of the source.

asset

An asset is an element with a certain value, which can include buildings or population. For example, an asset can include an individual building at a given location, or a number of buildings that are grouped, co- located at a single location and classified with the same taxonomy.

branch set

The structure describing the epistemic uncertainty on a specific parameter or model included in a logic tree structure. It ensembles a number of branches, each one representing a discrete alternative.

branching level

It indicates the position where a branch set or a branch is located in a logic tree structure. For example, the first branching level of the seismic source logic tree always contains one or several initial seismic source input models.

characteristic fault source

A fault source typology where ruptures always cover the entire fault surface.

complex fault source

A source typology usually adopted to model subduction interface faults.

consequence function

the distribution of the consequence (or loss) ratio conditional on a set of discrete limit states, defined for a particular taxonomy.

consequence model

A set of consequence functions used to model the consequence ratios of all the taxonomies in the exposure model.

dip


The dip is the steepest angle of descent of the fault plane relative to a horizontal plane; it is measured in degrees [0,90].

exposure model

A set of assets grouped according to their geographical location, taxonomy and value.

fault trace

A curve representing the intersection between the surface containing the fault surface (or its prolongation) and the topographic surface .

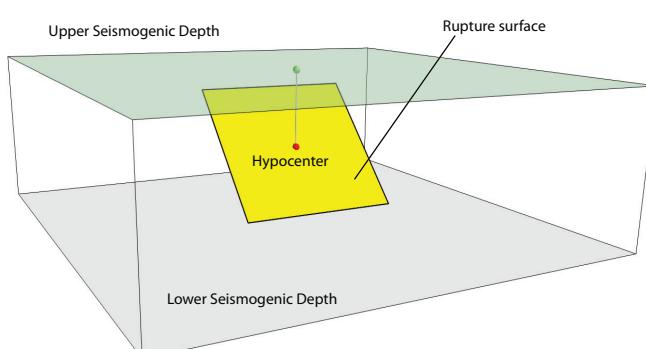

fragility function

the probability of exceeding a set of limit states, given an intensity measure level. These functions can be discrete or continuous.

fragility model

A set of fragility functions used to model the fragility of all the assets in the exposure model.

frequency-magnitude distribution

See magnitude-frequency distribution.

grid source

A source typology usually adopted to model distributed seismicity. It is routinely produced by a seismicity smoothing algorithm (one of the most famous algorithm is the one proposed by Frankel (1995)).

ground-motion logic tree

A method used to systematically describe the epistemic uncertainties related to the ground motion models used in the computation of hazard using a specific PSHA input model.

initial seismic source input model

It is the ensemble of information needed to fully describe the seismic sources composing a seismic source input model. The initial seismic source input model is included in the first branching level of a seismic source logic tree.

magnitude-frequency distribution

A distribution describing the frequency of earthquakes with a specific magnitude. It can be continuous or discrete. One frequency- magnitude distribution frequently adopted in PSHA is the double truncated Gutenberg-Richter distribution.

magnitude-scaling relationship

An empirical relationship linking the magnitude with a parameter describing the size of the corresponding rupture (e.g. the area of the rupture or the rupture length).

point source

The elemental source typology used in OpenQuake-engine to model distributed seismicity.

probabilistic seismic hazard analysis

A methodology to compute seismic hazard by taking into account the potential contributions coming from all the sources of engineering importance for a specified site.

PSHA input model

An object containing the information necessary to describe the seismic source and the ground motion models - plus the related epistemic uncertainties.

rake

The rake is the direction in which a hanging wall block moves during a rupture, measured relative to fault strike on the plane of the fault.

rupture model

An object containing the information necessary to describe a earthquake rupture, such as magnitude, hypocenter location, strike, dip, rake, and seismogenic depths.

seismic source input model

An object containing a list of seismic source data. In the OpenQuake-engine a seismic source model doesn't contain epistemic uncertainty.

simple fault source

A source typology usually adopted to model shallow structures with an uncomplicated geometry.

strike

The strike direction correspond to the angle between the north and the direction you take so that when you walk along the fault trace the fault dips on your right.

taxonomy

Scheme used to classify the assets. For buildings, a classification scheme has been proposed by GEM which considers a number of attributes including lateral load resisting system and its material, height, year of construction. The taxonomy is currently used to link the assets in the exposure model to the relevant vulnerability function or fragility function.

vulnerability function

A function that describes the probability distribution of loss ratio, conditioned on an intensity measure level. Currently only discrete vulnerability functions are supported.

vulnerability model

A set of vulnerability functions used to model the physical vulnerability of all the assets in the exposure model.