





# RICOH MP CW2201 PS Printer Setting

## Change printing mode


- Select RICOH MP CW2201 PS and go into Properties

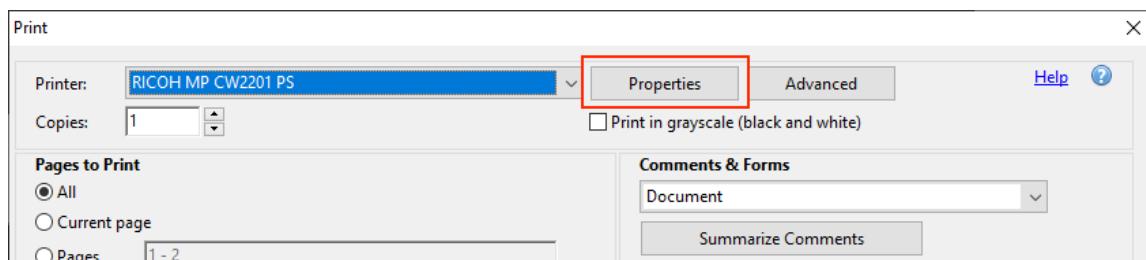

- Selecting "Factory Default" will print faster but create some strips while printing photos

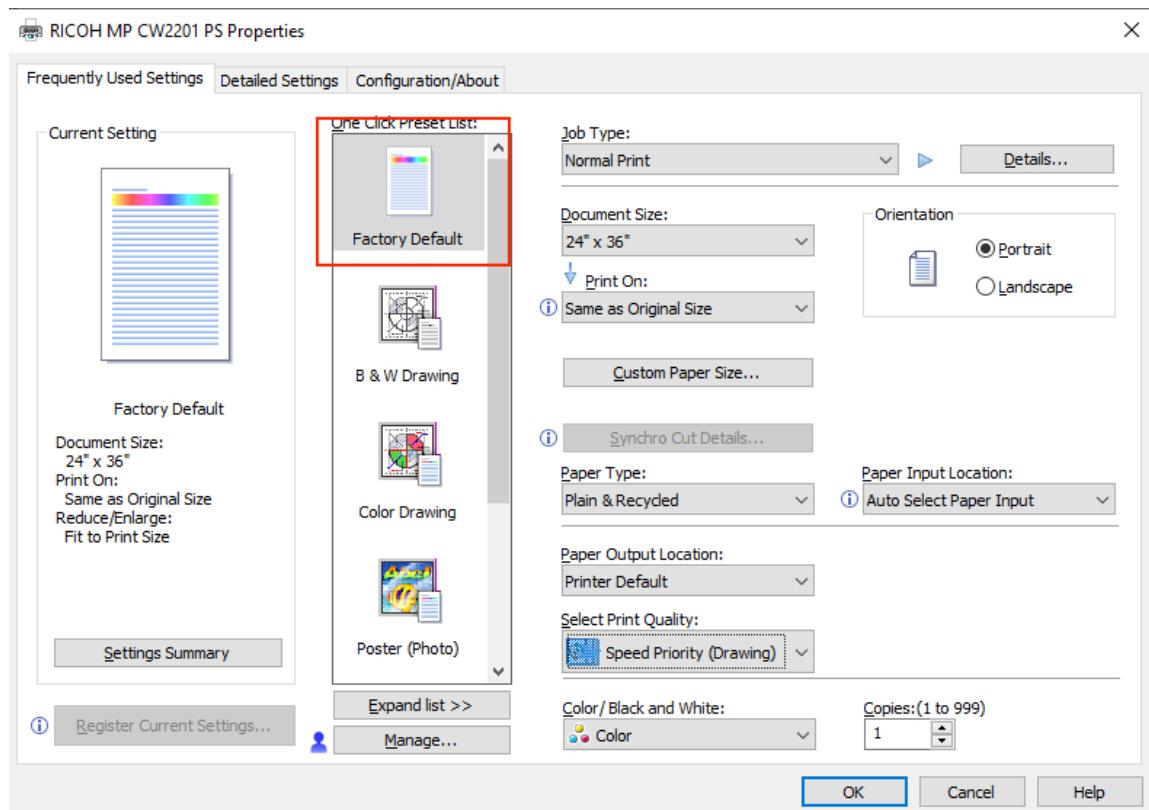


- Select "poster" will avoid the stripes but takes more time

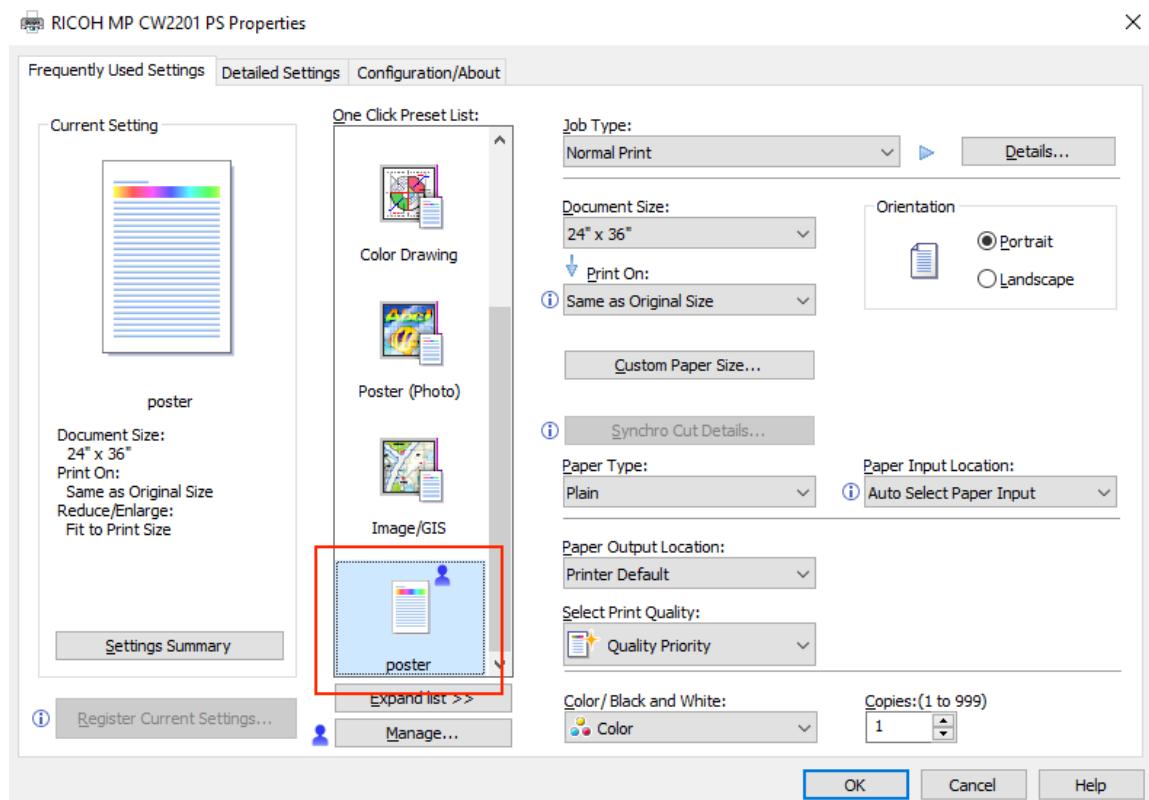

- Plugging an usb directly on the printer and print will use the factory default setting

## Examples

- Using "Factory default" setting

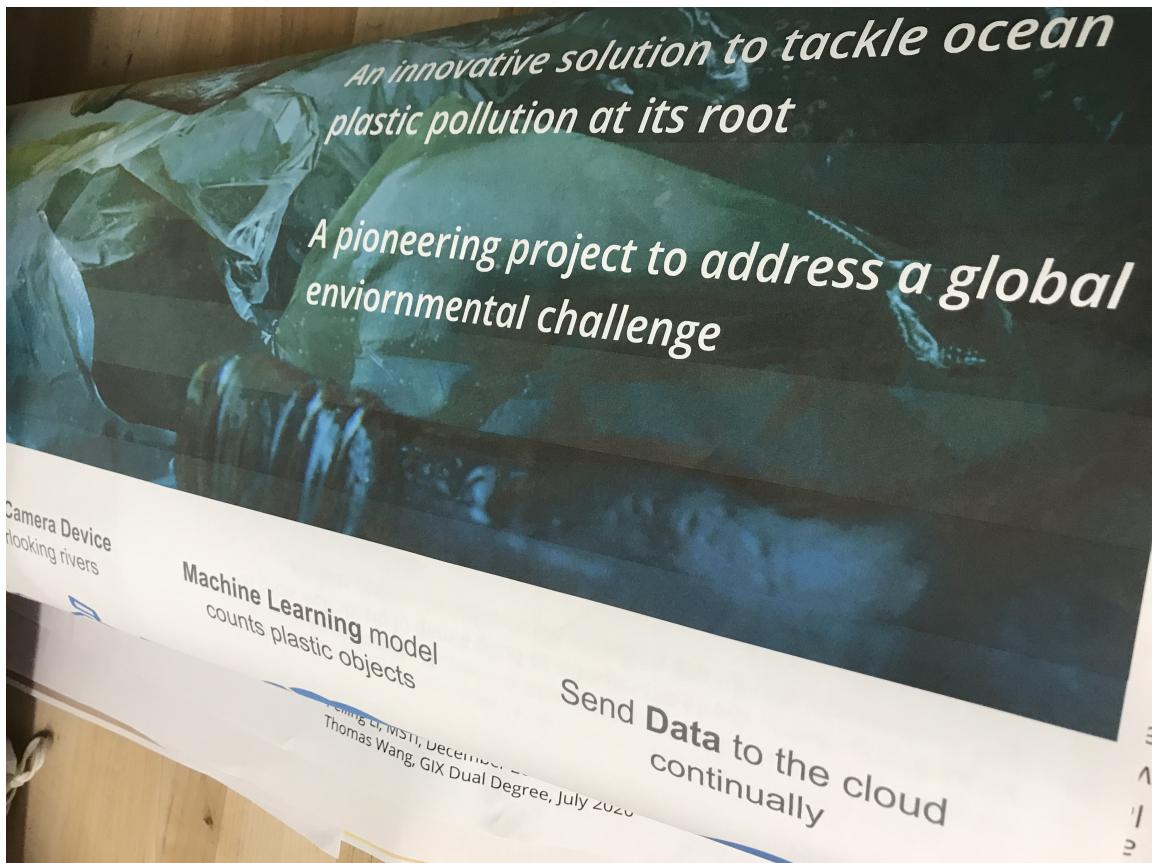

- Using "Poster" setting

