ACCESS · INDIGENOUS SKILLS 4 SUCCESS

Know the machine. Name the part.

A visual parts atlas for paving, milling, compaction and supporting equipment.

ASPHALT · CLASSROOM EDITION · 30 OCTOBER 2026

20	89	22
Source illustrations	Named components	Searchable publications

A shared language for the crew

A precise part name helps a crew explain an observation, find the right diagram and check understanding. Follow the leader line to the part. Say its name. Read its function. Then check the model and publication before using the information.

01

Find the machine
Record model, serial-number prefix and attachment.

02

Find the assembly
Use the section title and diagram.

03

Follow the callout
Match its number, letter or printed label.

04

Check the match
Confirm model, build and serial range in the source.


> These selected diagrams teach component identification. For the complete parts list for a training machine, use its serial-specific parts catalogue. The collection includes two complete roller operation manuals; public parts reference guides list selected parts. See equipment coverage and remaining manual needs.

Use photographs, pointing, reading aloud and partner check-backs as needed. Learners may bring workplace experience or work entirely from these supplied examples. Local Nation-specific language or knowledge is included only through locally chosen participation.

FIGURE 01 · CAT-01 · SOURCE PDF PAGE 63

Two main sections of the paver

Conceptual paver example in the 2016 application guide; this picture does not identify a specific machine serial number.

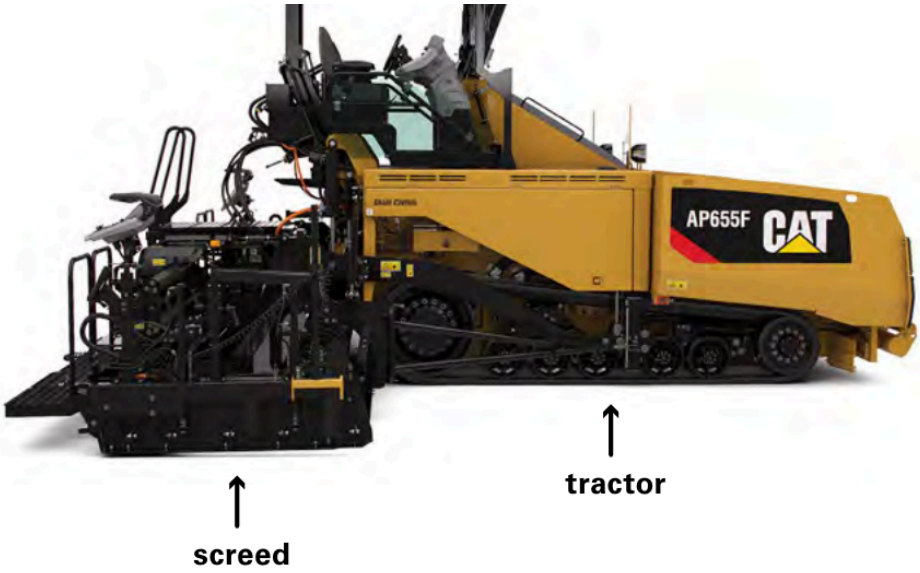


Caterpillar. (2016). *Guide to Asphalt Paving* (QEBQ1888), PDF p. 63. Full source page. Original illustration reproduced as a crop; labels unchanged.

Mark	Component and meaning
screed	**Screed** Places and shapes the mat behind the tractor.
tractor	**Tractor** Provides propulsion, power and material-handling functions.

FIGURE 02 · CAT-07 · SOURCE PDF PAGE 11

Inside the paver: the feeder system

Multiple paver/screed models and build numbers; applicability is specified in individual tables.

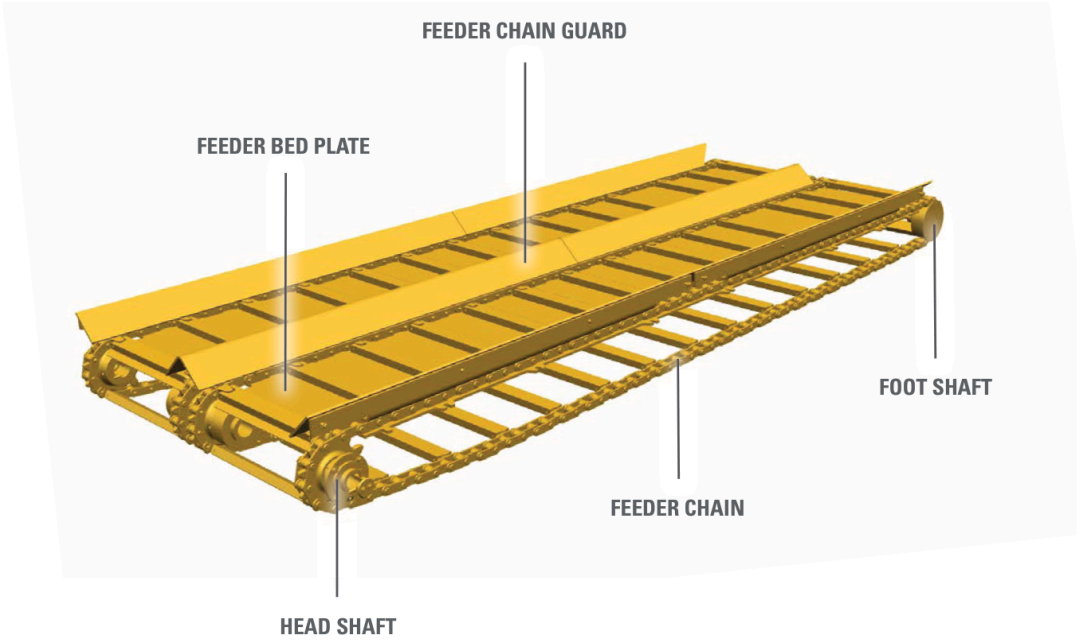


Caterpillar. (2024). *Pavers and Screeds Parts Reference Guide* (QEXQ3132-02 (08/2024)), PDF p. 11. Full source page. Original illustration reproduced as a crop; labels unchanged.

Mark	Component and meaning
label	**Feeder bed plate** Wear surface beneath material moving through the feeder system.
label	**Feeder chain guard** Protective wear plate associated with the feeder-chain path.
label	**Foot shaft** Shaft at the foot end of the feeder assembly.
label	**Feeder chain** Linked assembly that carries material through the feeder path.
label	**Head shaft** Shaft at the head end of the feeder assembly.

FIGURE 03 · CAT-07 · SOURCE PDF PAGE 15

Auger parts: identify the assembly

Multiple paver/screed models and build numbers; applicability is specified in individual tables.

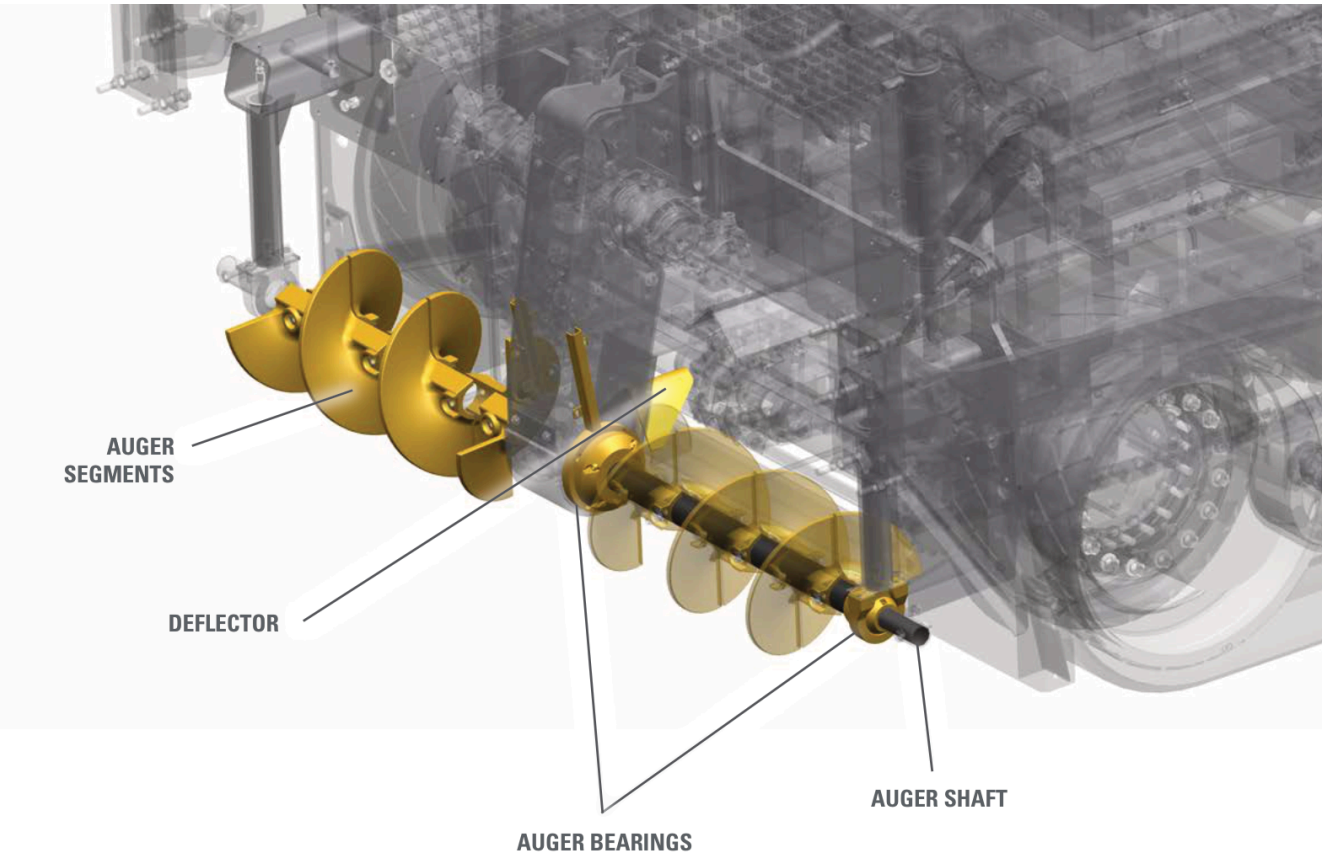


Caterpillar. (2024). *Pavers and Screeds Parts Reference Guide* (QEXQ3132-02 (08/2024)), PDF p. 15. Full source page. Original illustration reproduced as a crop; labels unchanged.

Mark	Component and meaning
label	**Auger segments** Spiral sections that move mixture across the width.
label	**Deflector** Guides material near the auger assembly.
label	**Auger bearings** Support the rotating auger shaft.
label	**Auger shaft** Shaft on which the auger segments are mounted.

FIGURE 04 · CAT-07 · SOURCE PDF PAGE 19

Paver contact with the ground

Multiple paver/screed models and build numbers; applicability is specified in individual tables.

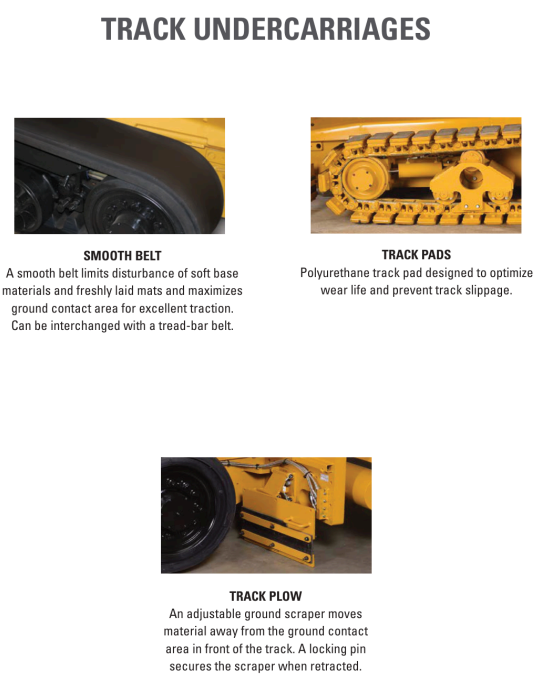


Caterpillar. (2024). *Pavers and Screeds Parts Reference Guide* (QEXQ3132-02 (08/2024)), PDF p. 19. Full source page. Original illustration reproduced as a crop; labels unchanged.

Mark	Component and meaning
photo	**Smooth belt** Ground-contact belt used on the illustrated track arrangement.
photo	**Track pads** Wear/contact pads on the illustrated track arrangement.
photo	**Track plow** Scraper ahead of the track contact area.

FIGURE 05 · CAT-07 · SOURCE PDF PAGE 22

Screed plates and heating components

Multiple paver/screed models and build numbers; applicability is specified in individual tables.

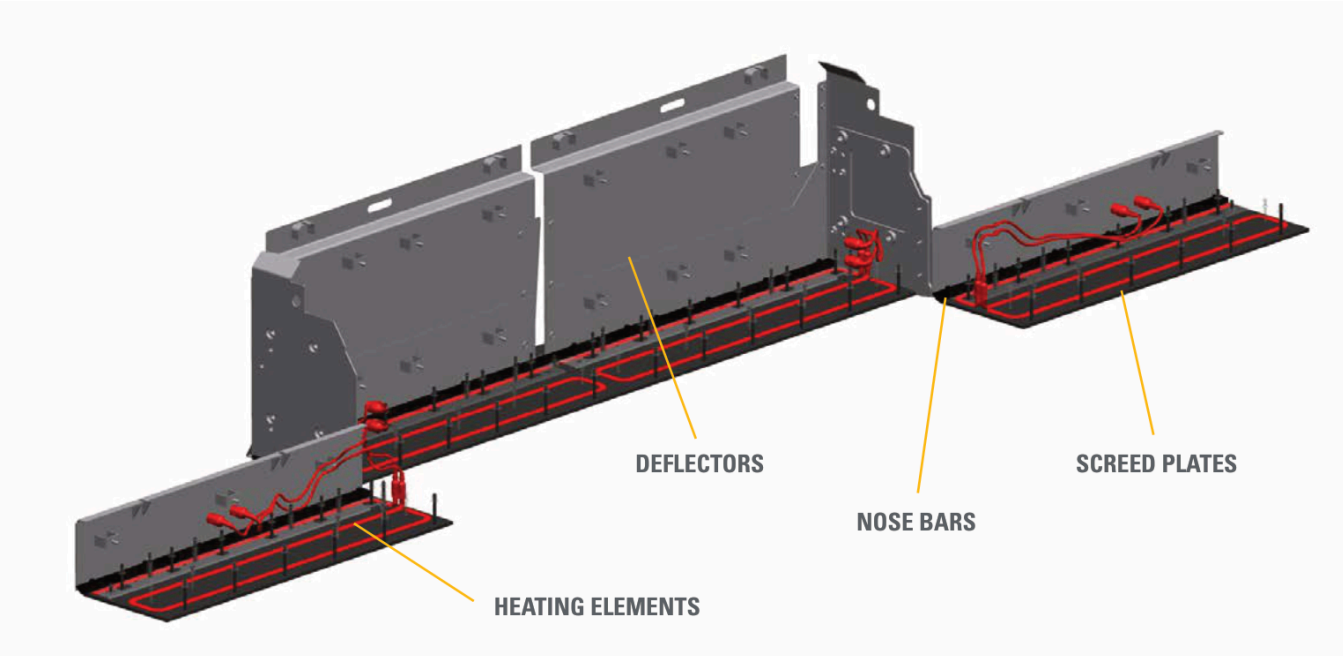


Caterpillar. (2024). *Pavers and Screeds Parts Reference Guide* (QEXQ3132-02 (08/2024)), PDF p. 22. Full source page. Original illustration reproduced as a crop; labels unchanged.

Mark	Component and meaning
label	**Deflectors** Guide material at the screed assembly.
label	**Screed plates** Lower wear surfaces that contact the placed mixture.
label	**Nose bars** Wear components at the leading part of the screed plate arrangement.
label	**Heating elements** Heat the applicable electrically heated screed components.

FIGURE 06 · CAT-07 · SOURCE PDF PAGE 28

Look inside a tamper-bar screed

Multiple paver/screed models and build numbers; applicability is specified in individual tables.

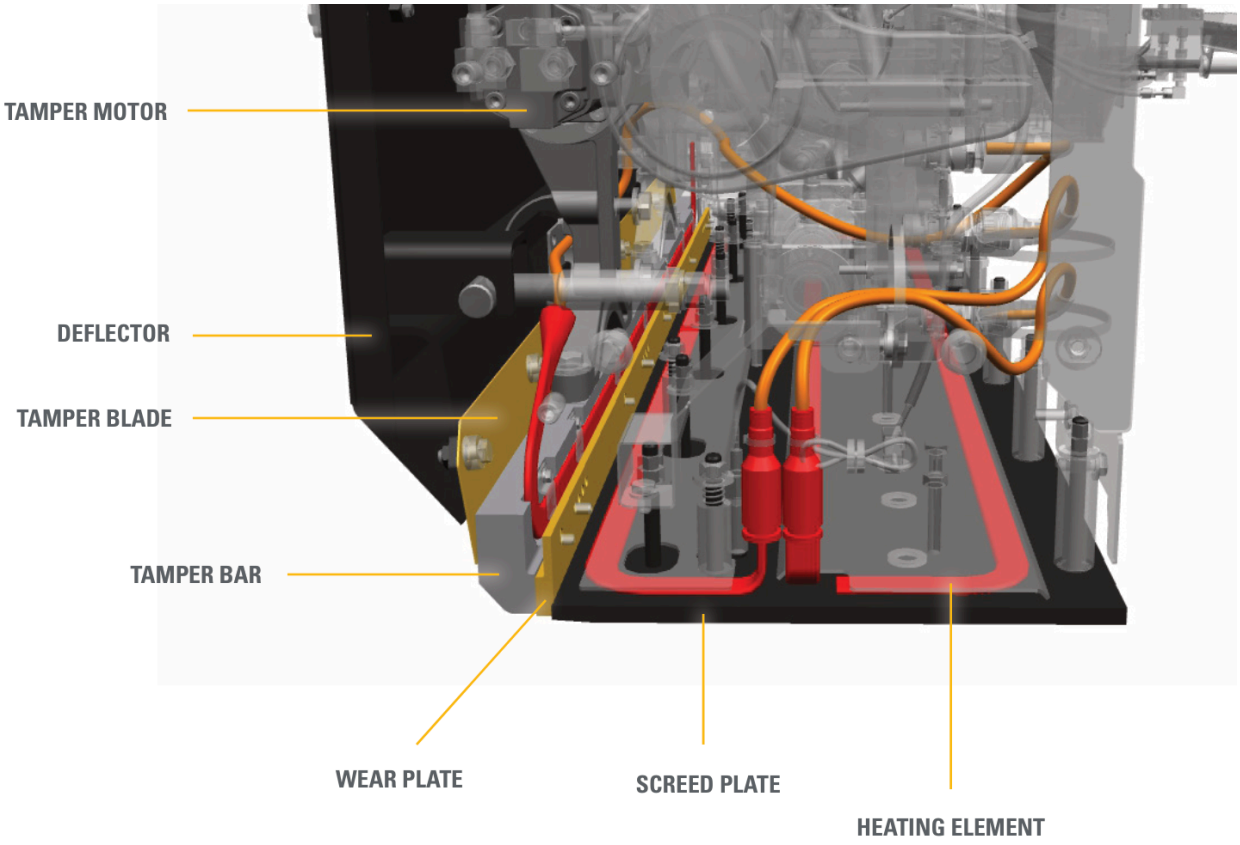


Caterpillar. (2024). *Pavers and Screeds Parts Reference Guide* (QEXQ3132-02 (08/2024)), PDF p. 28. Full source page. Original illustration reproduced as a crop; labels unchanged.

Mark	Component and meaning
label	**Deflector** Material-guiding component.
label	**Tamper blade** Working element in the tamping assembly.
label	**Tamper bar** Bar assembly that provides tamping action.
label	**Wear plate** Replaceable wear surface in the illustrated assembly.
label	**Screed plate** Surface that shapes the mat.
label	**Heating element** Heater for the applicable component.
label	**Tamper motor** Drive component for the tamping system.

FIGURE 07 · CAT-07 · SOURCE PDF PAGE 34

Identify grade and slope sensors

Multiple paver/screed models and build numbers; applicability is specified in individual tables.

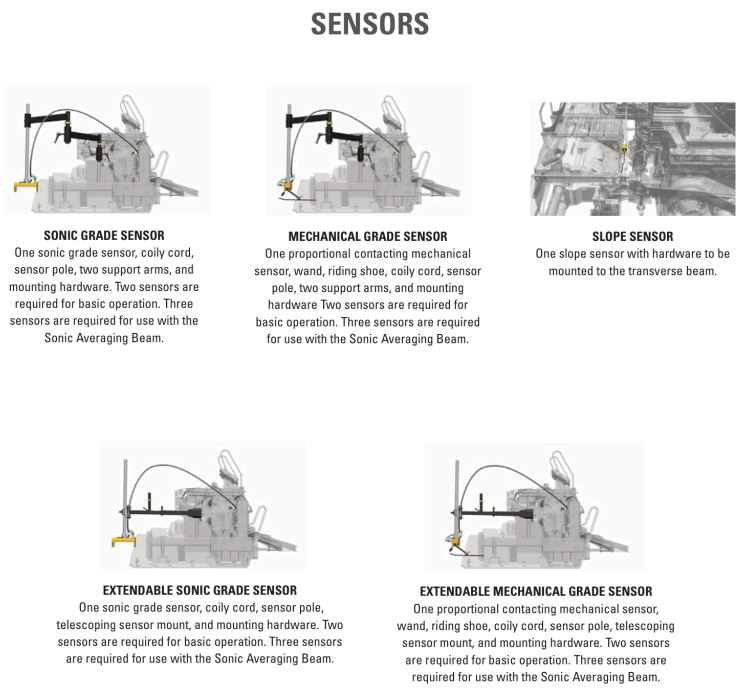

Caterpillar. (2024). *Pavers and Screeds Parts Reference Guide* (QEXQ3132-02 (08/2024)), PDF p. 34. Full source page. Original illustration reproduced as a crop; labels unchanged.

Mark	Component and meaning
photo	**Sonic grade sensor** Non-contact grade-reference sensor.
photo	**Mechanical grade sensor** Contacting sensor with a wand/riding shoe.
photo	**Extendable sonic grade sensor** Sonic sensor with an extendable mounting arrangement.
photo	**Extendable mechanical grade sensor** Mechanical sensor with an extendable mounting arrangement.
photo	**Slope sensor** Sensor associated with the transverse beam for slope information.


FIGURE 08 · CAT-07 · SOURCE PDF PAGE 43

Feed sensing and hopper information

Multiple paver/screed models and build numbers; applicability is specified in individual tables.

SONIC MATERIAL FEED SENSORS
Four sonic transducers mounted above the conveyor discharge and at the end of the augers activate automatically to maintain a preset amount of material ahead of the screed.

Two sonic transducers mounted at the end of the augers automatically maintain a preset amount of material ahead of the screed.

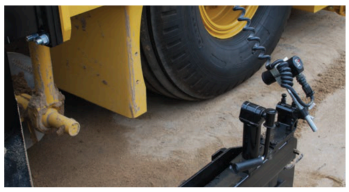


PADDLE MATERIAL FEED SENSORS
Two paddle sensors located in the auger chamber activate the conveyors to automatically maintain the desired amount of material ahead of the screed.



HOPPER MATERIAL LEVEL AND TEMPERATURE SENSOR
Mounts above the hopper to monitor the amount of material and the temperature of the mix using a single infrared temperature sensor. Material level and temperature information is available on the machine display at the operator station.

Not compatible with certain serial numbers. Before ordering, provide machine serial number to your Cat dealer.

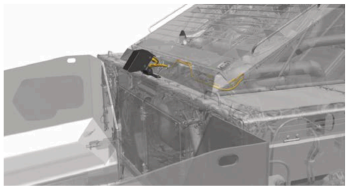


Caterpillar. (2024). *Pavers and Screeds Parts Reference Guide* (QEXQ3132-02 (08/2024)), PDF p. 43. Full source page. Original illustration reproduced as a crop; labels unchanged.

Mark	Component and meaning
photo	**Sonic material feed sensors** Sense material around conveyor discharge or auger ends in the applicable arrangement.
photo	**Paddle material feed sensors** Contacting material sensors in the auger chamber.
photo	**Hopper material level and temperature sensor** Reports hopper material information on applicable configurations.

FIGURE 09 · CAT-08 · SOURCE PDF PAGE 8

Cutting system: rotor details

Cat System K rotor example. Other rotor systems and retaining arrangements differ; no change-out procedure is taught here.

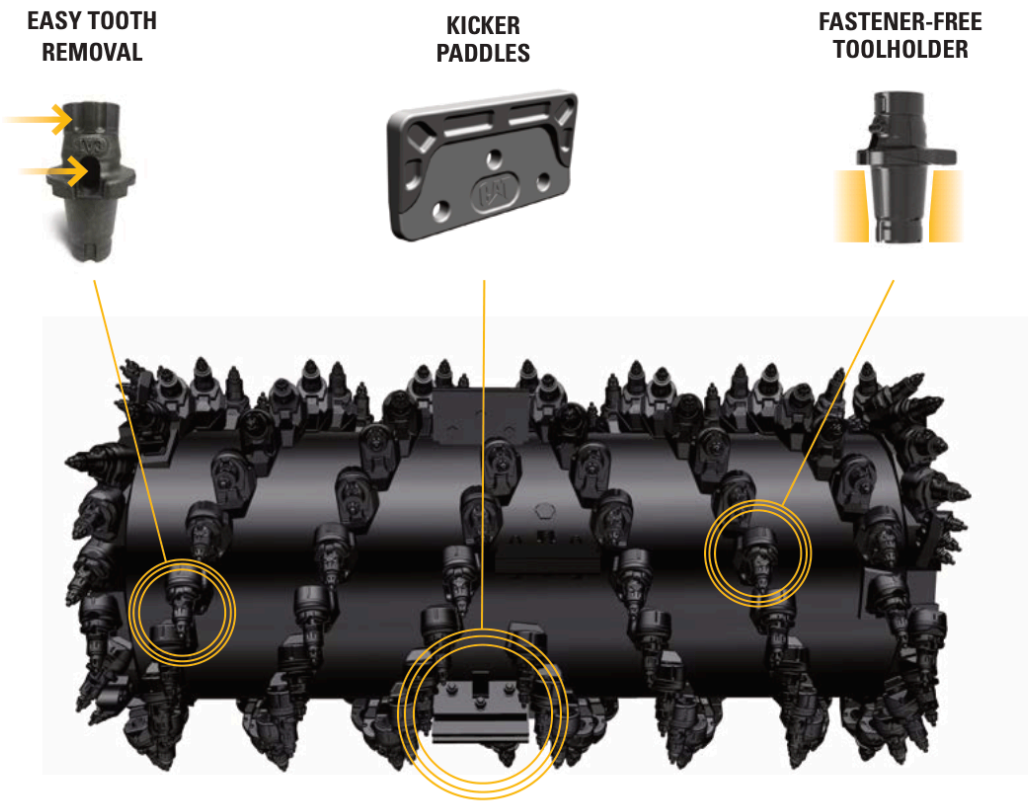


Caterpillar. (2026). *Cold Planer Parts Reference Guide* (QEXQ3131-01 (05/2026)), PDF p. 8. Full source page. Original illustration reproduced as a crop; labels unchanged.

Mark	Component and meaning
label	**Kicker paddles** Move cut material through the rotor system.
label	**Fastener-free toolholder** Holds the applicable cutting tool in the illustrated System K design.
detail	**Tooth / cutting bit** Cutting tool that contacts the material being removed.

FIGURE 10 · CAT-08 · SOURCE PDF PAGE 18

Four wear components around the cutting chamber

PM310, PM312, PM313, PM620, PM622, PM820, PM822 and PM825; individual parts/model tables apply.

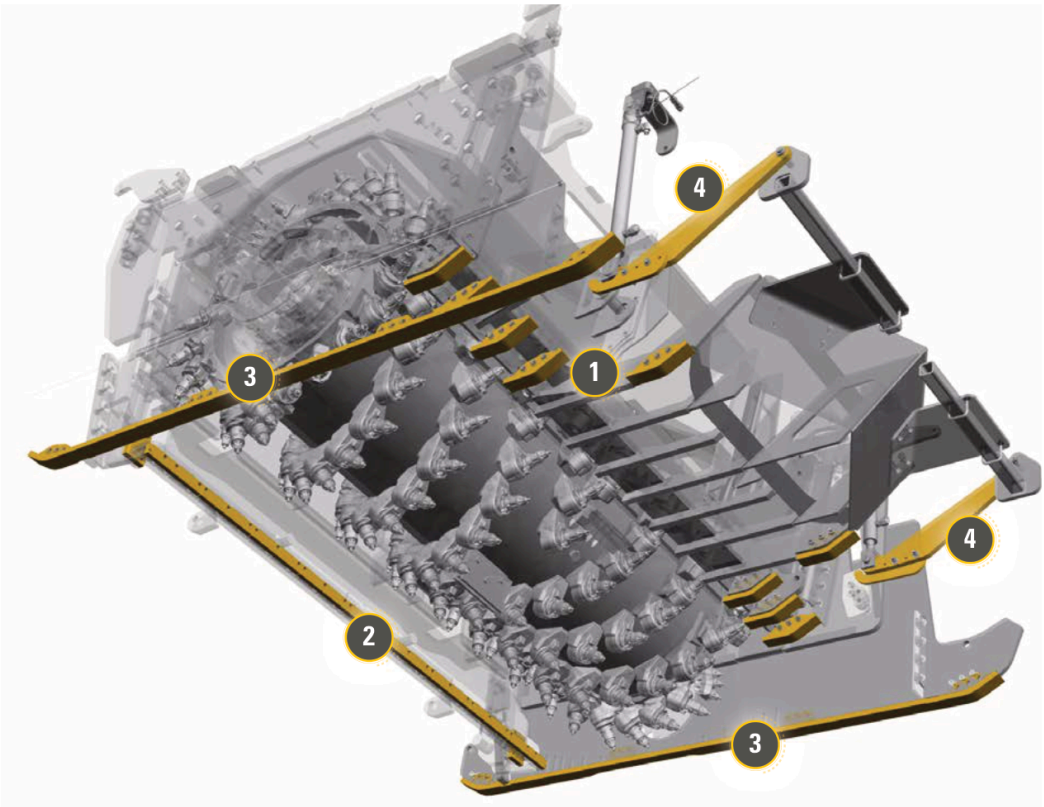


Caterpillar. (2026). *Cold Planer Parts Reference Guide* (QEXQ3131-01 (05/2026)), PDF p. 18. Full source page. Original illustration reproduced as a crop; labels unchanged.

Mark	Component and meaning
1	**Anti-slab wear skis** Wear surfaces associated with the anti-slab arrangement.
2	**Moldboard cutting edges** Wear edges at the rear of the cutting chamber.
3	**Sidegate wear skis** Wear surfaces at the chamber sides.
4	**Inboard grade control wear ski** Wear ski used with the inboard grade-control arrangement.

FIGURE 11 · CAT-08 · SOURCE PDF PAGE 22

Rotor drive components

PM310, PM312, PM313, PM620, PM622, PM820, PM822 and PM825; individual parts/model tables apply.

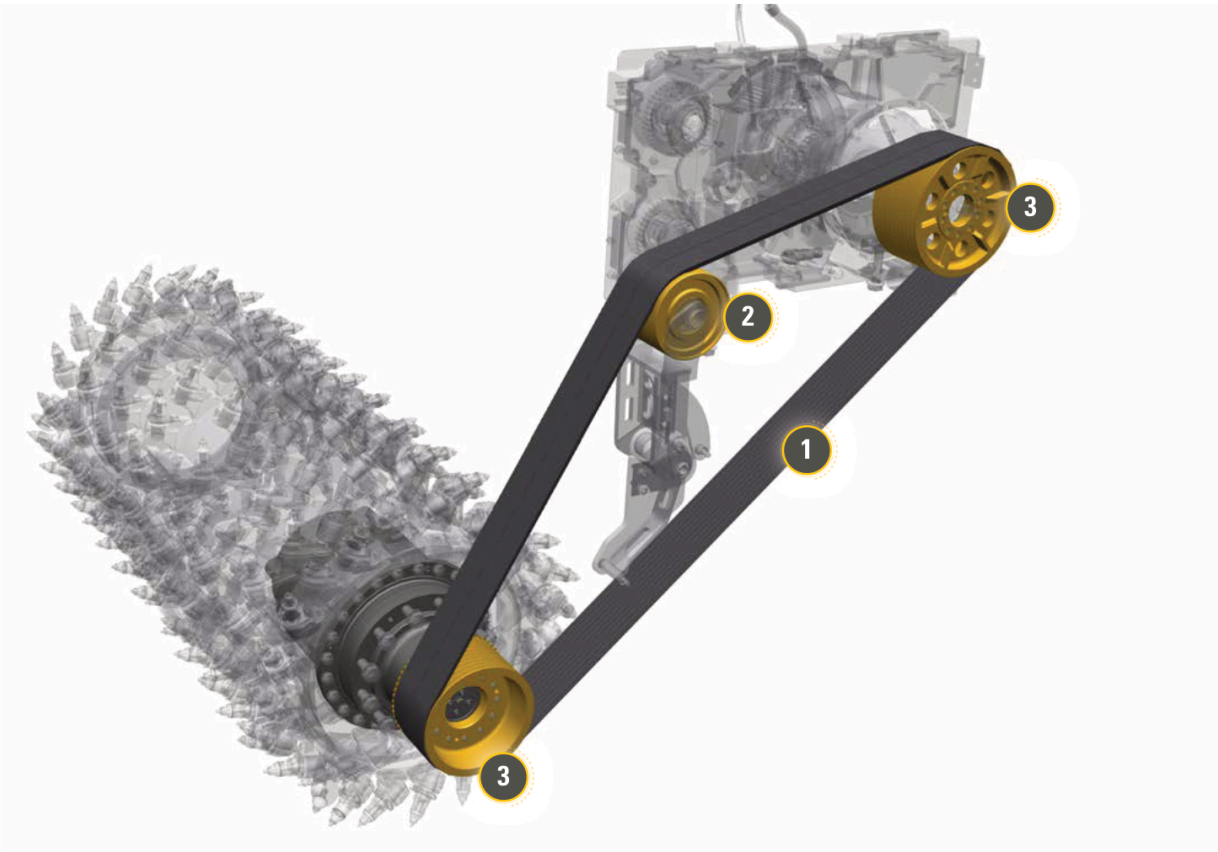


Caterpillar. (2026). *Cold Planer Parts Reference Guide* (QEXQ3131-01 (05/2026)), PDF p. 22. Full source page. Original illustration reproduced as a crop; labels unchanged.

Mark	Component and meaning
1	**Rotor drive belt** Transfers drive through the rotor-drive arrangement.
2	**Tensioner idler** Idler on the belt tensioner arm.
3	**Sheave** Grooved wheel that interfaces with the rotor drive belt.

FIGURE 12 · CAT-08 · SOURCE PDF PAGE 25

Every numbered component in this conveyor diagram

PM310, PM312, PM313, PM620, PM622, PM820, PM822 and PM825; individual parts/model tables apply.

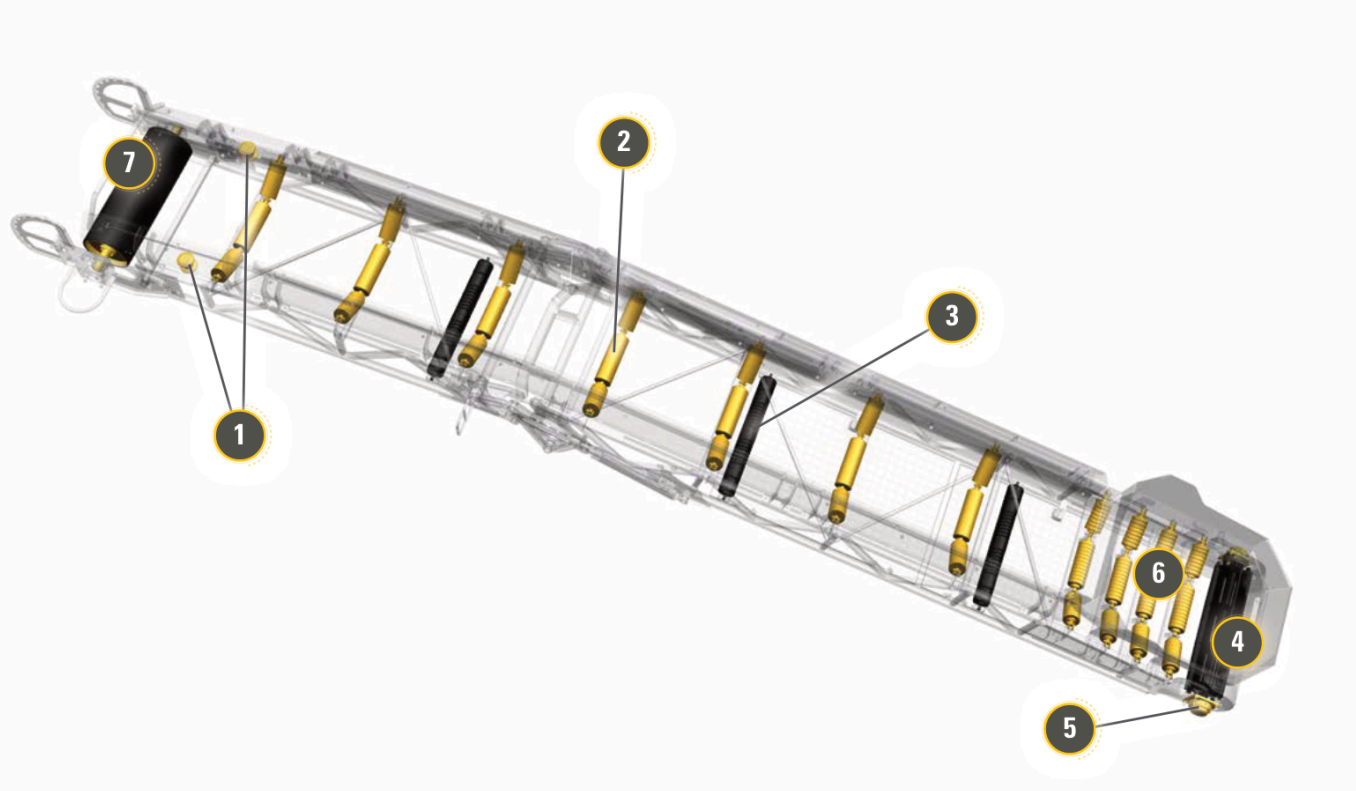


Caterpillar. (2026). *Cold Planer Parts Reference Guide* (QEXQ3131-01 (05/2026)), PDF p. 25. Full source page. Original illustration reproduced as a crop; labels unchanged.

Mark	Component and meaning
1	**Guide rollers** Guide the conveyor belt.
2	**Trough rollers** Support the belt in a trough shape.
3	**Return idlers** Support the returning portion of the belt.
4	**Tail pulley** Pulley at the tail end of the conveyor.
5	**Tail pulley bearings** Support the tail pulley on both sides.
6	**Bunk rollers** Support the belt in the material-loading area.
7	**Head pulley** Pulley associated with the conveyor drive end.

FIGURE 13 · CAT-08 · SOURCE PDF PAGE 32

Every numbered component in this track diagram

PM310, PM312, PM313, PM620, PM622, PM820, PM822 and PM825; individual parts/model tables apply.

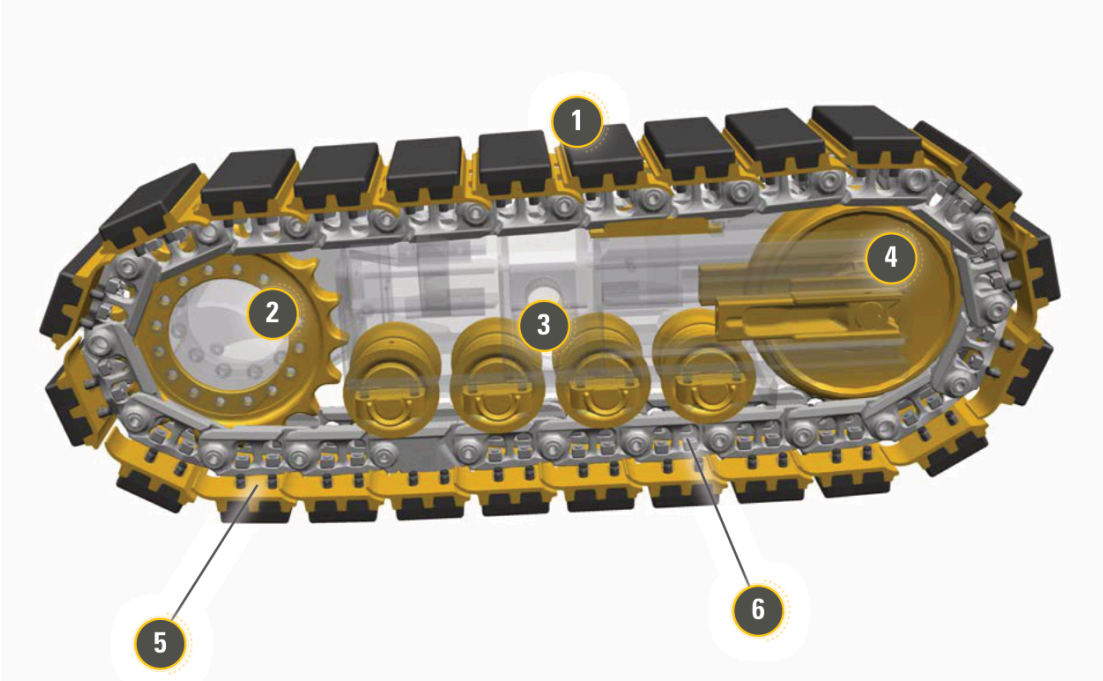

Caterpillar. (2026). *Cold Planer Parts Reference Guide* (QEXQ3131-01 (05/2026)), PDF p. 32. Full source page. Original illustration reproduced as a crop; labels unchanged.

Mark	Component and meaning
1	**Track pads** Ground-contact pads on this undercarriage.
2	**Sprockets** Transfer driving loads into the tracks.
3	**Rollers** Support/guide the track arrangement.
4	**Idlers** Guide the track at the idler end.
5	**Track shoes** Interface with the track pads in this arrangement.
6	**Track chain** Linked track assembly that travels around the undercarriage.

FIGURE 14 · CAT-10 · SOURCE PDF PAGE 41

Locate all 19 original roller-control callouts

CB2.5 GC: XGC 1-UP, 640 1-UP; CB2.7 GC: BT7 1-UP, 641 1-UP; CC2.7 GC: 2C7 1-UP, 642 1-UP. Illustration 39 has 1–5; Illustration 40 has 6–19. Optional items retain “if equipped.”

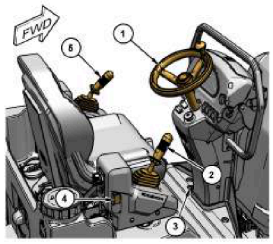


Illustration 39 g06673749

(1) Steering wheel
(2) Right propel control
(3) Traction Control Switch (if equipped)
(4) 12V power receptacle
(5) Left propel control (if equipped)



Illustration 40 g06610378

(6) Emergency stop knob
(7) Work lights
(8) Front/Position lights
(9) Turn signal
(10) Hazard lights
(11) Gauges and indicators
(12) Parking brake
(13) Horn
(14) Water spray system
(15) Engine start switch
(16) Vibratory mode / Emulsion switch
(17) Engine speed
(18) Beacon
(19) Digital display

Steering Wheel (1)

Steering wheel (1) controls the directional steering of the machine. The machine will turn in the same direction as steering wheel (1).


Caterpillar. (2022). *CB2.5 GC, CB2.7 GC, CC2.7 GC Utility Compactors — Operation and Maintenance Manual* (M0130633-02 (August 2022)), PDF p. 41. Full source page. Original illustration reproduced as a crop; labels unchanged.

Mark	Component and meaning
1	Steering wheel
2	Right propel control
3	Traction Control Switch (if equipped)
4	12V power receptacle
5	Left propel control (if equipped)
6	Emergency stop knob
7	Work lights
8	Front/Position lights
9	Turn signal
10	Hazard lights
11	Gauges and indicators
12	Parking brake
13	Horn
14	Water spray system
15	Engine start switch
16	Vibratory mode / Emulsion switch
17	Engine speed
18	Beacon
19	Digital display

FIGURE 15 · CAT-10 · SOURCE PDF PAGE 38

Articulation and the steering frame lock

CB2.5 GC: XGC 1-UP, 640 1-UP; CB2.7 GC: BT7 1-UP, 641 1-UP; CC2.7 GC: 2C7 1-UP, 642 1-UP. Read the complete source page for locking/unlocking instructions; this task is identification only.

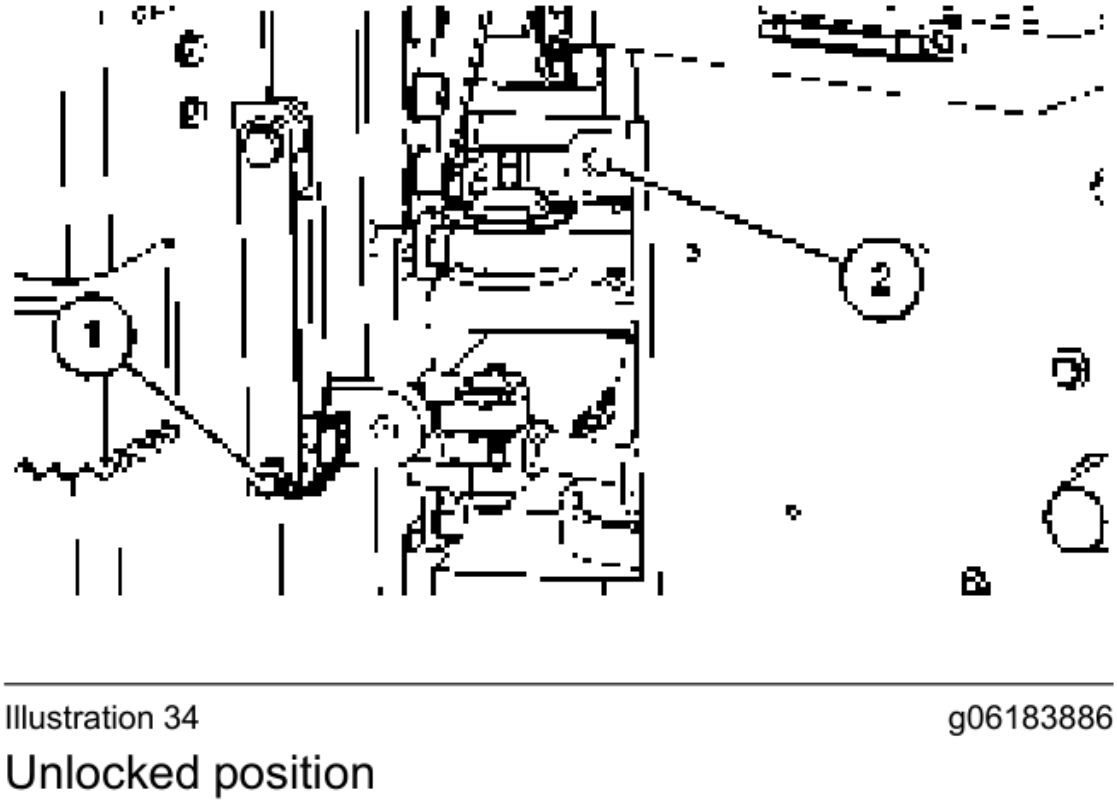

Caterpillar. (2022). *CB2.5 GC, CB2.7 GC, CC2.7 GC Utility Compactors — Operation and Maintenance Manual* (M0130633-02 (August 2022)), PDF p. 38. Full source page. Original illustration reproduced as a crop; labels unchanged.


Mark	Component and meaning
1	**Pin** Retaining pin identified in the source illustration.
2	**Eye hole** Alignment opening identified in the source illustration.
assembly	**Steering frame lock** Mechanical assembly used to restrict articulation under the manual's specified conditions.

FIGURE 16 · CAT-12 · SOURCE PDF PAGE 11

Motor grader: articulation pins and bearings

12K, 120K, 120K2, 140K, 140K2 and 160K; model and serial-prefix table applies.

LINKAGE PIN AND BEARING PART NUMBERS

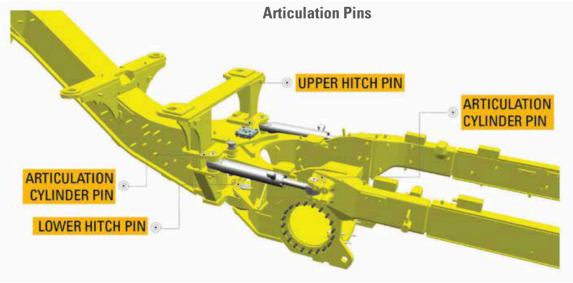

ARTICULATION PINS													
SALES MODEL	PREFIX	Upper Hitch Pin			Lower Hitch Pin			Articulation Cylinder Pins (HE)			Articulation Cylinder Pins (RE)		
		QTY	Part Number	Part Description	QTY	Part Number	Part Description	QTY	Part Number	Part Description	QTY	Part Number	Part Description
120K	JAP,SZN,SZS	1	124-3240	Pin	1	2G-6157	Pin	2	8D-9815	Pin	2	8D-9815	Pin
		1	4K-8659	Bearing	1	8D-9909	Bearing	2	8D-9814	Bushing	2	8D-9814	Bushing
		1	5K-0984	Bearing	2	6K-4186	Seal	4	7K-9201	Seal	4	7K-9201	Seal
		2	4K-7463	Seal	-	-	-	-	-	-	-	-	-
140K/ 140K2	JPA,SZL,SZW	1	124-3240	Pin	1	5K-0871	Pin	2	8D-4766	Pin	2	8D-4766	Pin
		1	4K-8659	Bearing	1	143-7356	Bearing	2	8D-7086	Bearing	2	8D-7086	Bearing
		1	5K-0984	Bearing	2	5K-0983	Seal	4	7K-9202	Seal	4	7K-9202	Seal
		2	4K-7463	Seal	-	-	-	-	-	-	-	-	-
12K	JJA,SZP	1	124-3240	Pin	1	5K-0871	Pin	2	8D-4766	Pin	2	8D-4766	Pin
		1	4K-8659	Bearing	1	143-7356	Bearing	2	8D-7086	Bearing	2	8D-7086	Bearing
		1	5K-0984	Bearing	2	5K-0983	Seal	4	7K-9202	Seal	4	7K-9202	Seal
		2	4K-7463	Seal	-	-	-	-	-	-	-	-	-
160K	JBP,SZM	1	124-3240	Pin	1	5K-0871	Pin	2	8D-4766	Pin	2	8D-4766	Pin
		1	4K-8659	Bearing	1	143-7356	Bearing	2	8D-7086	Bearing	2	8D-7086	Bearing
		1	5K-0984	Bearing	2	5K-0983	Seal	4	7K-9202	Seal	4	7K-9202	Seal
		2	4K-7463	Seal	-	-	-	-	-	-	-	-	-


Caterpillar. (2023). *K/K2 Series Motor Graders — Parts Reference Guide* (publication number not transcribed), PDF p. 11. Full source page. Original illustration reproduced as a crop; labels unchanged.

> Read the original table headings and model/serial qualifiers in this complete source page. Open the image or PDF to magnify the small text. Keep each part number with its model and table column.

FIGURE 17 · CAT-17 · SOURCE PDF PAGE 6

Wheel loader: all 11 lettered pin locations

950M/962M; cover lists EMB, KSA, FTR, NHL, J1S, XCJ, EJB, RKH, F2T, K88, J2S, JYD.

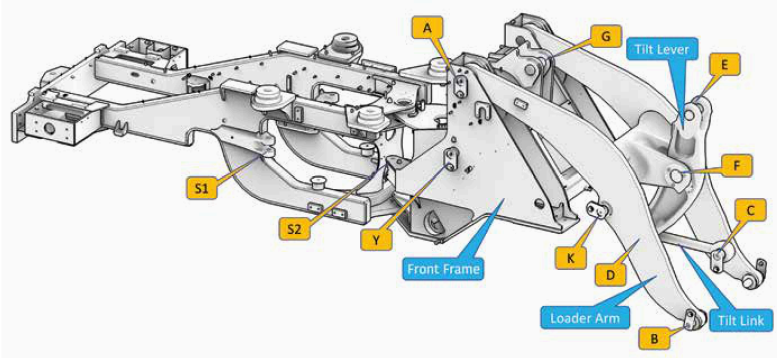

Pin Name	Location
A	Loader Arm to Front Frame
B	Loader Arm to Coupler/Bucket
C	Tilt Link to Coupler/Bucket
D	Tilt Lever to Tilt Link
E	Tilt Cylinder to Tilt Lever
F	Tilt Lever Pivot
G	Tilt Cylinder to Front Frame
K	Lift Cylinder to Loader Arm
Y	Lift Cylinder to Front Frame
S1	Steering Cylinder to Rear Frame
S2	Steering Cylinder to Front Frame

Caterpillar. (2022). *950M/962M Medium Wheel Loader — Parts Reference Guide* (publication number not transcribed), PDF p. 6. Full source page. Original illustration reproduced as a crop; labels unchanged.

Mark	Component and meaning
A	**Loader arm to front frame** Pin joining the two named components; locate the matching letter on the diagram.
B	**Loader arm to coupler/bucket** Pin joining the two named components; locate the matching letter on the diagram.
C	**Tilt link to coupler/bucket** Pin joining the two named components; locate the matching letter on the diagram.
D	**Tilt lever to tilt link** Pin joining the two named components; locate the matching letter on the diagram.
E	**Tilt cylinder to tilt lever** Pin joining the two named components; locate the matching letter on the diagram.
F	**Tilt lever pivot** Pin joining the two named components; locate the matching letter on the diagram.
G	**Tilt cylinder to front frame** Pin joining the two named components; locate the matching letter on the diagram.
K	**Lift cylinder to loader arm** Pin joining the two named components; locate the matching letter on the diagram.
Y	**Lift cylinder to front frame** Pin joining the two named components; locate the matching letter on the diagram.
S1	**Steering cylinder to rear frame** Pin joining the two named components; locate the matching letter on the diagram.
S2	**Steering cylinder to front frame** Pin joining the two named components; locate the matching letter on the diagram.

FIGURE 18 · CAT-18 · SOURCE PDF PAGE 5

Mini excavator: undercarriage parts and model table

Cat 300–310 family; exact model and serial-prefix tables apply.

UNDERCARRIAGE

Machine Model		Under 3 tons		
Sales Model	Serial # Prefix	Rollers	Sprockets	Rubber Belt Track
300.9D	LJM, LJ2	372-5958	372-5983	367-4063
300.9D VPS	TGP, DW2			
301.5	MNH	535-9003	535-9004	535-9001
301.6	MY6	535-9003	535-9004	535-9001
301.7 CR	JH7	501-5035	535-9004	535-9002
301.8	H8X	501-5035	535-9004	535-9002
302 CR	RHM	501-5035	501-5037	521-4087
302.2D	LJG, LJ5	381- 3040	426-2641	390-2334
302.4D	LJN, LJ6	386-0791	386-0584	390-2335
302.7D CR	LJL, LJ7	386-0791	386-0584	430-3220

Machine Model		Over 3 tons						
Sales Model	Serial # Prefix	Rollers	Sprockets	Rubber Belt Track	Steel Track Assembly	Steel Track Shoe	Rubber Track Pads	Steel Track Assembly w/Pads
303E CR	HHM, SGE	266-8793	193-7091	153-5982	163-7538	158-4684 (weld-on)	184-2184 (2 stud style pad) 212-5118 (nut & clip style pad)	–
303.5E CR	JX2, RKY	266-8793	436-2488	382-3844	263-9252	158-4684 (weld-on)	184-2184 (2 stud style pad) 212-5118 (nut & clip style pad)	–
303.5E2 CR	BG8, JWY	468-7455	436-2488	382-3844	263-9252	158-4684 (weld-on)	184-2184 (2 stud style pad) 212-5118 (nut & clip style pad)	–
304E2 CR	CJ2, ME4	468-7455	436-2488	473-6511	396-6223	396-6233 (shoe) 396-9400 (bolt) 396-9401 (nut)	397-2382 (pad) 398-1441 (bolt) 398-1442 (washer)	–
304.5E2 CR XTC	FXT	468-7455	436-2488	473-6511	–	–	–	–
305E2 CR	DJX, H5M	422-0837	260-6341	465-9224	263-9239	158-4777 (shoe) 158-4775 (bolt) 158-4776 (nut)	163-7093 (pad assembly) 3B-4508 (washer) 6V-8149 (nut)	263-9242
305.5E2 CR	EJX, CR5							
305.5E2 FB	WE2	422-0837	333-5622	–	333-5631	333-5653 (shoe) 333-5651 (bolt) 455-0404 (nut)	163-7093 (pad assembly) 3B-4508 (washer) 6V-8149 (nut)	–
306E2 FB	E2W							
306 / 306.5	6G6, GW6	527-2758	527-2756	527-2809	527-2793	527-2786 (std shoe) 527-2792 (link) 527-2796 (bolt) 527-2797 (nut)	527-2793 Pad Group 536-6497(pad assembly) 536-6501 (washer) 536-6502 (nut)	527-2798
307.5	GW7	507-1285	514-0898	–	514-0887 (std) 514-0892 (wide)	522-0652 (std shoe) 522-1046 (wide shoe) 136-2401 (bolt) 136-2402 (nut)	522-1713 Pad Group 170-4419 (pad assembly) 159-6529 (washer) 096-4876 (nut)	514-0876
308 SR	GK8	507-1285	514-0898	–	514-0888 (std) 514-0893 (wide)	522-0652 (std shoe) 522-1046 (wide shoe) 136-2401 (bolt) 136-2402 (nut)	514-0904 Pad Group 170-4419 (pad assembly) 159-6529 (washer) 096-4876 (nut)	514-0877
308 CR	GG8, GW8	507-1285 (single flange) 127-3807 (center flange)	514-0898	465-9223	514-0888 (std) 514-0893 (wide)	522-0652 (std shoe) 522-1046 (wide shoe) 136-2401 (bolt) 136-2402 (nut)	514-0904 Pad Group 170-4419 (pad assembly) 159-6529 (washer) 096-4876 (nut)	514-0877
308 CR	GX8	507-1285	514-0898	–	514-0888 (std) 514-0893 (wide)	522-0652 (std shoe) 522-1046 (wide shoe) 136-2401 (bolt) 136-2402 (nut)	514-0904 Pad Group 170-4419 (pad assembly) 159-6529 (washer) 096-4876 (nut)	514-0877
308.5	GZ8	507-1285	514-0898	–	514-0888 (std) 514-0893 (wide)	522-0652 (std shoe) 522-1046 (wide shoe) 136-2401 (bolt) 136-2402 (nut)	514-0904 Track Group 170-4419 (pad assembly) 159-6529 (washer) 096-4876 (nut)	514-0877
309 CR (Std UC)	GG9, GW9	507-1285 (single flange) 127-3807 (center flange)	514-0898 511-3173	465-9223	514-0888 (std) 514-0893 (wide)	522-0652 (std shoe) 522-1046 (wide shoe) 136-2401 (bolt) 136-2402 (nut)	514-0904 Track Group 170-4419 (pad assembly) 159-6529 (washer) 096-4876 (nut)	514-0877
309 CR (Long UC)		507-1285 (single flange) 127-3807 (center flange)	514-0898 511-3173	–	514-0875 (std) 514-0894 (wide)	514-0901 (std shoe) 514-0902 (wide shoe) 518-4858 (bolt) 136-2402 (nut)	514-1724 Track Group 170-4419 (pad assembly) 159-6529 (washer) 096-4876 (nut)	514-0878
310	GWT	507-1285	511-3173	–	514-0875 (std) 514-0894 (wide)	514-0901 (std shoe) 514-0902 (wide shoe) 518-4858 (bolt) 136-2402 (nut)	522-1724 Track Group 170-4419 (pad assembly) 159-6529 (washer) 096-4876 (nut)	514-0878

GROUND ENGAGING TOOLS

Machine Model		Blade Cutting Edges	
Sales Model	Serial # Prefix	Weld-On	Bolt-On
303E CR	HHM, SGE	154-5078	–
303.5E CR	JX2, RKY	444-0705 (straight), 260-6326 (angle)	–
303.5E2 CR	BG8, JWY	444-0705 (straight), 260-6326 (angle)	End bit 522-6328, 522-6329 cutting edge
304E2 CR	CJ2, ME4	444-0706 (straight), 344-8052 (angle)	End bit 522-6328, 522-6330 cutting edge
305E2 CR	DJX, H5M	433-3945 (straight), 191-6758 (angle)	End bit 522-6328, 522-6331 cutting edge
305.5E2 CR	EJX, CR5	433-3945 (straight), 191-6758 (angle)	End bit 522-6328, 522-6331 cutting edge
305.5E2 FB	WE2	260-8866	–
306E2 FB	E2W	260-8866	–

Athens 303.5 to 305.5 now have bolt-on cutting edges. They are NOT retrofitable.

Machine Model		Blade Cutting Edges				
Sales Model	Serial # Prefix	MP Bucket Back (Blade)	72" MP Bucket Clamp (Rear Edge)	78" MP Bucket Clamp (Rear Edge)	72" MP Bucket Clamp (Front Edge)	78" MP Bucket Clamp (Front Edge)
304.5E2 CR XTC	FXT	154-5077 (72") 199-8316 (78")	154-5078 (weld-on)	199-8317 (weld-on)	135-9396 (bolt-on)	135-9397 (bolt-on)
Sales Model	Serial # Prefix	Bolt-On Standard Width		Bolt-On Wide Width		
306 / 306.5	6G6, GW6	522-6331 Cutting Edge, 522-6328 (2) bit end		522-6331 Cutting Edge, 522-6328 (2) bit end		
307.5	GW7	143-3088 cutting edge, 4T-6229 (2) bit end		143-3088 cutting edge, 520-7437 (2) bit end		
308 CR	GX8, GG8, GW8	143-3088 cutting edge, 4T-6229 (2) bit end		143-3088 cutting edge, 520-7437 (2) bit end		
308 SR	GK8	143-3088 cutting edge, 4T-6229 (2) bit end		143-3088 cutting edge, 520-7437 (2) bit end		
308.5	GZ8	143-3088 cutting edge, 4T-6229 (2) bit end		143-3088 cutting edge, 520-7437 (2) bit end		
309 CR	GG9, GW9	143-3088/143-3089 cutting edge, 195-7193 (2) bit end, 4T-6229 (2) bit end use/91 In.		143-3088 / 143-3089 cutting edge, 520-7437 (2) bit end /518-0417 (2) bit end		
310	GWT	143-3089 cutting edge, 195-7189 (2) bit end		143-3089 cutting edge, 518-0417 (2) bit end		

Bucket Teeth		
Description	J200 (3-5.5 ton)	J225 (5.5-6 ton) (7-9 ton) (10 ton)
Long	1U-3202	6Y-3222
Retainer	8E-6209	8E-6259
Light Duty Long	449-2154	–
Short	–	6Y-6221
Wide	109-9200	186-3010
Penetration	1U-3209	6Y-8229
Sharp – Corner	9W-8208	6Y-7228
Sharp – Center	9W-8209	6Y-7229
Sharp – Twin	135-8208	135-8228
Heavy Duty Long	–	8E-4222
Heavy Duty Abrasion	–	6Y-6223
Abrasion	4T-2203	–
Heavy Duty Pin	8E-6208	132-4762
Heavy Duty Retainer – Assembly	8E-6209	149-5733



Caterpillar. (2019). *Mini Excavator — Parts Reference Guide* (publication number not transcribed), PDF p. 5. Full source page. Original illustration reproduced as a crop; labels unchanged.

Read the original table headings and model/serial qualifiers in this complete source page. Open the image or PDF to magnify the small text. Keep each part number with its model and table column.

FIGURE 19 · CAT-13 · SOURCE PDF PAGE 4


Backhoe loader: glass, lighting, wear and engine parts

F Series backhoe loaders; listed E/F ground-engaging-tool combinations and model tables control coverage.

MIRRORS AND LIGHTS E and F Series

Mirror Location	Notes	Part Number
Rearview	Internal	199-0929

Lamp Type		Notes	Part Number
Flood Lamp		Outer	234-4328
Flood Lamp		Inner	234-4329
Flood Lamp		Corner	290-5760
	Bulb	55w/12v	9W-0607
Beacon (Warning)		Roof mounted	180-3664
	Bulb	55w/12v (Beacon)	9X-8118
Lamp (Signal)		Rear	172-6490
	Bulb	21w/12v	9W-0607

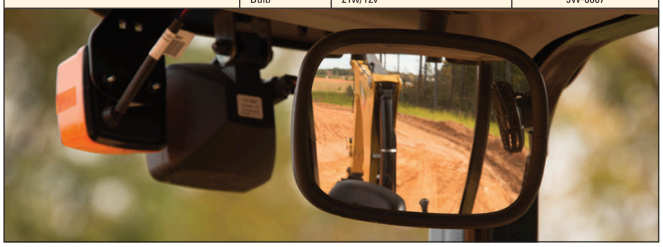

CAB GLASS E and F Series

Position	Part Number
Windscreen (Top)	380-7828
Windscreen (Bottom RH)	380-7827
Windscreen (Bottom LH)	380-7826
Door (Top LH)	205-9587
Door (Bottom LH)	205-9588
Door (Top RH)	205-9597
Door (Bottom RH)	205-9598
Rear (Top LH)	325-9300
Rear (Bottom LH)	205-9622
Rear (Top RH)	325-9301
Rear (Bottom RH)	205-9631
Rear Glass (Top Section)	229-0309
Rear Glass (Bottom Section)	229-0308



BATTERY E and F Series

Part Number	Voltage	CCA (Amps)	Capacity (AH)	Type	Service Interval (Hours)	Length (mm)	Width (mm)	Height (mm)
230-6368	12	880	–	Wet	–	304	191	192




ENGINE PARTS F Series

Machine Model	Notes	Starter Motor	Alternator	Water Pump	Fuel Pump	Turbocharger	Fuel Injector
416F Tier 4i	70kW	331-7010	321-8927	397-5683	360-7503	356-3519	370-7287
420F, 430F Tier 4i	74.5kW				370-8363		
416F, 420F, 430F	Reman	–	20R-3601	–	–	–	20R-2480
416F Tier 2	70kW	143-0539	346-9825	247-0144	236-8228	237-3786	236-1647
420F, 430F Tier 2	74.5kW		383-2557	355-2252	326-8993	326-9153	315-3381
416F	Reman	0R-4316	–	–	–	10R-9721	20R-0471
420F, 430F	Reman					–	–



WEARPADS AND SHIMS E and F Series

Function	Notes	Part Number
Stabilizer	Rock guard option	188-3953
E-Stick	Nose (wedge)	217-1577
	Top	226-9764
	Side (pucks)	233-5169
	Shim (1 mm)	233-5166
	Shim (2 mm)	233-5167
	Head (wedge)	289-9426

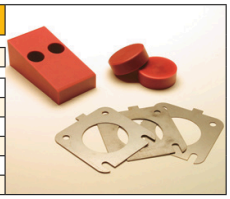

Caterpillar. (2015). *F Series Backhoe Loader — Parts Reference Guide* (publication number not transcribed), PDF p. 4. Full source page. Original illustration reproduced as a crop; labels unchanged.


> Read the original table headings and model/serial qualifiers in this complete source page. Open the image or PDF to magnify the small text. Keep each part number with its model and table column.

FIGURE 20 · CAT-14 · SOURCE PDF PAGE 9


Articulated truck: dump-body liner locations

725, 730, 730 EJ, 735, 740 GC, 740 EJ, 745; listed 3T/3F serial prefixes.

DUMP BODY LINERS

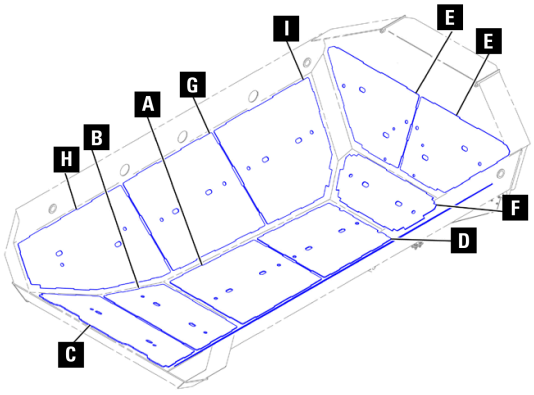

DUMP BODY LINERS

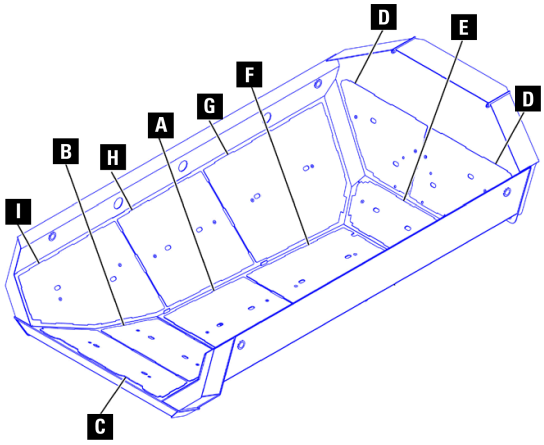

DUMP BODY LINERS				
Sales Model	Serial Number Range	Item Location	Part Number	Quantity
740 GC	3T800001-05400 3F800001-05100	A	143-4002	1
		B	233-6950	1
		C	233-6951	1
		D	301-4831	1
		E	398-9914	2
		F	398-9915	1
		G	435-5703	2
		H	435-5709	2
		I	545-5274	2

DUMP BODY LINERS				
Sales Model	Serial Number Range	Item Location	Part Number	Quantity
745	3T600001-05600 3F600001-05500	A	143-4002	1
		B	233-6950	1
		C	233-6951	1
		D	398-9914	2
		E	398-9915	1
		F	398-9917	1
		G	398-9918	2
		H	435-5703	2
		I	435-5709	2

Caterpillar. (2022). *Articulated Trucks — Parts Reference Guide* (publication number not transcribed), PDF p. 9. Full source page. Original illustration reproduced as a crop; labels unchanged.

> Read the original table headings and model/serial qualifiers in this complete source page. Open the image or PDF to magnify the small text. Keep each part number with its model and table column.

Build the record for your actual machine

Record manufacturer, model, complete product identification/serial number, attachment model, publication number, revision, applicable serial range, diagram group and callout. A similar-looking machine is a starting point for a search; it is not enough to choose a part number.

Use Cat Parts Diagrams and the Cat service-manual route. Confirm any required account or dealer access through the provider. Keep the applicable operation manual beside the parts catalogue.

Download the 89-row component register · Figure provenance and crop record · Coverage by machine family