

COLD PLANER
PARTS REFERENCE GUIDE

SHOP ONLINE AT **WWW.PARTS.CAT.COM** OR CONTACT YOUR LOCAL CAT DEALER


PM822

Introduction **4**
Support **4**
Repair Options 4
Cat Inspect App 4
Genuine Cat® Parts 5
Parts Kits 5
Cat Service Information System (SIS) 5
Locating Serial Numbers and Build Numbers 6
Rotors **7**
System K Rotor Features and Benefits 8
Rotor Applications 9
Rotor Options 10
System K Kicker Paddles 11
System K Toolholders 11
System K Blocks and Triple Trees 11
Service Tools 12
Carbide Cutter Bit Features and Benefits 13
Carbide Bit Offering 14
Diamond Bit Features and Benefits 15
Diamond Bit Offering 16
Cutting Chamber **17**
Wear Skis 19
Moldboard Cutting Edges 20
Rotor Drive System **21**
Rotor Drive Components 23
Conveyor System **24**
Rollers and Bearings 25
Primary Conveyor Rollers and Bearings 26
Secondary Conveyor Rollers and Bearings 27
Flashing and Belts 28
Primary Conveyor Flashing and Belts 29
Secondary Conveyor Flashing and Belts 30
Undercarriage **31**
Components 33
Spray Systems **34**
Washdown and Dust Reduction 36
Chamber Spray Arrangement 37
Grade Control **38**
Cat Grade and Slope System 39
Components 40
Upgrades and Accessories **41**
Lighting 43
Mirrors 43
Cameras 44
Preventative Maintenance **45**
PM310, PM312, PM313 46
PM620, PM622, PM820, PM822, PM825 47
VisionLink™ **49**

SUPPORT
WHEN YOU NEED IT MOST

When we say we're right there with you, we mean it. We're focused on building relationships that extend well beyond machines. That means sharing our expertise to help you select, finance, operate and maintain equipment and then standing by your side to keep that equipment—and your business—running smoothly.

To learn more, contact your local Cat dealer and your Cat Financial Commercial Account can help with convenient payment plans for any parts and/or service needs. **FIND YOUR DEALER**

FIND YOUR DEALER

REPAIR OPTIONS

Maximize your uptime and minimize overall owning and operating costs by planning an off-season repair and annual replacement of wear parts. Whether you are a Do-it-myself, Do-it-with-me, or a Do-it-for-me customer, your Cat dealer is ready to assist you with parts orders to complete rebuilds of your equipment.

DO-IT-MYSELF – If you prefer to do the work in-house, your Cat dealer can help you determine your parts needs. One of our experts will utilize Caterpillar Service Information, or can perform a (TA1) visual inspection, or (TA2) technical inspection to help you identify your parts replacement needs.

DO-IT-WITH-ME – In addition to providing parts, your Cat dealer can supplement your repair capabilities with fully trained technicians and specialized tooling that your team may not have.

DO-IT-FOR-ME – Your Cat dealer can manage the replacement of vital wear parts or a complete rebuild. Ask your dealer about an inspection and a repair option plan to meet your needs.

CAT® INSPECT APP PROVIDES QUICK AND EASY DIGITAL INSPECTIONS

Cat Inspect allows you to access your equipment data on your mobile device. This easy-to-use app lets you capture inspection data and integrates with your other Cat data systems, so you can keep a close eye on your fleet.

To get access, speak with your Cat dealer today to start using the Cat Inspect App for your equipment inspections.

LEARN MORE
Find out more about the Cat Inspect app

PROTECT YOUR INVESTMENT
WITH GENUINE CAT® PARTS

This guide is designed to provide you with a ***quick reference for key wear and maintenance parts*** and part numbers you need to keep your Cat cold planer operating at peak efficiency. It is not a replacement for the Parts Manual. Always read and understand the machine's Operation and Maintenance Manual prior to performing any type of maintenance.

Proactive preventative maintenance extends the life of your machine and protects your investment. Proper maintenance minimizes the need for repair and replacement. In the event that replacement parts are required, the use of genuine Cat parts helps maximize machine performance and maintains high resale value.

PURCHASE PARTS AND OPERATION AND MAINTENANCE MANUALS ONLINE 24/7
http://catpublications.com/

5 REASONS TO USE GENUINE CAT PARTS

1. Cat parts are constructed of top-quality materials, built to exact original specifications by our engineers and rigorously tested to ensure maximum performance.
2. Cat parts are precisely matched to other Cat components for an exact fit to deliver greater reliability, durability and longer life.
3. We maintain the largest inventory of replacement parts in the industry to ensure the best possible availability anywhere in the world.
4. By using only Cat parts you maintain your equipment integrity to maximize its resale value.
5. Cat parts come with a 12-month warranty backed by Caterpillar and supported by dealers around the world.

PARTS KITS

Some models offer parts kits that include all of the parts needed for a specific repair or rebuild in addition to part numbers for the individual pieces with the quantity needed. Paper kits contain a compiled list of the part numbers to order for select repairs, rebuilds or upgrades. For complete replacement parts lists, service, and ordering information by machine sales model, contact your local Cat dealer.

CAT SERVICE INFORMATION SYSTEM (SIS)

Cat Service Information System (SIS) is the electronic service tool that covers all information for Cat products from 1977 to today. With 2 million service graphics, 1.5 million parts numbers, and 44,000 parts/service documents, this tool is the equivalent of over 25,000 books a click away!

WWW.PARTS.CAT.COM
Register and create your SIS account or shop parts online 24/7

LOCATING THE SERIAL NUMBER AND BUILD NUMBER

Knowing the Serial Number and Build Number (if applicable) for your equipment is important for selecting the correct replacement parts, accessories, upgrades, filters and fluids.

If you are uncertain about which parts to order, your Cat dealer is ready to assist with the ordering process.



1. Each machine has a unique PIN number.

2. The Serial Number is the last 8 characters of the PIN number. PIN plate locations are shown below.

3. Some models will have a Build Number. If your machine has one, it is located above the PIN number field. In some cases, parts or upgrades may only apply to machines with a certain build number. If this exception applies, it will be noted on the part number tables in this document.

Right side of the machine above the front track



PM310, PM312, PM313



PM620, PM622, PM820, PM822, PM825



ROTORS DESIGNED WITH YOU IN MIND

SAVE TIME AND MONEY

System K rotors for milling were inspired from Caterpillar's expertise in Ground Engaging Tools and feedback from contractors like you. Designed to make changing cutter bits easier, the toolholder eliminates the need for retaining bolts, pins and setscrews, so you can get back in the cut faster.

SYSTEM K ROTORS

Engineered specifically for Cat cold planers, Cat System K rotors feature efficient material flow with a uniform cutting pattern and are designed to simplify maintenance.


Maintaining bits and toolholders is key to achieving maximum productivity, and System K rotors are designed to simplify maintenance and get you back to work faster.

+ Dual-retention toolholders eliminate the need for fasteners
+ Bit removal can be done through multiple methods
+ A variety of removal tools specifically for System K rotors help you replace bits and toolholders quickly

ZERO FASTENERS

TAPERED, DUAL-RETENTION DESIGN

ELIMINATES
RETAINING PINS, BOLTS AND SETSCREWS

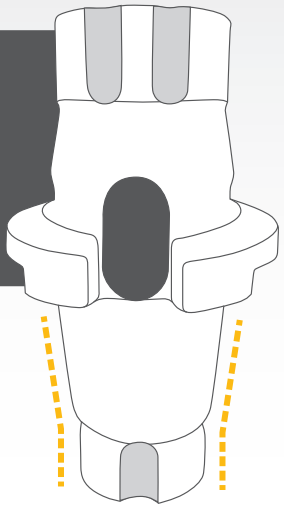

EASY TOOTH REMOVAL




KICKER PADDLES



FASTENER-FREE TOOLHOLDER



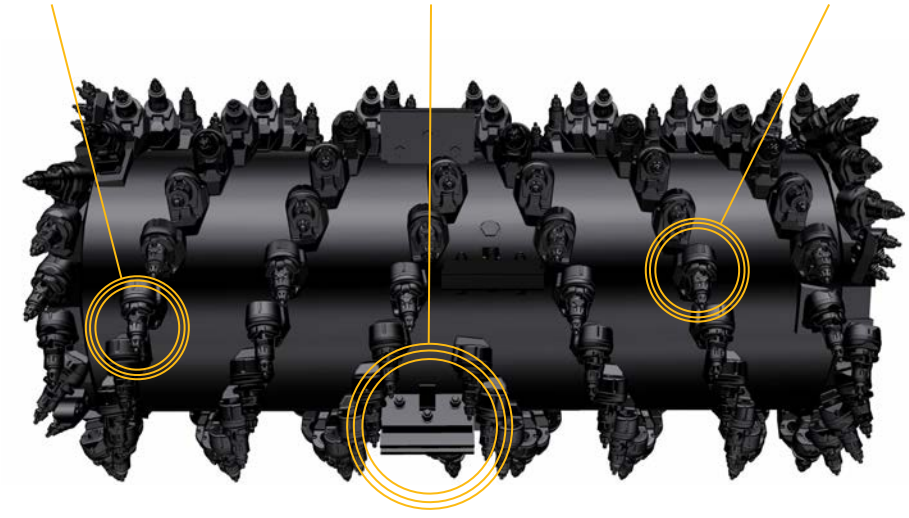

ROTOR APPLICATIONS


Whether texturing a road or milling an airport runway, we have a rotor that will match your job requirements and help you meet your production goals.

MICRO MILLING

Spacing: 6 mm, 6x2 mm*

Application: Very fine milling finish to meet specific job specifications

Recommended Milling Depth:
0-51 mm (0-2 in)

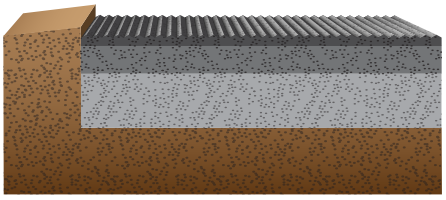




** 6x2 mm rotor is a System H design*


FINE MILLING

Spacing: 8 mm, 10 mm**

Application: Fine milling finish for smooth surface removal

Recommended Milling Depth:
0-101 mm (0-4 in)

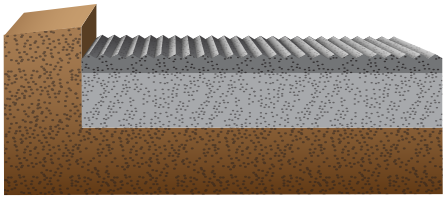

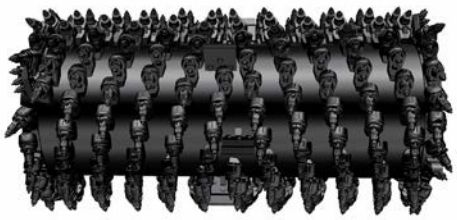


*** 10 mm available on the PM622, PM822 and PM825 only*

STANDARD MILLING

Spacing: 15 mm

Application: Surface removal or complete removal of road surfaces

Recommended Milling Depth:
0-330 mm (0-13 in)

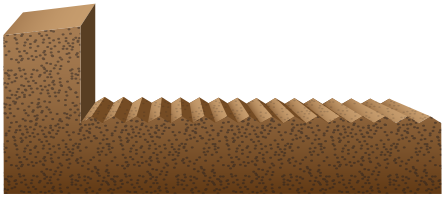




COARSE MILLING

Spacing: 18 mm and 25 mm

Application: Surface removal or complete removal of road surface with a rougher finish

Recommended Milling Depth:
0-330 mm (0-13 in)

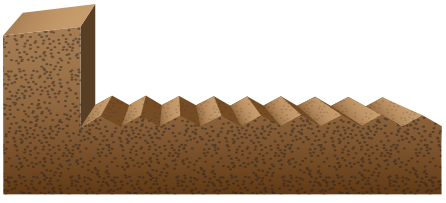



ROTOR OPTIONS

MILLING TYPE	MACHINE MODEL	TOOL SPACING (MM)	NUMBER OF BITS	MILLING WIDTH (MM)	PART NUMBER
Micro	PM620, PM820	6	350	2010	575-7463
	PM622, PM822	6	386	2235	575-7467
	PM825	6	431	2505	575-7471
	PM620, PM820	6x2*	672	2010	501-2144*
	PM622, PM822	6x2*	748	2235	511-5050*
Fine	PM310	8	150	1000	567-0886
	PM312	8	172	1225	567-0892
	PM313	8	181	1300	567-0898
	PM620, PM820	8	276	2010	567-0932
	PM622, PM822	8	304	2235	567-0904
	PM825	8	338	2505	567-0907
	PM622 / PM822	10	247	2235	625-2144
	PM825	10	274	2505	636-3270
Standard	PM102	15	91	1000	597-3340
	PM200	15	170	2010	529-7637
	PM200	15	185	2235	594-0222
	PM201	15	180	2100	588-8864
	PM310	15	91	1000	522-0118
	PM312	15	106	1225	522-0127
	PM313	15	111	1300	522-0133
	PM620, PM820	15	170	2010	497-9842
	PM622, PM822	15	185	2235	517-1709
	PM825	15	203	2505	517-0842
Coarse	PM310	18	80	1000	567-0889
	PM312	18	92	1225	567-0895
	PM313	18	98	1300	567-0901
	PM620, PM820	18	150	2010	559-1545
	PM622, PM822	18	162	2235	558-6381
	PM825	18	177	2505	567-2017
	PM620, PM820	25	122	2010	582-7727
	PM622, PM822	25	131	2235	582-8826
	PM825	25	143	2505	582-8830

** 6x2 mm rotor is a System H design*

SYSTEM K KICKER PADDLES

MACHINE MODEL	TOOL SPACING	APPLICATION	PART NUMBER
PM310, PM312, PM313	8 mm	Fine	567-0937
	15 mm	Standard	602-5729
	18 mm	Coarse	637-9437
PM620, PM622, PM820, PM822, PM825	6 mm	Micro	567-0937
	8 mm	Fine	637-9437
	15 mm	Standard	602-5629
	18 mm	Coarse	602-5629
	25 mm	Coarse	559-7707

SYSTEM K TOOLHOLDERS

SHANK SIZE	PART NUMBER
20 mm	583-6054
22 mm	623-3644
25 mm	623-3647

SYSTEM K BLOCKS AND TRIPLE TREES

APPLICATION	DESCRIPTION	PART NUMBER
Micro, Fine	Left Side Block	606-3852
Micro, Fine	Right Side Block	606-3855
Standard, Coarse	Left Side Block	567-0938
Standard, Coarse	Right Side Block	567-0939
All	End Ring Block	496-3468
All	Left Triple Tree	541-7552
All	Right Triple Tree	541-7553

SERVICE TOOLS

TOOL	DESCRIPTION	PART NUMBER
Storage Case	For pneumatic hammer and punches	647-3932
Pneumatic Hammer	Compatible with interchangeable tools for rotor maintenance	625-8775
Pneumatic Punch (57 degrees)	To remove bits through slot in toolholder	609-2601
Pneumatic Punch (15 degrees)	To remove bits through slot in toolholder	545-9105
Pneumatic Punch (straight)	To remove bits through back of base block	226-0124
Pneumatic Flat Chisel	To remove bits under washer	223-4355
Pneumatic Fork Tool	To remove bits under washer	592-9019
Pneumatic Cup Tool	For bit installation	625-9698
Hand Tool	To remove bits through slot in toolholder	543-5470
	To remove bits	609-1092
	To remove toolholder and static diamond bits	592-3967
	To install static diamond bits	504-5049
Extractor	For damaged toolholders	577-4176
Toolholder and Static Diamond Installation Press Kit	Pneumatic installation tool for System K tool holders and System K Diamond cutting tools **Includes:** Tool holder and diamond adapters, pneumatic assembly, support bracket, all required fittings and hose	591-1346
Service Tool Kit	Rotor service tool kit for cold planer cutting bit installation and removal. Air gun and attachments included for fast bit maintenance.	675-7792




CARBIDE BITS

PREMIUM CUTTING BITS OPTIMIZE PERFORMANCE TO MAXIMIZE PRODUCTION

+ Designed to flow material away from the body and prevent material build up
+ Fluted body supports bit rotation to help extend tool life
+ A long collar on the body protects the washer and toolholder
+ Some bits offer puller grooves for fast bit removal
+ Valve seat and plug style bits for high impact applications
+ Variety of tips available to match your application



CARBIDE CUTTER BITS

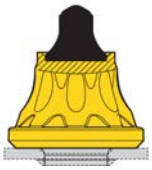	APPLICATION	MATERIAL	SHANK SIZE	PULLER GROOVE	PART NUMBER
	Light Duty Milling (Skid Steer)	Soft - Medium Asphalt	20 mm	Yes	Piece: 561-8134
	Light / Medium Duty Milling	Soft - Medium Asphalt	20 mm	Yes	Piece: 560-2306 Pallet: 626-4493*
	Light / Medium Duty Milling	Soft - Medium Asphalt	20 mm	No	FACTORY INSTALLED Piece: 674-7262 Pallet: 626-4495*
	Full-depth Cutting and Stabilizing	Soft - Medium Asphalt	22 mm	No	Piece: 533-5760
	Medium / Heavy Duty Milling	Medium - Hard Asphalt	20 mm	No	Piece: 564-1260 Pallet: 626-4494*
	Medium / Heavy Duty Milling	Hard Asphalt	20 mm	No	Piece: 561-8135 Pallet: 626-4496*
	Concrete Milling	Concrete	20 mm	Yes	Piece: 561-8132

** Not available in all regions. Please contact your Cat dealer for availability.*

CAT DIAMOND BITS

DESIGNED FOR LONGER LIFE, MORE UPTIME AND LOWER OPERATING COSTS

For bituminous applications without obstacles such as interstates or motorways, consider Cat Diamond bits. They are designed to stay sharp and last significantly longer than a carbide bit. Diamond bits contribute to improving the return on your milling machine investment by helping you to complete jobs faster and achieve lowering owning and operating costs, month after month.

WHY CHOOSE DIAMOND BITS

Diamond bits can provide a variety of benefits to milling contractors.

+ Fewer bit changes reduces service time, allowing crews to focus on production
+ Efficient cutting and improved fuel efficiency
+ Consistent cutting patterns
+ Aids in reducing machine vibration helping to improve the life of machine components

CAT DIAMOND BITS FOR SYSTEM K ROTORS


Available through your Cat dealer for convenient ordering on PARTS.CAT.COM.

PART NUMBER: 616-1061



ENGINEERED TO **STAY SHARP LONGER** THAN CARBIDE BITS

A single piece design with a non-rotating diamond tip provides directional wear and structural integrity over the life of the bit.

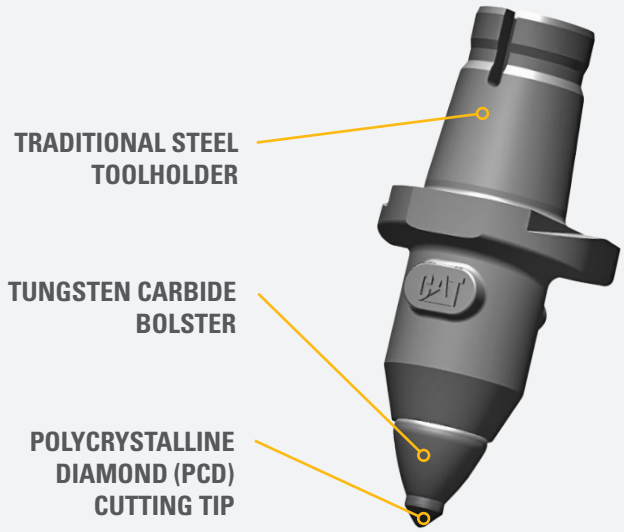

Results based on customer survey data of cold planer users in North America using diamond bits. Comparison between Cat 540 diamond bits and carbide bits. Average life and exact tonnage is impacted by local aggregate and operating technique.

DIAMOND CUTTER BITS

ROTOR SYSTEM	STANDARD DIAMOND	INSTALL TOOL	REMOVAL TOOL
Cat® System K	616-1061	Hydraulic Tool: 591-1346 Hand Tool: 504-5049	625-9697
Cat System J	618-3654	504-5049	473-3835
Kennametal KPF-303	616-1058	504-5049	473-3838
Sollami Quick Change Drum	618-3636	504-5049	473-3837



CAT SYSTEM K
616-1061



CAT SYSTEM J
618-3654



KENNAMETAL KPF-303
616-1058




SOLLAMI
618-3636



CUTTING CHAMBER

PRECISE CONTROL

Regularly inspect the surrounding wear components on the cutting chamber to prevent unwanted damage to other major weldments. Periodically measure the plate or carbide thickness to determine remaining life and proactively plan the next maintenance interval. Some components are reversible for extended life and reduced service intervals. The cutting chamber is designed with bolt on wear components for ease of service.

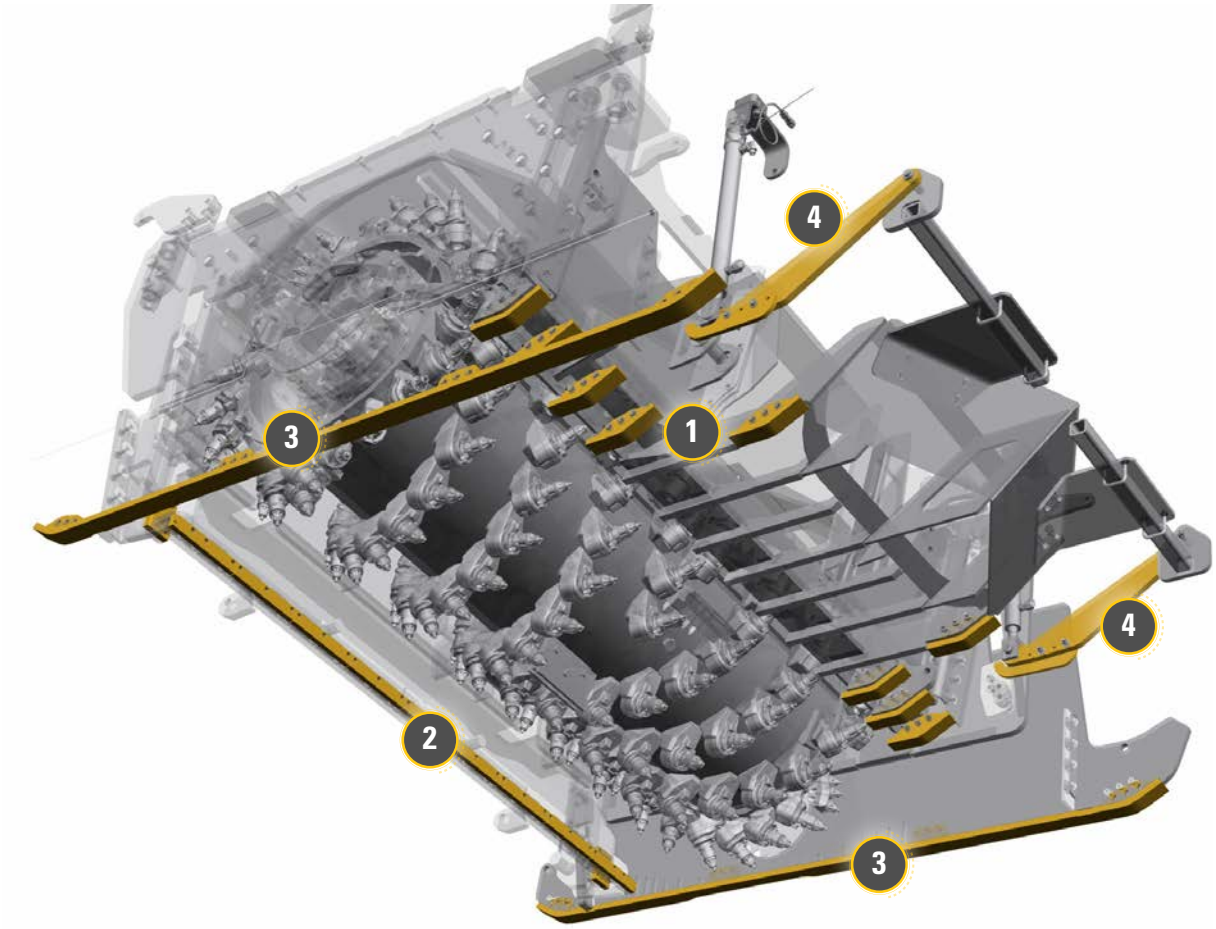



1. ANTI-SLAB WEAR SKIS Made with a wear resistant, carbide overlay for extended life and are reversible for double the life. Regularly inspect and maintain the anti-slab wear skis to ensure proper operation of the anti-slab and prevent large slabs of asphalt from damaging your conveyor system.



2. MOLDBOARD CUTTING EDGES Cat cutting edges are made with carbide inserts aligned to provide a flush milled surface for many hours. Maintain moldboard cutting edges to protect the moldboard door, provide a clean milled surface, and prevent material from leaking out the back of the cutting chamber.



3. SIDEGATE WEAR SKIS Made of heat treated, wear resistant steel to improve the life of the part with bolt on wear ski for ease of service and replacement. Regular maintenance preserves the sidegates and prevents material from leaking out the sides of the cutting chamber.




4. INBOARD GRADE CONTROL WEAR SKI A bolt-on design allows for easy service and replacement. Regular inspection and maintenance of the inboard wear ski is necessary to preserving the inboard system and ensures proper operation of the inboard grade control.

WEAR SKIS

DESCRIPTION	MACHINE MODEL	PAPER KIT PART NUMBER (INCLUDES HARDWARE)	PART NUMBER	QUANTITY
Anti-slab Wear Ski	PM310, PM312, PM313	568-6406	382-4612	3
	PM620, PM820	569-0304		8
	PM622, PM822	569-0305		9
	PM825	569-0306		10
Sidegate Wear Skis	PM310	568-6397	Right – 538-2608	1
			Left – 541-7828	1
	PM312	568-6396	Right – 538-2608	1
			Left – 541-4528	1
	PM313	568-6394	Right – 538-2608	1
			Left – 519-2275	1
	PM620, PM622, PM820, PM822, PM825	569-0298	Right – 562-9317	1
			Left – 609-0969	1
Inboard Wear Ski	PM620, PM622, PM820, PM822, PM825		590-7785	2

MOLDBOARD CUTTING EDGES


MACHINE MODEL	PAPER KIT PART NUMBER (INCLUDES HARDWARE)	DESCRIPTION	PART NUMBER	QUANTITY
PM310	568-6403	Right	382-4623	1
		Center	382-4624	2
		Left	382-4625	1
		Upper Sides	468-0394	2
PM312	568-6401	Right	382-4623	1
		Center – 222 mm	468-0396	1
		Center – 248 mm	382-4624	2
		Left	382-4625	1
		Upper Sides	468-0394	2
PM313	568-6398	Right	382-4623	1
		Center – 248 mm	382-4624	2
		Center – 297 mm	468-0397	1
		Left	382-4625	1
		Upper Sides	468-0394	2
PM620, PM820	569-5427 and 569-0300	Right	382-4623	1
		Center	382-4624	6
		Left	382-4625	1
		Upper Sides	386-4611	2
		Guide	526-4875	2
PM622, PM822	569-5427 and 569-0301	Right	382-4623	1
		Center – 224 mm	386-4528	1
		Center – 248 mm	382-4624	6
		Left	382-4625	1
		Upper Sides	386-4611	2
		Guide	526-4875	2
PM825	569-5428 and 569-0302	Right	382-4623	1
		Center	382-4624	8
		Left	382-4625	1
		Upper Sides	386-4611	2
		Guide	526-4875	2

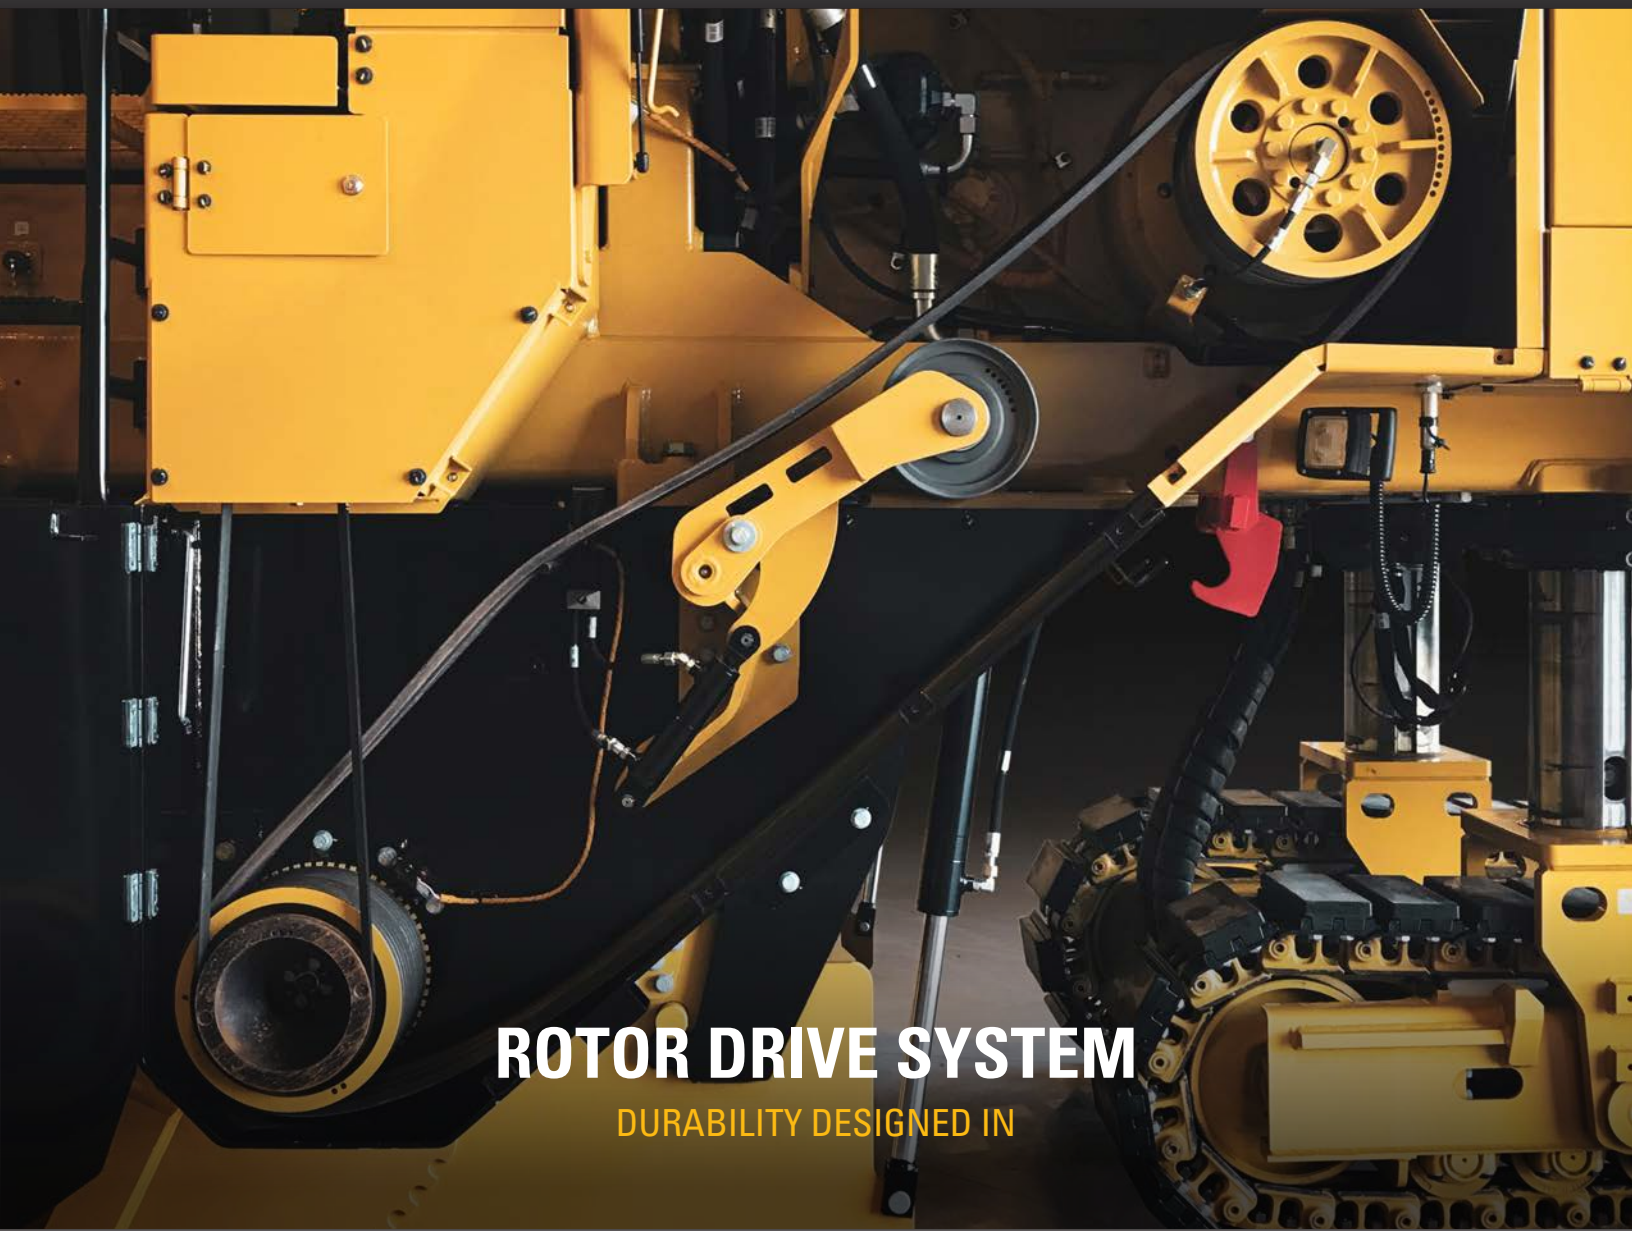


ROTOR DRIVE SYSTEM

DURABILITY DESIGNED IN

Periodically inspect the rotor drive system including the rotor drive belt, pulley system, and sheaves to avoid rotor slippage and ensure efficient rotor operation. Rips, tears, or excessive stretch in the rotor drive belt indicate replacement is necessary. The rotor drive belt comes in a matched set for ease of replacement. Inspect the v-grooves in the sheaves to ensure they are properly engaging with the grooves of the rotor drive belt.

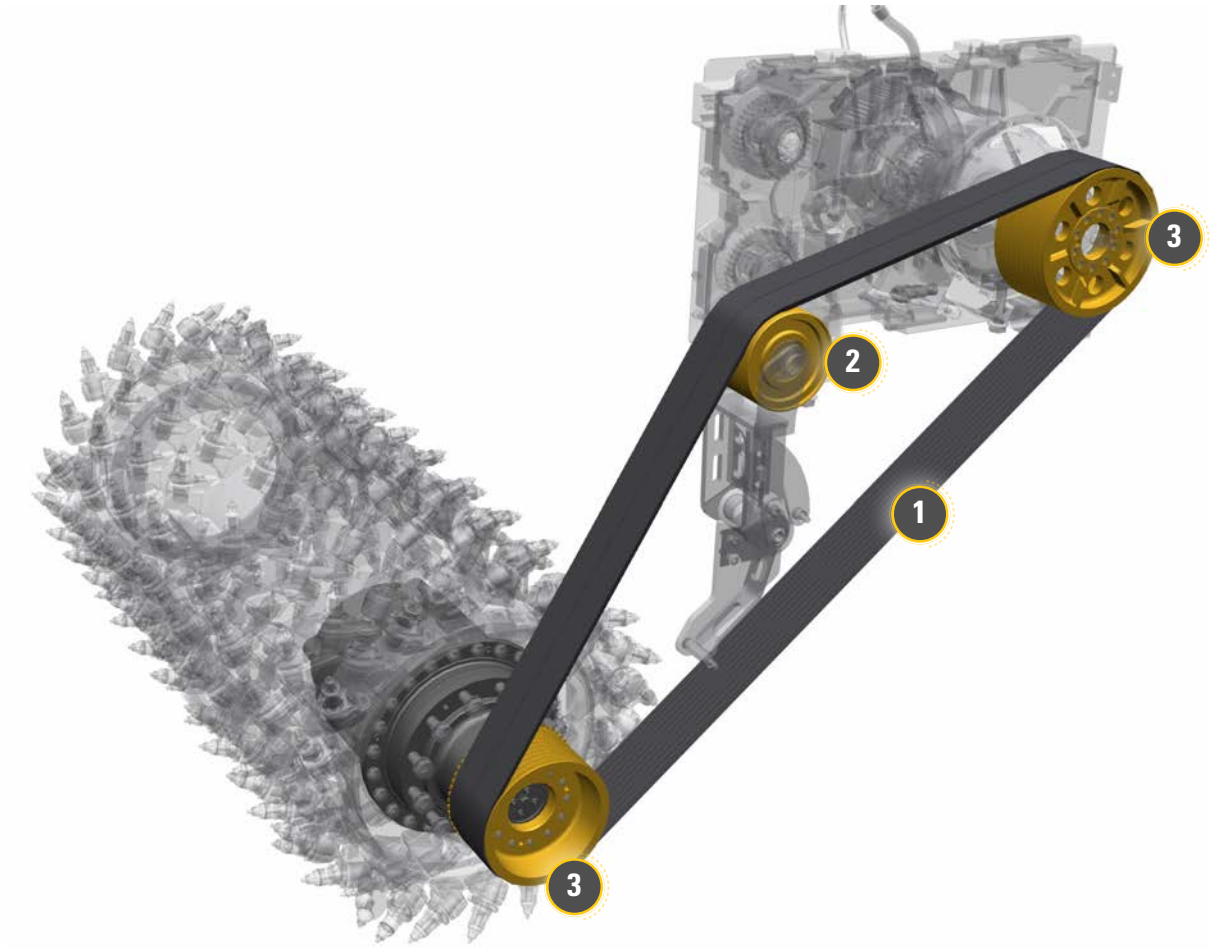

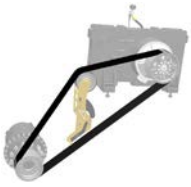

1. ROTOR DRIVE BELT Designed to ensure consistent tension when engaging the rotor and prevent slippage.



2. TENSIONER IDLER Idler on the tensioner arm for the rotor drive belt.



3. SHEAVE Interfaces with v-grooves in rotor drive belt to transfer torque and speed from engine to rotor.




ROTOR TURNING DEVICE BELT Belt designed to ensure efficient operation of the rotor turning device.

ROTOR DRIVE SYSTEM COMPONENTS

MACHINE MODEL	DESCRIPTION	PART NUMBER	QUANTITY
PM310, PM312, PM313	Rotor Drive Belt	516-6103	2
	Tensioner Idler	482-1262	2
	Sheave – Upper	485-3381	3
	Sheave – Lower	470-6519	1
	Rotor Turning Device Belt*	566-9871	1
PM310	Gearbox	590-0218	1
PM312, PM313	Gearbox	590-0217	1
PM620, PM622	Rotor Drive Belt	526-0883	1
	Gearbox	577-3874	1
	Tensioner Idler	391-0218	1
	Sheave – Upper	382-3748	1
	Sheave – Lower	382-3747	1
	Rotor Turning Device Belt	433-7020	1
PM820, PM822, PM825	Rotor Drive Belt	532-8397	1
	Gearbox	577-3875	1
	Tensioner Idler	496-5118	1
	Sheave – Upper	496-5090	1
	Sheave – Lower	496-5091	1
	Rotor Turning Device Belt	433-7020	1


** Available on models with a Build Number of 02B. Build Numbers are listed on the PIN plate of the machine. Please refer to the introduction section of this document for information on how to locate the PIN plate.*

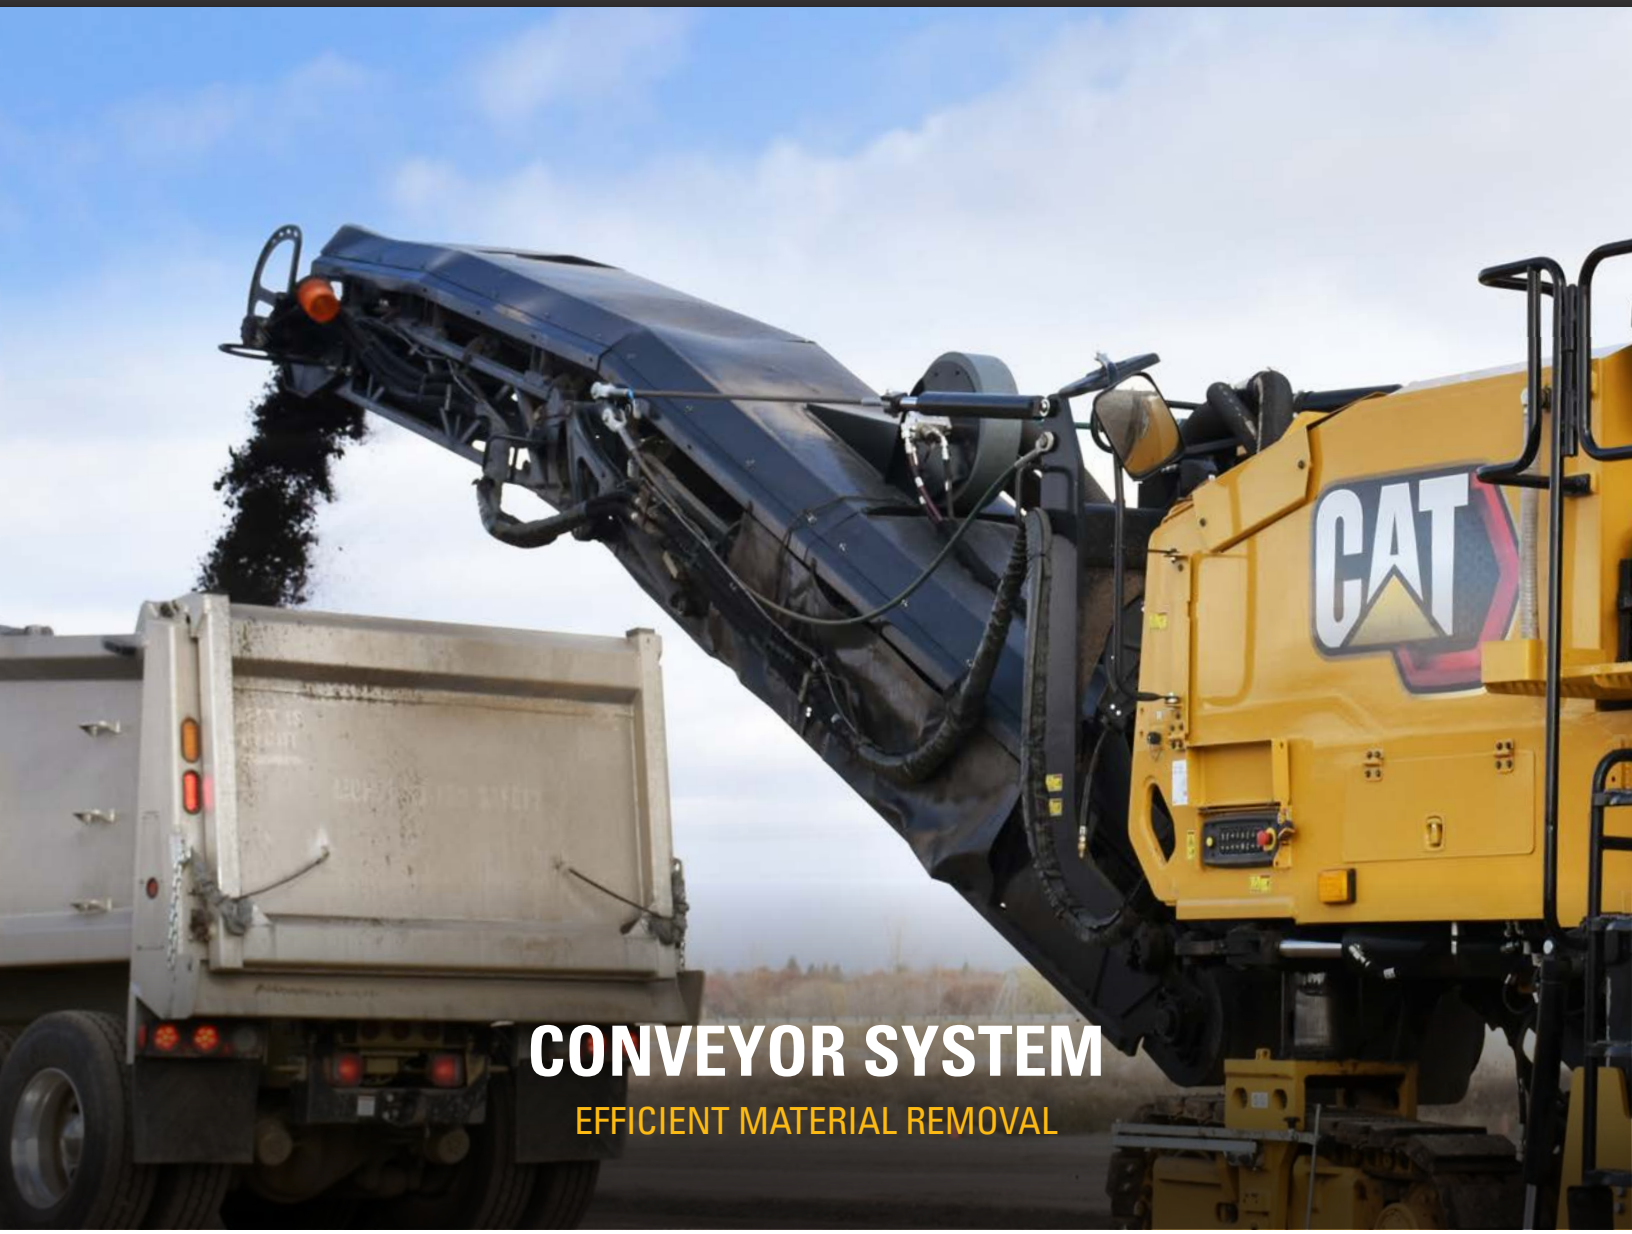

CONVEYOR SYSTEM

EFFICIENT MATERIAL REMOVAL

Cat conveyor systems are designed to efficiently move material from the cutting chamber out of the machine. A properly maintained conveyor system is important to the overall functionality of the machine and production of the job site. Regularly maintain and inspect the conveyor rollers and flashing for optimal performance and periodically clean any pick-up stock off of the rollers. Flat spots on rollers may indicate they are seized and need replacement. Adjust the conveyor belt flashing to prevent material from leaking out the sides and replace flashing when adjustment is no longer possible.

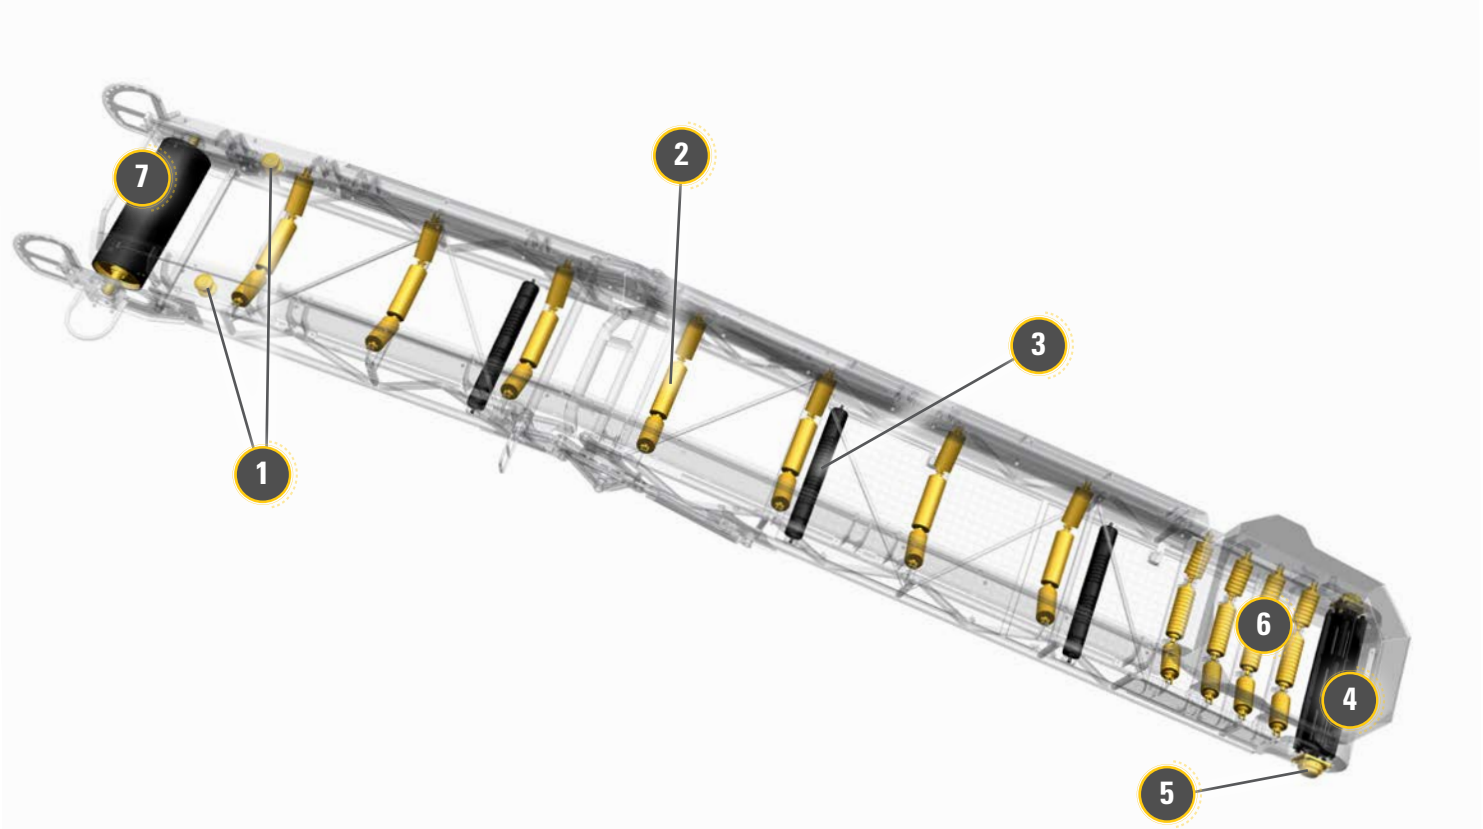



1. GUIDE ROLLERS Steel rollers with rubber on the top and bottom creating a channel to guide the conveyor belt with sealed for life bearings.



2. TROUGH ROLLERS Supports the belt in a "U" shape to funnel material to the center of the belt to help prevent spilled material and assist with belt alignment. Equipped with sealed for life bearings.



3. RETURN IDLERS Designed to support the return of the conveyor belt. Steel roller wrapped in vulcanized rubber with built in grooves to resist material build up and prevent excessive wear. Equipped with sealed for life bearings.



4. TAIL PULLEY Wing pulley with welded contact bars to support the conveyor belt and shaft that interfaces with bearings on each side.



5. TAIL PULLEY BEARINGS Supports the tail pulley on both sides. Equipped with end caps to prevent contamination and improve the life of the bearing.



6. BUNK ROLLERS Designed to withstand the impact in the loading area of the conveyors. Equipped with continuous rubber discs creating grooves that prevent material build up and sealed for life bearings.



7. HEAD PULLEY Wrapped in rubber with cross hatched pattern to prevent material build up and resist wear. Equipped with a shaft and spline that interfaces with the conveyor motor.