
PRIMARY CONVEYOR ROLLERS AND BEARINGS

DESCRIPTION	MACHINE MODEL	PAPER KIT PART NUMBER (INCLUDES HARDWARE)	PART NUMBER	QUANTITY
Trough Rollers	PM310, PM312, PM313	568-6424	541-1679	5
	PM620, PM622, PM820, PM822, PM825	569-2074	622-7362	4
Return Idlers	PM310, PM312, PM313	568-6420	528-5018	1
	PM620, PM622, PM820, PM822, PM825	569-0347	528-5017	2
Guide Rollers	PM310, PM312, PM313	568-6421	541-1678	2
	PM620, PM622, PM820, PM822, PM825	569-2075	541-1678	2
Head Pulley	PM310, PM312, PM313		584-5693	1
	PM620, PM622, PM820, PM822, PM825		573-6380	1
Tail Pulley	PM310, PM312, PM313		386-2406	1
	PM620, PM622, PM820, PM822, PM825		388-9556	1
Tail Pulley Bearings	PM310, PM312, PM313	568-6422	572-1725	2
	PM620, PM622, PM820, PM822, PM825	569-0346	572-1725	2
Complete Roller Kit	PM310, PM312, PM313	568-6423		1
	PM620, PM622, PM820, PM822, PM825	569-0314		1



SECONDARY CONVEYOR ROLLERS AND BEARINGS

DESCRIPTION	MACHINE MODEL	PAPER KIT PART NUMBER (INCLUDES HARDWARE)	PART NUMBER	QUANTITY
Bunk Rollers	PM310, PM312, PM313	568-6408	541-1681	3
			541-1680	6
	PM620, PM622, PM820, PM822, PM825	569-0351	543-2999	4
			543-3000	8
Trough Rollers	PM310, PM312, PM313	568-6411	541-1679	7
	PM620, PM622, PM820, PM822, PM825	569-0348	543-2998	7
Return Idlers	PM310, PM312, PM313	568-6409	528-5018	3
	PM620, PM622, PM820, PM822, PM825	569-0350	528-5017	3
Guide Rollers	PM310, PM312, PM313	568-6410	541-1678	2
	PM620, PM622, PM820, PM822, PM825	569-5423	541-1678	2
Head Pulley	PM310, PM312, PM313		584-5693	1
	PM620, PM622, PM820, PM822, PM825		640-9027	1
Tail Pulley	PM310, PM312, PM313		386-2406	1
	PM620, PM622, PM820, PM822, PM825		644-6227	1
Tail Pulley Bearings	PM310, PM312, PM313	568-6412	572-1725	2
	PM620, PM622, PM820, PM822, PM825	569-0346	572-1725	2
Complete Roller Kit	PM310, PM312, PM313	568-6413		1
	PM620, PM622, PM820, PM822, PM825	569-0349		1

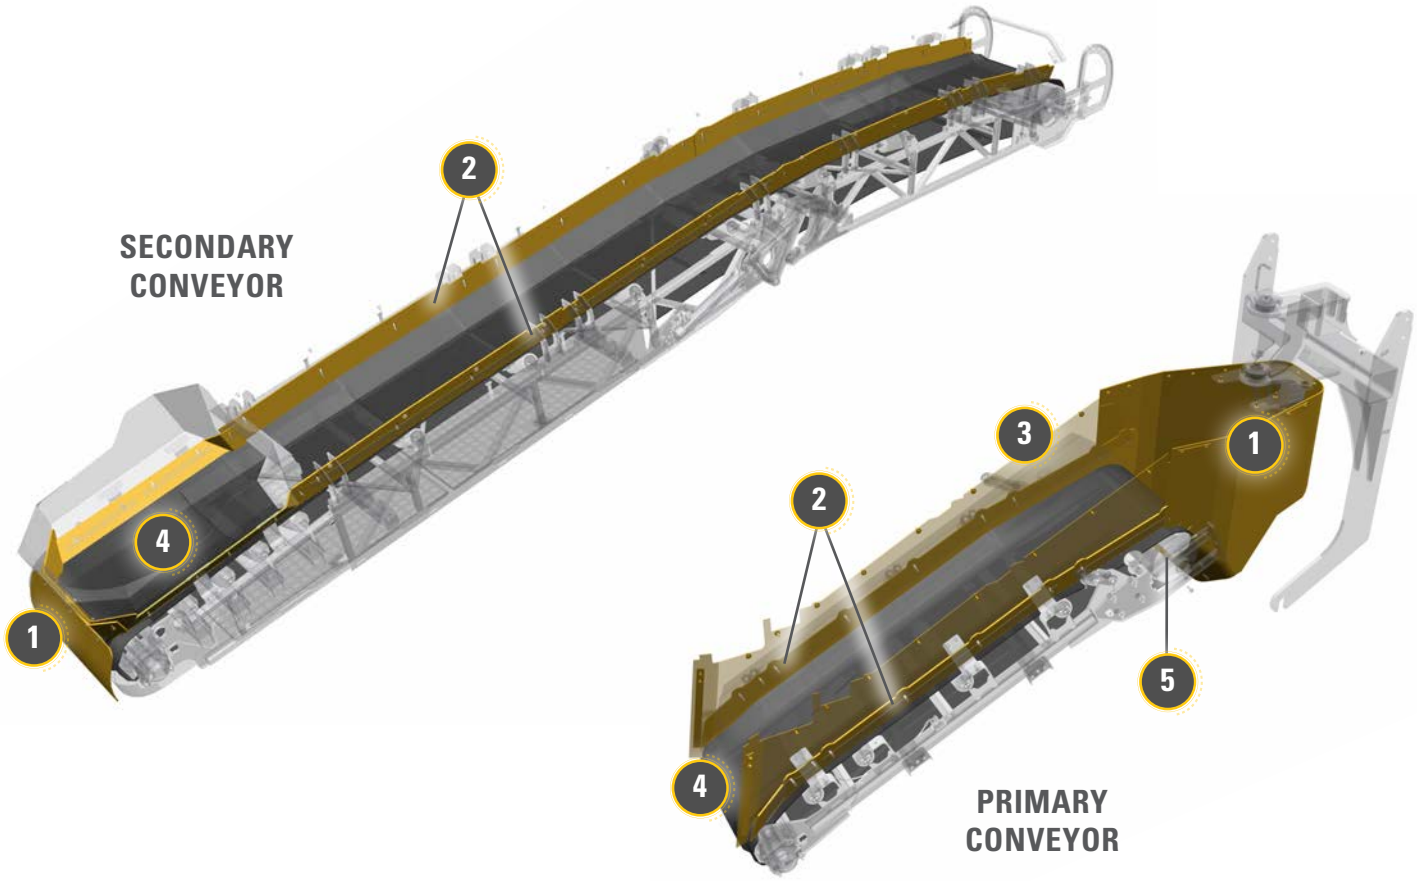




1. FLASHING Rubber conveyor flashing is designed to prevent material leakage while remaining flexible to allow full mobility of the conveyors. All flashing is bolt on for ease of maintenance.

2. BELT SEALS Conveyor belt seals are designed with slots to allow for adjustment as the flashing wears. Rubber seals are designed to prevent material leakage while remaining flexible to allow full mobility of the conveyors.

3. DEFLECTORS Help retain the material in the conveyor system during operation.

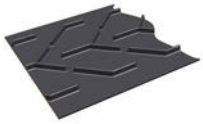

4. CONVEYOR BELTS Conveyor belts are robust and designed to efficiently move material out of the machine. They are made with a multi-ply mold and vulcanized into one continuous loop with 32 mm high chevron cleats that wrap around the belt to help move material. It is recommended to replace the flashing when replacing a belt.

5. APRON Rubber flashing on the PM310, PM312, and PM313 that interfaces with the hopper flashing at the exit of the primary conveyor creating a chute to channel the asphalt into the bunk of the secondary conveyor.




PRIMARY CONVEYOR FLASHING AND BELTS

DESCRIPTION	MACHINE MODEL	PAPER KIT PART NUMBER (INCLUDES HARDWARE)	PART NUMBER	QUANTITY
Deflectors	PM310, PM312, PM313	568-6414	523-4554	1
			523-4555	1
			523-4553	1
			541-4639	2
	PM620, PM622, PM820, PM822, PM825	569-5421	499-2412	2
Belt Seals	PM310, PM312, PM313	568-6415	523-6576	1
			522-9006	1
			582-8228	2
			533-6149	2
	PM620, PM622, PM820, PM822, PM825	569-5422	499-2421	2
Hopper Flashing	PM310, PM312, PM313	568-6416	555-7670	1
			533-6148	1
			555-7671	1
	PM620, PM622, PM820, PM822, PM825	569-5420	500-4804	1
Apron	PM310, PM312, PM313	568-6417	555-7668	2
Conveyor Belts	PM310, PM312, PM313		635-9760	1
	PM620, PM622, PM820, PM822, PM825		642-2321	1

SECONDARY CONVEYOR FLASHING AND BELTS


DESCRIPTION	MACHINE MODEL	PAPER KIT PART NUMBER (INCLUDES HARDWARE)	PART NUMBER	QUANTITY
Hopper Flashing	PM310, PM312, PM313		533-6189	1
			533-6181	1
			555-7666	2
			555-7667	1
			533-6183	2
			555-7665	1
			533-6179	1
	PM620, PM622, PM820, PM822, PM825		475-9737	1
			475-9736	2
			475-9738	1
			476-2085	1
Belt Seals	PM310, PM312, PM313		520-5965	2
			520-5966	2
	PM620, PM622, PM820, PM822, PM825		497-8802	2
			497-8802	2
			497-8801	2
Complete Flashing Kit	PM310, PM312, PM313	568-6407		1
	PM620, PM622, PM820, PM822, PM825	569-0313		1
Conveyor Belts	PM310, PM312, PM313		635-9762	1
	PM620, PM622, PM820, PM822, PM825		642-2322	1

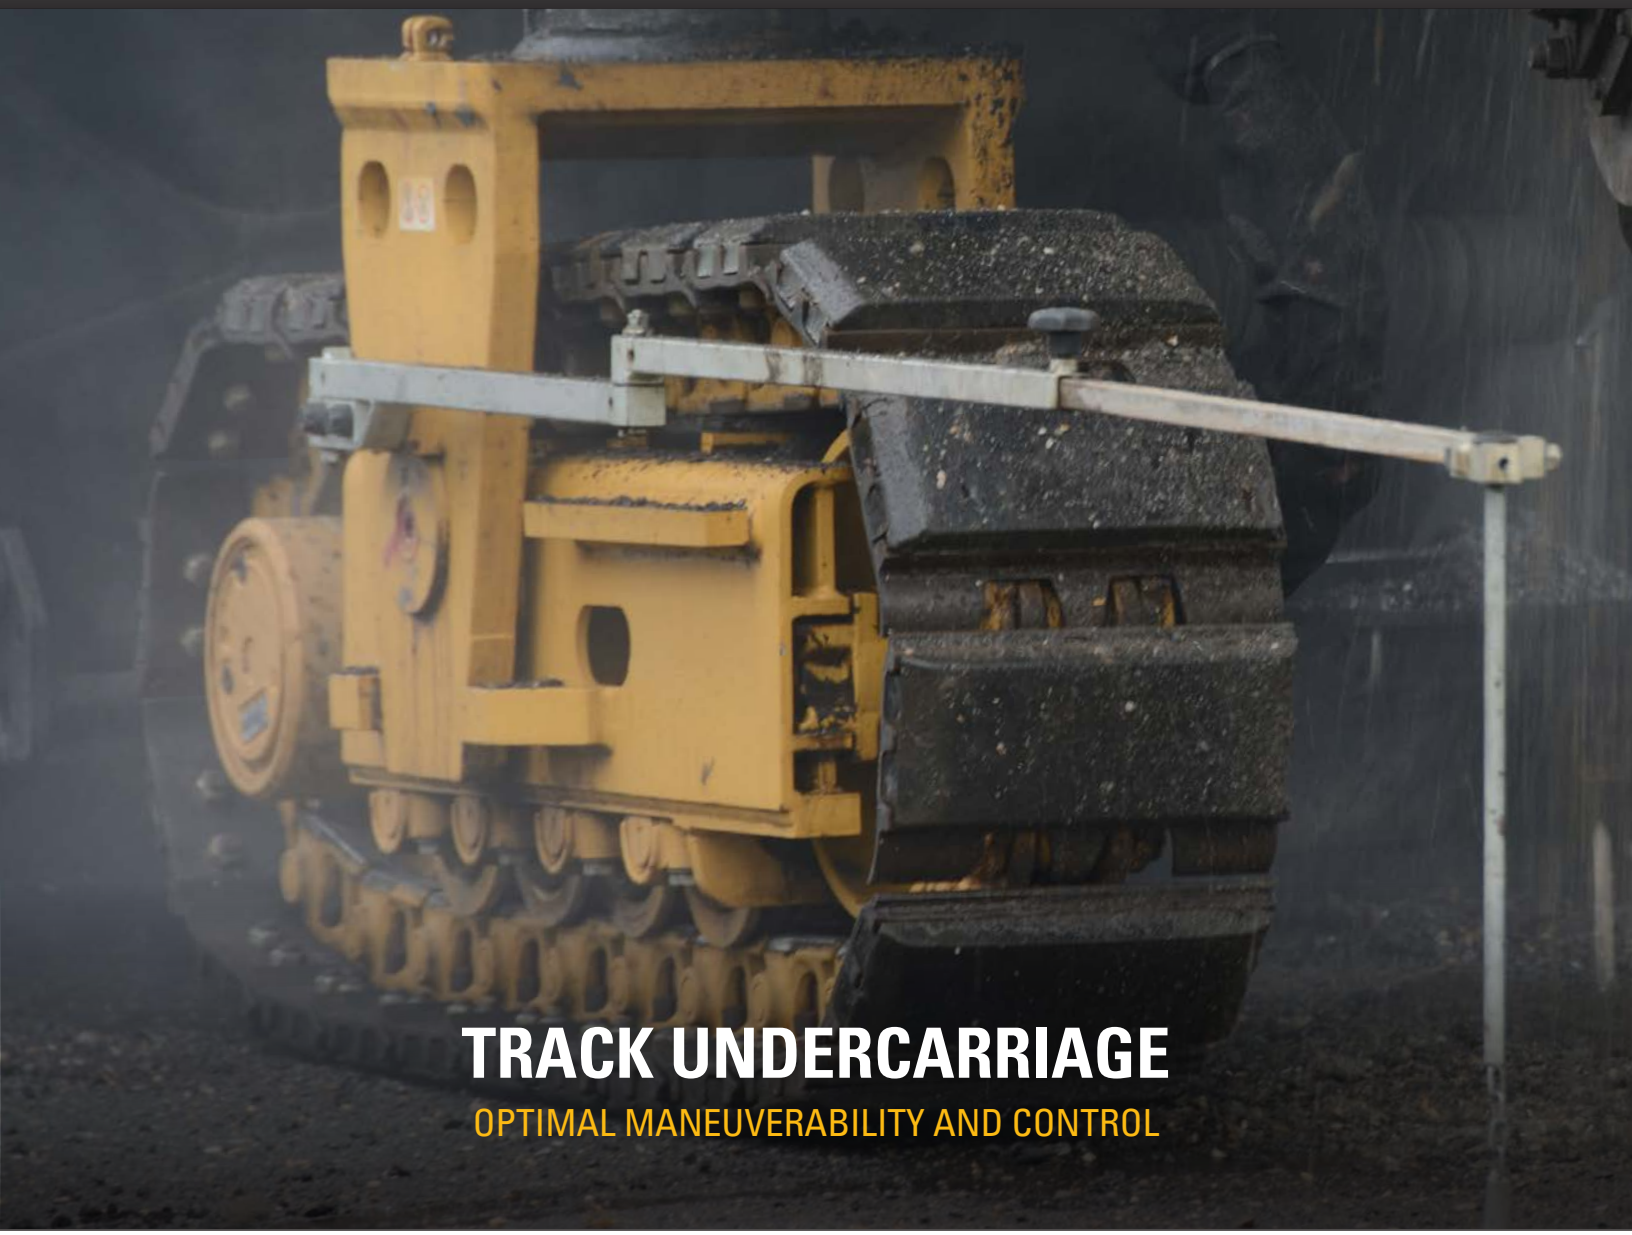

TRACK UNDERCARRIAGE

OPTIMAL MANEUVERABILITY AND CONTROL

Cat cold planer undercarriages incorporate many of the track type tractor and excavator undercarriage components to leverage their wear life and performance benefits. Regular inspection of components such as the sprocket, track chain, idler, and rollers help to maintain a uniformly milled surface. Periodically inspect the polyurethane track pads and replace before wearing into the steel track shoe.

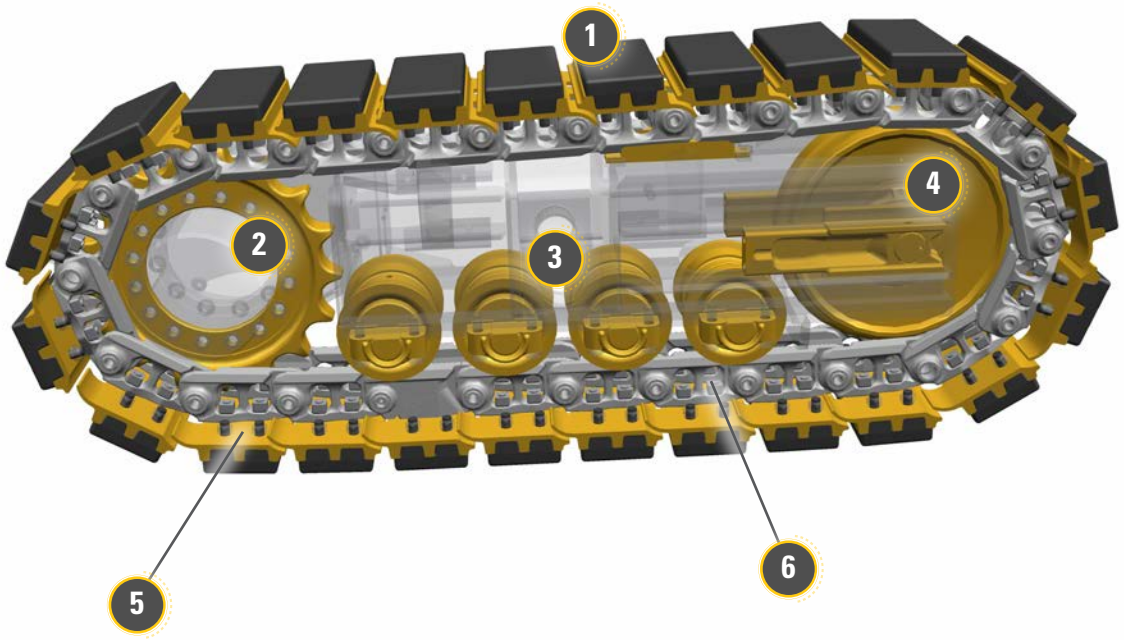



1. TRACK PADS Polyurethane track pad designed to optimize wear life and prevent track slippage.



2. SPROCKETS Uniform surface hardening provides the strength needed to transfer the driving loads from the drive motors to the tracks.



3. ROLLERS Equipped with duo-cone seals to eliminate internal wear and provide lifetime lubrication with deep case hardness for long wear life and a high core hardness for strength.



4. IDLERS Hardened to provide proper strength for balanced wear life and lower overall operating costs.



5. TRACK SHOES Triple grouser track shoes interface with the rubber track pads for optimal track pad retention.



6. TRACK CHAIN Sophisticated heat-treat processes provide resistance to wear against the track roller tread and flange for balanced wear life. Cat pin and bushing bores are machined to very close tolerances for superb pin and bushing retention.

UNDERCARRIAGE COMPONENTS


DESCRIPTION	MACHINE MODEL	PAPER KIT PART NUMBER (INCLUDES HARDWARE)	PART NUMBER	QUANTITY / UNDERCARRIAGE
Track Pads	PM310, PM312, PM313 – Rear	569-5441	561-4358	20
	PM310, PM312, PM313 – Front	569-5444	561-4358	18
	PM620, PM622, PM820, PM822, PM825	569-0297	540-0150	24
Track Shoes	PM310, PM312, PM313 – Rear	569-5442	478-8217	20
	PM310, PM312, PM313 – Front	569-5443	478-8217	18
	PM620, PM622, PM820, PM822, PM825	569-5431	383-6914	23
			Master – 385-7548	1
Rollers	PM310, PM312, PM313 – Rear	568-6392	480-4148	3
	PM310, PM312, PM313 – Front	568-6390	480-4148	2
	PM620, PM622, PM820, PM822, PM825	569-5432	497-8871	4
Sprocket	PM310, PM312, PM313	568-6388	471-4156	1
	PM620, PM622, PM820, PM822, PM825	569-5433	383-4240	1
Idlers	PM310, PM312, PM313	569-5445	471-8011	1
	PM620, PM622, PM820, PM822, PM825	569-5434	567-8554	1
Wear Pads	PM310, PM312, PM313	569-5446	476-0984	2
	PM620, PM622, PM820, PM822, PM825	569-5435	385-9196	2
Track Chain	PM310, PM312, PM313		481-2481	1
	PM620, PM622, PM820, PM822, PM825		383-4239	1



SPRAY SYSTEMS

IMPROVES COMPONENT WEAR LIFE AND DUST SUPPRESSION

The spray systems cool components to prolong their wear life and assist with dust suppression. To keep the system clean, replace the filters according to recommended service intervals. Frequently clean the spray bars and nozzles to ensure proper operation and periodically inspect them for damage and clogs.

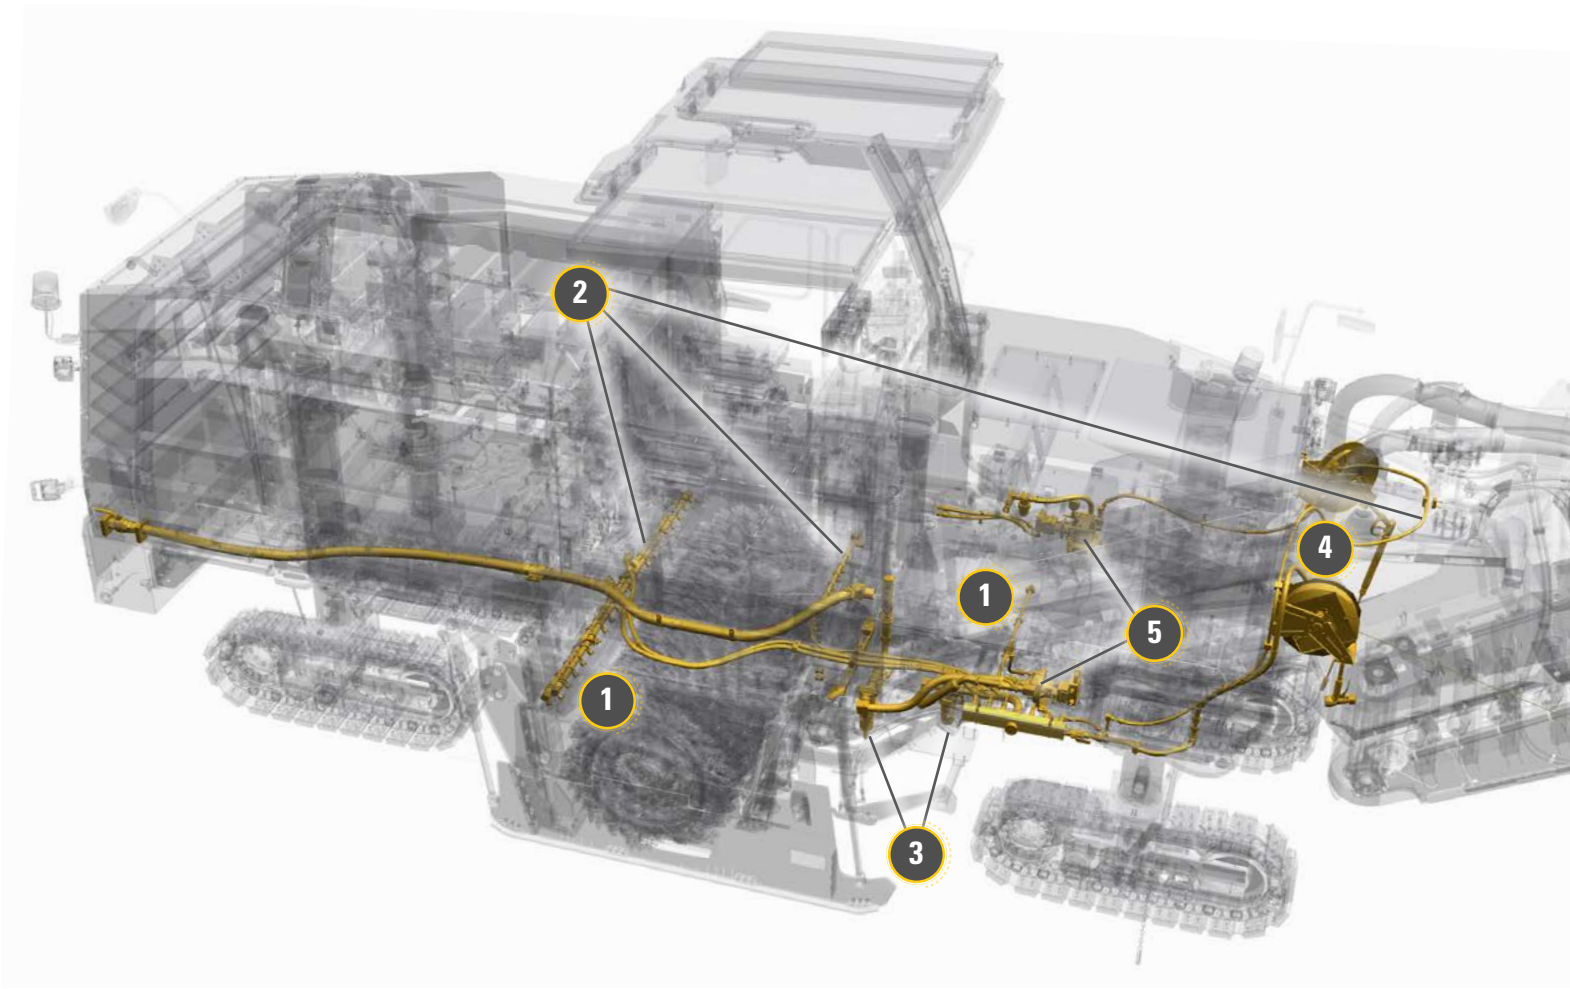



1. WATER SPRAY BARS Positioned on the machine to cool components to optimize wear life and dust suppression.

2. OPTIONAL WATER SPRAY BARS The PM620, PM622, PM820, PM822 and PM825 may include two additional spray bars plus additional nozzles as a factory-installed option.



3. WATER SPRAY FILTERS Filter the water to prevent clogs and keep the system clean.



4. WATER HOSE REELS For the high and low pressure machine wash down systems. Low (right side), High (left side)



5. WATER SPRAY PUMPS Optimized for Cat cold planer spray systems.



SPRAY NOZZLES Deliver an optimal spray pattern to cool components.



WATER INLET BASKET STRAINER Filter to prevent debris from contaminating the water system.

WASHDOWN AND DUST REDUCTION

DESCRIPTION	MACHINE MODEL	DETAIL	PART NUMBER	QUANTITY	GROUP PART NUMBER (INCLUDES HARDWARE)
Low Pressure Washdown	PM310, PM312, PM313	Water Nozzle	398-8499	1	544-2811
	PM620, PM622, PM820, PM822, PM825	Hose Reel	572-4963	1	591-6023
		Water Nozzle	398-8499	1	
High Pressure Washdown	PM310, PM312, PM313	Water Pump	538-1148	1	577-6255
		Spray Gun	398-6440	1	
		Spray Lance	488-1394	1	
		Spray Tip	488-1395	1	
	PM620, PM622, PM820, PM822, PM825	Water Pump	538-1148	1	374-6811
		Water Filter	161-8211	1	
		Hose Reel	388-3713	1	
		Spray Gun	398-6440	1	
		Spray Lance	488-1394	1	
		Spray Tip	488-1395	1	
Dust Reduction Spray System	PM310, PM312, PM313	Spray Bar	529-8714	1	421-9634
		Spray Bar	529-8712	1	
		Nozzle	517-7244	6	
		Clamp	390-7635	6	
	PM620, PM820	Spray Bar	595-2230	1	594-4055
		Spray Bar	581-8851	1	
		Nozzle	478-2767	24	
		Clamp	478-2766	24	
	PM622, PM822	Spray Bar	595-2257	1	594-4054
		Spray Bar	581-8851	1	
		Nozzle	478-2767	26	
		Clamp	478-2766	26	
	PM825	Spray Bar	595-2276	1	594-4057
		Spray Bar	581-8851	1	
		Nozzle	478-2767	28	
		Clamp	478-2766	28	

CHAMBER SPRAY ARRANGEMENT

DESCRIPTION	MACHINE MODEL	DETAIL	PART NUMBER	QUANTITY	GROUP PART NUMBER (INCLUDES HARDWARE)
Pump and Conveyor Spray Bar	PM310, PM312, PM313	Water Pump	545-6062	1	381-6468
		Water Filter	490-5490	1	
		Spray Bar	529-8646	1	
		Nozzle	517-7244	2	
		Clamp	390-7635	2	
Conveyor Spray Bar	PM620, PM622, PM820, PM822, PM825	Spray Bar	629-9597	1	568-0080
		Nozzle	478-2767	2	
		Clamp	390-7635	2	
Water Pump and Filters	PM620, PM622, PM820, PM822, PM825	Water Pump	542-1233	1	595-6620
		Water Filter	490-5490	1	
		Water Filter	563-3119	1	
		Screen	390-7765	1	
Chamber Spray Bar	PM310	Spray Bar	524-3063	2	381-6667
		Nozzle	478-2767	10	
		Clamp	390-7635	10	
	PM312	Spray Bar	524-3064	2	381-6672
		Nozzle	478-2767	12	
		Clamp	390-7635	12	
	PM313	Spray Bar	524-3065	1	381-6677
		Spray Bar	524-3063	1	
		Nozzle	478-2767	13	
		Clamp	390-7635	13	
	PM620, PM820	Spray Bar	595-2230	1	381-6672
		Nozzle	478-2767	18	
		Clamp	478-2766	18	
	PM622, PM822	Spray Bar	595-2241	1	381-6672
		Nozzle	478-2767	20	
		Clamp	478-2766	20	
	PM825	Spray Bar	595-2274	1	381-6672
		Nozzle	478-2767	22	
		Clamp	478-2766	22	



GRADE CONTROL

PRECISE AND REPEATABLE CUTTING RESULTS

The integrated Cat Grade and Slope system for cold planers takes the guesswork out of producing accurate and repeatable cutting results. Contacting (side plate or inboard ski) and non-contacting (sonic) sensors provide multiple grade references for milling accuracy. Consoles can be installed at the operator station and on either side or rear of the machine for ground level access (locations vary by model).





1. SONIC SENSORS Optional sonic sensors can be mounted on the side of the machine for grade control reference.



2. INBOARD SKI SYSTEM Optional inboard ski can be used as an additional reference point for the grade control system.




3. DISPLAYS Touchscreen displays can be mounted on the side or back of the machine or in the operator station to operate the grade control system (locations vary by model).



4. CONTROLLER Cat controller required for operation with the grade control system.

Cat Grade and Slope for cold planers allows milling operators to achieve accurate and repeatable cutting results to provide a smooth base for any project. Contacting (side plate or inboard ski) and non-contacting (sonic) sensors provide multiple grade references. Seamlessly swap between multiple grade sensors for uninterrupted accuracy during milling.

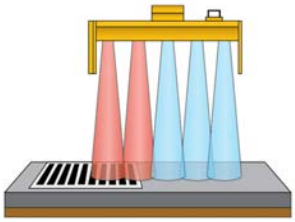

SONIC SENSORS
Sensors have five transducers, discard the high and low readings and use the remaining three for a true average reading



INBOARD SKI
Position-sensing inboard ski cylinder




SIDE PLATES
Position-sensing side plate cylinders

GRADE AND SLOPE SYSTEM

DESCRIPTION	MACHINE MODEL	DETAIL	PART NUMBER	QUANTITY
Sonic Sensors	PM310, PM312, PM313, PM620, PM622, PM820, PM822, PM825	Sonic Sensor	541-2488	2
		Harness	360-6702	2
		Carrying Case	492-8121	1
Inboard Ski System	PM620, PM622, PM820, PM822, PM825	Wear Ski	590-7785	2
		Mounting Plate	590-5067	2
		Cylinder	390-5232	2
Displays	PM310, PM312, PM313, PM620, PM622, PM820, PM822, PM825	Display	387-9468*	1
	PM310, PM312, PM313	Display – Operator Platform	381-7318*	1
Display Harness	PM310, PM312, PM313	Coiled Harness	528-5461	1
	PM620, PM622, PM820, PM822, PM825	Coiled Harness	519-7973	1
Grade and Slope Controller	PM310, PM312, PM313, PM620, PM622, PM820, PM822, PM825	Control	449-2017	1
		Sensor – Internal	433-6936	1


** Available with a miscellaneous sales order (MSO). Please contact your Cat dealer to order.*

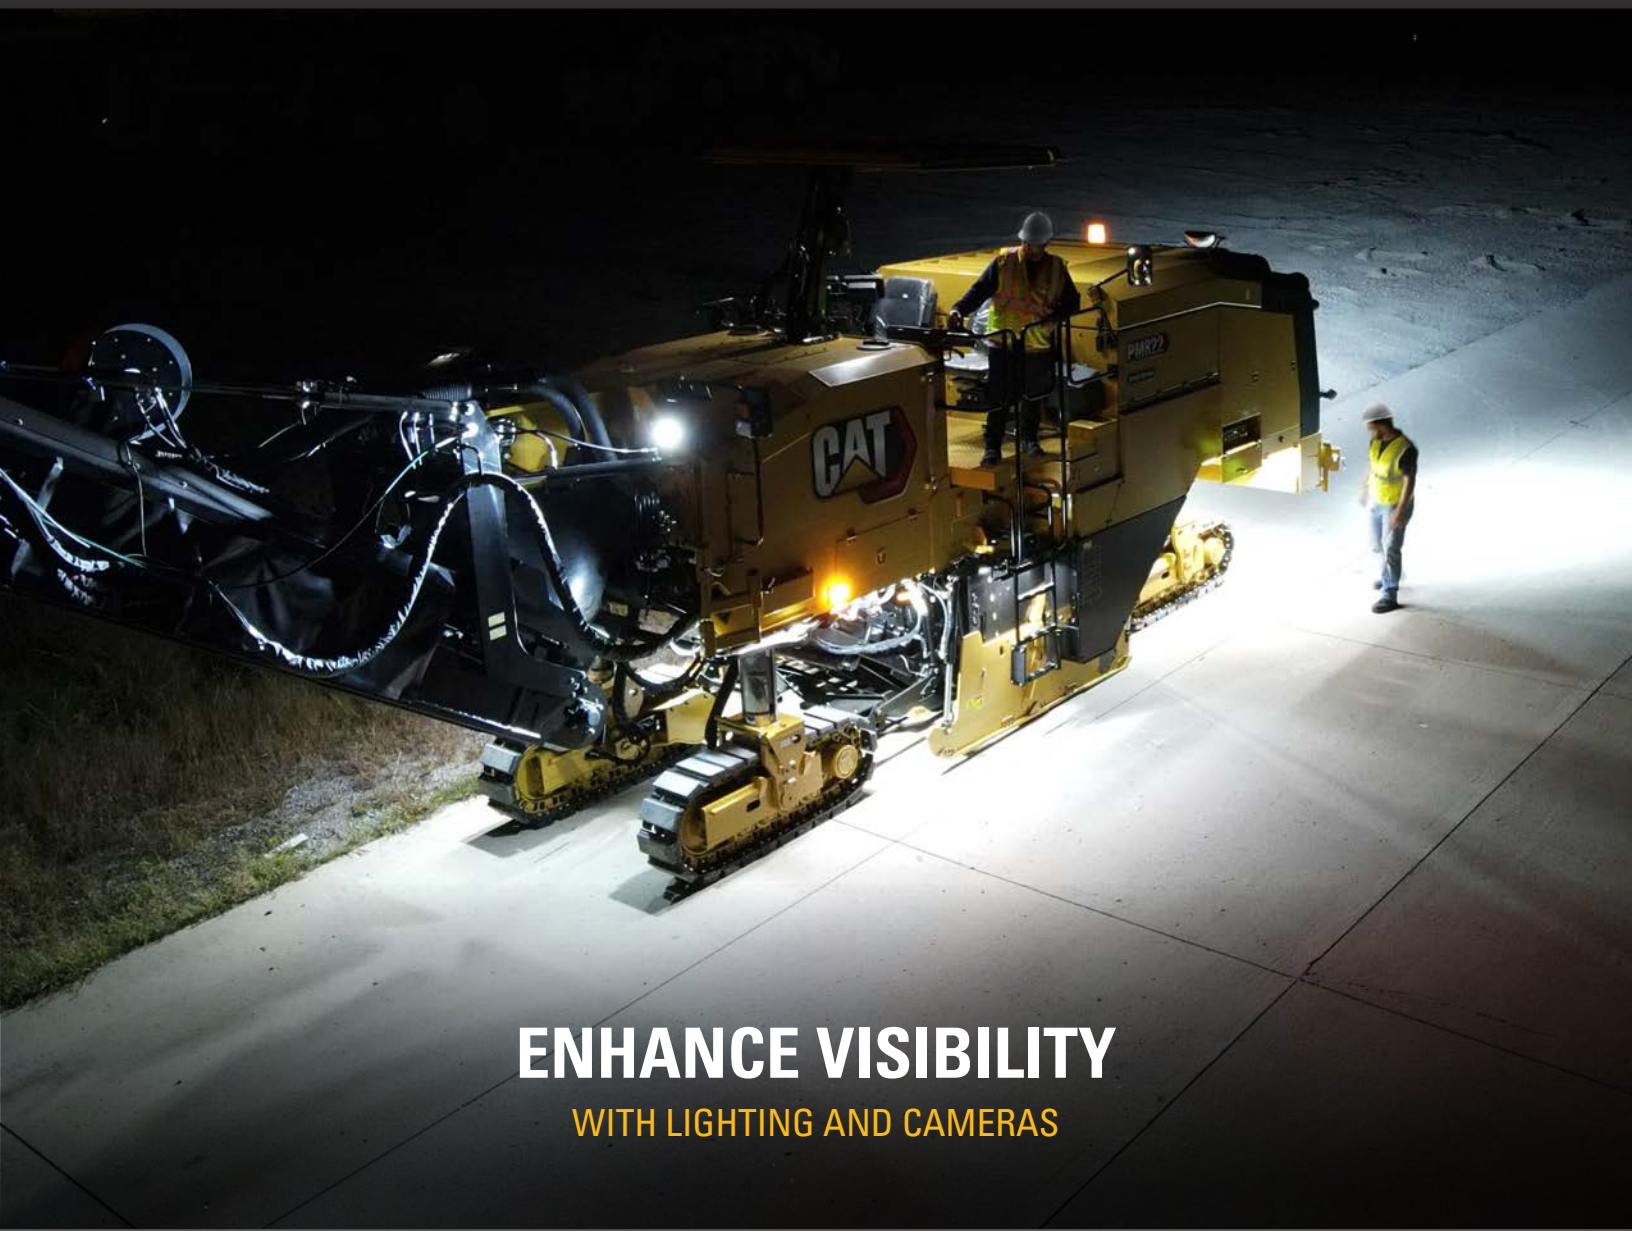


ENHANCE VISIBILITY

WITH LIGHTING AND CAMERAS

Upgrade your Cat cold planer with lighting packages and camera options. Optional remote cameras enhance visibility to the cutting edge and conveyor as well as provide visibility to the rear of the machine. Lighting options are available for replacement or to add to the machine for better illumination around the machine during operation.

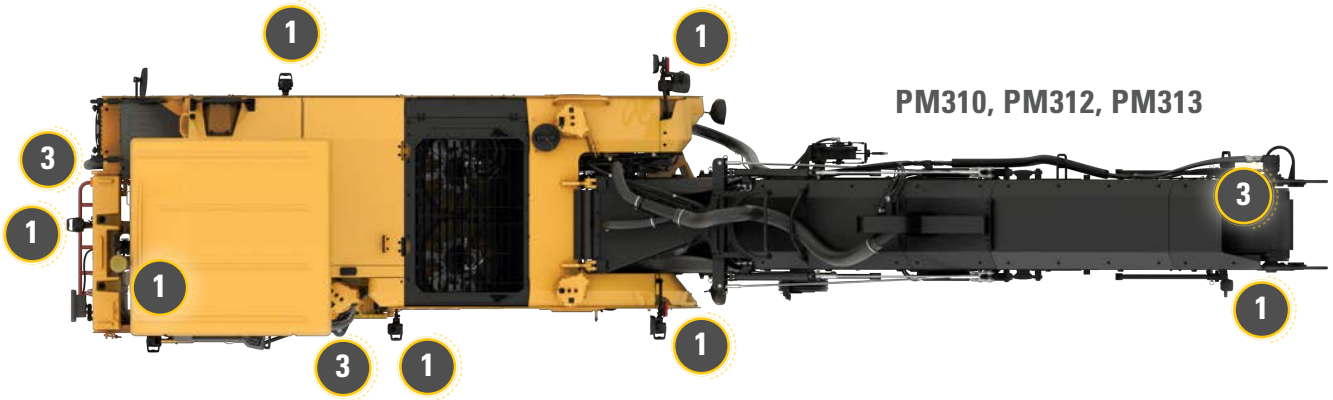

PM310, PM312, PM313

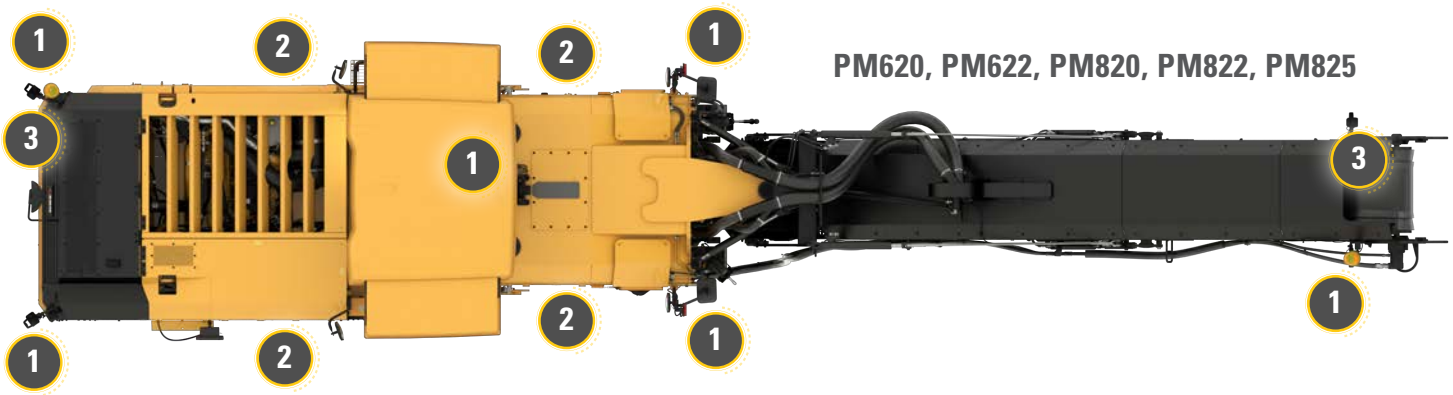

PM620, PM622, PM820, PM822, PM825



1. LIGHTING Various lighting options available to illuminate the machine during operation and maintenance.



2. PERIMETER LIGHTS Optional perimeter lights for additional illumination around the base of the machine. Perimeter lights are not available on all models. **Please check machine PIN plate to identify which models are available with this lighting package.**



3. CAMERAS Improve visibility around the machine. Options and locations vary by machine model.



MIRRORS Attached at various locations around the machine for proper visibility.

LIGHTING

DESCRIPTION	MACHINE MODEL	DETAIL	PART NUMBER	QUANTITY
Hazard Lights	PM310, PM312, PM313, PM620, PM622, PM820, PM822, PM825	Hazard Light – Mounted on Conveyor and Rear	371-2241	2
	PM620, PM622, PM820, PM822, PM825	Hazard Light – Canopy	378-6901	2
Truck Signal Lights	PM310, PM312, PM313, PM620, PM622, PM820, PM822, PM825	Truck Signal Light – Red	334-8049	2
		Truck Signal Light – Green	321-7871	2
Lamps	PM310, PM312, PM313	Right Head Lamp with Signal	344-3455	1
		Left Head Lamp with Signal	344-3456	1
		Rear Signal Lamp	392-4634	2
		Basic Lamp – License Plate	259-0134	1
		Flood Lamp – Magnetic Mount	594-8849	1
		LED Lamp – Pole Mount	594-5646	8
	PM620, PM622, PM820, PM822, PM825	LED Lamp – Pole Mount	560-1697	10
		LED Lamp – Magnetic Mount	594-8849	1
		Halogen Flood Lamp – Bracket Mounted	219-6485	4
		LED Flood Lamp – Bracket Mounted	601-2214	4
		Head Lamp – Front and Rear	579-5750	10
Canopy Lights*	PM620, PM622, PM820, PM822, PM825	LED Canopy Light Bar	579-7213	4
LED Perimeter Lights*		84 cm (33 in) LED Light Bar	568-7859	2
		56 cm (22 in) LED Light Bar	568-7862	3
		43 cm (17 in) LED Light Bar	568-7863	5

** Available on models with a Build Number of 02B and 02C. Build Numbers are listed on the PIN plate of the machine. Please refer to the Introduction portion of this document for more information on locating PIN plates.*

MIRRORS

MACHINE MODEL	DESCRIPTION	PART NUMBER
PM310, PM312, PM313	Front and Rear Mirror	220-4050
PM620, PM622, PM820, PM822, PM825	Front and Operator Platform Mirror	215-4809
	Rear Mirror	471-4223

CAMERAS

MACHINE MODEL	DESCRIPTION	DETAIL	PART NUMBER	QUANTITY
PM310, PM312, PM313	Rear Camera	Camera Group	336-6684	1
		Cable Assembly	283-0658	1
		Camera Bracket	488-5576	1
	Conveyor Camera	Camera Group	336-6684	1
		Cable Assembly	283-0658	2
		Camera Bracket	394-2675	1
	Left Hand Drum Edge Camera	Camera Group	336-6684	1
		Cable Assembly	251-8248	1
		Flood Lamp	576-5030	1
		Bracket	543-0458	1
		Bracket	543-0459	1
	Remote Camera	Camera Group	336-6684	1
		Cable Assembly	283-0657	1
		Harness Assembly	398-1930	1
		Magnetic Bracket	418-0232	1
	Cut Tracking Camera	Camera Group	336-6684	1
		Cable Assembly	283-0657	1
		Bracket	555-7688	1
		Bracket	593-2552	1
PM620, PM622, PM820, PM822, PM825	Rear Camera	Camera Group	336-6684	1
		Camera Bracket	396-9665	1
		Harness Assembly	398-1930	1
	Conveyor Camera	Camera Group	336-6684	1
		Camera Bracket	394-2675	1
		Harness Assembly	398-1930	1
		Cable Assembly	274-4477	1
	Remote Camera	Camera Group	336-6684	1
		Cable Assembly	283-0659	1
		Harness Assembly	398-1930	1
		Magnetic Bracket	418-0232	1



PREVENTATIVE MAINTENANCE

FOR PEAK PERFORMANCE

Regular preventative maintenance to the engine, hydraulics, fuel and rotor systems is key to keeping your equipment running during the milling season. ***Please refer to your Operation and Maintenance Manual for recommended maintenance intervals and procedures.*** The following tables include common filters and components needed to perform regular service on your equipment.

PM310, PM312, PM313
PREVENTATIVE MAINTENANCE

INTERVAL (HOURS)	SUBSYSTEM	DESCRIPTION	SERIAL NUMBER PREFIX	PART NUMBER	QUANTITY
500	Engine	Serpentine Belt	DK9, J63, JHZ, KWA, LJ9, NA9, NJX, NM9, NMA, RH8	374-8493	1
		Advanced Efficiency Engine Oil Filter		1R-1808	1
		Fuel / Water Separator Filter Element	DK9, J63, KWA, LJ9, NA9, NMA, RH8	500-0481	1
			NM9, NJX, JHZ	436-7077	1
	Fuel	Fuel Tank Strainer	DK9, J63, JHZ, KWA, LJ9, NA9, NJX, NM9, NMA, RH8	9P-7121	1
		Secondary Fuel Filter	DK9, J63, JHZ, KWA, LJ9, NA9, NJX, NM9, RH8	500-0480	1
	Rotor	Rotor Drive Belt	DK9, J63, JHZ, KWA, LJ9, NA9, NJX, NM9, NMA, RH8	516-6103	2
		Rotor Turning Device Belt	J63, JHZ, LJ9, NJX, NM9, RH8	566-9871	1
		Rotor Drive Belt with Rotor Turning Device		571-0404	2
1000	Hydraulics	Breather Assembly	DK9, J63, JHZ, KWA, LJ9, NA9, NJX, NM9, NMA, RH8	207-5997	1
		Advanced Efficiency Hydraulic Filter		389-1085	1
		Standard Efficiency Hydraulic Filter		054-1719	1
2000	Fuel	Fuel Tank Cap Filter Kit	DK9, J63, JHZ, KWA, LJ9, NA9, NJX, NM9, NMA, RH8	350-7735	1
3000	Engine	Coolant Temperature Regulator	DK9, J63, JHZ, KWA, LJ9, NA9, NJX, NM9, NMA, RH8	318-0004	1
		Isolation Seal		260-0113	1
5000	Engine	Exhaust Fluid Injector Gasket Assembly	JHZ, NJX, NM9, NMA	418-2073	1
	DEF	DEF Injector Assembly		485-9752	1
		Standard Efficiency DEF Fuel Filter		378-3187	1
		Diesel Particulate Filter Band Clamp	DK9, J63, JHZ, KWA, LJ9, NA9, NJX, NM9, NMA, RH8	346-0335	1
6000	Engine	Cat ELC® Coolant Extender	DK9, J63, JHZ, KWA, LJ9, NA9, NJX, NM9, NMA, RH8	119-5152	1
10000	DEF	DEF Manifold Filter Gasket	JHZ, NJX, NM9, NMA	391-5262	1
		DEF Manifold Filter Assembly	JHZ, NJX, NM9, NMA	506-5818	1
		DEF Manifold High Debris Filter Sock	JHZ, NJX, NM9, NMA	584-8137	1
		Standard Efficiency DEF Fuel Filter	JHZ, NJX, NM9, NMA	584-8137	1
When Required	Engine	Primary Air Filter Element	DK9, J63, JHZ, KWA, LJ9, NA9, NJX, NM9, NMA, RH8	220-0454	1
		Secondary Air Filter Element		142-1403	1

PM620, PM622, PM820, PM822, PM825 PREVENTATIVE MAINTENANCE

INTERVAL (HOURS)	SUBSYSTEM	DESCRIPTION	SERIAL NUMBER PREFIX	PART NUMBER	QUANTITY
500	Engine	Serpentine Belt	3C6, 626, 627, 8RF, AK5, AN8, E8S, EE2, EL6, ESE, FG4, H6S, HN8, JB9, JCF, JFC, LB8, LH9, RL3, SL8, TLZ, TPH, XS6, YLA, YLB, YLC, YLD, YLF	357-2890	1
		Engine Oil Filter Element	3C6, 626, 627, 8RF, AK5, AN8, E8S, EE2, EL6, ESE, FG4, H6S, HN8, LB8, RL3, SL8, TLZ, TPH, XS6, YLA, YLB, YLC, YLD, YLF	500-0483	1
		Fuel / Water Separator Filter Element		436-7077	1
		Advanced Efficiency Engine Oil Filter	JB9, JCF, JFC, LH9	1R-1808	1
	Fuel	Advanced Efficiency Fuel Filter	3C6, 626, 627, 8RF, AK5, AN8, E8S, EE2, EL6, ESE, FG4, H6S, HN8, JB9, JCF, JFC, LB8, LH9, RL3, SL8, TLZ, TPH, XS6, YLA, YLB, YLC, YLD, YLF	1R-0749	1
		Fuel Filter Element	3C6, 626, 627, 8RF, AK5, AN8, E8S, EE2, EL6, ESE, FG4, H6S, HN8, LB8, RL3, SL8, TLZ, TPH, XS6, YLA, YLB, YLC, YLD, YLF	500-0480	1
		Advanced Efficiency Fuel / Water Separator	JB9, JCF, JFC, LH9	326-1643	1
1000	Hydraulics	Advanced Efficiency Hydraulic Filter	3C6, 626, 627, 8RF, AK5, AN8, E8S, EE2, EL6, ESE, FG4, H6S, HN8, JB9, JCF, JFC, LB8, LH9, RL3, SL8, TLZ, TPH, XS6, YLA, YLB, YLC, YLD, YLF	376-1288	1
		Breather Assembly		207-5997	1
		Hydraulic Oil Return Filter		376-1286	1
2000	Engine	Engine Oil Filter Housing Assembly	3C6, 626, 627, 8RF, AK5, AN8, E8S, EE2, EL6, ESE, FG4, H6S, HN8, LB8, RL3, SL8, TLZ, TPH, XS6, YLA, YLB, YLC, YLD, YLF	500-0482	1
	Fuel	Fuel Tank Cap Filter Kit	3C6, 626, 627, 8RF, AK5, AN8, E8S, EE2, EL6, ESE, FG4, H6S, HN8, JB9, JCF, JFC, LB8, LH9, RL3, SL8, TLZ, TPH, XS6, YLA, YLB, YLC, YLD, YLF	350-7735	1
	Hydraulics	Pump Drive Oil Breather		258-2829	1
		Advanced Efficiency Hydraulic Oil Filter		389-1085	1

Continued

PM620, PM622, PM820, PM822, PM825 PREVENTATIVE MAINTENANCE

INTERVAL (HOURS)	SUBSYSTEM	DESCRIPTION	SERIAL NUMBER PREFIX	PART NUMBER	QUANTITY
3000	Engine	Isolation Seal	3C6, 626, 627, 8RF, AK5, AN8, E8S, EE2, EL6, ESE, FG4, H6S, HN8, JB9, JCF, JFC, LB8, LH9, RL3, SL8, TLZ, TPH, XS6, YLA, YLB, YLC, YLD, YLF	242-9537	1
		Water Temperature Regulator Seal		341-1429	1
		Water Temperature Regulator Lip Seal		3S-9643	2
		Coolant Temperature Regulator	3C6, AK5, AN8, E8S, EE2, ESE, FG4, H6S, JB9, JFC, LB8, SL8, TLZ, TPH, XS6	248-5513	2
			626, 627, 8RF, EL6, HN8, JCF, RL3	247-7133	1
5000	Engine	Exhaust Fluid Injector Gasket	E8S, EE2, FG4, JB9, JFC, LB8, LH9, TPH, XS6	418-2073	1
	DEF	Standard Efficiency DEF Fuel Filter		378-3187	1
		DEF Injector Assembly		485-9752	1
		DEF Filter Clamp		371-1871	1
6000	Engine	Cat ELC Coolant Extender	3C6, 626, 627, 8RF, AK5, AN8, E8S, EE2, EL6, ESE, FG4, H6S, HN8, JB9, JCF, JFC, LB8, LH9, RL3, SL8, TLZ, TPH, XS6, YLA, YLB, YLC, YLD, YLF	119-5152	2
		Coolant Conditioner Test Kit		4C-9301	1
10000	DEF	DEF Manifold Gasket	E8S, EE2, FG4, JB9, JFC, LB8, LH9, TPH, XS6	391-5262	1
		DEF Manifold Filter Assembly		506-5818	1
		DEF Manifold High Debris Filter Sock		584-8142	1
		Standard Efficiency DEF Fuel Filter		584-8137	1



VISIONLINK™

ASSET MONITORING AND FLEET MANAGEMENT

VisionLink™ provides actionable data insights for all assets—regardless of fleet size or equipment manufacturer.* Review equipment data from your desktop or mobile device to maximize uptime and optimize assets. Dashboards provide information such as hours, miles, location, idle time, and fuel utilization. Make informed decisions that lower costs, simplify maintenance, and improve safety and security on your jobsite.

** Data field availability can vary by equipment manufacturer. VisionLink™ subscription required. Availability may vary by region, consult your Cat Dealer for more details.*

VISIONLINK™

EQUIPMENT FEATURES

With tracking of every asset in your fleet, the equipment management features within VisionLink empower you to make informed, data-based decisions to help reduce operating costs.

ENTIRE FLEET VISIBILITY

+ Get actionable data insights for all assets, regardless of make.
+ Manage mixed OEM fleets with a single interface.
+ Diesel, gas and electric equipment.
+ Construction equipment, engines, generators, on- and off-highway trucks.
+ Owned, rented or leased assets.

ASSET TRACKING

+ Track location, operating hours, fuel levels, health issues, and overall utilization.

HELP INCREASE UPTIME

+ Monitor equipment health, fault codes, fluid analysis, and inspection due dates.
+ Reduce unplanned downtime with critical alerts.
+ Order parts and schedule service within the platform.

HELP OPTIMIZE UTILIZATION

+ Manage by projects, groups, or geofences.
+ Set utilization targets and monitor performance.

PRODUCTIVITY FEATURES

FOR PM620, PM622, PM820, PM822, PM825 COLD PLANERS

Productivity features** within VisionLink gathers, analyzes and summarizes detailed data to provide actionable insights into jobsite productivity and equipment utilization.

REPORTING

+ Track how much milling occurs each day (hours and distance)
+ Visualize milled locations, excess travel and machine stops
+ Eliminate the need for manual data gathering

ANALYSIS

+ Evaluate detailed utilization data to better understand productivity
+ Track and eliminate unnecessary fuel burn
+ Compare operations between shifts, machines and projects

ACTION

+ Identify and reduce unnecessary waiting (i.e. start-up, waiting for trucks)
+ Achieve longer, more productive cutting cycles
+ Improve estimating for future projects
+ Optimize profit by increasing efficiency and reducing costs

NOTE: *Cat Payload for determining quantity of material milled is not available for cold planers.*

*** A VisionLink PerformancePro subscription is required to access Productivity features.*

STEPS TO GET STARTED

1 CONTACT YOUR CAT DEALER
To ensure the successful integration of VisionLink, consult with your Cat dealer during the setup process.

2 CONNECT YOUR ASSETS
For new Cat equipment, activate the built-in hardware. For older Cat assets and other OEM brands, install Product Link™ devices or integrate data from existing OEM or third-party telematics providers using APIs.

3 CHOOSE A SUBSCRIPTION
Obtain a VisionLink subscription (per machine). Your Cat Dealer can help determine the best subscription to fit your business needs.

4 IMPLEMENT CHANGE MANAGEMENT
Utilize data-driven insights by educating users on the platforms and implementing change management.