
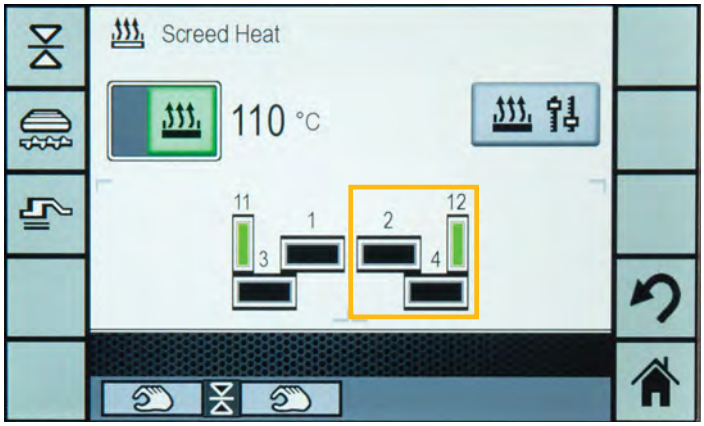


Check the status of the screed heat system while the screed plates are heating. The screed heat screen shows the four standard heating elements—two on the main screed plate and one on each extender screed plate. When equipped, optional end gate heating elements will also be displayed. There are two zones in the display. One zone (shown above) includes the right half of the main screed plate, the right extender screed plate, and the right end gate (if equipped). The other zone includes the comparable left side heating elements, simply touch the zone to display screed plate temperatures.

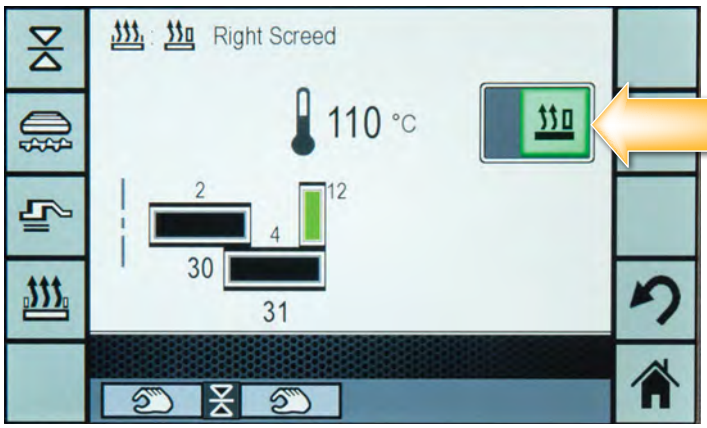

end-gate heat control

The heating elements in the right zones appear. In this view, the optional end-gate and end-gate heat icon have been activated as indicated by the green color. The right half of the main screed and the right extender are still heating, as indicated by the black color. When all the screed plates are green, the preset temperature has been reached. Following is a list of the temperature ranges for each temperature set-point and the coloration shown on the screen.

Set Point	Black	Gray	Green
Low	0–59° C (32-138°F)	60-109° C (140°-228°F)	110° C+ (230°F+)
Medium	0-79° C (32-174°F)	80-129° C (176-264°F)	130° C+ (266°F+)
High	0-109° C (32-228°F)	110-159° C (230-318°F)	160° C+(320°F+)

User Tip: *Many crews, especially those doing commercial work with frequent restarts, leave the generator on and let the screed re-heat automatically. When the temperature of any portion of the screed plates drops below the set-point temperature, that heating element will automatically energize and reheat the screed. The screed operators do not have to remember to heat the screed after picking up the screed and moving, if they leave the system activated.*

The second type of screed heating system uses liquid propane. Before activating the propane heating system, open the valve on the liquid propane cylinder.



To activate the automatic ignition sequence, depress the AUTO / OFF pad **(1)**. The propane burners will begin to ignite. As the burners ignite, the yellow indicators **(2)** illuminate to confirm that heating has started for that portion of the screed plate. If a burner does not ignite, the indicator light will be red. To ignite that burner, depress the number **(3)** of the burner to be ignited. Then, depress the AUTO / OFF pad again. Verify that the yellow ignition indicator light has illuminated.

To change the temperature of any burner, depress the pad **(1)** that corresponds to the number of that burner. The set point temperature for the selected burner shows on the display **(2)**. Depress the UP or DOWN arrows **(3)** until the desired set-point temperature appears in the display. Repeat the sequence for other burners, if needed.



When a portion of the screed plate is close to the set-point temperature, the corresponding green and yellow indicators illuminate. When the set-point temperature has been reached, the yellow indicator goes dark, and the green indicator remains illuminated. When all four green indicators are illuminated, the screed is ready for paving.


As long as the AUTO / OFF control is in the AUTO position, the appropriate burners will reignite when any of the screed plate temperatures drop below the set-point temperatures.

[2. POSITION TOW-ARM CYLINDERS]


With the screed above the starting reference, adjust the height of the tow arms on both sides of the paver. The height of the tow arms affects the line of pull (traction angle) between the tow-arm connection and the pivot point of the screed.

The position of the tow-points is dependent on the paver model and height scale that are adjacent to the tow-arm connection. Always consult the Operation and Maintenance Manual for the paver being used.

In this view, the tow arm is set at the "zero" position. The center, or zero position, is correct for laying down an asphalt layer up to 7.5 cm (3") thick. This tow-arm position will create a line of pull that is approximately parallel to the grade. When the layer is greater than 7.5 cm (3") thick, raise the tow arm above zero a distance equal to the amount above 7.5 cm (3"). For example, when laying down a layer that is 10 cm (4") thick, position the tow arm 2.5 cm (1") above the zero mark.

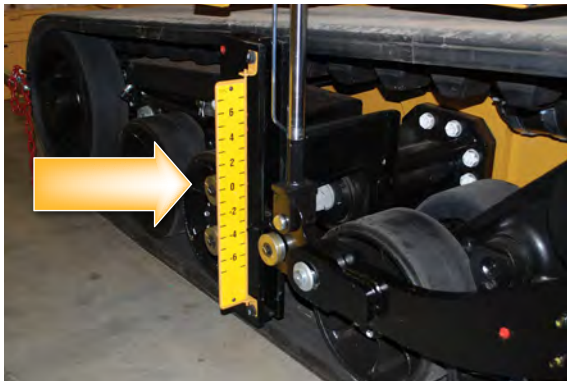

Set the tow-arm position to create the correct line of pull.

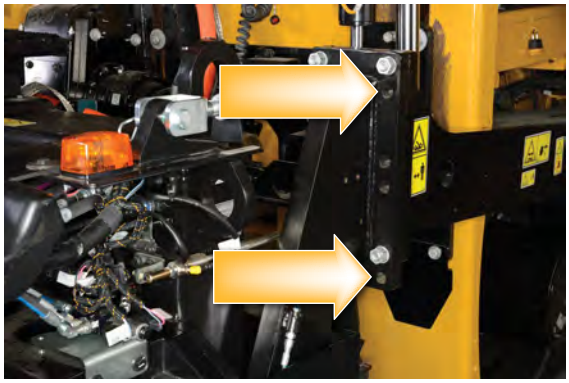

The connection between the tow arm and screed drop arm should be changed for deep-depth paving applications.


When paving 18 cm to 30 cm (7" to 12") deep, Caterpillar recommends changing the connection between the tow arm and the drop arm of the screed. Remove the bolts at the connections on each side. Lower the drop arms and install the bolts in the lower holes of the drop arms. The zero mark on the height scale will now be the correct tow-arm position for paving depths between 18 cm and 23 cm (7" and 9"). Raise the tow arm above the zero mark for paving deeper than 23 cm (9").

User Tip: *The tow-point height scales use metric dimensions. The numbers refer to centimeters. The metric dimensions confuse some crews. Converting the scale to inches may avoid confusion and mistakes.*

[3. SET THE PAVING WIDTH]

With the screed still above the starting reference, set the paving width. When utilizing a fixed width screed, bolt on extensions may be required. Most of the time, the screed will have hydraulic power extenders. Using the scale that is facing the back of the screed, move the extender out the desired amount. It is good practice to have equal extenders on both sides of the screed, whenever possible. For example, if the paving width is 3.6 m (12') and the paver is equipped with a 3 m (10') screed, then bring each extender out 30 cm (1').


For some applications, the extender is used to pave the emergency lane in addition to the driving lane. The emergency lane may have a different slope than the driving lane, and therefore extender widths will be unequal for that application.

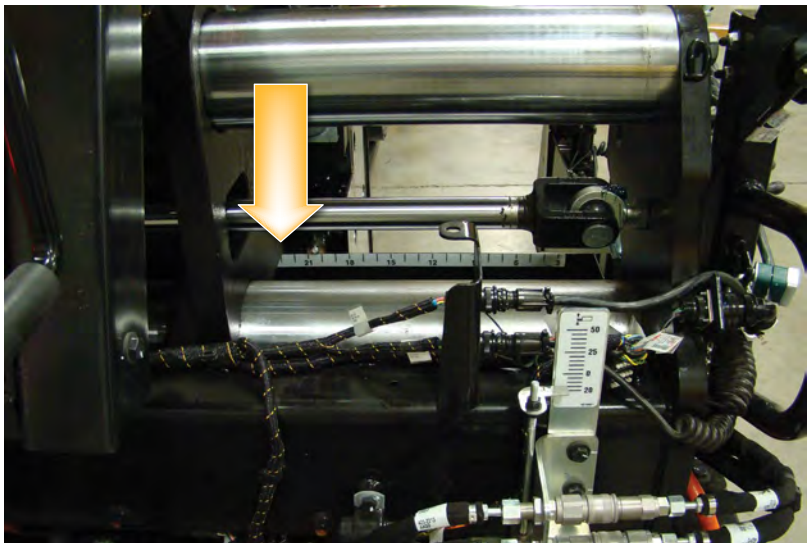

User Tip: *Remember the guidelines for adding auger extensions and mainframe extensions when planning the paving width. Add auger and mainframe extensions when paving with a front-mount screed to keep the end of the auger within 60 cm (2'), or closer, of the end gate. Add auger and mainframe extensions when paving with a rear-mount screed to keep the end of the auger within 1 m (3'), or closer, of the end gate.*

[4. SET MAIN SCREED CROWN]


Next, set the crown of the main screed according to the project specifications. The scale for the main screed crown is in the center of the screed. Use the power crown switch to adjust the crown. Most of the time, the crown should be set at zero. In other words, the screed is flat. A positive or negative crown can be created. The crown scale shows percent of slope from the center of the screed.

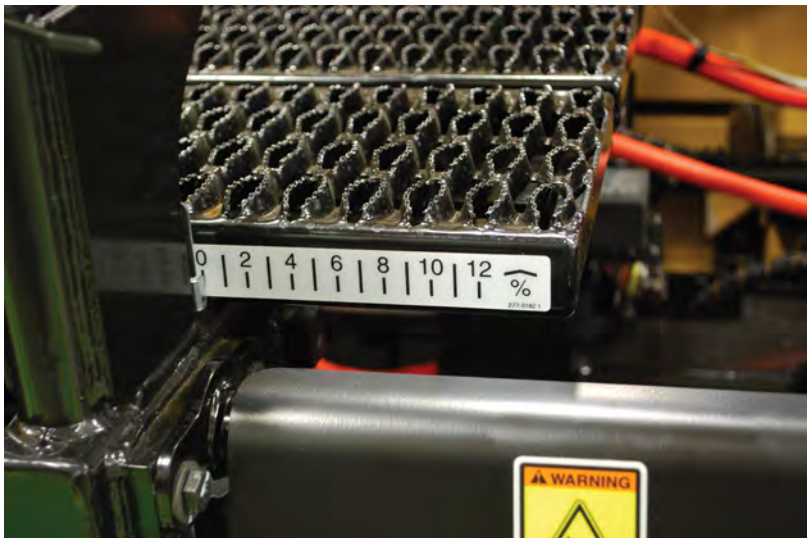

User Tip: *Caterpillar recommends verifying the accuracy of all scales on the screed. To set the crown scale, raise the screed and lock it in the raised position. Use a string or straight edge to verify that there is no crown in the screed. Use the crown switch if necessary to flatten the screed. Then, check the crown scale. Move the indicator to point at zero if necessary. The crew should not have to "string the screed" at the beginning of every shift, if they periodically check the accuracy of the crown scale.*

[5. SET EXTENDER HEIGHT]

Screed extenders have power height adjustments. Push-buttons for left and right screed extenders are located on the respective screed control boxes. The scales that show extender height are installed near the ends of the extenders.

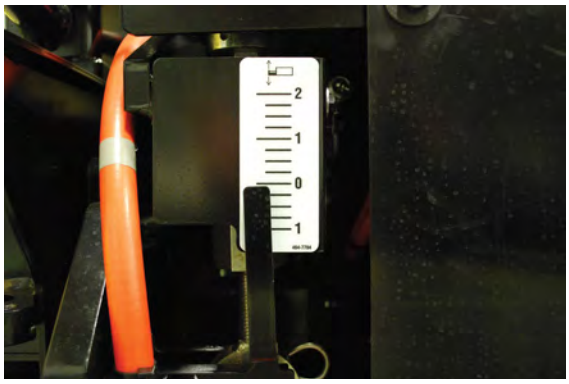

During this step, the screed operators set the height of the extender, so they are in the same plane as the main screed. To create a height match between the main screed and the screed extenders, set the height of the extenders 5 mm (0.2") above zero on the height scale, when paving with rear-mount screeds.

To create a height match between the main screed and the screed extenders, set the height of the extenders 5 mm (0.2") below zero on the height scale, when paving with front-mount screeds.

[6. SET EXTENDER SLOPE]

Screed extenders have power slope adjustments. Push buttons for the slope of the left and right screed extenders are located on the respective screed control boxes. The scales that show extender slope are located on the main screed next to the screed control boxes.




Using the slope scale as a guide, set the slope of the extender. If the plan specifies a flat screed, set the indicator at zero.

User Tip: *The scale may not always be calibrated exactly to the slope of the extender. Always check the slope of the layer directly behind the extender after pulling off the starting reference. Use the slope switch to make adjustments to the slope of the extender, if necessary.*

[7. LOWER THE SCREED ON THE STARTING REFERENCE]

Before lowering the screed, raise the end gates to ensure that the screed, not the end gates, rests on the starting reference. Make sure the starting reference is correct. When using starter boards, use at least two. Position the starter boards directly beneath the depth control screws. In that position, the boards will support both the main screed and the screed extenders. If a screed extender has been pushed out more than half its maximum width, use another starter board to support that extender.

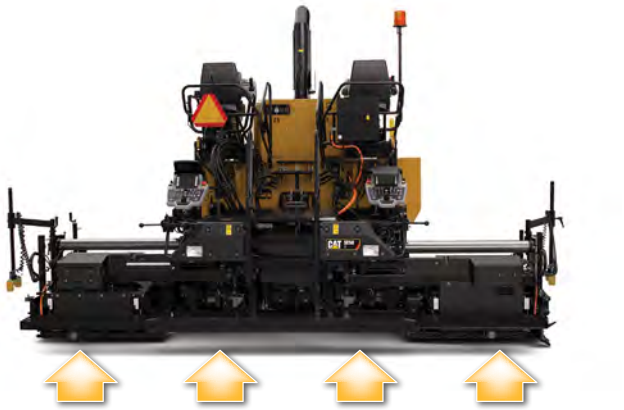


Boards should be placed at the outer edge of the main screed (behind the tractor) and outer edges of the extenders.

Note: *Starter boards must be long enough to support the entire width of the main screed and the screed extender. For example, if both the main screed plate and the screed extenders are 45 cm (18") long, then starter boards that are at least 90 cm (36") long will be needed.*

Lower the screed to the starting reference. Activate screed float. "Float" position.




With the screed resting on the starting reference, move the paver ahead slightly to take the slack out of the tow-arm connection. The roller on the end of the tow arm must be in contact with the tow-point slide assembly before the paver starts to pave. If there is a gap between the tow-arm roller and the slide, the screed will dive off the starting reference.

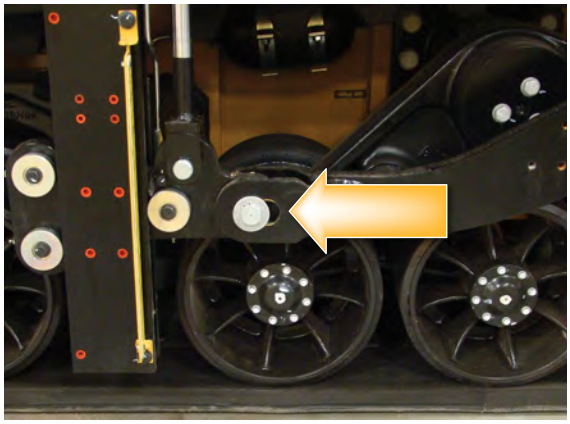

[8. NULL THE SCREED]

Nulling the screed means taking all tension out of the depth-control screws. It is very important that screed operators null the screed one side at a time. For example, start with the left side of the screed. Turn the depth-control screw in either direction until there is no resistance. This is the null position. Next, null the right depth-control screw in the same manner. Return to the left depth-control screw and verify that this screw is still in the null position. Now, the screed is totally "relaxed."

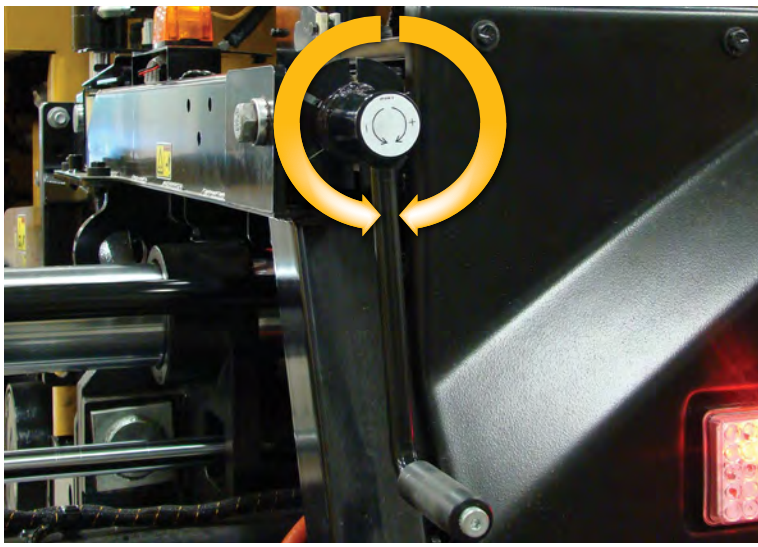

Note: *At this time, the screed should be setting with a slight nose-up angle of attack. Remember, in step five, the extender height was set at 5 mm (0.2") above the main screed for rear-mount screeds and 5 mm (0.2") below the main screed for screeds with front-mount extenders.*

When the rear-mount screed was lowered, the first component to touch the starting reference was the main screed plate due to the extender being 5 mm (0.2") higher. When the screed was nulled, it rocked back around the pivot point to allow the extender to touch the starting point. The nose of the screed assumed the nose-up position at the correct angle. The same result occurs with front mount screeds. In that situation, the extender touched the starting reference first, and the main screed rocks back during the nulling process.


To hold the screed at the correct angle of attack during takeoff, turn each depth-control screw in the direction of "depth increase" until there is resistance in the depth-control screw. In other words, remove all slack from the depth-control screws and create slight tension.

User Tip: *Older screed models required several rotations of the depth-control screws to set the angle of attack. Crews may be accustomed to putting several rotations into the screws. On new Cat Vibratory Screeds, it should not be necessary to utilize these rotations. In fact, the added rotations of the depth-control screws will increase the angle of attack, and make the screed run with too much nose-up attitude. Screed plates will show excessive, premature wear on the trailing edge. The texture of the bituminous layer will be tight and shiny.*

[9. POSITION END GATES]

End gates on both ends of the screed retain material at the proper width. Position the end gates in a manner that is appropriate for the application. Caterpillar recommends that the end gates be lowered, so the end-gate ski floats on the grade when creating unconfined edges. First, lower the end gate until it touches the grade. On manual gates, raise or lower the spring tension to create a 2.5 cm (1") space between the washer and bracket that enables the end gates to move up and down over any grade irregularities. On hydraulic power end gates, lower them to the grade and press the "auto" button or raise them even with the bottom of the extender plate depending on the requirements.


In other situations, the end-gate ski will be positioned at the same height as the screed plate. For example, when creating a height match to an adjacent layer or to an existing gutter, bring the end gate up to the same level as the screed plate.

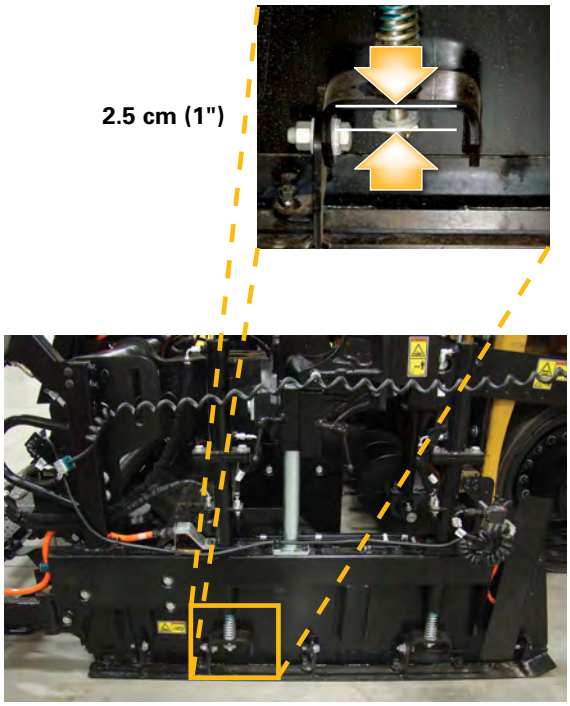

User Tip: *Always perform end-gate maintenance at the end of each shift or more frequently when paving with polymer-modified asphalt cement. The slide area is a narrow opening. Fines and small aggregates can lodge in the slide area. The end gate is difficult to adjust when the slide area is dirty. Clean the slide area between the outer and inner frame members by lowering the end gate all the way and spraying with an approved release agent.*

[10. SET HEIGHT OF AUGERS]

Using the push buttons at the paver operator's stations or at the screed operator's stations, set the height of the augers in relation to the surface of the uncompacted bituminous layer. As a general rule, set the augers so the bottom of the auger segments are 5 cm (2") above the surface of the layer. Increase the gap between the bottom of the augers and the layer to 8 cm (3") when paving with a mix that has aggregates 25 mm (1") or larger. Make final adjustments to auger height at the start of paving. If there is open texture in the layer directly in line with the auger shafts, the augers are too low. Gradually increase the height of the augers until the texture of the bituminous layer is acceptable.

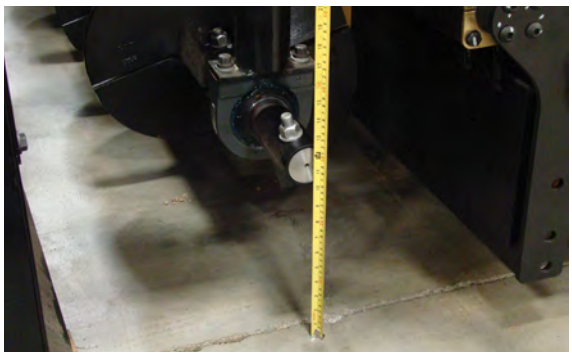

[11. POSITION FEEDER SENSORS]

There are two types of feeder system sensors: mechanical and sonic. Each type should be carefully positioned prior to the start of paving.

To position a mechanical sensor, use a tape measure or folding ruler. Rotate the paddle arm that extends out of the sensor box to a 45-degree angle. Measure back to the last auger segment. The tip of the paddle should be about 45 cm (18") away from the last auger segment. If necessary, slide the sensor on the sensor support arm to the correct position. The tip of the paddle should also be in line with the center of the auger shaft when it is rotated to a 45-degree angle. Adjust the height of the paddle arm until it is even with the center of the auger shaft.



When swung out to a 45-degree angle, the tip of the paddle should be about 45 cm (18") away from the last auger segment.

Aim sonic sensors at the active head of material coming out at the front of the auger chamber. Ideally, this target area should be about 45 cm (18") away from the end of the sonic sensors. They should be aimed perpendicular to the target so the echoes from the sound pulses will reflect back to the sensors.

When using sonic feeder sensors, it may be easier to make the final adjustments and aim the sensors after paving has started. Extend the measuring device out 45 cm (18") along one side of the sensor to show where the sensor is aimed. Reposition the sensor, if necessary.




Sonic feeder sensors should be aimed at the active head of material coming out of the auger chamber.

[12. SET FEEDER SYSTEM CONTROLS]


Before starting to pave, it is important to set the feeder system controls for the operation of the left and right conveyors and the left and right material height dials.

MATERIAL FEED ICON

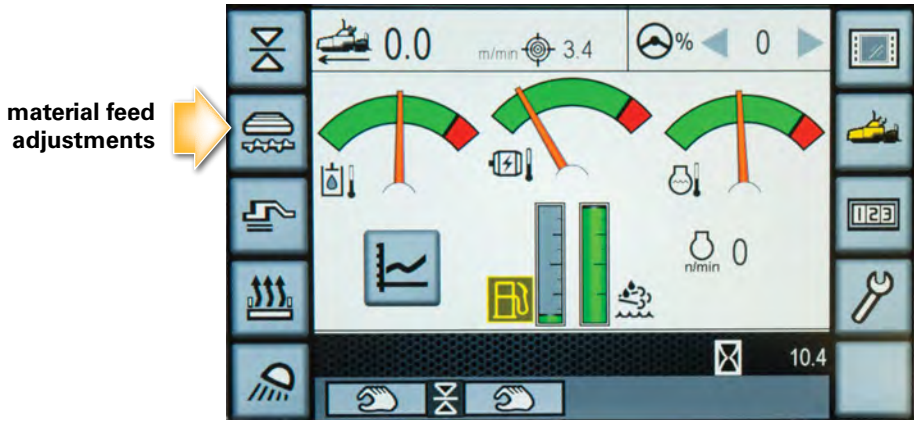

To access the feeder control screen, touch the Material Feed icon that is on the left side of the tractor control panel.

MATERIAL FEED CONTROL SCREEN

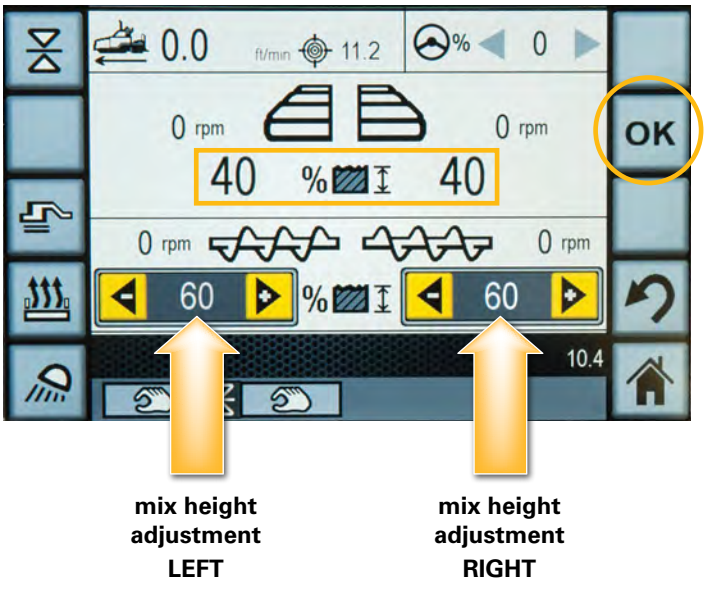

Using the multi-function dial on the control panel, set the conveyor speed to 40 percent for each conveyor. Adjust the mix height to 60 percent using the arrows on the touch screen. After adjusting mix height, push the OK icon on the touchpad to accept the setting. This is a starting point for the feeder system. The tractor operator or screed operator can fine tune these settings when paving begins.

[13. FILL THE AUGER CHAMBER]

Filling the auger chamber to the correct level is extremely important. The most common mistake is overfilling the auger chamber. Remember, the material in the auger chamber is weight, or resistance, felt by the screed. If there is too much resistance, the screed will climb at the takeoff and create a high spot at the transverse starting joint.



Fill the auger chamber in front of the screed until the material covers one half the auger.

Fill the auger chamber one side at a time, alternating between the conveyor and auger. This helps prevent material from being pulled under the machine and overfilling the chambers. The goal is to fill the auger chamber evenly on both sides.

***NOTE:** Do not fill the chamber using the conveyor and auger switches together or by using the feeder override switches located on the screed. This will overfill the chamber and cause a bump on take off.*

Use one manual conveyor switch at a time to move material out until it just touches the auger shaft.

***User Tip:** Always fill the auger chamber with the engine at low idle speed. At low idle, the hydraulic drive for the feeder system operates slowly. It is easier for the operator to control the flow of material on the conveyors back to the auger chamber and across the auger chamber using the left and right augers. The slower conveyor speed minimizes the amount of material that gets pushed under the tractor. Also, slower auger speed minimizes segregation when paving with a mix containing large-size aggregates.*



Then, use the manual auger switch to move material to the end of the screed. The correct head of material covers one half of the augers.

Always fill the auger chamber using the manual mode at low idle and be careful not to overfill.

Overfilling the auger chamber will result in a bump when starting off the transverse joint.

Use a shovel to move material out to the end gates whenever the extenders are moved out more than 30 cm (1') away from the last auger segment or whenever special attachments are added to the end of the screed. Using the auger to force mix out to a wide paving width will create an overload in the center of the auger chamber and the screed will climb during takeoff. Do not fill in the area adjacent to the main screed. This area will be filled in when the paver takes off from the starting reference.





When the auger chamber has been filled to half full—no more, no less—put the conveyors and augers in "AUTO" mode. Either push the automatic conveyor and auger button or press individual automatic buttons for both the conveyor and auger. Verify that all four automatic system indicators are illuminated.

As soon as the propel lever is moved from the Neutral position, the feeder sensors begin to automatically control the operation of the feeder system.


[14. SET ACCESSORY FUNCTIONS]

Caterpillar recommends that final grade and slope control adjustments, if any are required, be made after all the other tractor and screed preparations have been completed. If the crewmembers follow the same steps and the same sequence every time they prepare to pave, they are less likely to make mistakes. They are also more likely to work together and not skip steps.

At this time, the crew can also make adjustments to accessory systems like the screed counterbalance pressure, friction steering and system time delays.



[15. PULL OFF THE STARTING REFERENCE]

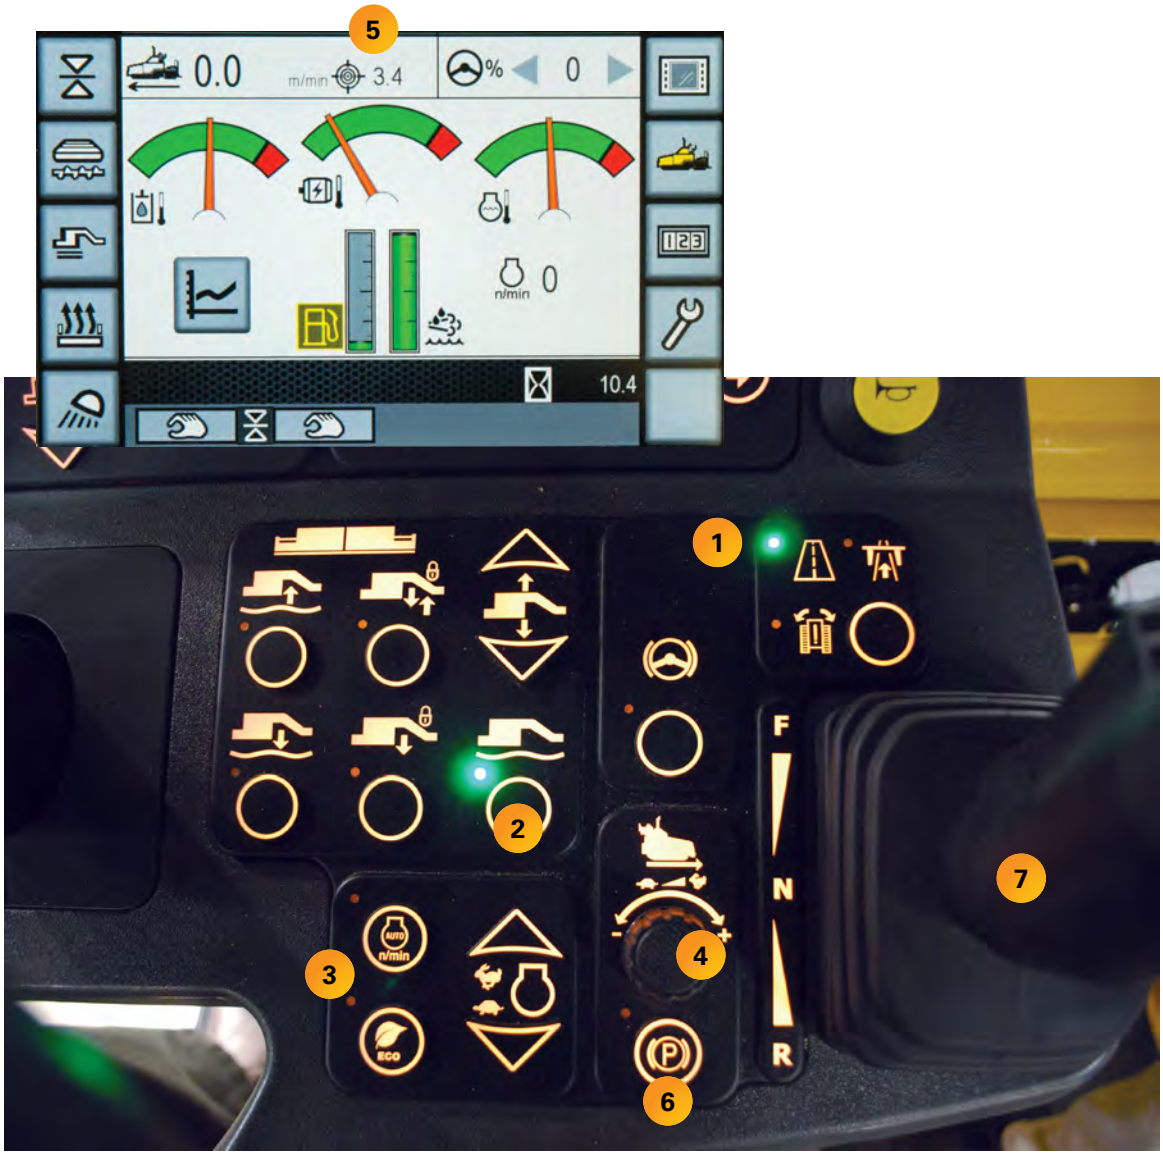

*At this point, the paver is ready to pull off the starting reference. Make sure the gear selector is in the PAVE mode **(1)**, the screed is in float **(2)**, and the engine throttle is set at the chosen speed (ECO or high idle) **(3)**. Then, turn the speed control dial **(4)** clockwise until the calculated paving speed is displayed in the target speed area of the display **(5)**. Release the parking brake **(6)**. Propel the machine by squeezing the trigger and stroking the propel lever **(7)** fully forward in one quick, smooth motion.*

***User Tip:** When the calculated target speed is reached, use the propel lever to stop and start the machine using the same quick, smooth motion as before. Slowly stroking the propel lever will result in a more uneven head of material and have an adverse effect on mat smoothness.*

As the paver reaches the calculated paving speed, the screed operators should check the operation of the feeder system.

The left and right screed operators should be looking to the area at the end of the auger shaft, and in front of the extender. Their primary responsibility at the start of paving is to make sure enough material is coming out of the auger chamber and flowing to the end gate. The screed operators can adjust the mix height dial to set the head of material at the end of the auger shaft and to set the flow of material in front of the extender.



The screed operators' first responsibility is to make sure there is enough material in front of the extenders.

Next, check the material level in the center of the auger chamber. The left or right ratio control dials are used to adjust the head of material. Once the head of material is correct across the full width of the auger chamber, check the auger rotational speed.



The paver operator checks the head of material in the center of the auger chamber.

User Tip: *On newer Cat Pavers, the speed of the left and right augers can be monitored on the LCD display at the screed control boxes. On older pavers without auger speed gauges, the operator can simply monitor the rotation of the auger shafts by watching the rotation of the last auger segment. The last auger segment is a split segment. As the tip of the segment rotates, count how long it takes for one complete revolution. A two-second revolution equals 30 revolutions per minute. Remember, the ideal range for auger speed is 20 to 40 revolutions per minute.*

[16. OPERATIONAL ADJUSTMENTS]

To speed up the auger rotation, turn the ratio control dial counterclockwise. This slows the speed of the affected conveyor and reduces the volume of material in the auger chamber. Hence, the sensor will signal for an increase and the augers will rotate more quickly. To slow the auger rotation, turn the ratio-control dial clockwise.



Once the paving speed has stabilized and the feeder system is operating at a uniform speed with the correct head of material, the screed will be at its equilibrium point. All forces acting on the screed are in balance, and the screed is now floating at a constant level. Check and adjust thickness and slope of the layer. Also check mat appearance. The texture of the surface should be uniform from edge to edge.



Extender height is too high.

Sometimes there may be a slight mismatch between the height of the extenders and the height of the main screed. The difference in height will cause a straight line to appear longitudinally in the surface of the layer. If the line is directly behind the end of the main screed, then the extender is too high. While continuing to pave, hold down the extender-height switch until the line disappears.



Extender height is too low

If the line is directly behind the inside edge of the extender, then the extender is too low. Activate the extender height raise switch until the line disappears.

[SUMMARY]

The proper takeoff from the starting reference sets the tone for the length of the pass. The crew should take the time to implement all 15 steps correctly in the proper sequence.

Two of the steps are particularly important. The first is setting the main screed angle of attack. Be sure the crew knows the characteristics of the screed with which they're working. What they learned on one screed may be different than what is needed on another screed. Remember, the angle of attack that is installed while the screed is setting on the starting reference is the angle of attack the screed returns to for the length of that pass.

Second, fill the auger chamber slowly one side at a time. It is very common for the crew to overfill the auger chamber at the starting point. Always fill the auger chamber with the engine at low idle. It takes a few minutes longer to slowly fill the auger chamber, but it results in smoother transverse joints.

Finally, be sure the crew is paving with a calculated paving speed whenever possible. If the speed changes for some reason, the crew must adjust the feeder system to match the new demand for material.


AP600F
CAT



Unit 5
PREPARING TO PAVE USING TAMPING SCREEDS WITH VIBRATION

Utilization of tamping screeds with vibration requires different take-off techniques. Crews need to be well trained in the processes that apply to these screeds.



Unit 5 describes how to prepare a paver to pull off a starting reference when utilizing a tamper-bar screed. The process for preparing to pave with a vibratory screed is different and is described in Unit 4. Caterpillar recommends using a step-by-step procedure to prepare the paver, one that helps crewmembers work together and includes all steps.

Pulling away from a starting reference can be a frustrating experience for the paving crew.

Sometimes, the screed drops after pulling off the starting reference. Sometimes the screed climbs during the take-off. Sometimes the take-off is perfect. While there is no way to guarantee perfect take-offs every time, the crew can create more predictable results when they follow a logical sequence and stay together.

Note: *Some of the steps described in this unit apply specifically to Cat Pavers. Other steps are general in their application. Always consult the specific instructions in the Operation and Maintenance Manual for the paver that is being used.*


[1. HEAT THE SCREED]

The first step is heating the screed plates prior to pulling off the starting reference. If the screed plates are not close to the temperature of the material passing under the screed, the hot mix will adhere to the bottom of the screed plates. Drag marks will appear in the surface of the bituminous layer, and the screed will dive after pulling off the starting reference.




Before pulling off the starting joint, the crew must heat the screed plates to prevent hot bituminous material from sticking to them.


Several types of screed heating systems are available on Cat Pavers. One is electric screed heat. Start with the screed approximately 25-75 mm (1-3") above the ground. If the screed is at maximum height, wind can affect the performance of the heaters. Also if the screed is on the ground, the ground acts as a heat sink, and it will take longer for the screed to reach temperature.

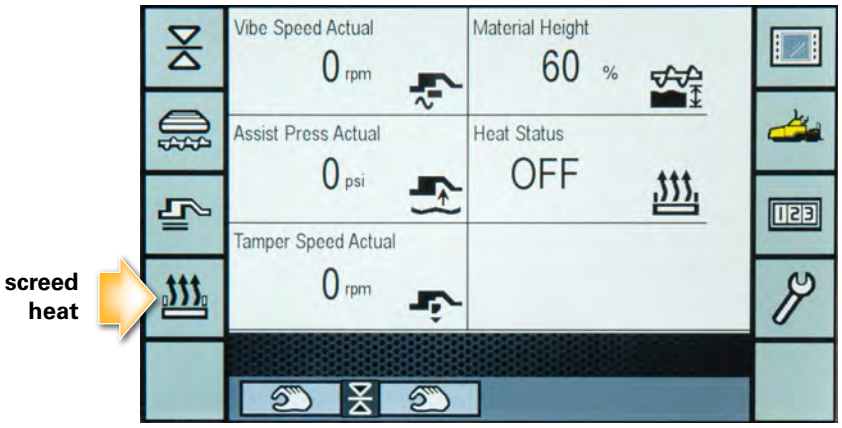


Activate the electric screed-heat system from either the left or right operator station on the tractor or the left or right operator station on the screed. Touch the screed heat icon. Electric screed heat can be activated from any of the four operator station screens.

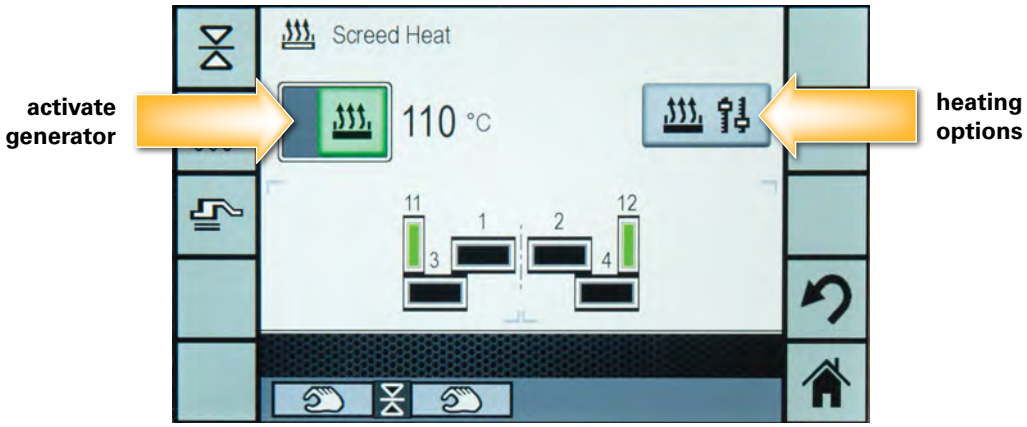

When the screed-heat screen appears, the operator can activate the generator by touching the heat icon and sliding the icon to the right. The icon will illuminate green, the engine speed will increase to 1300 revolutions per minute and the generator will provide power to the screed heat system. The operator can choose the temperature set-point by touching the heating option icon on the right side of the screen.

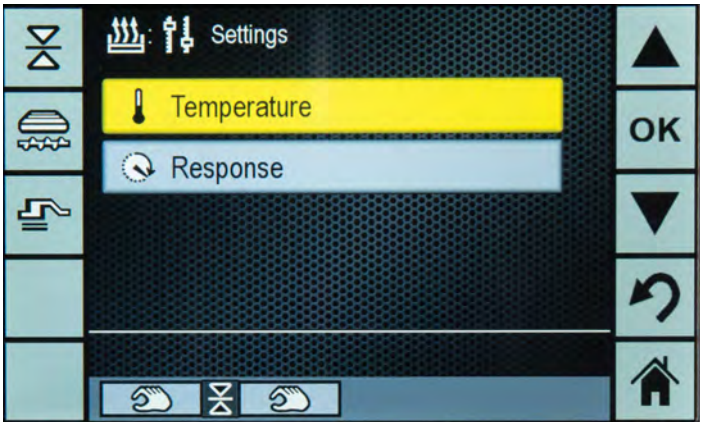


The heating options menu appears next in the display. Select the temperature option.

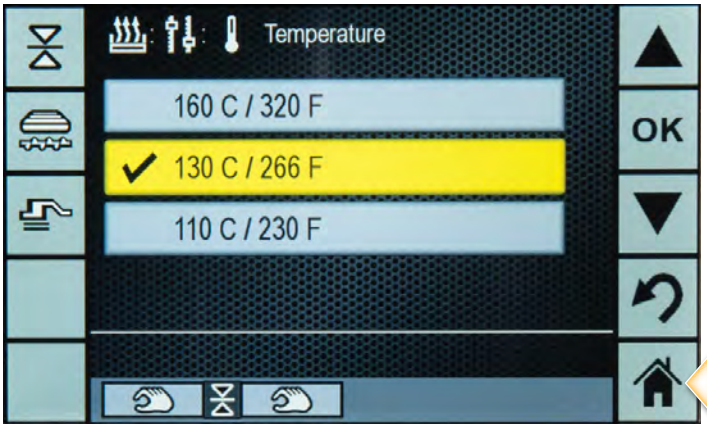


The screen then provides three choices for set-point temperature. Select either low range, where the set-point temperature will be 110° C (230° F); the mid range, where the set-point temperature will be 130° C (266° F); or the high range, where the set-point temperature will be 160° C (320° F). Touch the Home icon (lower right) to return to the normal operating screen and continue preparing the screed to start paving. The screed heat sequence takes 15 to 20 minutes under normal conditions.

View 1

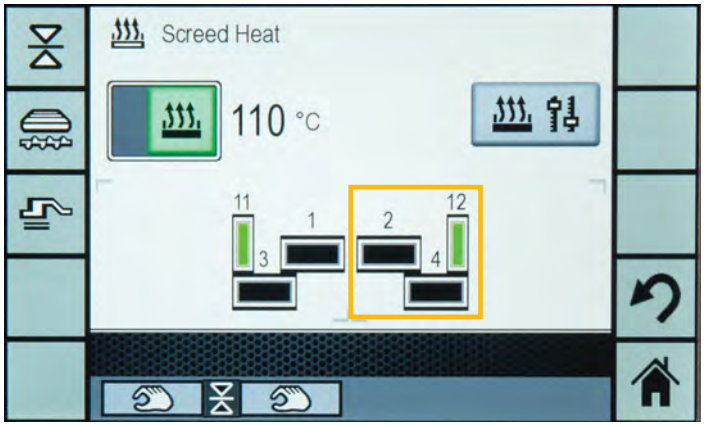


View 2

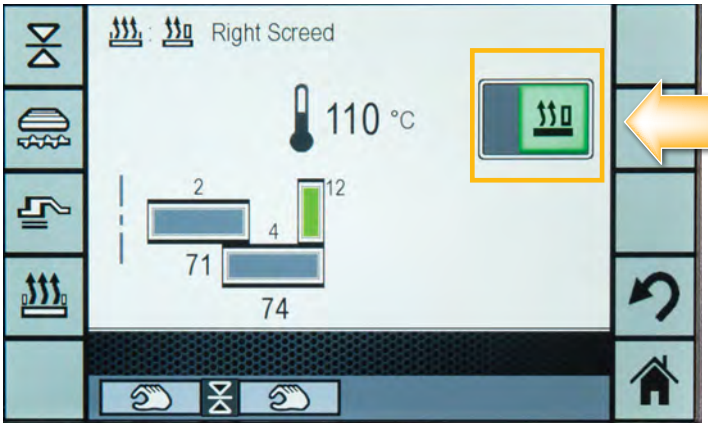

activate end-gate heat

View 3

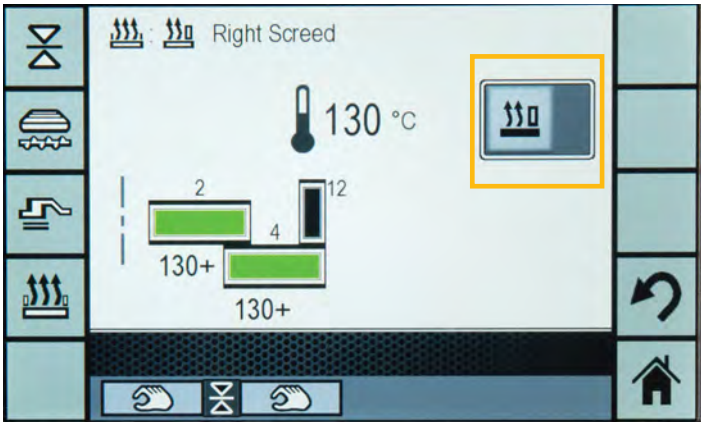

Returning to the Screed Heat screen shows the status of the various heating elements.

Check the status of the screed-heat system by touching the Screed Heat icon at any time.

On Cat extendable-type screeds, each screed frame section has a heating element. There is one for each screed extender and there are two for the main screed. The left and right end-gate skis may also have heating elements.

The heating elements are grouped in two zones. One zone includes the elements in the right end-gate ski, the right screed extender and the right half of the main screed plate. ***(view 1)****. The other zone includes the heating elements in the left end-gate ski, the left screed extender and the left half of the main screed plate. Touch one of the zones to view the status of the heating elements.*


When the optional end-gate heat has been activated, the end-gate heat icon and the end-gate will be green. The screed plates shown here in gray have not yet reached their preset temperature ***(view 2)****. When the end-gate heat has been deactivated, the end-gate heat icon will be gray and the end-gate will be black* ***(view 3)****.*

The various heating elements appear as green, gray or black depending on their current temperatures. The following chart explains what the colors mean for each set point temperature.

Set Point	Black	Gray	Green
Low	0–59° C (32-138°F)	60-109° C (140°-228°F)	110° C+ (230°F+)
Medium	0-79° C (32-174°F)	80-129° C (176-264°F)	130° C+ (266°F+)
High	0-109° C (32-228°F)	110-159° C (230-318°F)	160° C+(320°F+)

The temperature sensors that provide input to the screed heat controller are located along the outer edges of the screed plates. In the infrared image, notice that the edges are slightly cooler than the inner portion. When the set-point temperature is sensed by the temperature sensors around the outer edges, the temperature in most of the screed plate is actually higher.

When the screed plate around any of the heating elements reaches the set-point temperature, the icon for that portion of the screed will turn green. That heating element will de-energize. When all the icons are green, the screed is hot enough to begin paving.

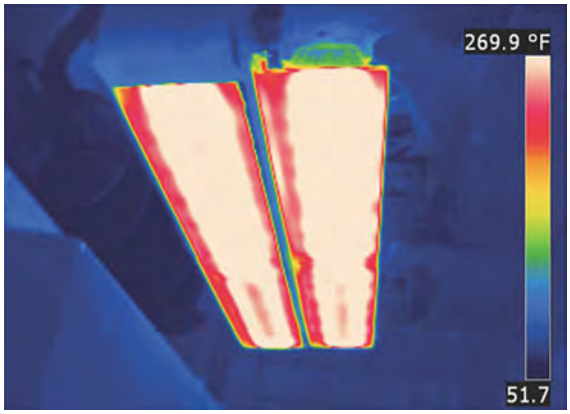

Infrared image of screed plates heating with electric screed heat

User Tip: *Many crews, especially working in urban applications with frequent re-starts, leave the generator on and let the screed re-heat automatically. When the temperature for any portion of the screed plates drops below the set point temperature, that heating element will automatically energize and reheat the screed. The screed operators do not have to remember to heat up the screed after picking up the screed and moving, if they leave the system activated.*

The second type of screed heating system uses liquid propane. Before activating the propane heating system, open the valve on the liquid propane cylinder.

To activate the automatic ignition sequence, depress the AUTO / OFF pad **(1)**. The propane burners will begin to ignite. As the burners ignite, the yellow indicators **(2)** illuminate to confirm that heating has started for that portion of the screed plate. If a burner does not ignite, the indicator light will be red. To ignite that burner, depress the number **(3)** of the burner to be ignited. Then, depress the AUTO / OFF pad again. Verify that the yellow ignition indicator light has illuminated.



To change the temperature of any burner, depress the pad **(1)** that corresponds to the number of that burner. The set point temperature for the selected burner shows on the display **(2)**. Depress the UP or DOWN arrows **(3)** until the desired set-point temperature appears in the display. Repeat the sequence for other burners, if needed.



When a portion of the screed plate is close to the set-point temperature, the corresponding green and yellow indicators illuminate. When the set-point temperature has been reached, the yellow indicator goes dark and the green indicator remains illuminated. When all four green indicators are illuminated, the screed is ready for paving.

As long as the AUTO / OFF control is in the AUTO position, the appropriate burners will reignite if the screed plate temperature drops below the set-point temperature.