
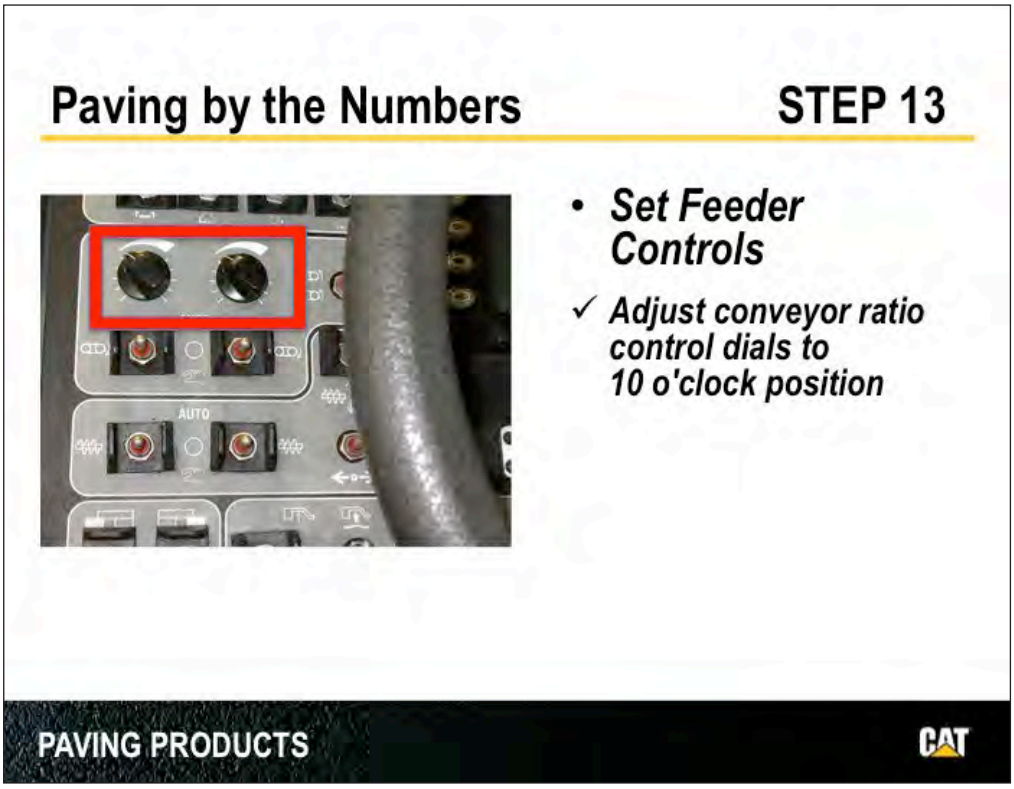


STEP 13 *(Continued)*

The conveyor ratio control dials are located on the left side of the console on the operator's station. Turn the ratio control dials clockwise to about the 10 o'clock position.


You can fine tune these dials when you start paving.

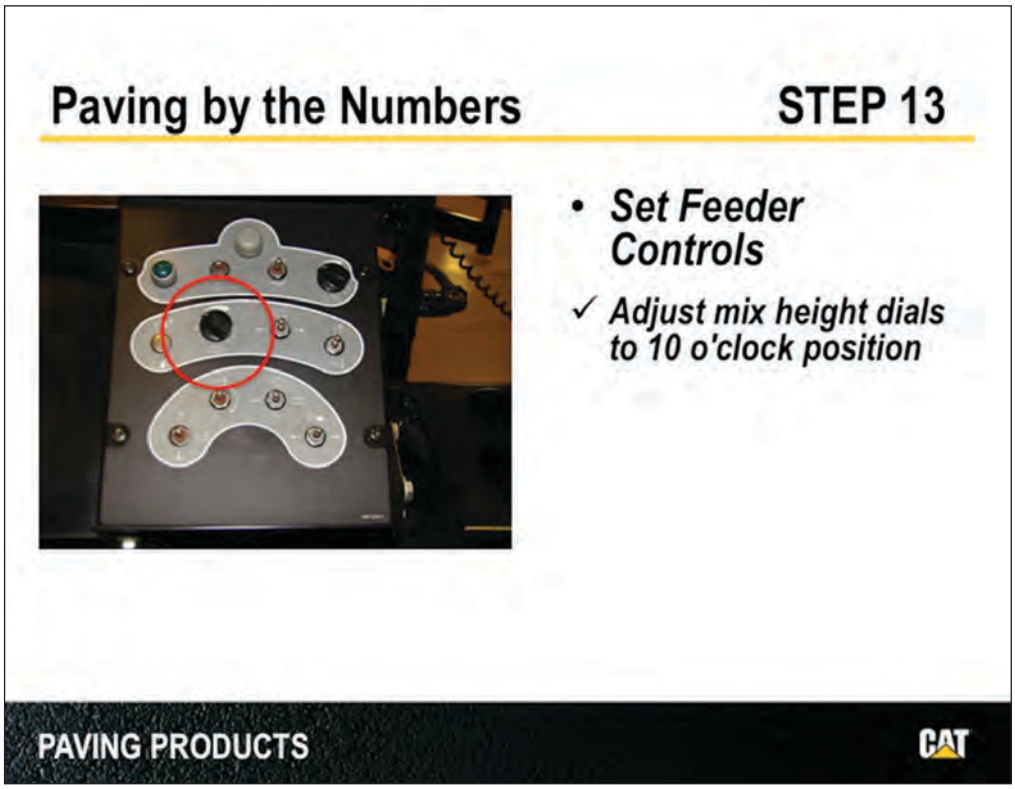

STEP 13 *(Continued)*

Next is adjusting feeder controls. Turn the mix height dials in both screed control boxes to the 10 o’clock position.


You can fine tune these dials when you start paving.

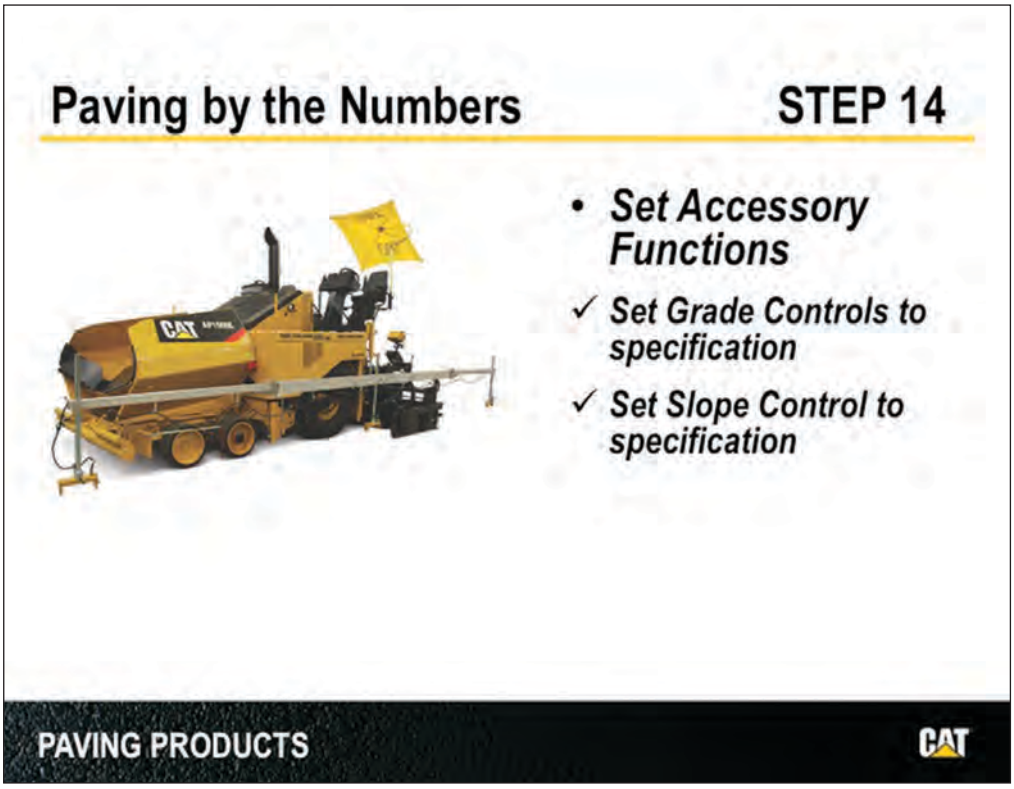

STEP 14


Step 14 is setting the accessory functions of the machine

Set up the automatic grade and slope controls if equipped. Set your system up according to the specifications of the job.

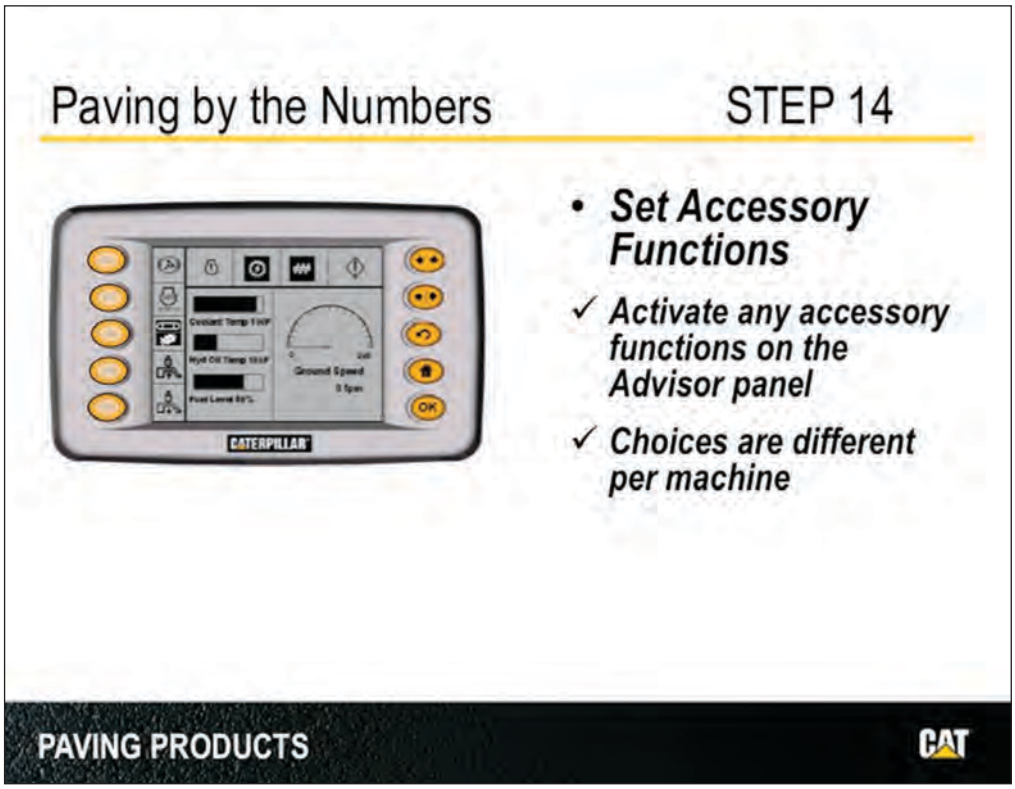


STEP 14 *(Continued)*

Step 14 is also a good time to activate accessory functions for your machine. Machines can have Friction Steering, Automatic Engine Speed Control, Auto Conveyor/Auger Fill, Screed Raise Lock and Screed Lower Lock. These are functions selected with the soft keys on the left of the Advisor panel.

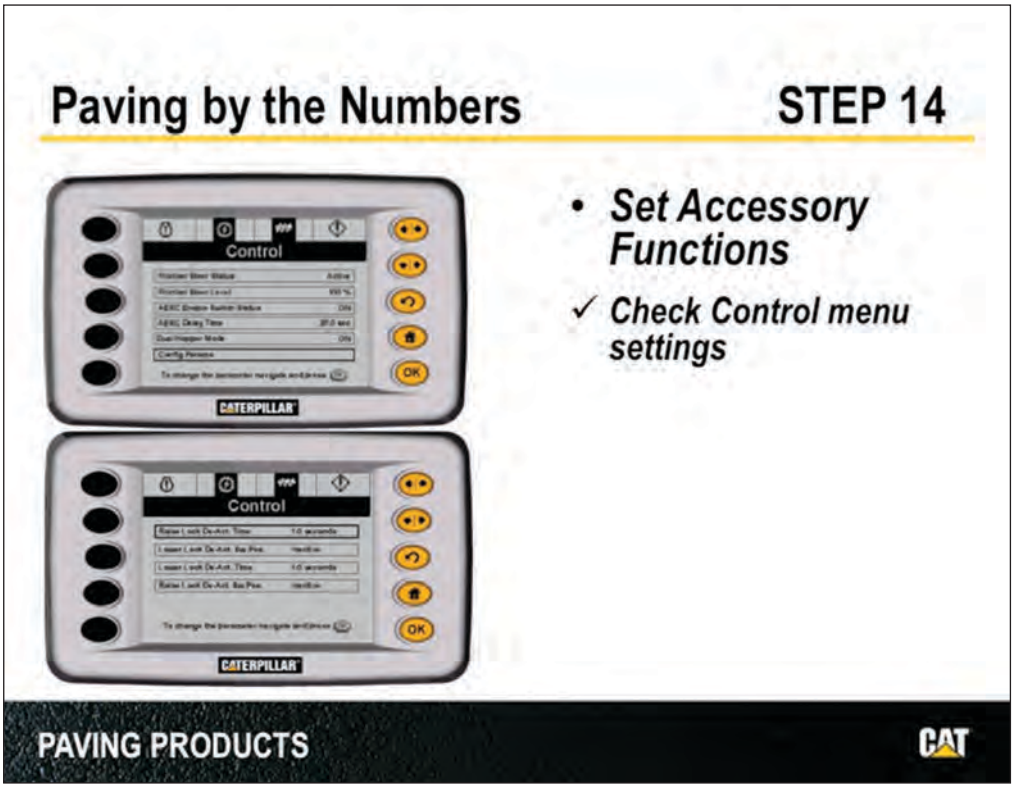


STEP 14 *(Continued)*

Step 14 is also a good time to access the Control Menu in the Advisor panel. From this menu various setting can be activated or de-activated or adjusted.

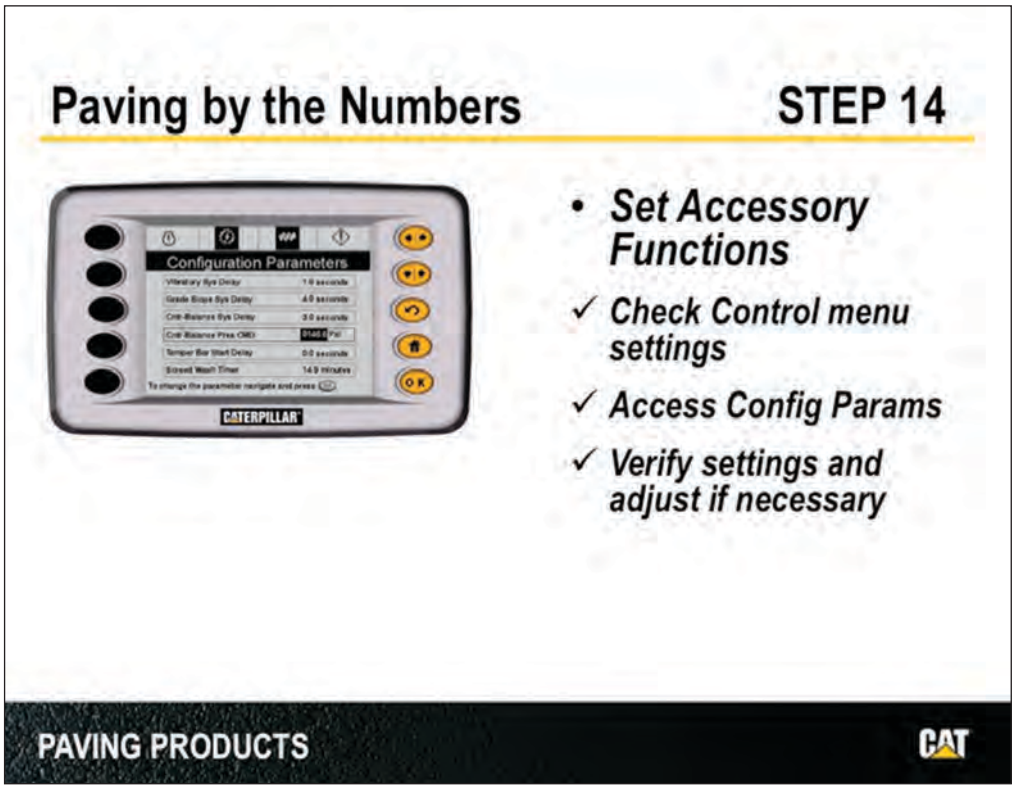

STEP 14 *(Continued)*

Also from the control menu, you can access the "Config Params" to check and adjust the various settings in this menu.

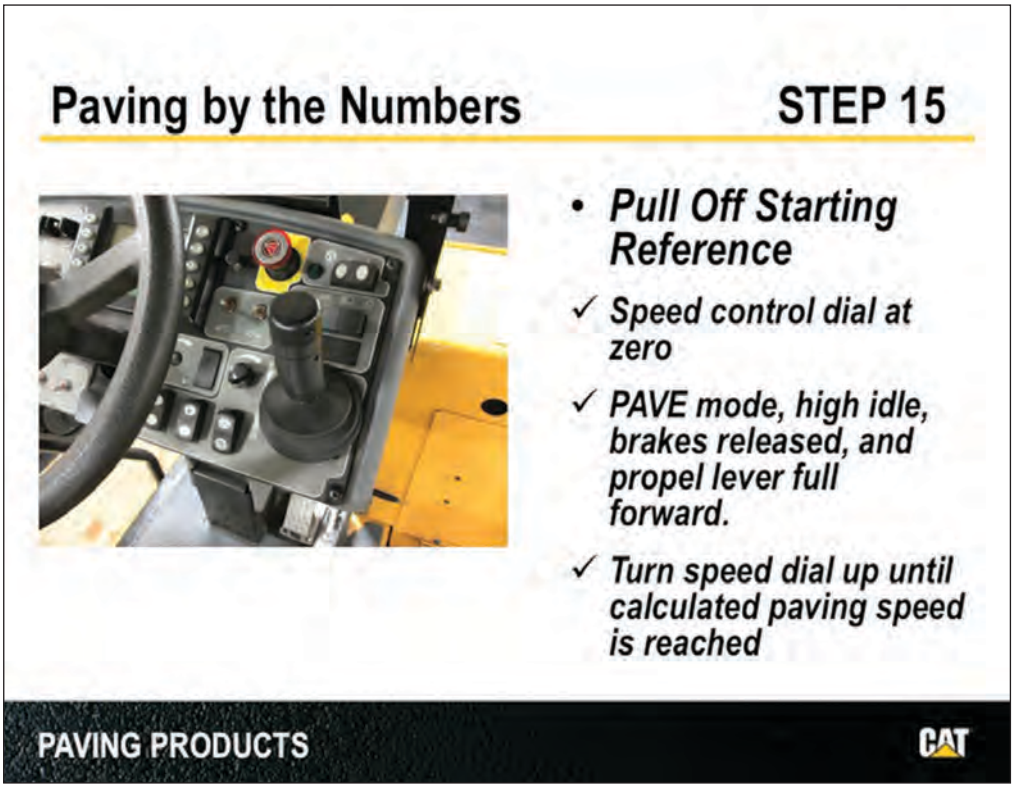

STEP 15


Now we're ready for step 15—pulling off the starting reference.

Start with the speed control dial set at zero—that's fully counterclockwise.

Make sure the gear selector is in the PAVE mode, the engine throttle is set at high idle, the parking brakes are released, and the propel lever is moved all the way forward.

Then, turn the speed control dial clockwise until the calculated paving speed is reached.


NOTE: When calculated speed is reached, use the propel lever to stop and start the machine. This will bring the machine back to the same calculated paving speed after each stop.

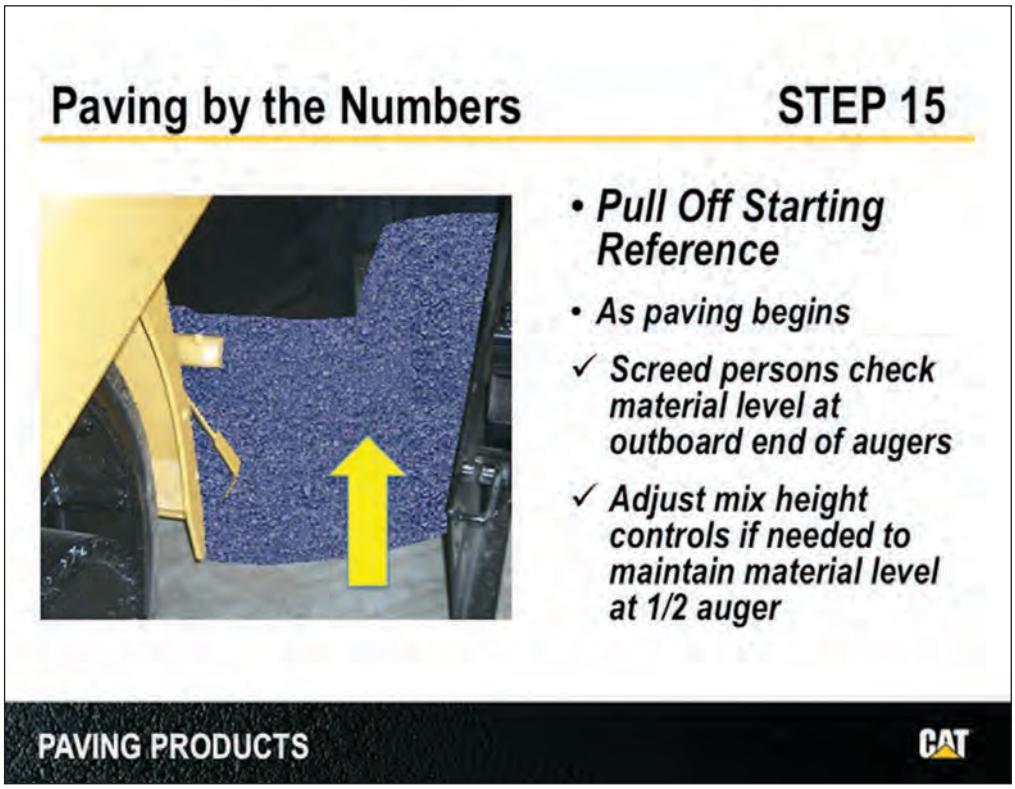

STEP 15 *(Continued)*

Screed personnel observe the level of material at the outboard ends of the auger shafts to see if the auger shafts are one half covered.


There are individual material height dials on the screed control boxes which are adjusted to control the height of material at the outboard ends.

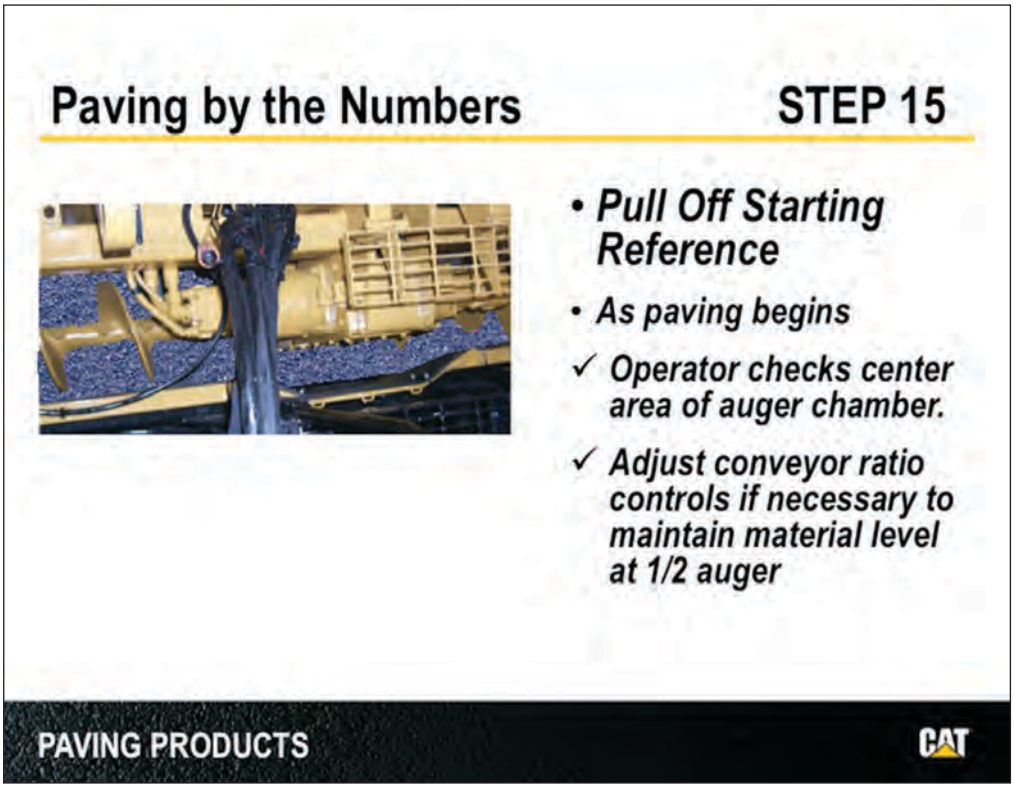

STEP 15 *(Continued)*

As the paver comes up to speed, the operator should look down at the auger chamber. The goal is to maintain the mix level and maintain an auger speed of 20 to 40 rpm.

Use the independent left and right conveyor ratio controls to adjust the auger speed.

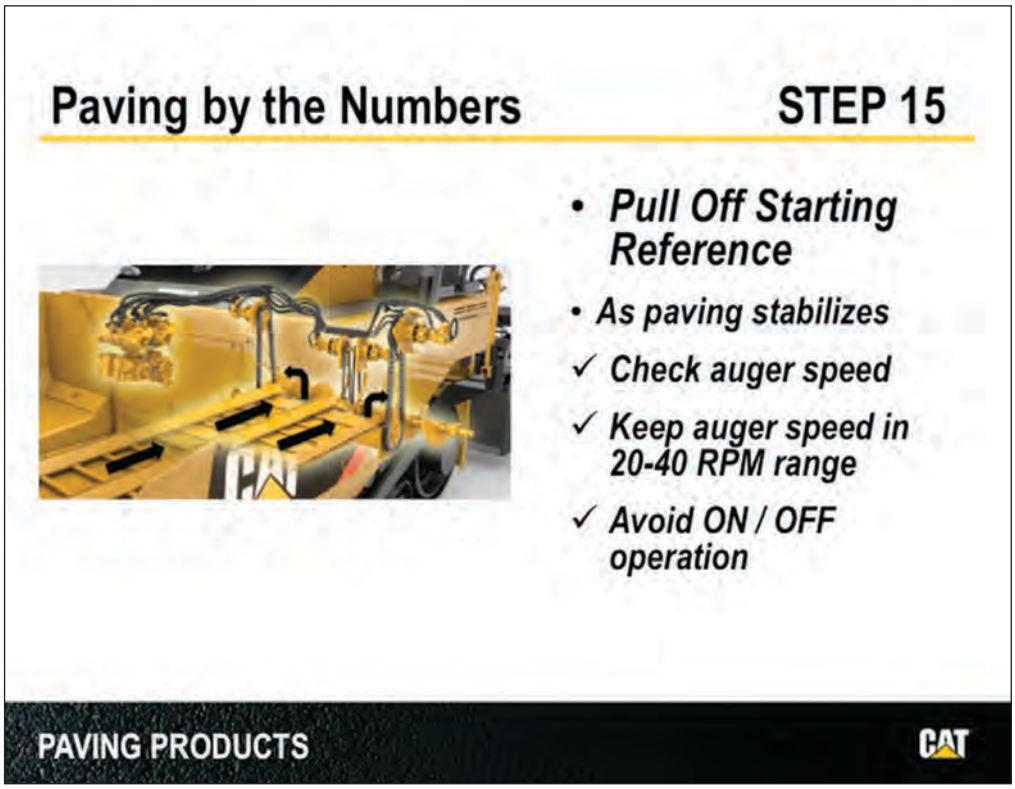


STEP 15 *(Continued)*

As the paving operation stabilizes, the operator should check the speed of auger rotation. The augers should be turning uniformly in the range of 20-40 rpm.

To slow down the augers, the operator turns the ratio control dials clockwise. This action sends more mix to the auger chamber. To increase auger speed, turn the conveyor ratio control dials counterclockwise.


By all means, avoid erratic or ON/OFF operation of the augers. These conditions tend to create material segregation stripes in the mat and loss of smoothness.

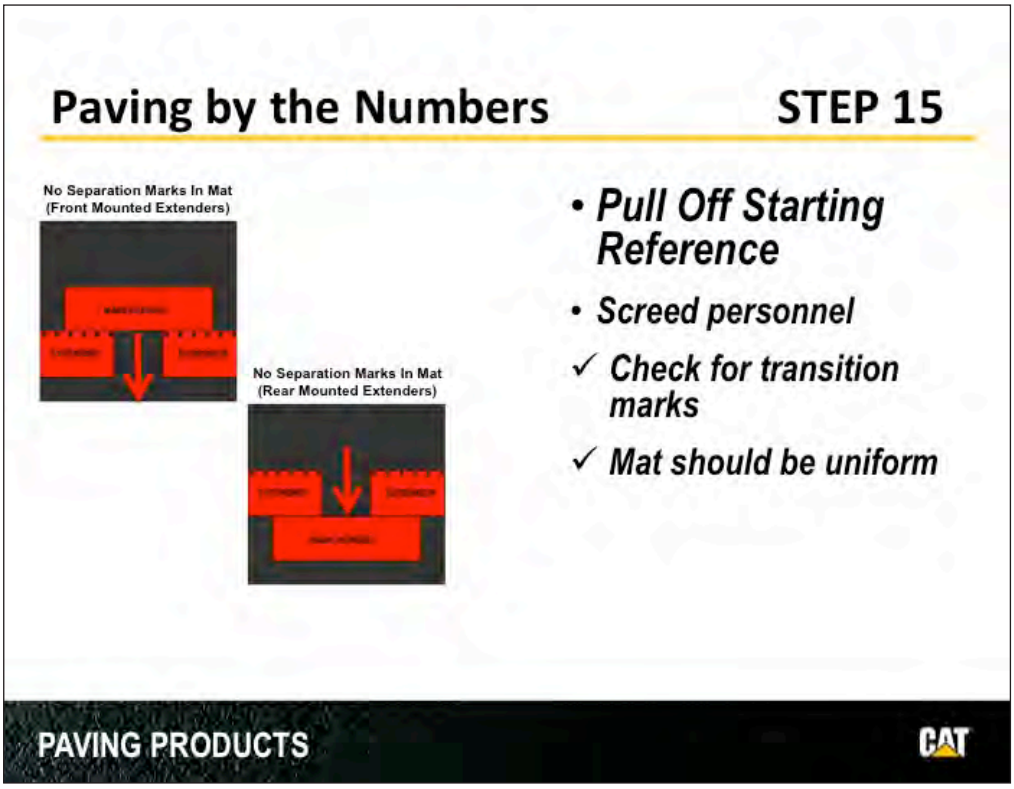

STEP 15 *(Continued)*

As paving speed and feeder system operation are stabilized, screed personnel should look for transition marks between the main screed and screed extenders.


If screed height, angle of attack and slope are correct, the mat should have a uniform texture across the full width of the mat and there should be no longitudinal lines present.

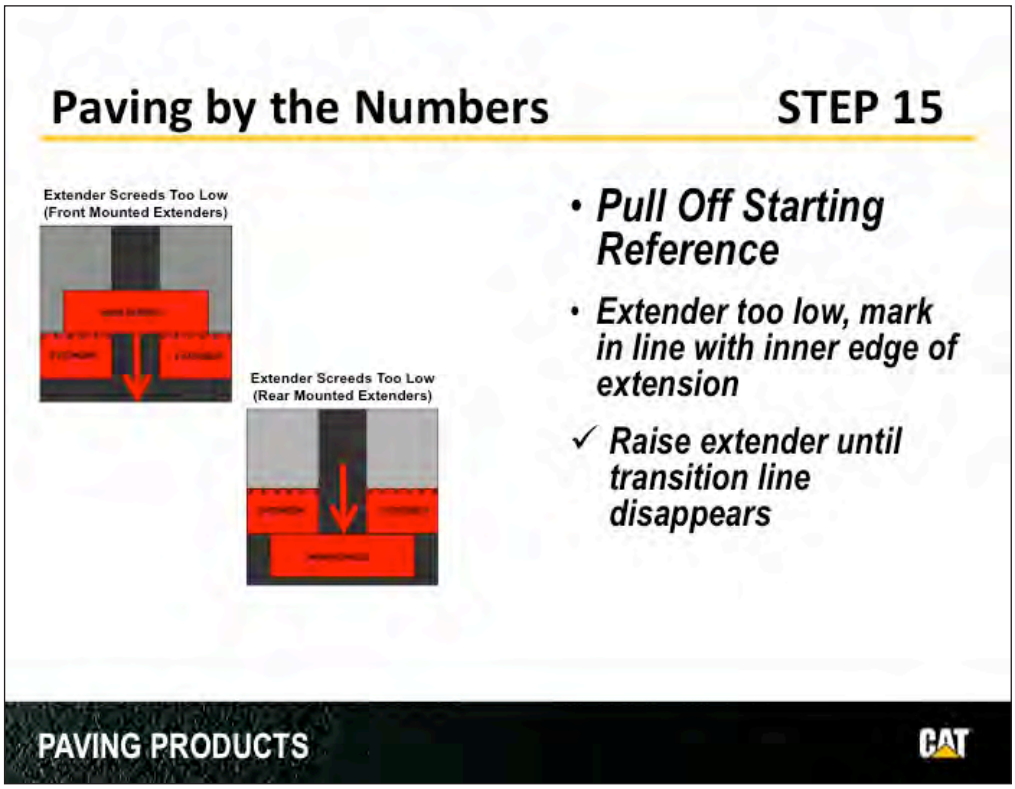

STEP 15 *(Continued)*

If an extender is set too low, there will be a longitudinal transition mark in line with the inner edge of the screed extender. The mat will be thinner behind the screed extender.


Use the extender height switch to raise the extender until no transition mark is present.

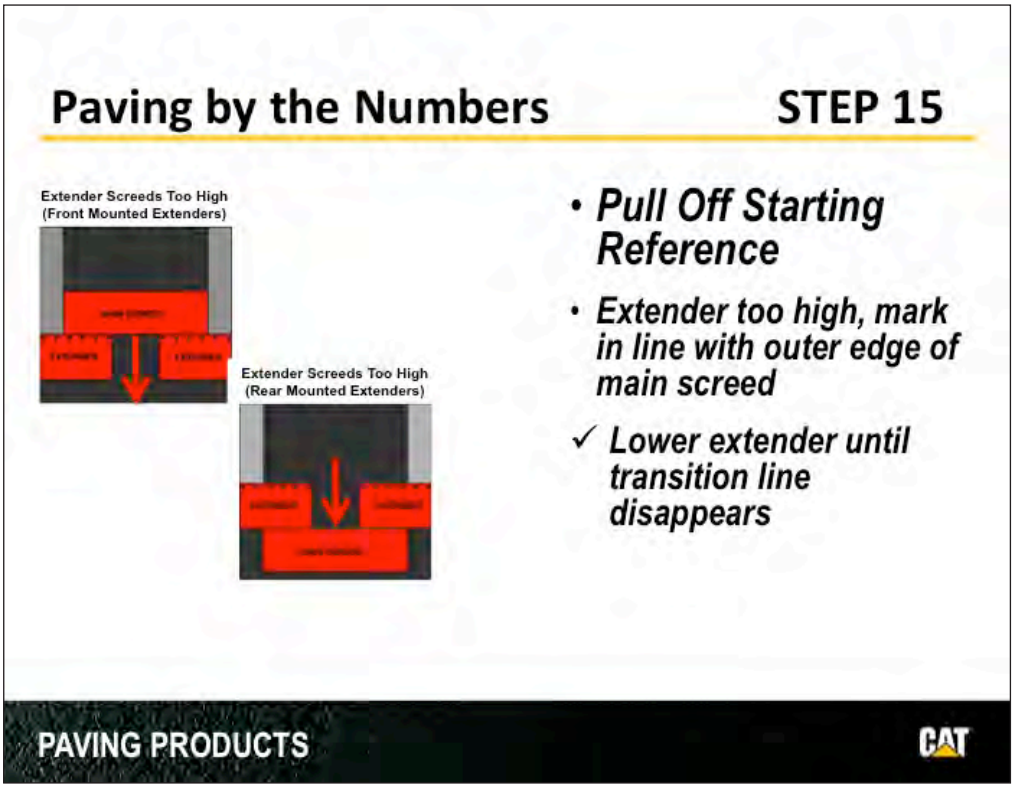

STEP 15 *(Continued)*

If an extender is set too high, there will be a longitudinal transition mark in line with the outer edge of the main screed. The mat will be thicker behind the screed extender.

Use the power height switch to lower the extender until no transition mark is present.

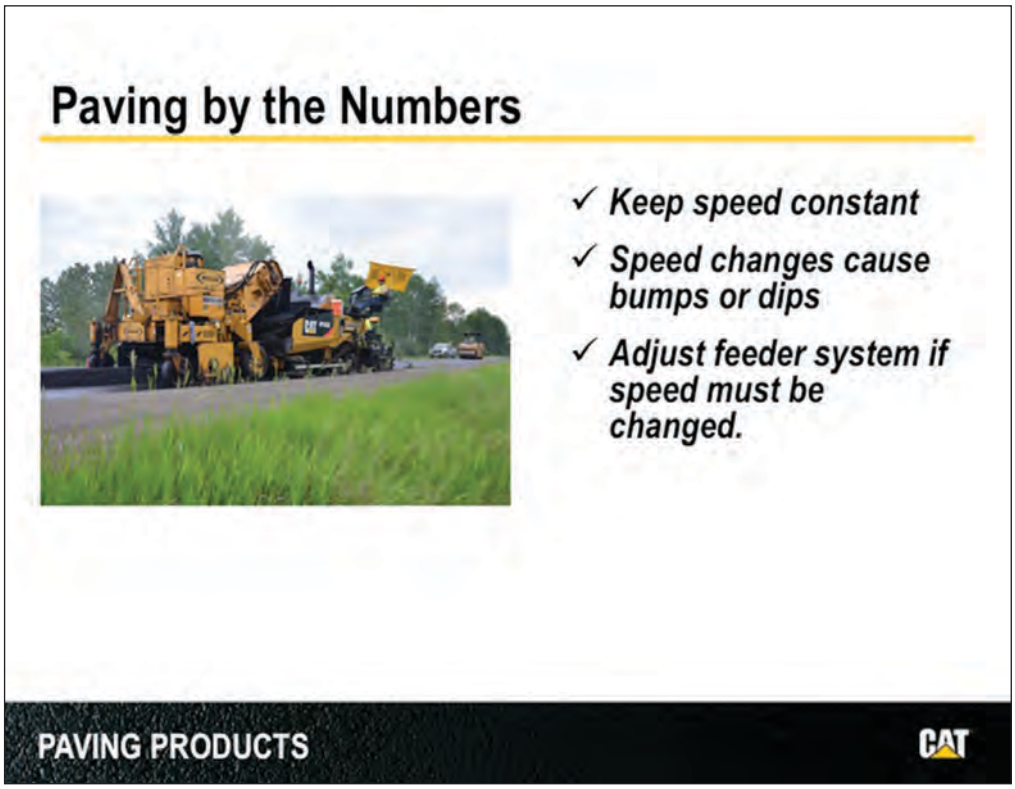

One of the most important fundamentals of smooth paving is maintaining a consistent paving speed.

Normally, you can set up the paver to pave smoothly at any speed that matches the delivery of mix to the job site. The important thing is to keep the speed constant on all systems.

If the paving speed is changed drastically, the screed will either rise or fall and mat smoothness will suffer.

Also, if paving speed changes, the demands on the feeder system change. So the feeder system controls will have to be adjusted to match the new material demands.

For quality paving results, always follow the basic fundamentals of paver set-up and keep the operation consistent.

QEDQ1265-03 (1/2013)
© 2013 Caterpillar
All Rights Reserved.

Materials and specifications are subject to change without notice.
Featured machines in photography may include additional equipment for special applications. CAT, CATERPILLAR, their repective logos, “Caterpillar Yellow” and the POWER EDGE trade dress, as well as corporate and product identity used herein, are trademarks of Caterpillar and may not be used without permission.