

RECLAIMER / STABILIZER PARTS REFERENCE GUIDE

SHOP ONLINE AT **WWW.PARTS.CAT.COM** OR CONTACT YOUR LOCAL CAT DEALER


CAT
RM800
CAT

Introduction **4**
Support **4**
Repair Options 4
Cat Inspect App 4
Genuine Cat® Parts 5
Parts Kits 5
Cat Service Information System (SIS) 5
Locating Serial Numbers and Build Numbers 6
Rotors **7**
Selecting a Rotor 8
Rotor Applications 9
Rotor Options 10
Cutter Bit Offering 17
Bit Service Tools 18
Cutting Chamber **20**
Cutting Chamber Components 22
Rotor Drive System **23**
Rotor Drive Components 26
Spray Systems **27**
Water Spray System 28
Emulsion Spray System 30
Washdown Spray System 32
Spray System Components 33
Upgrades and Accessories **35**
Lighting 38
Mirrors 38
Attachments and Accessories 38
Cameras 39
Preventative Maintenance **40**
RM400 41
RM500, RM500B 42
RM600, RM800 43
Cat VisionLink® **44**

SUPPORT
WHEN YOU NEED IT MOST

When we say we're right there with you, we mean it. We're focused on building relationships that extend well beyond machines. That means sharing our expertise to help you select, finance, operate and maintain equipment and then standing by your side to keep that equipment—and your business—running smoothly.

To learn more, contact your local Cat dealer and your Cat Financial Commercial Account can help with convenient payment plans for any parts and/or service needs. **FIND YOUR DEALER**

FIND YOUR DEALER

REPAIR OPTIONS

Maximize your uptime and minimize overall owning and operating costs by planning an off-season repair and annual replacement of wear parts. Whether you are a Do-it-myself, Do-it-with-me, or a Do-it-for-me customer, your Cat dealer is ready to assist you with parts orders to complete rebuilds of your equipment.

DO-IT-MYSELF – If you prefer to do the work in-house, your Cat dealer can help you determine your parts needs. One of our experts will utilize Caterpillar Service Information, or can perform a (TA1) visual inspection, or (TA2) technical inspection to help you identify your parts replacement needs.

DO-IT-WITH-ME – In addition to providing parts, your Cat dealer can supplement your repair capabilities with fully trained technicians and specialized tooling that your team may not have.

DO-IT-FOR-ME – Your Cat dealer can manage the replacement of vital wear parts or a complete rebuild. Ask your dealer about an inspection and a repair option plan to meet your needs.

CAT® INSPECT APP PROVIDES QUICK AND EASY DIGITAL INSPECTIONS

Cat Inspect allows you to access your equipment data on your mobile device. This easy-to-use app lets you capture inspection data and integrates with your other Cat data systems, so you can keep a close eye on your fleet.

To get access, speak with your Cat dealer today to start using the Cat Inspect App for your equipment inspections.

LEARN MORE
Find out more about the Cat Inspect app

PROTECT YOUR INVESTMENT
WITH GENUINE CAT® PARTS

This guide is designed to provide you with a ***quick reference for key wear and maintenance parts*** and part numbers you need to keep your Cat cold planer operating at peak efficiency. It is not a replacement for the Parts Manual. Always read and understand the machine's Operation and Maintenance Manual prior to performing any type of maintenance.

Proactive preventative maintenance extends the life of your machine and protects your investment. Proper maintenance minimizes the need for repair and replacement. In the event that replacement parts are required, the use of genuine Cat parts helps maximize machine performance and maintains high resale value.

PURCHASE PARTS AND OPERATION AND MAINTENANCE MANUALS W 24/7
http://catpublications.com/

5 REASONS TO USE GENUINE CAT PARTS

1. Cat parts are constructed of top-quality materials, built to exact original specifications by our engineers and rigorously tested to ensure maximum performance.
2. Cat parts are precisely matched to other Cat components for an exact fit to deliver greater reliability, durability and longer life.
3. We maintain the largest inventory of replacement parts in the industry to ensure the best possible availability anywhere in the world.
4. By using only Cat parts you maintain your equipment integrity to maximize its resale value.
5. Cat parts come with a 12-month warranty backed by Caterpillar and supported by dealers around the world.

PARTS KITS

Some models offer parts kits that include all of the parts needed for a specific repair or rebuild in addition to part numbers for the individual pieces with the quantity needed. Paper kits contain a compiled list of the part numbers to order for select repairs, rebuilds or upgrades. For complete replacement parts lists, service, and ordering information by machine sales model, contact your local Cat dealer.

CAT SERVICE INFORMATION SYSTEM (SIS)

Cat Service Information System (SIS) is the electronic service tool that covers all information for Cat products from 1977 to today. With 2 million service graphics, 1.5 million parts numbers, and 44,000 parts/service documents, this tool is the equivalent of over 25,000 books a click away!

WWW.PARTS.CAT.COM
Register and create your SIS account or shop parts online 24/7

LOCATING THE SERIAL NUMBER AND BUILD NUMBER

Knowing the Serial Number and Build Number (if applicable) for your equipment is important for selecting the correct replacement parts, accessories, upgrades, filters and fluids.

If you are uncertain about which parts to order, your Cat dealer is ready to assist with the ordering process.



1. Each machine has a unique PIN number.

2. The Serial Number is the last 8 characters of the PIN number. PIN plate locations are shown below.

3. Some models will have a Build Number. If your machine has one, it is located above the PIN number field. In some cases, parts or upgrades may only apply to machines with a certain build number. If this exception applies, it will be noted on the part number tables in this document.




RM400



RM500, RM500B



RM600, RM800

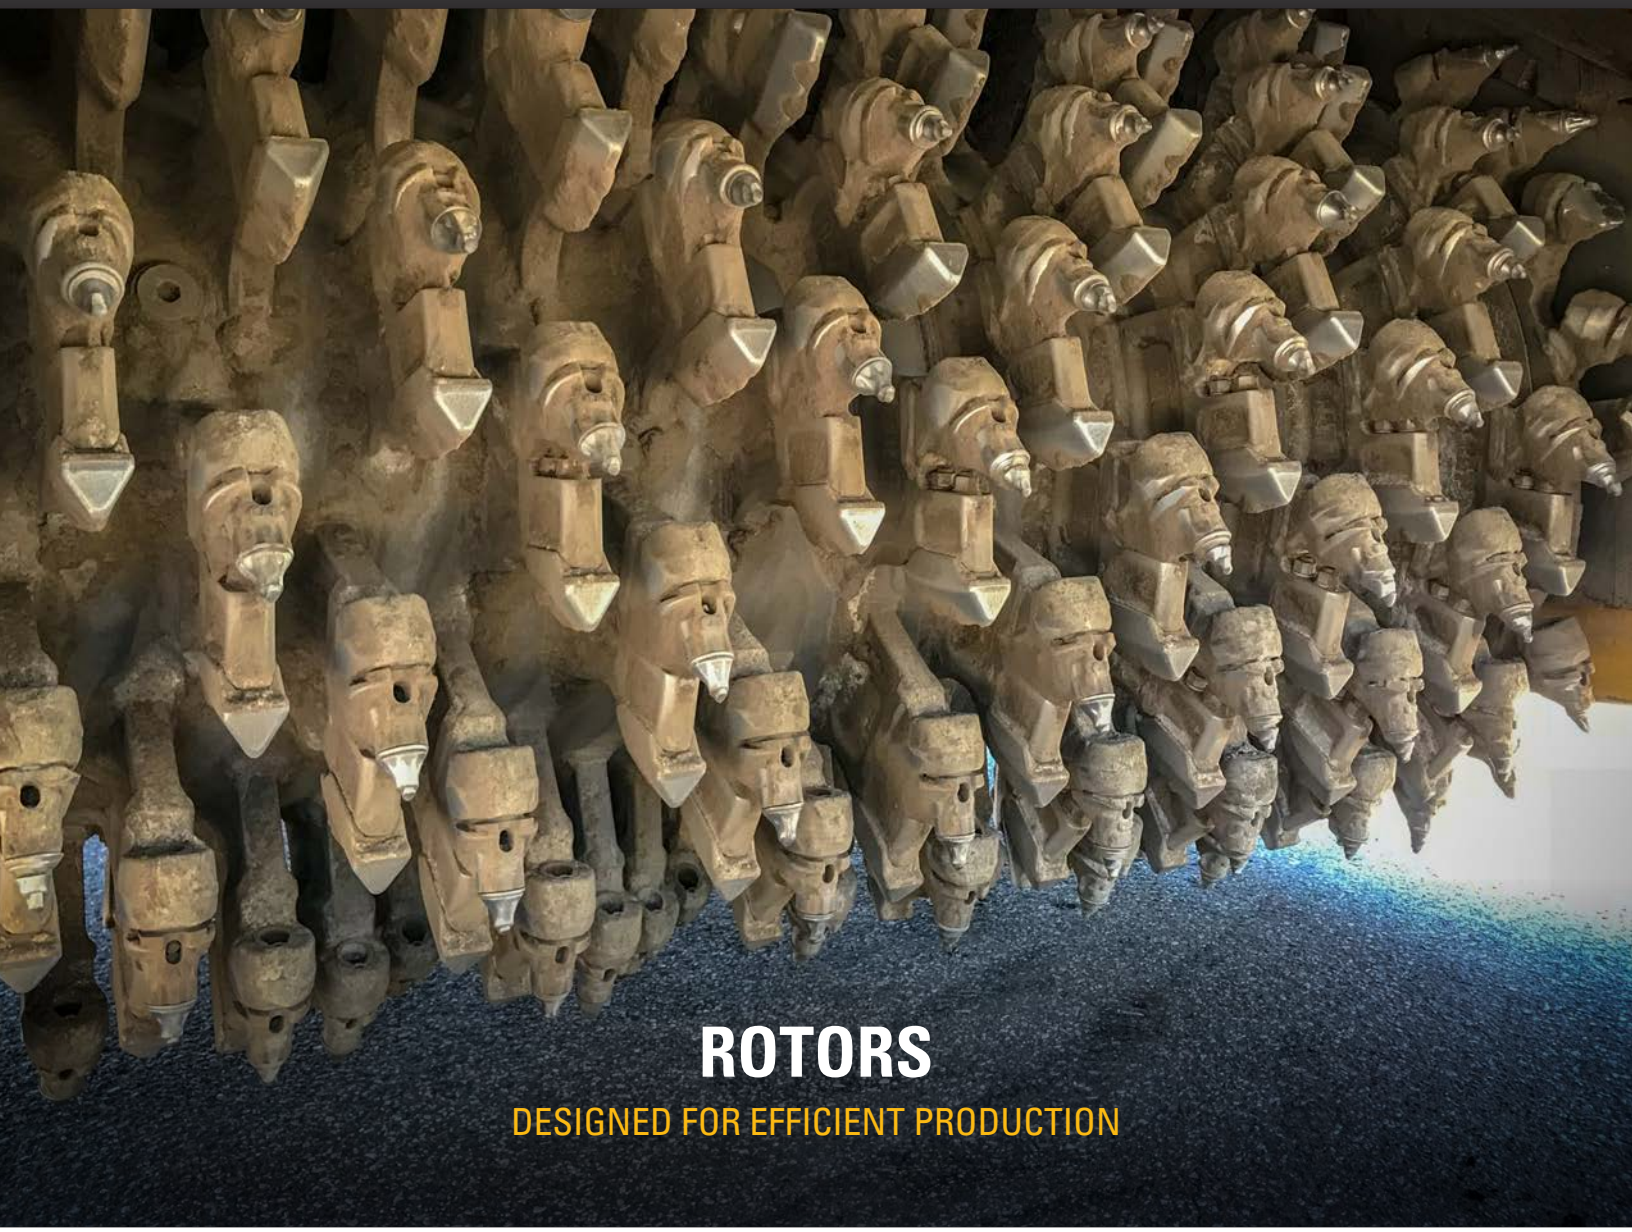

ROTORS

DESIGNED FOR EFFICIENT PRODUCTION

Cat® rotors work efficiently on a variety of reclamation and stabilization projects to help you meet production goals. Always inspect the rotor before use and replace damaged bits and toolholders.

SELECTING THE ROTOR THAT'S RIGHT FOR YOU

Not all rotors are created equal, so choosing the correct rotor for the job can help you achieve maximum productivity and increase uptime.

+ Know your application
+ Determine the results you need for gradation performance and breakout force
+ Choose a cutting bit specific to the application to optimize machine efficiency

When choosing a rotor for your Cat reclaimer / stabilizer, there are many factors that affect the measure of performance:

+ Your machine selection will dictate how much power you will be able to apply
+ Each application has many variables that can affect performance: soil type, asphalt layer thickness, type of asphalt used, etc.
+ Rotor selection will dictate the parameters for gradation performance and breakout force
+ Machine settings – propel speed, rotor speed, position of front or rear mixing chamber door – will also dramatically affect the performance of the rotor

Not all rotors are available in all regions. Please refer to the Rotor Selection Guide (QEHQ1233) for more information about selecting a rotor or your Cat dealer can help you choose the best machine and rotor for the application.

ROTOR OFFERING BY MODEL

ROTOR	RM400	RM500†, RM500B	RM600	RM800
Universal 16	X	X		
Universal 18*	X	X		
Combination	X	X		
Soil		X		
Spade*	X			
System K			X	X

** Not available in all regions. Please consult your local Cat dealer for availability.*

† *Build Number: 02A. To identify the build number on your machine, refer to page 6 of this document.*

ROTOR SELECTION BY APPLICATION

Cat rotors are capable of producing good results in many applications, but each is designed to provide maximum efficiency and productivity in specific applications. This chart provides general guidance for choosing a rotor.


KEY


- ✓ Ideal choice for specific application
- ○ Acceptable, but not ideal
- × Not recommended for this application


ROTOR OFFERING BY APPLICATION

RECLAMATION / FULL DEPTH ASPHALT				
	Thin Asphalt Layer 25-75 mm (1-3 in)	**Medium Asphalt Layer** 75-175 mm (3-7 in)	**Thick Asphalt Layer** 175-250 mm (7-10 in)	**Soil and Cement** (fully cured)
Universal 16	✓	✓	✓	✓
Universal 18*	✓	✓	○	✓
Combination	○	○	×	○
Soil	○	×	×	○
Spade*	×	×	×	×
System K (Wedges)	✓	✓	✓	✓
System K (Paddles)	✓	✓	✓	○
MIXING / SOIL STABILIZATION				
	Granular Soils	**Granular with Rocks < 130 mm (5 in), Debris**	**Light Clay**	**Heavy Clay / Gumbo**
Universal 16	✓	✓	○	✓
Universal 18*	✓	✓	○	○
Combination	○	○	✓	✓
Soil	✓	×	○	○
Spade*	✓	✓	✓	✓
System K (Wedges)	✓	✓	✓	✓
System K (Paddles)	○	○	○	×

** Not available in all regions. Please consult your local Cat dealer for availability.*

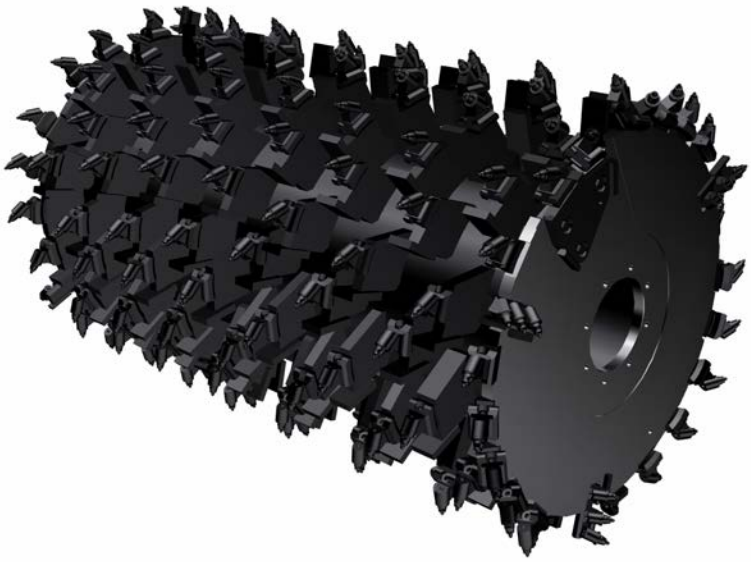

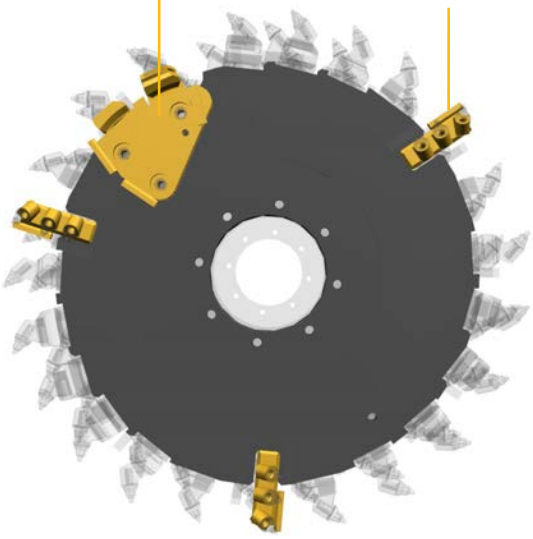
BOLT-ON END SEGMENT
TRIPLE TREE

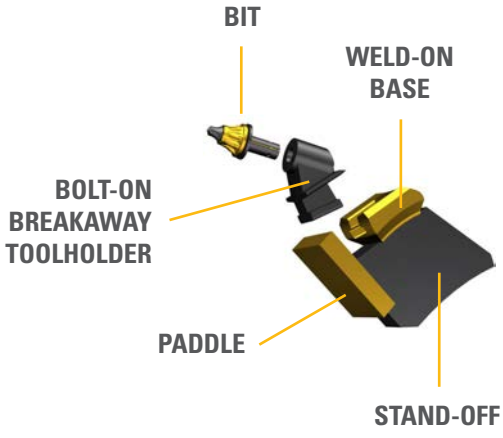

BIT
WELD-ON BASE
BOLT-ON BREAKAWAY TOOLHOLDER
PADDLE
STAND-OFF

UNIVERSAL ROTOR

MACHINE MODEL	DESCRIPTION	DETAIL	PART NUMBER	QUANTITY
RM400, RM500†, RM500B	Universal 16 Rotor		287-1724	1
	Universal 18 Rotor*		229-3180	1
	Toolholder	20 mm Shank Size	151-9941	182
		22 mm Shank Size	272-6089	182
	Triple Tree – Universal 16	Right	287-5853	3
		Left	287-5852	3
	Triple Tree – Universal 18	Right	205-6561	3
		Left	205-6562	3
	Paddles		183-4364	146
	Weld-On Base Block		169-1412	182
	Weld-On Stand-Off Assembly	Universal 16	183-4356	115
			211-1977	9
			211-1978	9
			211-1979	10
	Weld-On Stand-Off Assembly	Universal 18	229-3188	127
			229-3189	3
			229-3190	4
			229-3191	4
	End Ring Wedge for Blocks		183-4366	10
			183-4367	10
			183-4368	6
	Bolt-on End Segment	Right	205-6555	1
		Left	205-6556	1

** Not available in all regions. Please consult your local Cat dealer for availability.*


† Build Number: 02A. To identify the build number on your machine, refer to page 6 of this document.

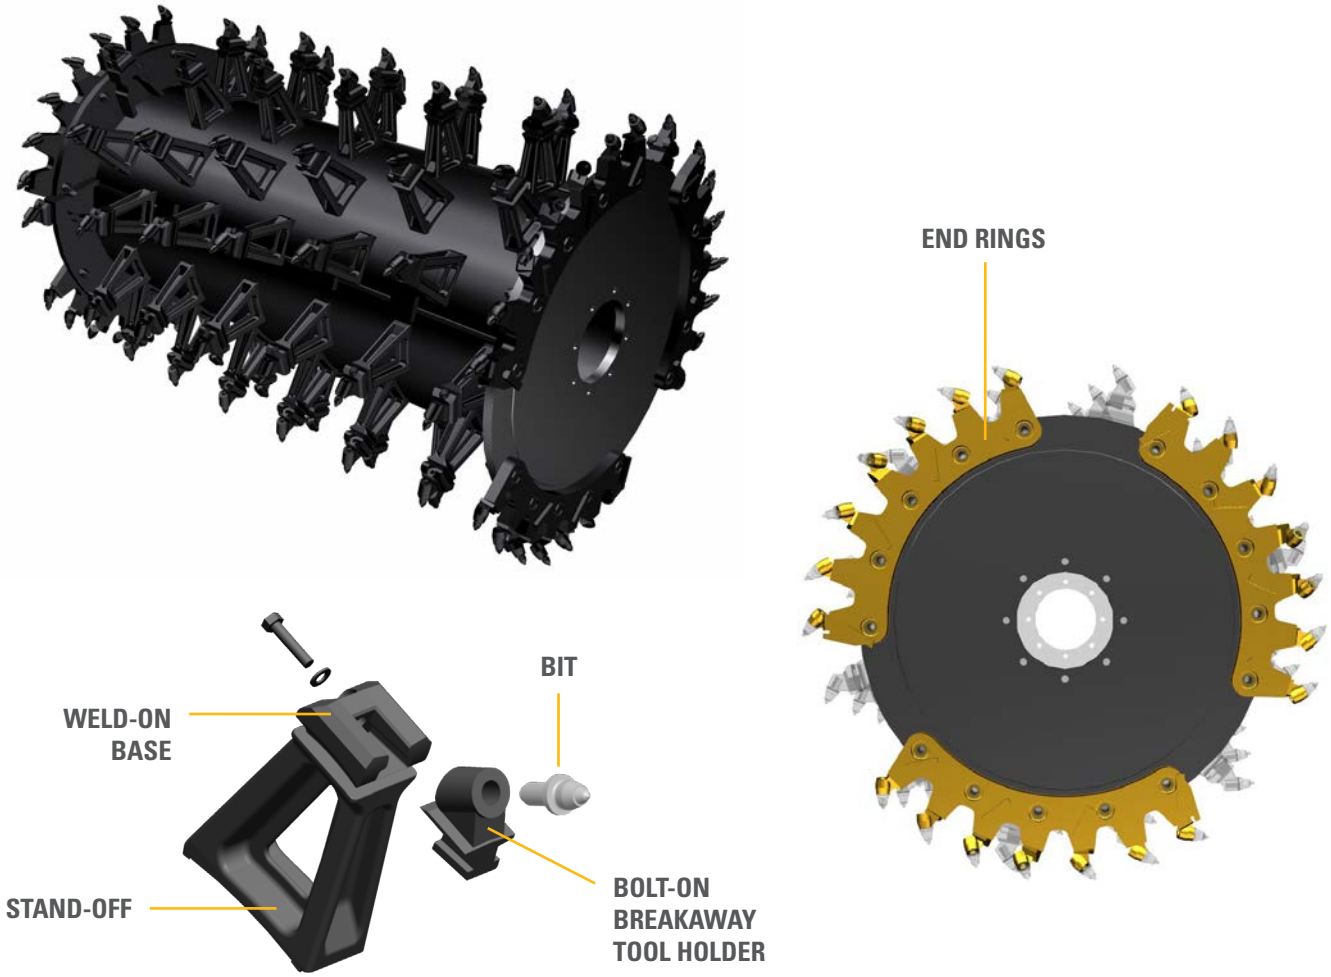



COMBINATION ROTOR

MACHINE MODEL	DESCRIPTION	DETAIL	PART NUMBER	QUANTITY
RM400, RM500†, RM500B	Combination Rotor		272-6090	1
	Toolholder	20 mm Shank Size	151-9941	72
		22 mm Shank Size	272-6089	72
	Weld-On Base Block		169-1412	72
	Weld-On Stand-Off Assembly		272-6101	68
	Bolt-On End Ring	Right	272-6096	3
		Left	272-9095	3
	End Ring Toolholder		274-8559	7 per End Ring

† *Build Number: 02A. To identify the build number on your machine, refer to page 6 of this document.*

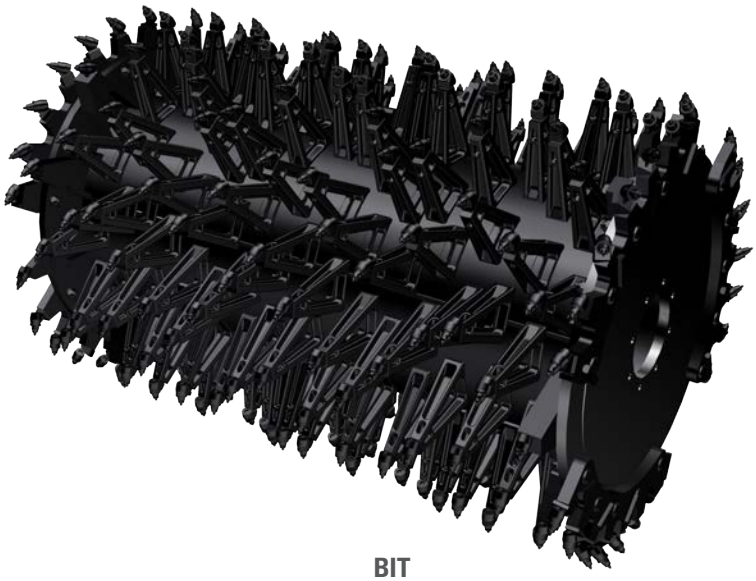

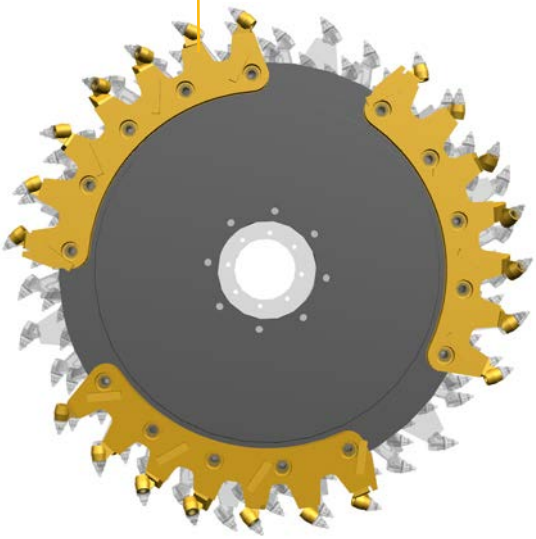

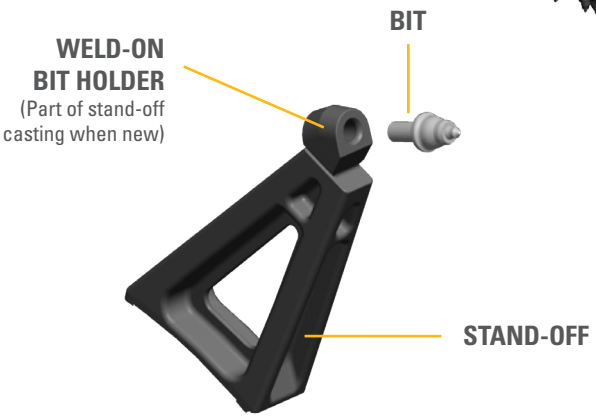


SOIL ROTOR

MACHINE MODEL	DESCRIPTION	DETAIL	PART NUMBER	QUANTITY
RM500†, RM500B	Soil Rotor		250-3960	1
	Toolholder		241-5859	238
	Stand-Off with Toolholder		272-2446	180
	Bolt-On End Ring	Right	241-5876	3
		Left	241-5875	3
	Stand-Off Assembly		241-5857	6
	End Ring Toolholder		241-5859	7 per End Ring


† *Build Number: 02A. To identify the build number on your machine, refer to page 6 of this document.*

SYSTEM K ROTOR

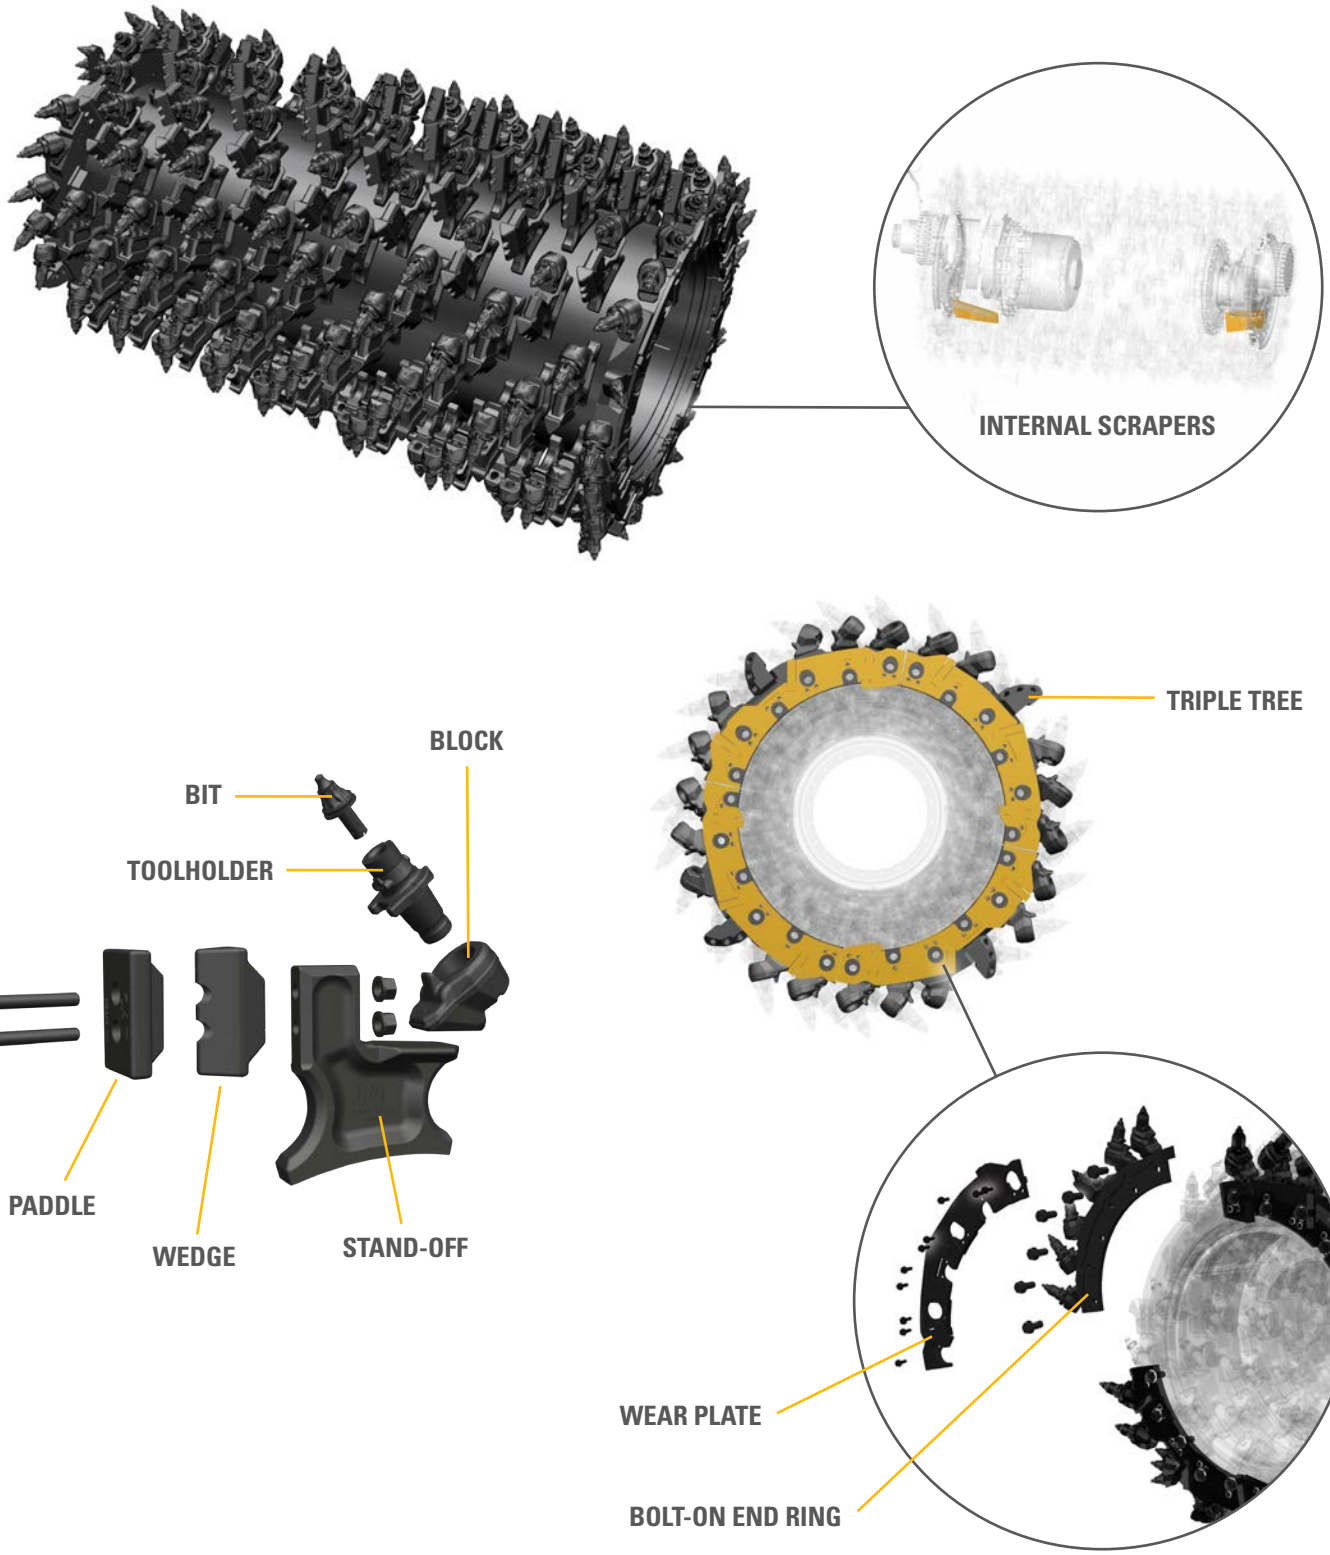

SYSTEM K ROTOR

MACHINE MODEL	DESCRIPTION	DETAIL	SHANK SIZE	PART NUMBER	QUANTITY
RM600, RM800	System K Rotor	Paddle	20 mm	608-7450	1
			22 mm	608-7453	
		Wedge	20 mm	608-7452	1
			22 mm	608-7455	
	Toolholders		20 mm	583-6054	184
			22 mm	519-7374	
	Paddles			552-3519	144
	Wedges			552-3520	144
	Nuts			8T-4132	288
	Bolts			637-8540	288
	Washers			9X-8257	288
	Blocks			496-3468	184
	Stand-Off with Block Assembly			588-2571	144
	Triple Trees	Right	20 mm	623-6806	4
			22 mm	624-1610	4
		Left	20 mm	623-6807	4
			22 mm	624-1611	4
	Bolt-On End Rings	Right	20 mm	624-7676, 624-7677 624-7678, 624-7679	1 each
			22 mm	624-1598, 624-1599 624-1601, 624-1602	1 each
		Left	20 mm	624-7672, 624-7673 624-7674, 624-7675	1 each
			22 mm	624-1603, 624-1605 624-1607, 624-1609	1 each
	End Ring Wear Plates	Right		623-7937, 623-7939	2 each
		Left		623-7940, 623-7941	2 each
	Internal Scrapers	Right		619-9968	1
		Left		619-9966	1

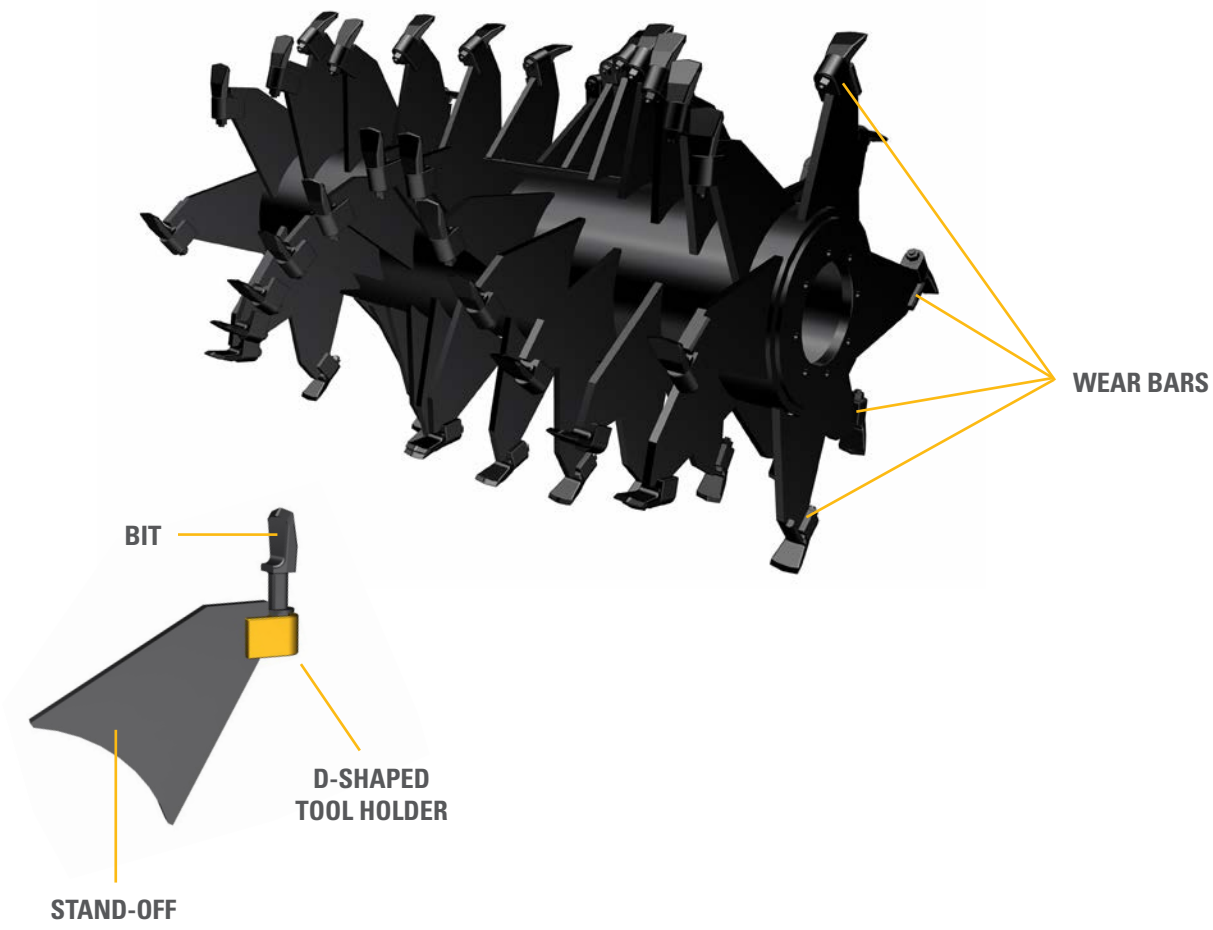

SPADE ROTOR

MACHINE MODEL	DESCRIPTION	PART NUMBER	QUANTITY
RM400	Spade Rotor	129-9365	1
	Toolholder – D-Shaped	107-3343	58
	Spade Bit	077-4018	58
	Weld-On Stand-Off	129-9364	58
	Wear Bar	129-8197	8

Not available in all regions. Please consult your local Cat dealer for availability.

BITS

Choosing the right cutting bit for your application can optimize the efficiency of the machine, resulting in more production with ideal material sizing and mixing quality. These charts identify which cutting bits are recommended for common applications. Bit holders can be retrofitted to allow for the use of the larger or smaller shank size.

CUTTER BITS FOR COMMON APPLICATIONS

	DESCRIPTION	SHANK SIZE	ROTOR	PART NUMBER
	Heavy Duty (Higher Carbide Content)	20 mm	Universal, Soil, Combination, System K	Piece: 561-8135 Pallet:* 626-4496
	Higher Impact (Valve Seat Tip)	20 mm	Universal, Soil, Combination, System K	Piece: 564-1260 Pallet:* 626-4494
	Light Duty	20 mm	Universal, Soil, Combination, System K	Piece: 578-4416 Pallet:* 626-4495
	Higher Impact	22 mm	Universal, Combination, System K	Piece: 533-5760

** Available in North America*

CUTTER BITS WITH PULLER GROOVE

	DESCRIPTION	SHANK SIZE	ROTOR	PART NUMBER
	Light Duty	20 mm	Universal, Soil, Combination, System K	Piece: 560-2306 Pallet:* 626-4493
	High Impact	20 mm	Universal, Combination, System K	Piece: 561-8132

SERVICE TOOLS



HAND TOOL TO REMOVE BITS THROUGH SLOT IN TOOLHOLDER



TOOLHOLDER INSTALLATION PRESS KIT



TOOLHOLDER REMOVAL



DAMAGED TOOLHOLDER EXTRACTOR



BIT REMOVAL PUNCH HAND TOOL

SERVICE TOOLS


ROTOR	DESCRIPTION	PART NUMBER
System K	Hand tool to remove bits through slot in tool holder	543-5470
	Pnuematic punch (57 degrees) to remove bits through slot in toolholder	609-2601
	Pnuematic punch (15 degrees) to remove bits through slot in toolholder	545-9105
	Toolholder Installation Press Kit	591-1346
	Toolholder Removal	592-3967
	Damaged Toolholder Extractor	577-4176
	Standoff Repair Tools	639-7074
		639-7075
All	Bit Removal Punch Hand Tool	104-8591
	Pnuematic punch (straight) to remove bits through back of base block	226-0124
	Pnuematic cup tool to install bits	625-9698
	Pnuematic flat chisel to remove bits under washer	539-6298
	Hand tool to remove bits by prying under washer	539-6298
Universal, Soil, Combination	15 degree punch - Pneumatic	226-0102




CUTTING CHAMBER

EASY TO SERVICE

Cat reclaimer cutting chambers are designed with service in mind. Equipped with convenient bolt-on repair parts to maintain the cutting chamber throughout the life of the machine. Easily replace the levelers, as needed, to maintain gradation control and spread of material. Inspect and replace the breaker bars and strike off plates to protect the inside of the cutting chamber and assist with breaking up material.

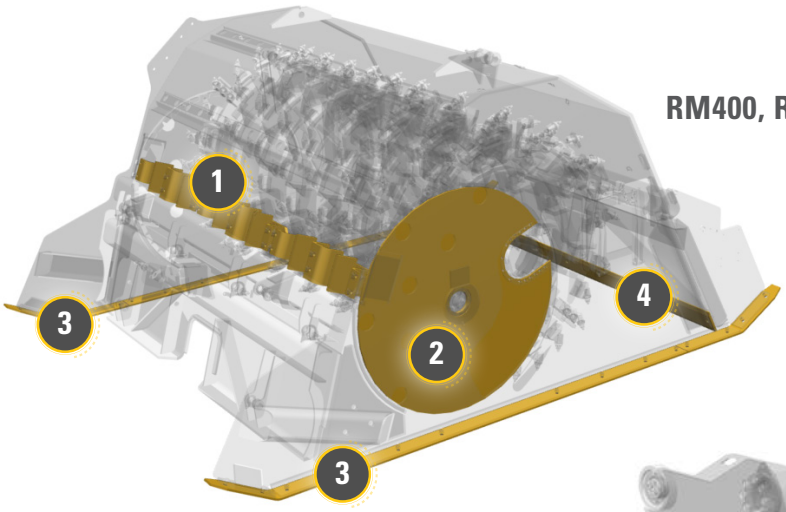

RM400, RM500, RM500B

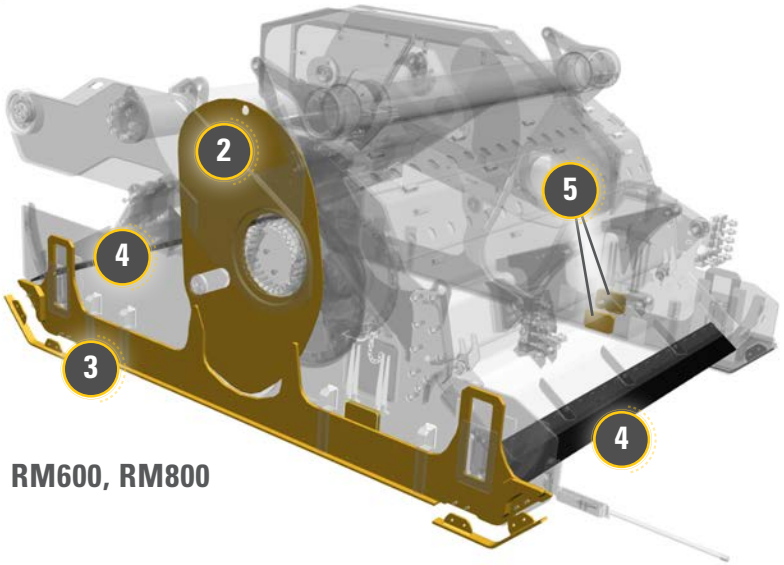

RM600, RM800



1. BREAKER BAR The breaker bar mounts inside the mixing chamber and enhances rotor's ability to pulverize large chunks of asphalt. RM400, RM500 and RM500B only.



2. CHAMBER DEBRIS PLATE Installed on each side of the rotor to provide protection and guide the depth adjustment of the rotor while keeping material inside the chamber.



3. CHAMBER WEAR SKIS Bolt-on skis protect the sides of the cutting chamber to prevent permanent abrasion to bottom of mixing chamber.



RM400, RM500, RM500B (REAR DOOR ONLY)



RM600, RM800

4. CHAMBER DOOR MATERIAL LEVELER Bolt-on levelers for the front and rear doors that help with gradation control and distribution of material coming out of the chamber.

5. MIXING CHAMBER WEAR PLATES Weld-on wear plates inside the chamber that deflect material from the rotor end rings. RM600 and RM800 only.

CUTTING CHAMBER

DESCRIPTION	MACHINE MODEL	PART NUMBER	QUANTITY
Chamber Wear Skis – Front and Rear	RM400, RM500†, RM500B	394-5142	4
	RM600, RM800	551-2433	4
Chamber Wear Skis – Center	RM400, RM500†, RM500B	394-5144	2
	RM600, RM800	588-3630	2
Chamber Door Material Leveler	RM400, RM500†, RM500B	077-7730	1
	RM600, RM800	600-9430	2
Material Leveler Retaining Plates	RM600, RM800	518-9219	8
Chamber Debris (Kidney) Plates	RM400, RM500†, RM500B	377-3136	2
	RM600, RM800	594-9447	2
Mixing Chamber Wear Plates	RM600, RM800	518-9149	4
Breaker Bars	RM400, RM500†, RM500B	193-1039	3

† *Build Number: 02A. To identify the build number on your machine, refer to page 6 of this document.*




ROTOR DRIVE SYSTEM

BUILT-IN DURABILITY

On the RM600 and RM800, periodically inspect the rotor drive system including the rotor drive belt, pulley system, and sheaves to avoid rotor slippage and ensure efficient rotor operation. Rips, tears, or excessive stretch in the rotor drive belt indicates belt replacement is necessary. Inspect the V-grooves in the sheaves to ensure they are properly engaging with the grooves of the rotor drive belt.

RM400, RM500, RM500B

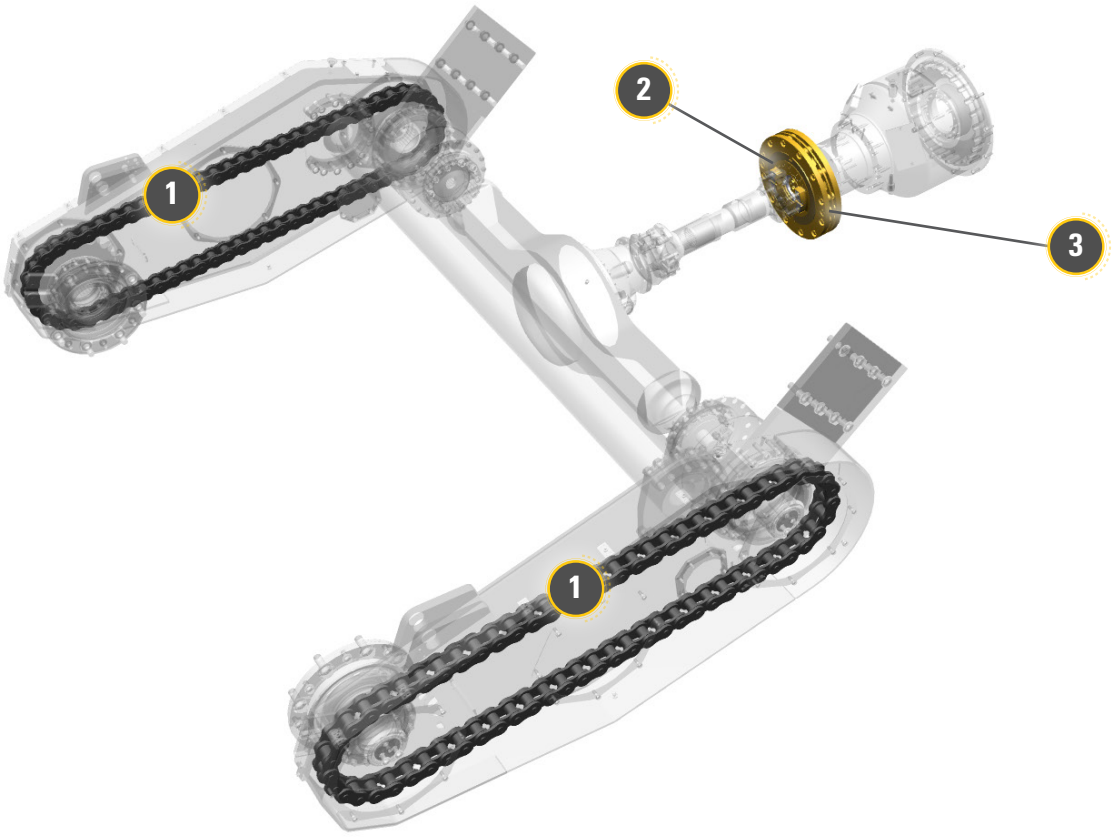



1. ROTOR DRIVE CHAIN Strong and reliable drive chain designed to transfer power to the rotor.




2. SHEAR DISK Protects the rotor drive system by decoupling the rotor drive transmission from the rotor.



3. TORQUE LIMITER The torque limiter minimizes the amount of torque that can be transferred from the engine to the rotor drive system. This allows the mechanism to limit potential damage when the rotor strikes an immovable object like a manhole cover.

RM600, RM800

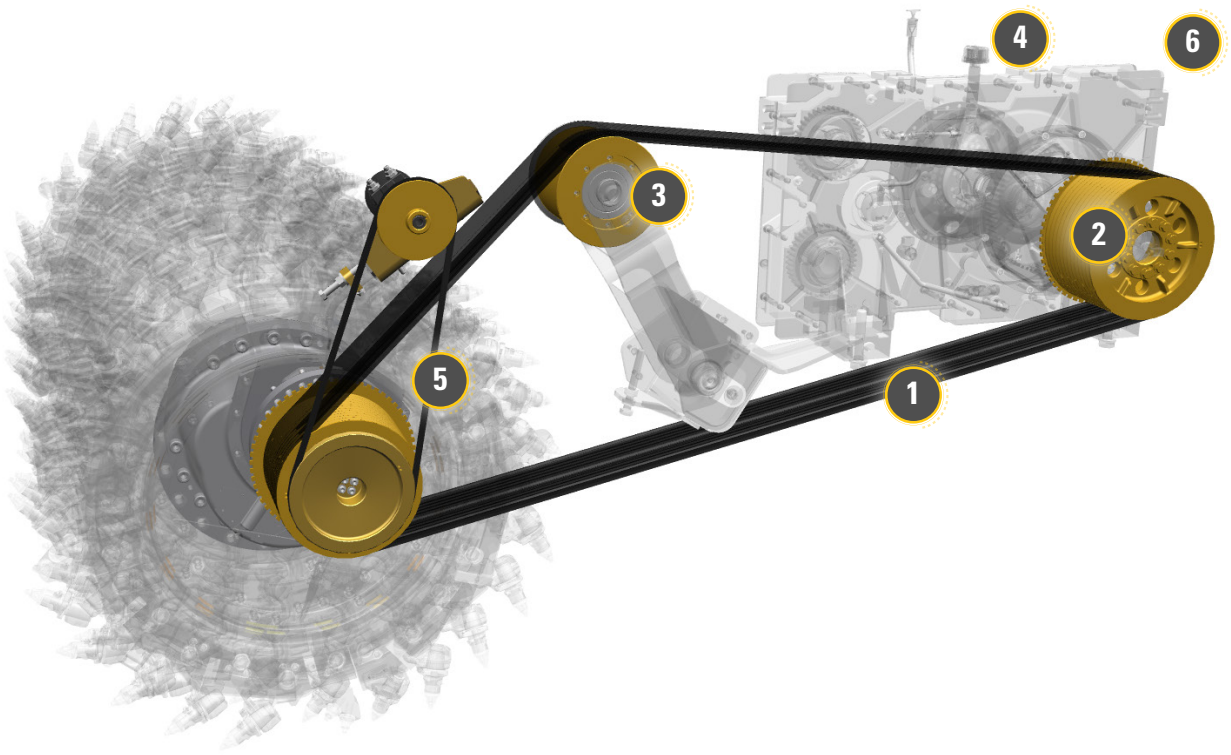



1. ROTOR DRIVE BELT V-belt designed to ensure consistent tension when engaging the rotor and prevent slippage.



2. SHEAVE Interfaces with v-grooves in rotor drive belt to transfer torque and speed from engine to rotor.




3. TENSIONER IDLER Idler on the tensioner arm for the rotor drive belt.



4. PUMP DRIVE BREATHER Filter for the pump drive that ensures air that enters the pump is clean and dry.



5. ROTOR TURNING DEVICE BELT Belt designed to ensure efficient operation of the rotor turning device during rotor service.

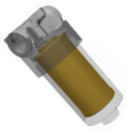

6. ROTOR DRIVE PLANETARY OIL FILTER Oil filter for the rotor drive planetary.



ROTOR TURNING DEVICE PENDANT Controller for the rotor turning device. Rotates the rotor forward or backward.