
ROTOR DRIVE SYSTEM COMPONENTS

MACHINE MODEL	DESCRIPTION	PART NUMBER	QUANTITY
RM400	Rotor Drive Chain	528-4977	2
	Shear Disk	530-1359	1
	Bolts for Shear Disk	7X-0278	1
	Nuts for Shear Disk	3E-9860	1
	Torque Limiter	532-7134	1
RM500†, RM500B	Rotor Drive Chain	356-1944	2
	Shear Disk	151-7256	1
	Bolts for Shear Disk	7X-0319	1
	Nuts for Shear Disk	9M-5048	1
	Torque Limiter	153-1356	1
RM600, RM800	Rotor Drive Belt	507-8375	1
	Sheave (RM600)	519-4482	2
	Sheave – Upper (RM800)	507-8385	1
	Sheave – Lower (RM800)	507-8386	1
	Tensioner Idler	580-8336	1
	Rotor Turning Device Belt	7W-8132	1
	Rotor Turning Device Pendant	574-8985	1
	Pump Drive Breather	258-2829	1
	Rotor Gearbox Breather	535-8636	1
	Rotor Drive Planetary Screen	271-3431	1
	Rotor Drive Planetary Magnetic Filter	279-2467	1
	Rotor Drive Planetary O-Ring	2H-6338	1
	Rotor Drive Planetary Oil Filter	579-0251	1

† *Build Number: 02A. To identify the build number on your machine, refer to page 6 of this document.*

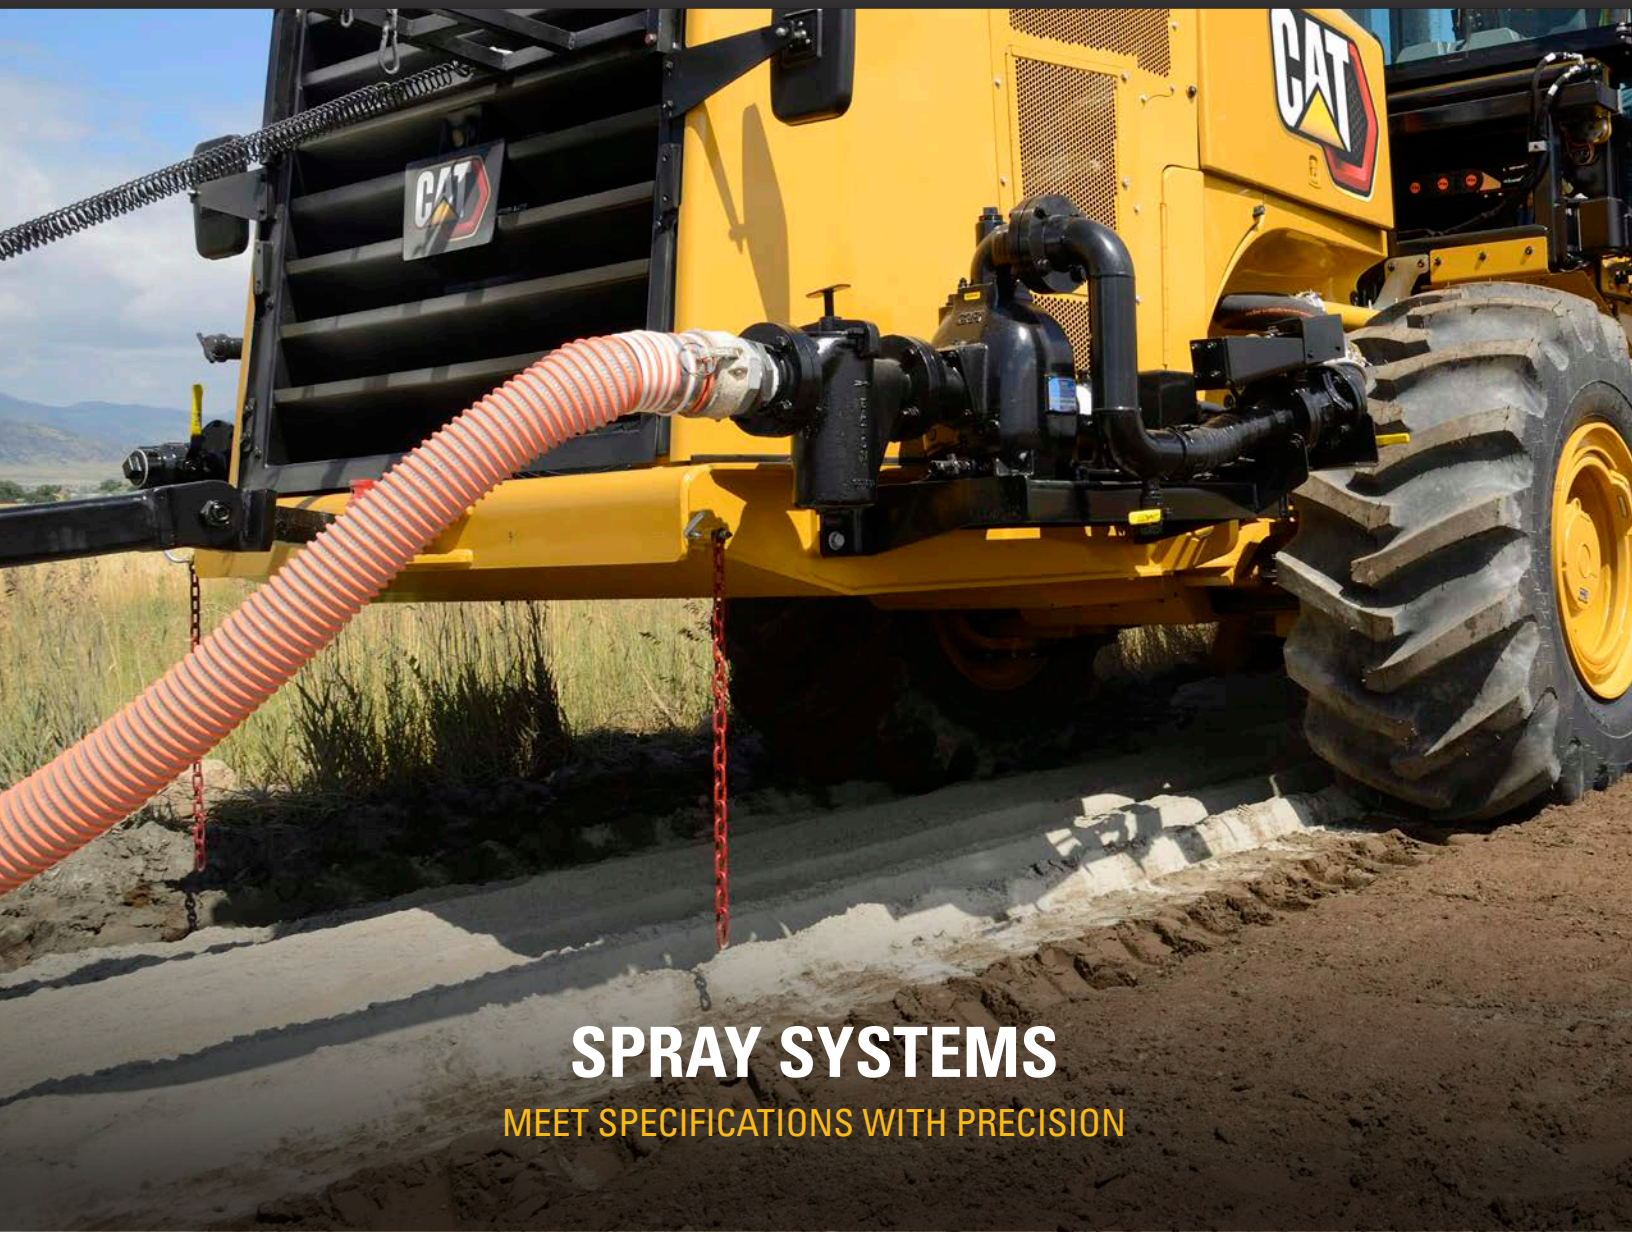


SPRAY SYSTEMS

MEET SPECIFICATIONS WITH PRECISION

The spray systems cool rotor components to prolong their wear life and assist in material mixing in certain applications. To keep the system clean, replace the filters according to the recommended service intervals. Frequently clean the spray bars and nozzles to ensure proper operation and periodically inspect them for damage and clogs.

RM400, RM500, RM500B
WATER SPRAY SYSTEM

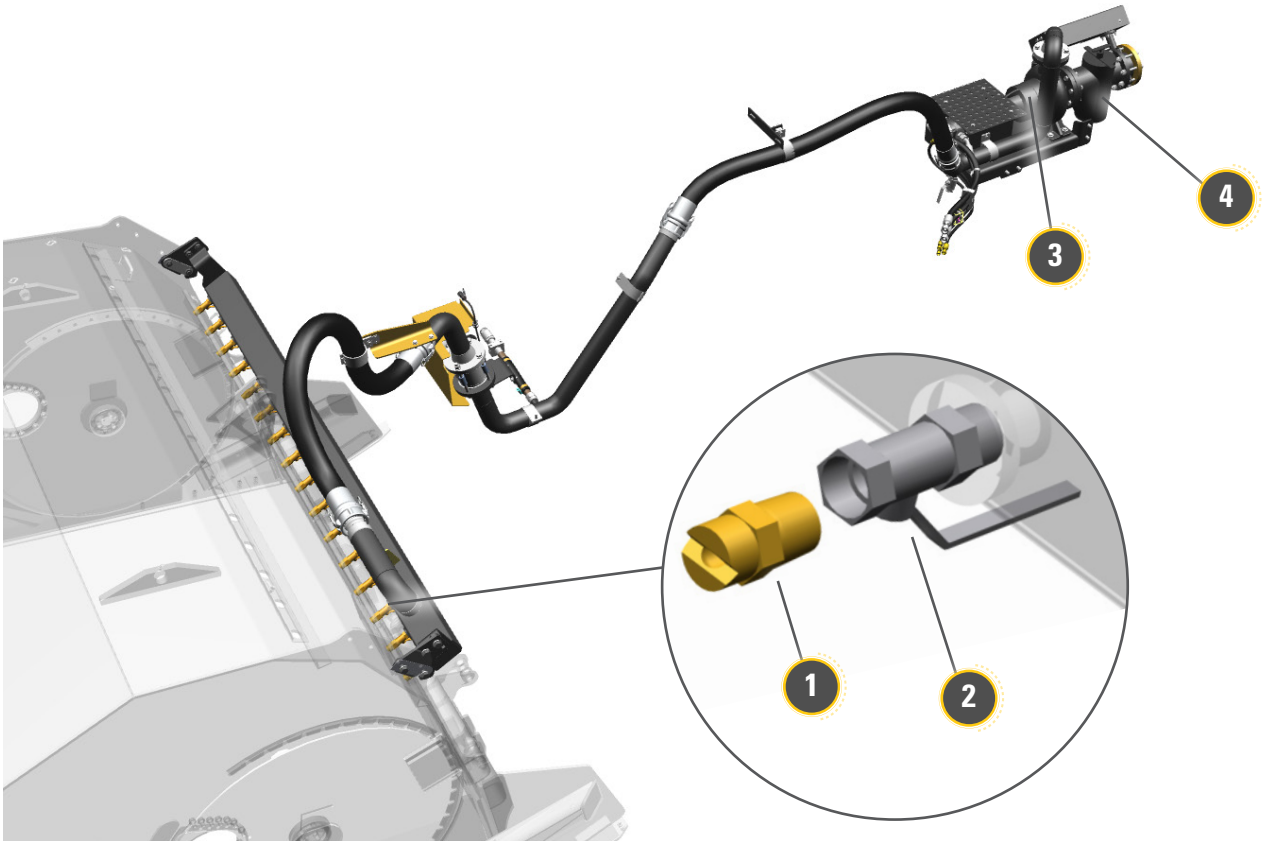



1. SPRAY NOZZLES Designed for an effective and efficient water spray pattern.

2. VALVE Turns each spray nozzle on or off to regulate the water spray.




3. WATER SPRAY PUMP Efficiently transfers water from the tank to the spray nozzles.



4. STRAINER BASKET AND O-RING Filter to keep sediment out of the water system.

RM600, RM800
WATER SPRAY SYSTEM

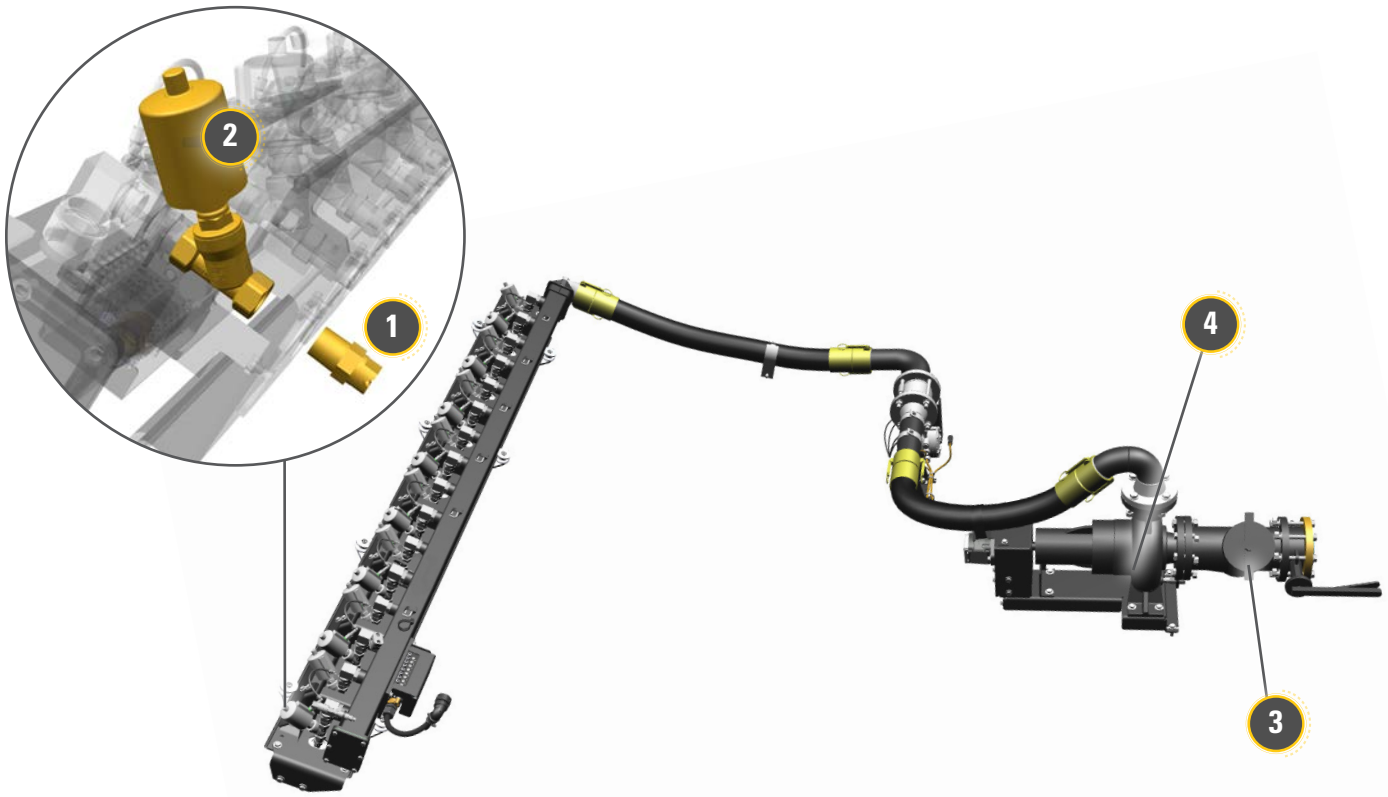



1. SPRAY NOZZLES Designed for an effective and efficient water spray pattern.

2. ACTUATORS Pneumatic actuator opens or closes the water spray valve on each nozzle.




3. STRAINER BASKET AND O-RING Filter to keep sediment out of the water system.




4. WATER SPRAY PUMP Efficiently transfers water from the tank to the spray nozzles.

RM400, RM500, RM500B
EMULSION SPRAY SYSTEM

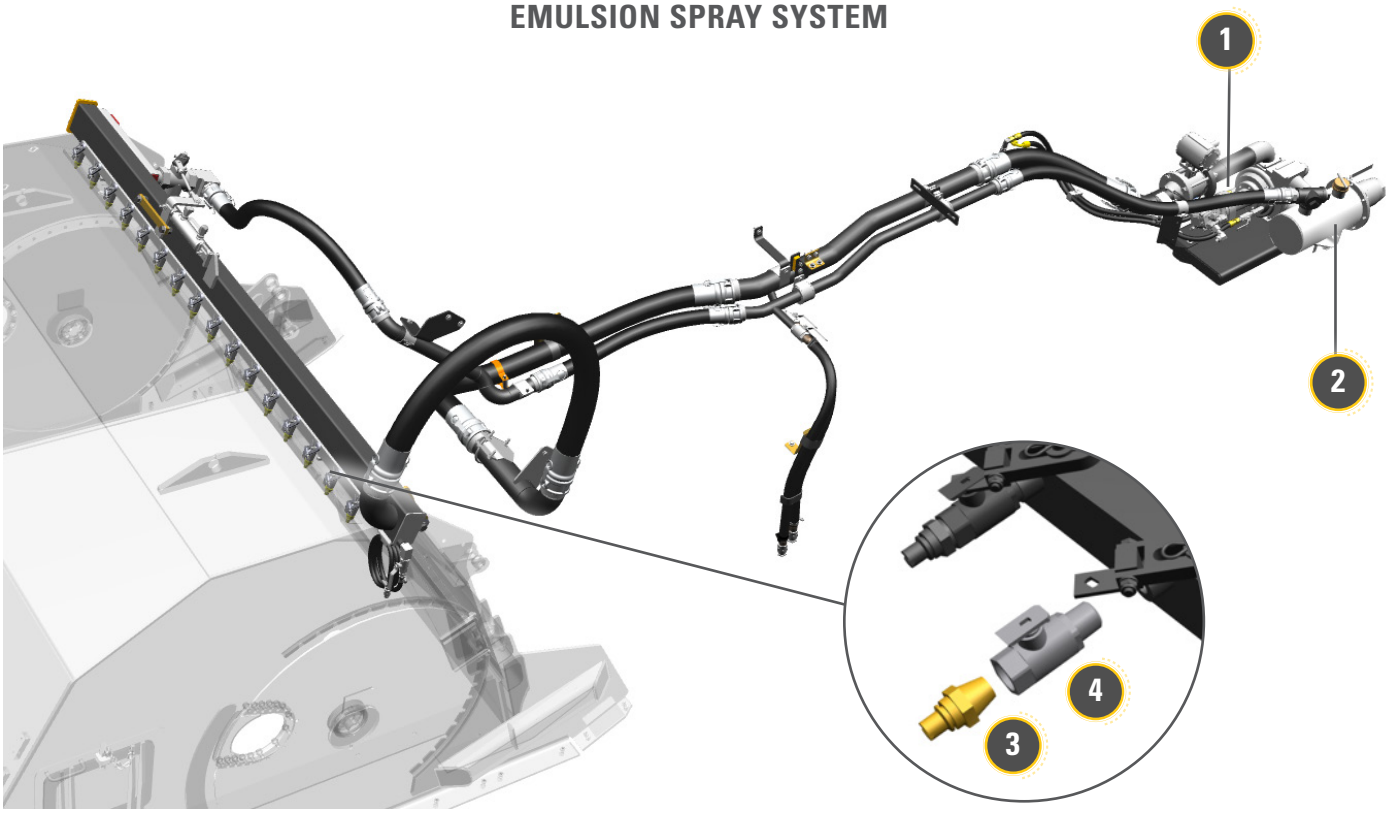



1. EMULSION PUMP Efficiently transfers bitumen emulsion from the truck to the spray nozzles.

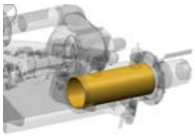


2. STRAINER BASKET AND O-RING Filter to keep sediment out of the emulsion system.



3. VALVE Turns each spray nozzle on or off to regulate the emulsion spray.

4. NOZZLE Designed for an effective and efficient emulsion spray pattern.

RM600, RM800
EMULSION SPRAY SYSTEM

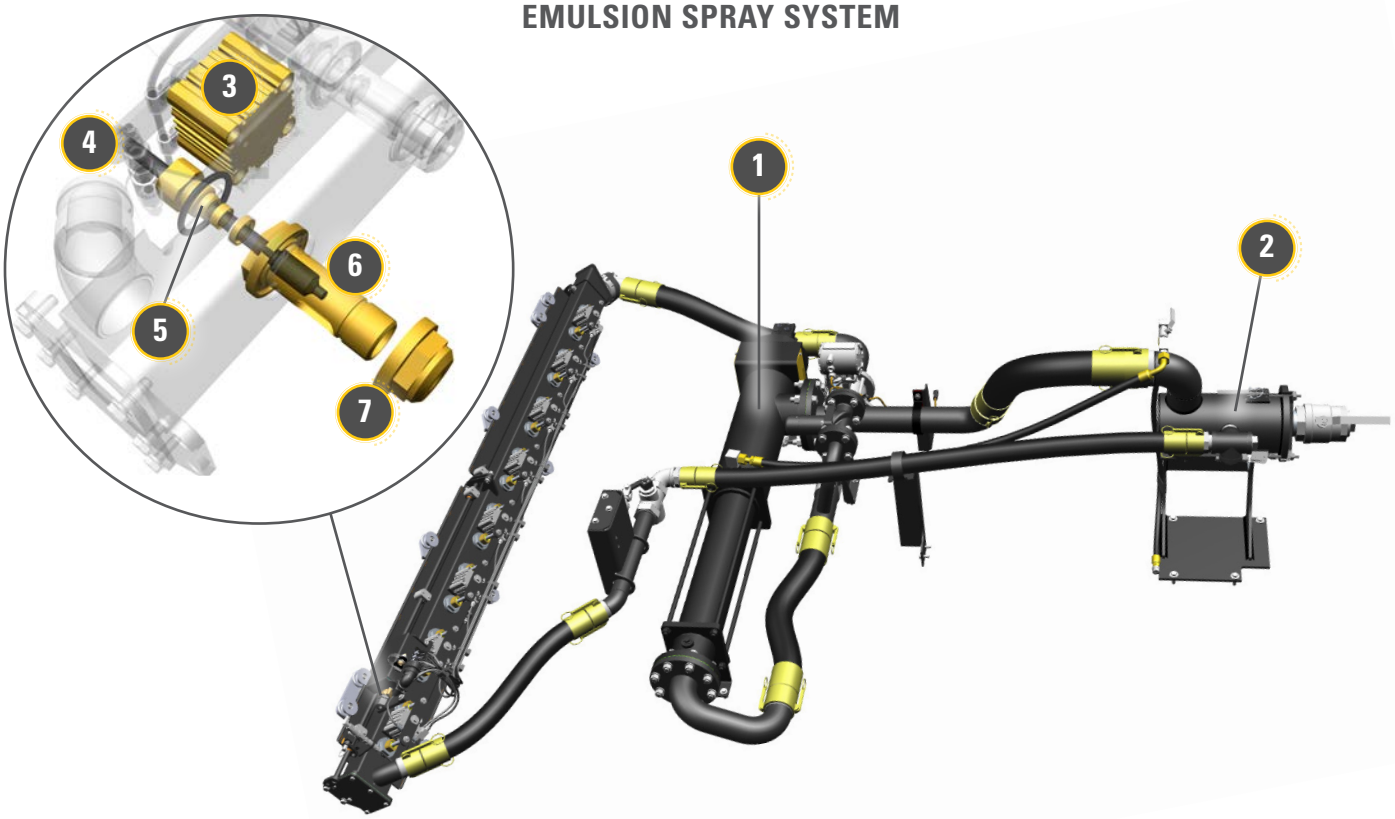



1. EMULSION PUMP Efficiently transfers bitumen emulsion or water from the truck to the spray nozzles.



2. STRAINER BASKET AND O-RING Filter to keep sediment out of the emulsion system.

3. ACTUATOR Pneumatic actuator opens or closes the emulsion spray valve on each nozzle.




4. PIN Pin in the emulsion spray nozzle assembly.

5. BRASS GLAND Seals the housing to the spray nozzle assembly.

6. HOUSING Housing for the emulsion spray nozzle assembly.

7. NOZZLE Designed for an effective and efficient emulsion spray pattern.

RM600, RM800
WASHDOWN SPRAY SYSTEM

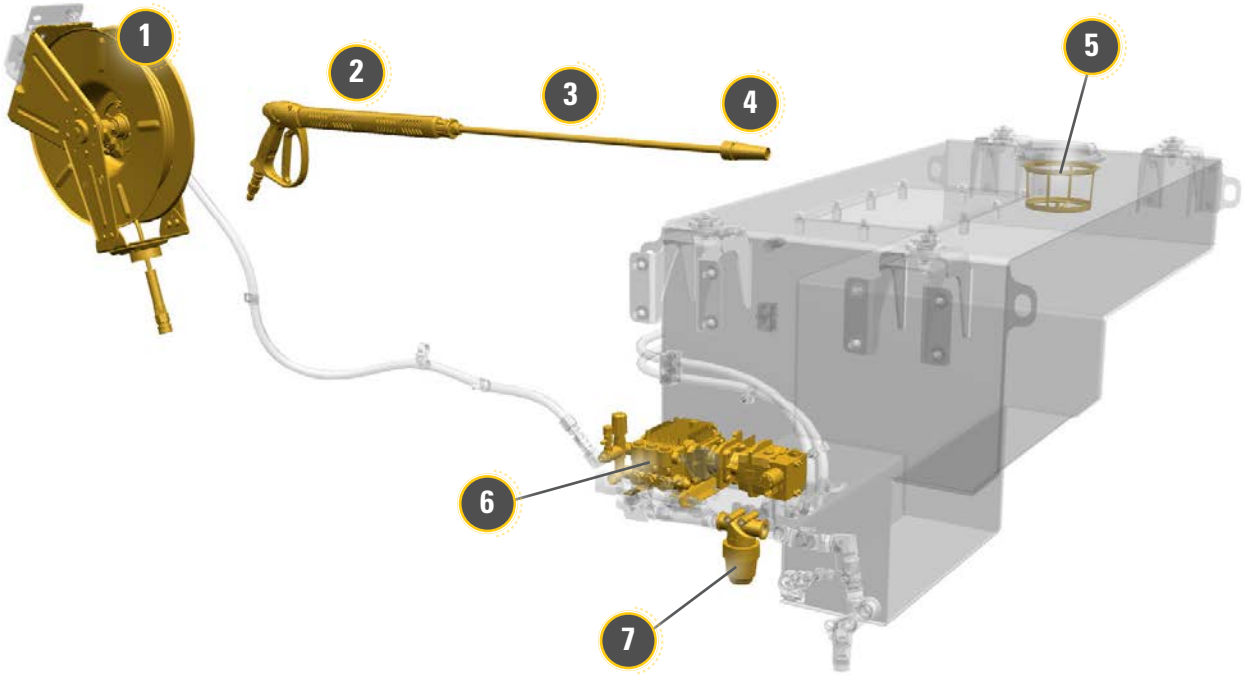




1. HOSE REEL Retractable reel and hose storage.



2. SPRAY GUN Handle and controls for the spray wand.

3. SPRAY LANCE Screws into the spray gun and accepts various spray nozzles.

4. SPRAY NOZZLE Provides effective spray pattern.

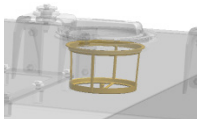

5. WATER TANK STRAINER Initial filter to catch debris when pumping water into the tank.



6. WATER PUMP Efficiently transfers water from the tank to the spray gun.



7. WATER FILTER Filter to keep sediment out of the water spray system.

SPRAY SYSTEMS

SUBSYSTEM	MACHINE MODEL	DESCRIPTION	PART NUMBER	QUANTITY	GROUP PART NUMBER (INCLUDES HARDWARE)
Water Spray System	RM400*	Nozzle – High Flow (624-1892 lpm / 165-500 gpm)	191-4837	16	530-1341
		Nozzle – Medium Flow (284-776 lpm / 75-205 gpm)	352-7009	16	
		Nozzle – Low Flow (113-530 lpm / 30-140 gpm)	434-7177	16	
		Ball Valve	191-4838	16	
		Breather	559-2269	1	
		Strainer Basket	569-6887	1	
		Strainer Basket O-Ring	3F-5792	1	
		Water Pump	559-6381	1	
	RM500†, RM500B	Nozzle – High Flow (624-1892 lpm /165-500 gpm)	191-4837	16	379-8944
		Nozzle – Medium Flow (284-776 lpm / 75-205 gpm)	352-7009	16	
		Nozzle – Low Flow (113-530 lpm / 30-140 gpm)	434-7177	16	
		Ball Valve	191-4838	16	
		Breather	113-9263	1	
		Strainer Basket	569-6887	1	
		Strainer Basket O-Ring	095-1720	1	
		Water Pump	423-8727	1	
	RM600, RM800	Nozzle – High Flow (624-1892 lpm / 165-500 gpm)	191-4837	16	479-0327
		Nozzle – Medium Flow (282-776 lpm/ 75-205 gpm)	325-7009	16	
		Nozzle – Low Flow (113-530 lpm / 30-140 gpm)	434-7177	16	
		Actuator	558-6439	16	
		Strainer Basket	569-6887	1	
		Strainer Basket O-Ring	3F-5792	1	
		Water Pump	559-6381	1	
Ultra Low Flow Water Spray System	RM500†, RM500B	Nozzle (284-776 lpm / 75 -205 gpm)	325-7009	16	462-9779
		Ball Valve	191-4838	16	
		Breather	113-9263	1	
		Strainer Basket	495-7557	1	
		Strainer Basket O-Ring	095-1720	1	
		Water Pump	423-8727	1	

** If adding a spray system to the RM400, a second touch screen display is required. Please consult your Cat dealer if adding this option.*

† *Build Number: 02A. To identify the build number on your machine, refer to page 6 of this document.*

Continued

SPRAY SYSTEMS

SUBSYSTEM	MACHINE MODEL	DESCRIPTION	PART NUMBER	QUANTITY	GROUP PART NUMBER (INCLUDES HARDWARE)
Emulsion Spray System	RM400*, RM500†, RM500B	Nozzle – High Flow	114-1198	16	RM400: 519-6425 RM500†, RM500B: 379-9700
		Nozzle – Medium Flow	115-7575	16	
		Nozzle – Low Flow	115-7573	16	
		Breather – RM400	559-2269	1	
		Valve	114-1190	16	
		Strainer Basket	173-3701	1	
		Strainer Basket O-Ring	9M-5024	1	
		Emulsion Pump	251-6421	1	
	RM600, RM800	Housing	524-2540	16	602-3019
		Brass Gland	517-4593	16	
		Pin	517-4594	16	
		Nozzle	517-4595	16	
		Housing Seal	517-7153	32	
		Brass Gland Seal	517-7152	16	
		O-Ring	9S-8307	32	
		Pneumatic Actuator	498-7930	8	
		Strainer Basket	173-3701	1	
		Strainer Basket O-Ring	2D-1691	1	
		Emulsion Pump	587-2854	1	
Washdown Spray System	RM600, RM800	Hose Reel	388-3713	1	479-0296
		Spray Gun	398-6440	1	
		Spray Lance	488-1394	1	
		Spray Nozzle	488-1395	1	
		Water Tank Strainer	508-2086	1	
		Water Pump	538-1148	1	
		Water Filter	161-8211	1	

** If adding a spray system to the RM400, a second touch screen display is required. Please consult your Cat dealer if adding this option.*

† *Build Number: 02A. To identify the build number on your machine, refer to page 6 of this document.*



UPGRADES AND OPTIONS

TO INCREASE VISIBILITY AND CAPABILITY

Upgrade your Cat reclaimer with options to enhance visibility and capability. Cameras enhance visibility from multiple angles of the machine. Various lighting options provide better illumination around the machine for the job crew during operation. Machine-specific additions allow you to tailor your machine to specific operating conditions.

1. WORK LIGHTING

Various lighting options available to illuminate the machine during operation and maintenance.

2. ROADING LIGHTS

Enable on-highway transportation. Includes turn signals and front-facing LED lamps.



MIRRORS

Attached at various locations around the machine for proper visibility.



CAMERAS

Improve visibility around the machine and to the cutting chamber. Options and locations vary by machine model.



PUSH BAR

Provides a firm connection to water or emulsion truck.




TOOLBOX

Additional toolbox available for the RM400 mounted above the rotor chamber for extra lockable storage.



BOLT-ON COUNTERWEIGHT

Bolt-on 1600 kg (3,500 lb) counterweight kit for the RM500 and RM500B enhances machine performance in tough reclamation applications. Recommended for asphalt cuts 25 cm (10 in) deep or greater.

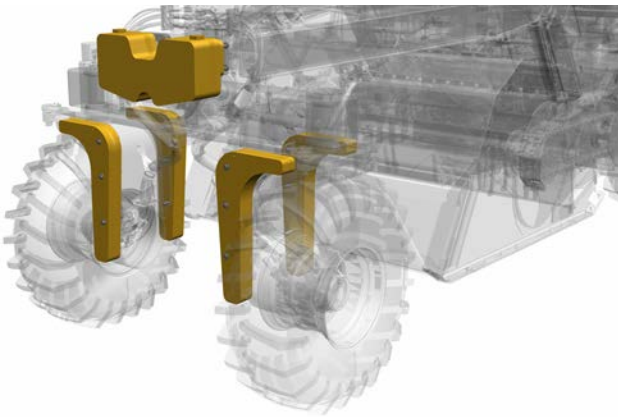

LIGHTING

DESCRIPTION	MACHINE MODEL	DETAIL	PART NUMBER	QUANTITY	GROUP PART NUMBER (INCLUDES HARDWARE)
Work Lights	RM400	Halogen Flood Lamp	325-4471	10	539-3865
		LED Flood Lamp	589-0452	10	539-3870
	RM500†, RM500B	Halogen Flood Lamp	219-6485	8	381-6310
	RM600, RM800	LED Flood Lamp	589-0452	6	479-0294
		LED Rotor Strobe Light	587-8287	2	
		LED Pole Mount Lamp	594-5646	1	
		LED Lamp – Rotor Chamber	589-0458	2	
Roading Lights	RM400, RM600, RM800	Side Turn Signal Lamp	334-5410	2	RM400: 539-3860 RM600, RM800: 479-0332
		Rear Turn Signal Lamp	428-6700	2	
		LED Lamp – Right	525-5297	1	
		LED Lamp – Left	525-5298	1	
	RM500†, RM500B	Halogen Lamp – Front Right	344-4455	1	382-9531
		Halogen Lamp – Front Left	344-3456	1	
		Halogen Lamp – Side	334-5410	2	
		Rear Turn Signal Lamp	392-4634	2	
Hazard Light	RM400, RM500†, RM500B, RM600, RM800	Lamp	371-2241	1	479-0333
Flood Lamp	RM400, RM500†, RM500B, RM600, RM800	Flood Lamp	594-8848	1	594-8849

MIRRORS

MACHINE MODEL	DESCRIPTION	PART NUMBER
RM400, RM500†, RM500B	Front and Rear Mirror	220-4050
RM600, RM800	Top Operator Platform Mirror	526-5057
	Bottom Operator Platform Mirror	214-0647

MISCELLANEOUS ATTACHMENTS AND ACCESSORIES

DESCRIPTION	MACHINE MODEL	PART NUMBER
Push Bar	RM400	589-6107*
	RM500†, RM500B	446-2633*
	RM600, RM800	515-0525*
Toolbox	RM400	Single: 603-8571* Dual: 603-8573*
Counterweight Kit	RM500†, RM500B	287-3675*
Rear Leg Supports	RM600, RM800	612-5193

** Available for order through your Cat Dealer only.*

† *Build Number: 02A. To identify the build number on your machine, refer to page 6 of this document.*

CAMERAS

MACHINE MODEL	DESCRIPTION	DETAIL	PART NUMBER	QUANTITY	GROUP PART NUMBER (INCLUDES HARDWARE)
RM400	Front and Rear Cameras	Camera	488-9162	2	533-4305
		Plate Mount	558-2968	1	
		Bracket	539-3864	1	
	Left and Right Side Cameras	Camera	488-9162	2	543-4535
		Right Bracket Mount	565-8596	1	
		Mount Assembly	565-8595	2	
		Plate Mount	558-2968	2	
		Left Bracket Mount	565-8597	1	
	Front and Rear Chamber Cameras*	Camera	488-9161	2	543-4530
		Front Chamber Camera Mount	533-4309	1	
		Rear Chamber Camera Mount	565-8732	1	
RM500†, RM500B	Cameras**	Front, Rear and Rear Rotor Chamber Door	347-1668	3	421-8953
RM600, RM800	Left and Right Cameras	Camera	488-9163	2	479-0330
		Right Plate Mount	556-2283	1	
		Right Bracket Mount	556-2281	1	
		Left Plate Mount	556-2282	1	
		Left Bracket Mount	556-2280	1	
	Front, Rear, and Chamber Cameras	Front and Rear Cameras	488-9163	2	485-8942
		Chamber Cameras	488-9161	2	
		Rear Camera Mount	555-8400	1	
		Camera Harness Mounting Plate	558-2968	4	
		Front Camera Mount	556-2213	1	
		Rear Chamber Camera Mount	556-2286	1	
		Front Chamber Camera Mount	555-8418	1	
		Front and Rear Chamber Camera Cover	587-8953	2	

** If adding front and rear chamber cameras to the RM400, a second touch screen display is required. Please consult your Cat dealer if adding this option.*

*** If adding cameras to the RM500 or RM500B, an in-cab display is required. Please consult your Cat dealer if adding this option.*

† *Build Number: 02A. To identify the build number on your machine, refer to page 6 of this document.*



PREVENTATIVE MAINTENANCE

FOR PEAK PERFORMANCE

Regular preventative maintenance to the engine, hydraulics, fuel and rotor systems is key to keeping your equipment running during the milling season. ***Please refer to your Operation and Maintenance Manual for recommended maintenance intervals and procedures.*** The following tables include common filters and components needed to perform regular service on your equipment.

RM400
PREVENTATIVE MAINTENANCE

INTERVAL (HOURS)	SUBSYSTEM	DESCRIPTION	SERIAL NUMBER PREFIX	PART NUMBER	QUANTITY
500	Engine	Engine Oil Filter Element	AK3, R2J, R4H, Z4M	500-0483	1
		Fuel / Water Separator Filter Element		436-7077	1
	Fuel	Fuel Filter Element	AK3, R2J, R4H, Z4M	500-0480	2
	Rotor Drive	Rotor Bearing Oil Tank Breather	AK3, R2J, R4H, Z4M	183-3873	1
		Rotor Drive Differential Breather		243-0165	1
1000	Hydraulics	Propel / Fan Charge Filter Element	AK3, R2J, R4H, Z4M	389-1085	1
		Spray System Charge Filter Element *(if equipped)*		389-1079	
		Hydraulic Tank Breather		207-5997	1
		Return Hydraulic Oil Filter Element		086-3940	1
2000	Engine	Crankcase Breather Filter Element	AK3, Z4M	326-4689	1
			R2J, R4H	582-6323	1
	Fuel	Fuel Tank Cap	AK3, R2J, R4H, Z4M	350-7735	1
3000	Engine	Thermostat / Water Temperature Regulator	AK3, R2J, R4H, Z4M	377-3016	1
	Safety	Seat Belt	AK3, R2J, R4H, Z4M	542-6995	1
5000	DEF	DEF Injector Assembly	AK3, Z4M	485-9751	1
		DEF Injector Gasket		418-2073	1
		DEF Filter Gasket		391-5262	1
		Standard Efficiency DEF Fuel Filter		378-3187	1
		Standard Efficiency DEF Pump Filter		584-8137	1
		DEF Manifold High Debris Filter Sock		584-8142	1
6000	Engine	Cat ELC® Coolant Extender	AK3, R2J, R4H, Z4M	119-5152	2
		Coolant Conditioner Test Kit		8T-5296	1
10000	DEF	DEF Manifold Filter Kit	AK3, Z4M	506-5819	1
		DEF Manifold Filter Assembly		506-5818	1
		DEF Header Pickup Filter		591-2380	1
		DEF Header Sock		591-2383	1

RM500, RM500B
PREVENTATIVE MAINTENANCE

INTERVAL (HOURS)	SUBSYSTEM	DESCRIPTION	SERIAL NUMBER PREFIX	PART NUMBER	QUANTITY
250	Air Filter	Cab Air Filter – Fresh Air	E5K, JSX, MB9, R5W, RMZ, S3A, TAS	119-3355	1
		Cab Air Filter – Recirculating		234-0138	1
500	Engine	Advanced Efficiency Engine Oil Filter	E5K, JSX, MB9, R5W, RMZ, S3A, TAS	1R-1808	1
		Fuel / Water Separator Filter Element		326-1643	1
	Fuel	Advanced Efficiency Fuel Filter	E5K, JSX, MB9, R5W, RMZ, S3A, TAS	1R-0749	2
	Hydraulics	Hydraulic Tank Breather	E5K, JSX, MB9, R5W, RMZ, S3A, TAS	207-5997	1
		Rotor Bearing Oil Tank Breather		183-3873	1
	Rotor Drive	Rotor Drive Differential Breather	E5K, JSX, MB9, R5W, RMZ, S3A, TAS	243-0165	1
		Rotor Transmission Breather		4H-6112	1
1000	Engine	Radiator Cap (shunt tank cap)	E5K, JSX, MB9, R5W, RMZ, S3A, TAS	031-1119	1
		Propel / Fan Charge Filter Element		389-1085	1
	Hydraulics	Return Hydraulic Oil Filter Element	E5K, JSX, MB9, R5W, RMZ, S3A, TAS	054-1719	1
		Return Hydraulic Oil Filter Seal Kit		077-6325	1
		Spray System Charge Filter *(if equipped)*		1G-8878	1
		Hydraulic Tank Breather		207-5997	1
	Rotor Drive	Rotor Transmission Oil Filter	E5K, JSX, MB9, R5W, RMZ, S3A, TAS	108-1153	1
2000	Fuel	Fuel Tank Cap	E5K, JSX, MB9, R5W, RMZ, S3A, TAS	357-7399	1
3000	Engine	Thermostat / Water Temperature Regulator	E5K, JSX, MB9, R5W, RMZ, S3A, TAS	248-5513	2
		Thermostat / Water Temperature Regulator Cover Seal		341-1429	1
		Thermostat / Water Temperature Regulator Seal		3S-9643	2
	Safety	Seat Belt	E5K, JSX, MB9, R5W, RMZ, S3A, TAS	542-6995	1
5000	DEF	Standard Efficiency DEF Fuel Filter	E5K, MB9, R5W, S3A	378-3187	1
		DEF Injector Gasket		418-2073	1
		DEF Injector Assembly		485-9752	1
6000	Engine	Cat ELC Coolant Extender	E5K, JSX, MB9, R5W, RMZ, S3A, TAS	119-5152	2
		Coolant Conditioner Test Kit		8T-5296	1

RM600, RM800
PREVENTATIVE MAINTENANCE

INTERVAL (HOURS)	SUBSYSTEM	DESCRIPTION	SERIAL NUMBER PREFIX	PART NUMBER	QUANTITY
500	Engine	Advanced Efficiency Engine Oil Filter	AB9, BT8, GMP, KFS, NAF, RTJ, SP7, TPW	1R-1808	1
	Fuel	Fuel Filter Drain Kit	AB9, BT8, GMP, KFS, NAF, RTJ, SP7, TPW	354-5833	2
		Primary Fuel Filter Element		436-7077	1
		Fuel Filter Element		500-0480	1
		Fuel Filter Drain Kit		563-7916	2
		Fuel and Water Separator Drain Kit		563-7917	1
1000	DEF	Fumes Disposal Filter Element	GMP, NAF, SP7, TPW	342-1725	2
	Hydraulics	Return Hydraulic Oil Filter Element	AB9, BT8, GMP, KFS, NAF, RTJ, SP7, TPW	054-1719	1
		Propel / Fan Charge Filter Element Seal		095-1671	1
		Hydraulic Tank Breather		207-5997	1
		Propel / Fan Charge Filter Element		389-1088	1
	Rotor Drive	Rotor Final Drive Breather	AB9, BT8, GMP, KFS, NAF, RTJ, SP7, TPW	535-8636	1
	Spray System	Spray System Charge Filter *(if equipped)*	AB9, BT8, GMP, KFS, NAF, RTJ, SP7, TPW	1G-8878	1
2000	Fuel	Fuel Cap	AB9, BT8, GMP, KFS, NAF, RTJ, SP7, TPW	350-7735	1
3000	Engine	Thermostat / Water Temperature Regulator	AB9, BT8, GMP, KFS, NAF, RTJ, SP7, TPW	247-7133	2
		Thermostat / Water Temperature Regulator Seal		341-1429	1
	Safety	Seat Belt	AB9, BT8, GMP, KFS, NAF, RTJ, SP7, TPW	542-6995	1
5000	DEF	DEF Injector Gasket	GMP, NAF, SP7, TPW	418-2073	1
		DEF Injector Assembly		485-9752	1
		Standard Efficiency DEF Fuel Filter		378-3187	1
6000	Engine	Cat ELC Coolant Extender	AB9, BT8, GMP, KFS, NAF, RTJ, SP7, TPW	119-5152	2
		Coolant Conditioner Test Kit		4C-9301	1
10000	DEF	DEF Header Pickup Filter	GMP, NAF, SP7, TPW	591-2380	1
		DEF Header Sock		591-2383	1



VISIONLINK®

COMPLETE VISIBILITY TO MANAGE YOUR ENTIRE FLEET

Are you ready to take the guesswork out of fleet management? VisionLink® delivers easy-to-understand actionable insights to help you make informed decisions at every turn. Get the most out of your entire fleet—from one single, intuitive, and trusted application.

DESIGNED FOR FLEETS OF 1 TO 100+

VisionLink is a cloud-based application that takes the guesswork out of managing your entire fleet – regardless of the equipment manufacturer. Review equipment data from your desktop or mobile device to maximize uptime and optimize assets. With interactive dashboards, VisionLink makes it easier for operations of all sizes to make informed decisions that lower costs and boost productivity. Your Cat Dealer can help you determine and obtain the VisionLink subscription (per machine) that best fits your business needs.

ENTIRE FLEET VISIBILITY

+ Get actionable data insights for all assets regardless of make
+ Manage mixed OEM fleets via one interface
+ Monitor owned, rented, or leased assets

MAXIMIZE UPTIME

+ Monitor equipment health, fault codes, fluid analysis, and inspection due dates
+ Reduce unplanned downtime with critical alerts
+ Order parts and schedule service within the platform

UP-TO-DATE ASSET TRACKING

+ Track location, operating hours, fuel levels, health issues, and overall utilization
+ View work tool attachment locations across multiple worksites and measure working hours to predict the need for tool maintenance

OPTIMIZE UTILIZATION

+ Manage according to projects, groups, or geofences
+ Set utilization targets and monitor performance
+ Make informed, data-based decisions to reduce operating costs

Not all features are available for every model. Please consult your Cat dealer for subscription offerings.

HOW IT WORKS

ONE-STOP SOLUTION
VisionLink is your one-stop platform for easy-to-understand data and actionable insights to optimize your assets across your entire fleet.

MIXED FLEET MANAGEMENT
Manage all your assets—regardless of brand. Connect to 3rd party and other OEM data providers or import OEM assets using Cat Product Link™ devices.

API CONNECTIONS
Application Programming Interfaces (APIs) allow VisionLink to connect with other software applications using ISO (AEMP 2.0) standards or custom APIs for more advanced data features such as geofences.

MOBILE APP
Stay on the go and manage your fleet—wherever you are. Pull up VisionLink on your desktop or mobile app for iPhone and Android users.

IN-APP SUPPORT
Navigate the app with confidence. VisionLink provides in-app help, FAQs, and tutorial videos to guide you on features and functions.

ONE INTEGRATED EXPERIENCE
VisionLink integrates with many Cat applications including: Cat Inspect, Cat S·O·S℠, Cat SIS2 (Service Information System), and parts.cat.com. Further integrations are planned.

LET'S DO THE WORK.™

QEXQ3133-01 (11/2024)
Replaces QEXQ3133

© 2024 Caterpillar. All Rights Reserved. CAT, CATERPILLAR, LET'S DO THE WORK, their respective logos, "Caterpillar Corporate Yellow", the "Power Edge" and Cat "Modern Hex" trade dress as well as corporate and product identity used herein, are trademarks of Caterpillar and may not be used without permission.

VisionLink is a trademark of Caterpillar Inc., registered in the United States and in other countries.