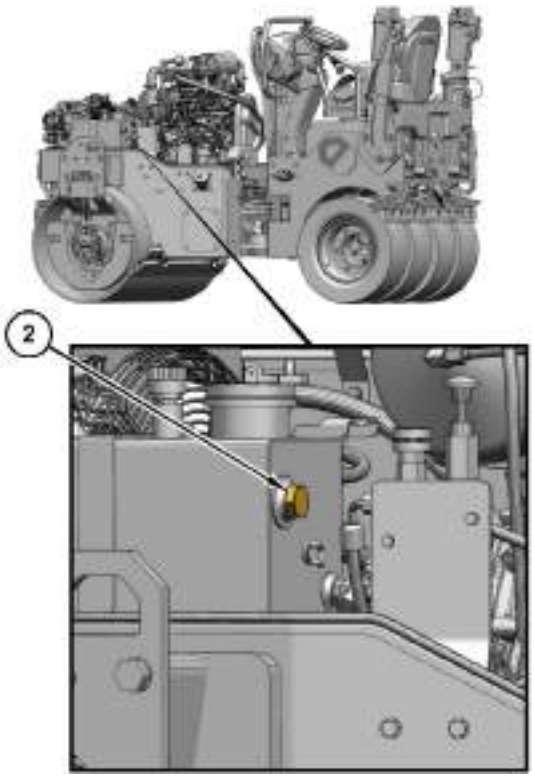


Illustration 148 g06676546

(2) Sight gauge

8. Check the oil level in sight gauge (2) on the hydraulic tank. Maintain the oil level between the markings in sight gauge (2). Refer to “Hydraulic System Oil Level - Check“ for more information.

Note: Refer to “General Hazard Information“ for more information that pertains to containing fluid spillage.

9. If required add oil. Refer to “Lubricant Viscosities“ and “Capacities (Refill)“ for more information.

10. Stop the engine. Refer to “Stopping the Engine“ for more information.

11. Close the engine compartment hood (1). Refer to “Access Doors and Covers“ for more information.

i08470219

Hydraulic System Oil Level - Check

SMCS Code: 5056-535-FLV; 5095-535-FLV

WARNING

Accidental machine starting can cause injury or death to personnel working on the machine.

To avoid accidental machine starting, turn the battery disconnect switch to the OFF position and remove the key. If the machine is not equipped with a battery disconnect switch, disconnect the battery cables from the battery and tape the battery clamps.

Place a do not operate tag at the battery disconnect switch location to inform personnel that the machine is being worked on.

WARNING

At operating temperature, the hydraulic tank is hot and under pressure.

Hot oil and components can cause personal injury. Do not allow hot oil or components to contact skin.

Remove the filler cap only when the engine is stopped, and the filler cap is cool enough to touch with your bare hand. Remove the filler cap slowly in order to relieve pressure.

WARNING

Personal injury can result from hydraulic oil pressure and hot oil.

Hydraulic oil pressure can remain in the hydraulic system after the engine has been stopped. Serious injury can be caused if this pressure is not released before any service is done on the hydraulic system.

Make sure all of the attachments have been lowered, oil is cool before removing any components or lines. Remove the oil filler cap only when the engine is stopped, and the filler cap is cool enough to touch with your bare hand.

⚠ WARNING

Personal injury or death can result from improperly checking for a leak.

Always use a board or cardboard when checking for a leak. Escaping air or fluid under pressure, even a pin-hole size leak, can penetrate body tissue causing serious injury, and possible death.

If fluid is injected into your skin, it must be treated immediately by a doctor familiar with this type of injury.

NOTICE
Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, PERJ1017, “Dealer Service Tool Catalog” for tools and supplies suitable to collect and contain fluids on Cat ® products.

Dispose of all fluids according to local regulations and mandates.

NOTICE
Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

NOTICE
Not following the recommendations found in this manual can lead to reduced performance and compartment failure.

Prepare the machine for maintenance. Refer to “Prepare the Machine for Maintenance“ for more information.

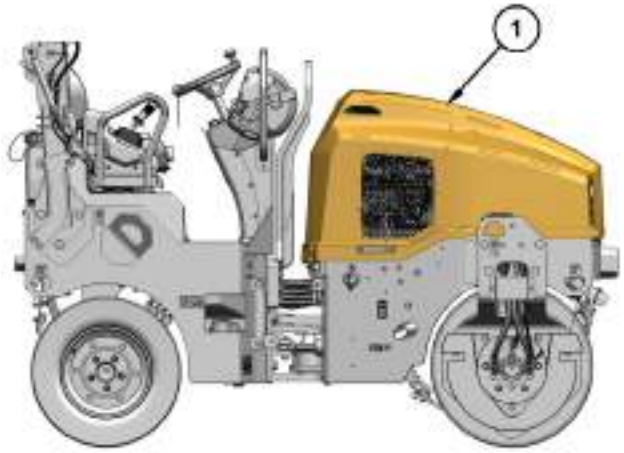


Illustration 149 g06674584

(1) Hood

1. Open the engine compartment hood (1). Refer to “Access Doors and Covers“ for more information.

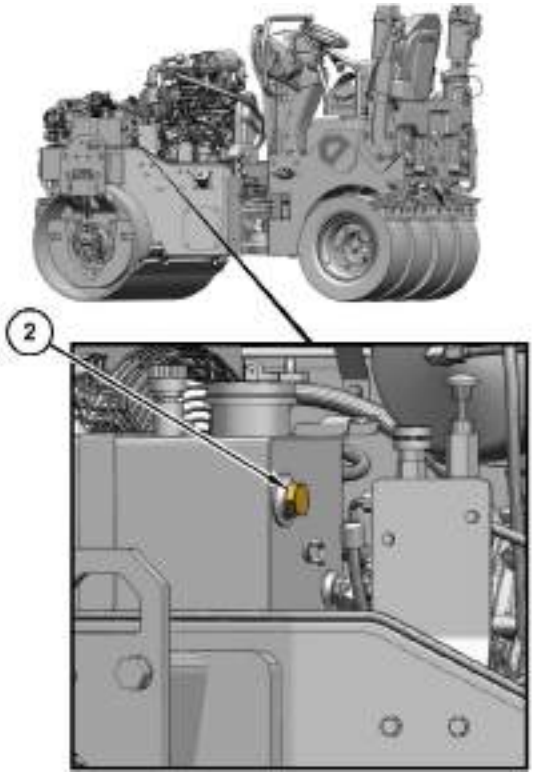


Illustration 150 g06676546

(2) Sight gauge

2. Observe the level of hydraulic oil in sight gauge (2). Maintain the oil level between the markings in sight gauge (2).

Note: Refer to “General Hazard Information“ for more information that pertains to containing fluid spillage.

3. If required, add oil. Refer to “Lubricant Viscosities“ and “Capacities (Refill)“ for more information.

4. Close the engine compartment hood (1). Refer to “Access Doors and Covers“ for more information.

i08470234

Hydraulic System Oil Sample - Obtain

SMCS Code: 5050-008; 5056-008; 5095-008

WARNING

At operating temperature, the hydraulic tank is hot and under pressure.

Hot oil and components can cause personal injury. Do not allow hot oil or components to contact skin.

Remove the filler cap only when the engine is stopped, and the filler cap is cool enough to touch with your bare hand. Remove the filler cap slowly in order to relieve pressure.

WARNING

Personal injury can result from hydraulic oil pressure and hot oil.

Hydraulic oil pressure can remain in the hydraulic system after the engine has been stopped. Serious injury can be caused if this pressure is not released before any service is done on the hydraulic system.

Make sure all of the attachments have been lowered, oil is cool before removing any components or lines. Remove the oil filler cap only when the engine is stopped, and the filler cap is cool enough to touch with your bare hand.

WARNING

Personal injury or death can result from improperly checking for a leak.

Always use a board or cardboard when checking for a leak. Escaping air or fluid under pressure, even a pin-hole size leak, can penetrate body tissue causing serious injury, and possible death.

If fluid is injected into your skin, it must be treated immediately by a doctor familiar with this type of injury.

WARNING

Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact the skin.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, PERJ1017, “Dealer Service Tool Catalog” for tools and supplies suitable to collect and contain fluids on Cat ® products.

Dispose of all fluids according to local regulations and mandates.

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

Prepare the machine for maintenance. Refer to “Prepare the Machine for Maintenance“ for more information.

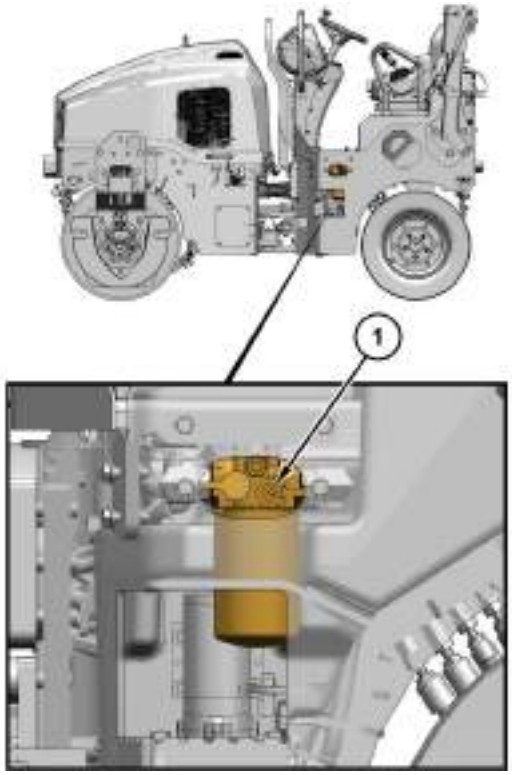


Illustration 151 g06676543

(1) Sampling port

Use sampling port (1) for obtaining the oil sample. Refer to Special Publication, SEBU6250, “Caterpillar Machine Fluids Recommendations” for further information on obtaining an oil sample.

i08470237

Hydraulic Tank Breather - Replace

SMCS Code: 5050-510-BRE; 5056-510-BRE; 5118-510

WARNING

At operating temperature, the hydraulic tank is hot and under pressure.

Hot oil and components can cause personal injury. Do not allow hot oil or components to contact skin.

Remove the filler cap only when the engine is stopped, and the filler cap is cool enough to touch with your bare hand. Remove the filler cap slowly in order to relieve pressure.

WARNING

Personal injury can result from hydraulic oil pressure and hot oil.

Hydraulic oil pressure can remain in the hydraulic system after the engine has been stopped. Serious injury can be caused if this pressure is not released before any service is done on the hydraulic system.

Make sure all of the attachments have been lowered, oil is cool before removing any components or lines. Remove the oil filler cap only when the engine is stopped, and the filler cap is cool enough to touch with your bare hand.

WARNING

Personal injury or death can result from improperly checking for a leak.

Always use a board or cardboard when checking for a leak. Escaping air or fluid under pressure, even a pin-hole size leak, can penetrate body tissue causing serious injury, and possible death.

If fluid is injected into your skin, it must be treated immediately by a doctor familiar with this type of injury.

WARNING

Hot oil and hot components can cause personal injury. Do not allow hot oil or hot components to contact the skin.

NOTICE
Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

NOTICE
Not following the recommendations found in this manual can lead to reduced performance and compartment failure.

Prepare the machine for maintenance. Refer to “Prepare the Machine for Maintenance“ for more information.

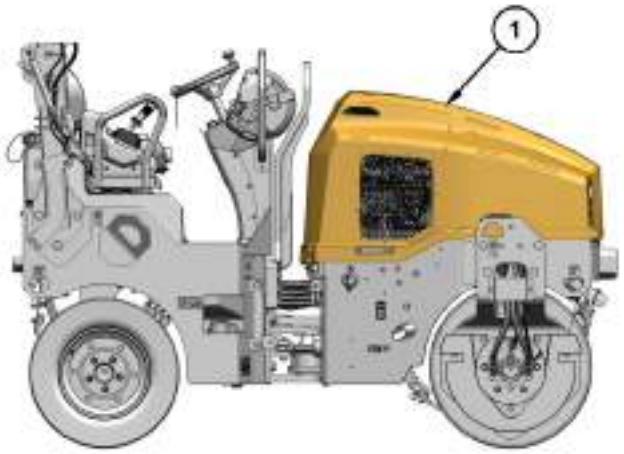


Illustration 152 g06674584

(1) Hood

1. Open the engine compartment hood (1). Refer to “Access Doors and Covers“ for more information.

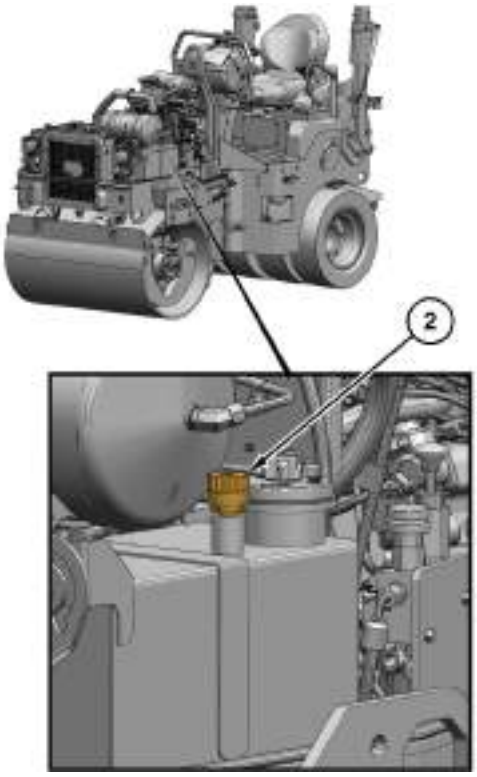


Illustration 153 g06676627

(2) Breather

2. Slowly loosen breather (2) and remove breather (2).
3. Install new breather (2).
4. Close the engine compartment hood (1). Refer to “Access Doors and Covers“ for more information.

i02072906

Hydraulic Tank Strainer - Clean

SMCS Code: 5056-070-STR



Illustration 154 g01059072

1. Remove the filler cap for the hydraulic tank.
2. Pull the strainer for the hydraulic tank out of the filler tube.
3. Clean the strainer in clean, nonflammable solvent. Dry the strainer with compressed air.
4. Install the strainer and the filler cap.

i04998410

Isolation Mounts - Inspect

SMCS Code: 5654-040

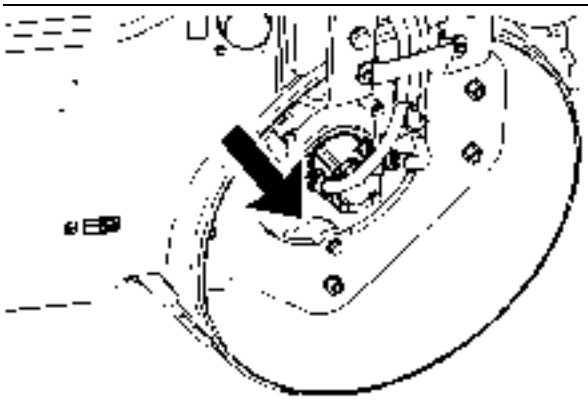


Illustration 155 g03175657

Inspect the isolation mounts for damage, cracking, or splitting. If an isolation mount is damaged, replace the mount. If two or more of the isolation mounts are damaged, replace all of the isolation mounts. Refer to the Disassembly and Assembly Manual for your machine for further information on removing and installing the isolation mounts.

i03003308

Neutral Start Switch - Test

SMCS Code: 1424-535; 1424-081; 1424-025

⚠ WARNING

The machine may lurch forward if the neutral start switch is out of adjustment. Be sure the area is clear of all personnel and equipment before performing this test.

1. Depress the parking brake knob in order to engage the parking brake.
2. Move the propel lever to the FORWARD position. Hold the engine start switch in the START position. Slowly move the propel lever toward the NEUTRAL position.
3. If the engine starts before you move the propel lever to the NEUTRAL position, the neutral start switch requires adjustment. Do not operate the machine until the repairs have been made. Refer to the service manual for your machine for the procedure on neutral start switch adjustment.
4. Move the propel lever to the REVERSE position. Hold the engine start switch in the START position. Slowly move the propel lever toward the NEUTRAL position.
5. If the engine starts before you move the propel lever to the NEUTRAL position, the neutral start switch requires adjustment. Do not operate the machine until the repairs have been made. Refer to the service manual for your machine for the procedure on neutral start switch adjustment.

i02106227

Oil Filter - Inspect

SMCS Code: 1308-507; 3004-507; 3067-507; 5068-507

Inspect a Used Filter for Debris

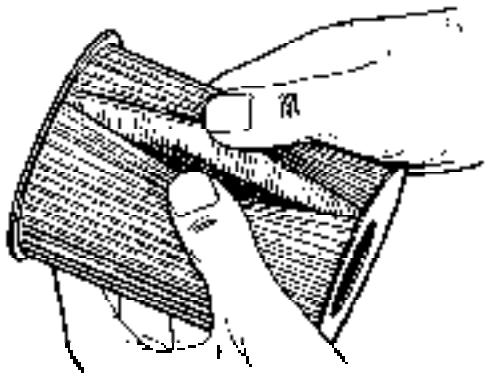


Illustration 156 g00100013

The element is shown with debris.

Use a filter cutter to cut the filter element open. Spread apart the pleats and inspect the element for metal and for other debris. An excessive amount of debris in the filter element can indicate a possible failure.

If metals are found in the filter element, a magnet can be used to differentiate between ferrous metals and nonferrous metals.

Ferrous metals can indicate wear on steel parts and on cast iron parts.

Nonferrous metals can indicate wear on the aluminum parts of the engine such as main bearings, rod bearings, or turbocharger bearings.

Small amounts of debris may be found in the filter element. This could be caused by friction and by normal wear. Consult your Caterpillar dealer in order to arrange for further analysis if an excessive amount of debris is found.

Using an oil filter element that is not recommended by Caterpillar can result in severe engine damage to engine bearings, to the crankshaft, and to other parts. This can result in larger particles in unfiltered oil. The particles could enter the lubricating system and the particles could cause damage.

i08470276

Operator Presence Switch - Test

SMCS Code: 1439-081; 1616-081

Prepare the machine for maintenance. Refer to “Prepare the Machine for Maintenance“.

Perform the following procedure to test the operator presence switch:

1. Move the machine to an open area with no obstacles or people nearby.
2. Fasten the seat belt. Refer to “Seat Belt“.
3. Start the engine. Refer to “Engine Starting“. Move the engine speed switch to LOW position. Refer to “Operator Controls“.
4. Move the propel control lever slightly forward until the machine just begins to move. Refer to “Operator Controls“.
5. Slowly shift your weight off the seat.
6. If the operator presence switch is functioning correctly, the machine will stop moving when your weight is off the seat.
7. If the machine does not stop and there is no weight on the seat, consult your Cat ® dealer for repair of the operator presence switch system. Do not operate the machine until the operator presence switch system is repaired.

Note: There are two switches in the seat to allow shifting weight to the left and the right without engaging the seat switch. Both switches must be open, for the machine to stop.

i02450488

Radiator Core - Clean

SMCS Code: 1353-070-KO

Open the engine compartment.

The radiator core is located at the front of the engine compartment. The radiator core is used to cool both the engine coolant and the hydraulic oil.

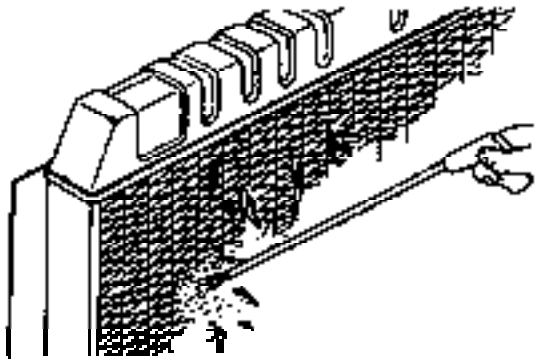


Illustration 157 g00101939

Inspect the radiator core for debris. If necessary, clean the radiator.

Compressed air is preferred, but high pressure water or steam can be used to remove dust and general debris from a radiator. Clean the radiator according to the condition of the radiator.

See Special Publication, SEBD0518, “Know Your Cooling System” for more information about cleaning radiator fins.

Close the engine compartment.

i05401018

Rollover Protective Structure (ROPS) - Inspect

SMCS Code: 7323-040



Illustration 158 g03412486

Standard ROPS

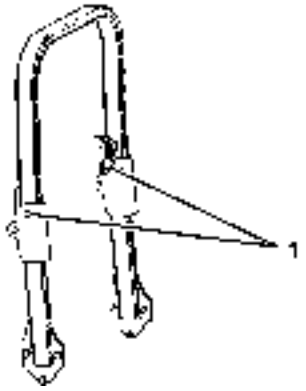


Illustration 159 g03412487

Foldable ROPS

Inspect the rollover protective structure (ROPS) for cracks. Inspect the ROPS for any loose bolts or damaged bolts. Replace the damaged bolts with original equipment parts only.

Note: If your machine is equipped with a foldable ROPS, inspect locking pins (1) for wear or damage.

Note: Apply oil to all ROPS bolt threads before you install the bolts. Failure to apply the oil to the threads can result in an improper bolt torque.

Do not straighten the ROPS or repair the ROPS by welding reinforcement plates to the ROPS.

Consult your Caterpillar dealer for the repair of the ROPS.

i04423622

Seat Belt - Inspect

SMCS Code: 7327-040

Always inspect the condition of the seat belt and the condition of the seat belt mounting hardware before you operate the machine. Replace any parts that are damaged or worn before you operate the machine.



Illustration 160 g02620101

Typical example

Inspect buckle (1) for wear or for damage. If the buckle is worn or damaged, replace the seat belt.

Inspect seat belt (2) for webbing that is worn or frayed. Replace the seat belt if the webbing is worn or frayed.

Inspect all seat belt mounting hardware for wear or for damage. Replace any mounting hardware that is worn or damaged. Make sure that the mounting bolts are tight.

If your machine is equipped with a seat belt extension, also perform this inspection procedure for the seat belt extension.

Contact your Cat dealer for the replacement of the seat belt and the mounting hardware.

Note: The seat belt should be replaced within 3 years of the date of installation. A date of installation label is attached to the seat belt retractor and buckle. If the date of installation label is missing, replace belt within 3 years from the year of manufacture as indicated on belt webbing label, buckle housing, or installation tags (non-retractable belts).

i06891605

Seat Belt - Replace

SMCS Code: 7327-510

The seat belt should be replaced within 3 years of the date of installation. A date of installation label is attached to the seat belt retractor and buckle. If the date of installation label is missing, replace belt within 3 years from the year of manufacture as indicated on belt webbing label, buckle housing, or installation tags (non-retractable belts).

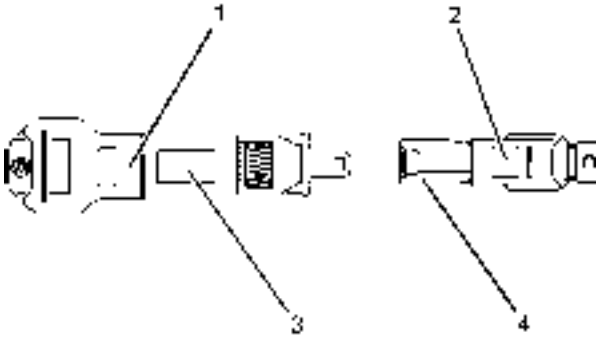


Illustration 161 g01152685

Typical Example

(1) Date of installation (retractor)
(2) Date of installation (buckle)
(3) Year of manufacture (tag) (fully extended web)
(4) Year of manufacture (underside) (buckle)

Consult your Cat dealer for the replacement of the seat belt and the mounting hardware.

Determine age of new seat belt before installing on seat. A manufacture label is on belt webbing and imprinted on belt buckle. Do not exceed install by date on label.

Complete seat belt system should be installed with new mounting hardware.

Date of installation labels should be marked and affixed to the seat belt retractor and buckle.

Note: Date of installation labels should be permanently marked by punch (retractable belt) or stamp (non-retractable belt).

If your machine is equipped with a seat belt extension, also perform this replacement procedure for the seat belt extension.

i08470635

Steering Cylinder Ends - Lubricate

SMCS Code: 4303-086-BD

⚠ WARNING

Block the machine in order to prevent unexpected movement of the machine. Failure to do so may result in personal injury or death.

Prepare the machine for maintenance. Refer to “Prepare the Machine for Maintenance“.

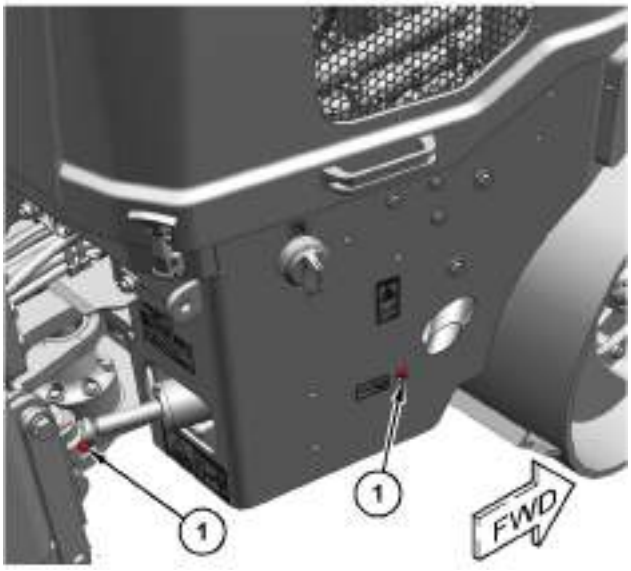


Illustration 162 g06677216

Right side view of the machine

(1) Grease fitting

The steering cylinder is in the pivot area, on the right side of the machine. Lubricate fitting (1) at each end of the steering cylinder. Refer to “Lubricant Viscosities“ for the selection of grease type.

Note: Wipe all the fittings before you lubricate the fittings.

i05006984

Tire Inflation - Check

SMCS Code: 4203-535-PX

S/N: 6421–Up

S/N: 2C71–Up

S/N: BT71–Up

S/N: XGC1–Up

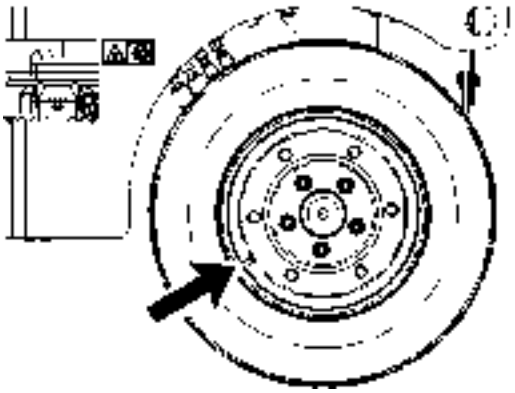


Illustration 163 g03179559

If necessary, inflate the tires.

For normal operating conditions, inflate the tires to the proper pressure:

Table 16

Tire Size	Minimum Pressure	Maximum Pressure
9.5/65-15	220 kPa (32 psi)	324 kPa (47 psi)

The tire inflation pressure is based on the weight of a machine that is ready to work and the machine is without attachments. The pressure is based on the rated payload, and in average operating conditions. Pressures for each application may vary. Consult your Caterpillar dealer for more information about proper tire inflation pressures.

i08468344

Tire Scraper - Inspect/Adjust/Replace

SMCS Code: 6607-025; 6607-510; 6607-040

S/N: 6421–Up

S/N: 2C71–Up

S/N: BT71–Up

S/N: XGC1–Up

WARNING

Block the machine in order to prevent unexpected movement of the machine. Failure to do so may result in personal injury or death.

Prepare the machine for maintenance. Refer to “Prepare the Machine for Maintenance“.

Inspect Scrapers

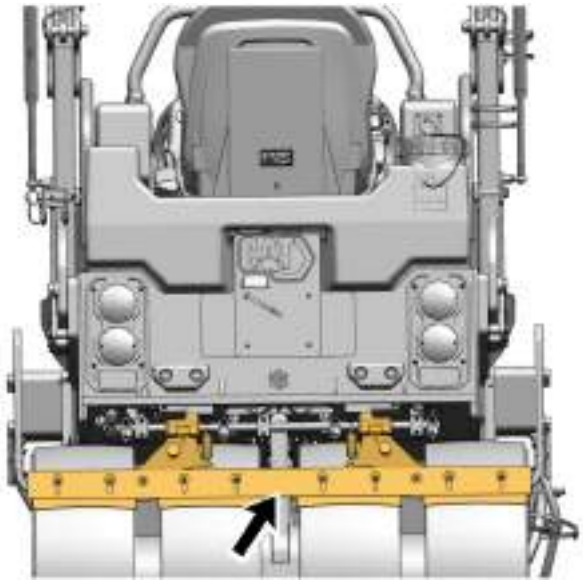


Illustration 164 g06675507

Rear view of the machine displaying the location of tire scraper

1. Remove dirt and debris from scrapers.

2. Inspect the scrapers for wear or damage.

3. Move the scraper down using the adjustment slots that are provided on the support for the scraper to maintain the original angle of the scraper. If no adjustment is remaining in the slot, replace the scraper.

Adjust Scrapers

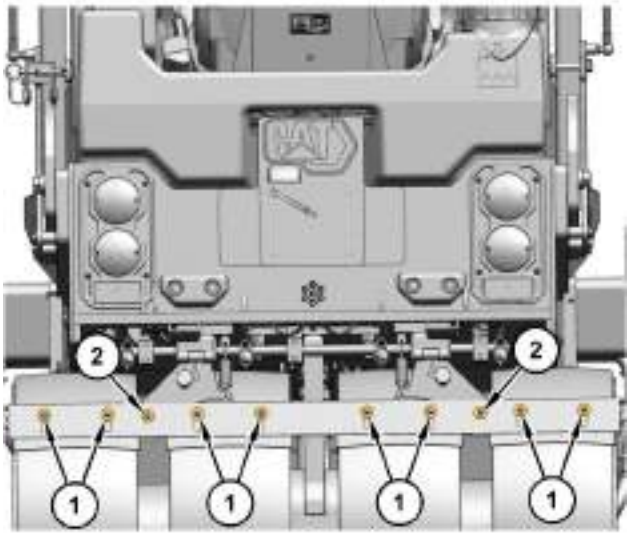


Illustration 165 g06675488

Rear view of the machine

(1) Bolt
(2) Adjustment Bolt

The tire scrapers should be adjusted slightly above the surface of the tire. The scraper should not touch the tire.

1. Adjust the scraper so that the tire scraper is slightly above the tire. Leave a 5 mm (0.2 inch) gap between the tire and the scraper.

2. Loosen bolts (1) to adjust the scraper. When the scraper is in the desired position, tighten bolts (1). The scrapers should be perpendicular to the surfaces of the tires. Use adjustment bolts (2), if necessary. Refer to Specifications, SENR3130, “Torque Specifications” for the correct tightening torque values for the bolts.

Replace Scrapers

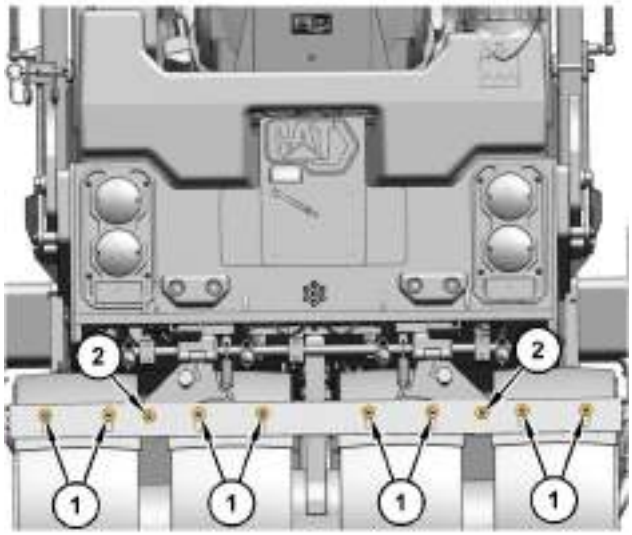


Illustration 166 g06675488

Rear view of the machine

(1) Bolt
(2) Adjustment Bolt

1. Loosen bolts (1) and remove the damaged scraper.

2. Install the new scraper and tighten bolts (1). Refer to Specifications, SENR3130, “Torque Specifications” for the correct tightening torque values for the bolts.

3. Leave a 5 mm (0.2 inch) gap between the tire and the scraper.

4. The scrapers should be perpendicular to the surfaces of the tires. Use adjustment bolts (2), if necessary. Refer to Specifications, SENR3130, “Torque Specifications” for the correct tightening torque values for the bolts.

i08470911

Water and Additive Spray Nozzles - Clean

SMCS Code: 1743-070; 5612-070; 5615-070

Prepare the machine for maintenance. Refer to “Prepare the Machine for Maintenance“.

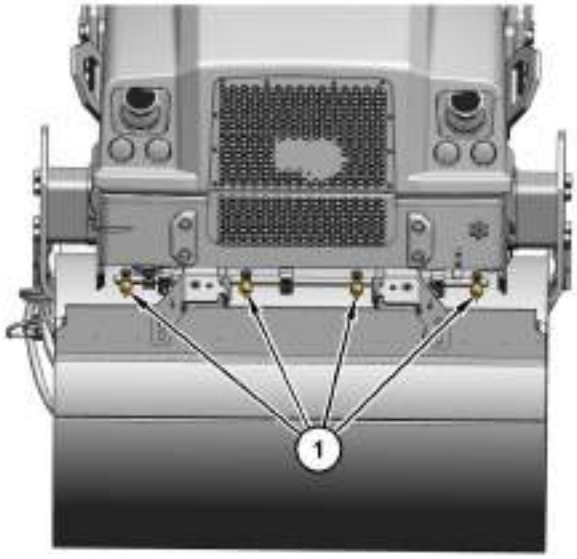


Illustration 167 g06675395

Front view of the machine

(1) Nozzle assembly

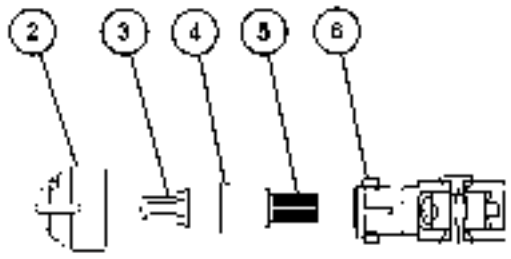


Illustration 168 g06675430

Components of nozzle assembly (1)

(2) Cap
(3) Spray nozzle
(4) Rubber washer
(5) Screen
(6) Nozzle body

1. Remove cap (2).

2. Remove spray nozzle (3).

3. Remove rubber washer (4).

4. Remove screen (5).

5. Wash nozzle (3) and screen (5) in a clean, non-flammable solvent.

6. Install screen (5) into nozzle body (6).

7. Install rubber washer (4).

8. Install nozzle (3).

9. Install cap (2).

Note: Rotation of the nozzle may be required to establish a correct spray pattern.

i08468695

Water Spray System - Drain

SMCS Code: 5612-543

WARNING

Block the machine in order to prevent unexpected movement of the machine. Failure to do so may result in personal injury or death.

Prepare the machine for maintenance. Refer to “Prepare the Machine for Maintenance“.

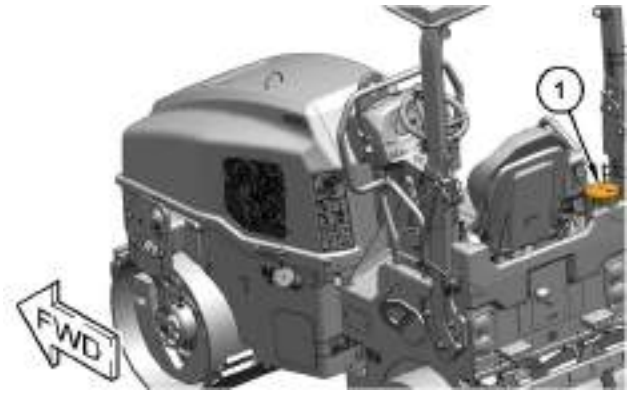


Illustration 169 g06675102

(1) Filler cap

1. Remove filler cap (1) on the water tank.

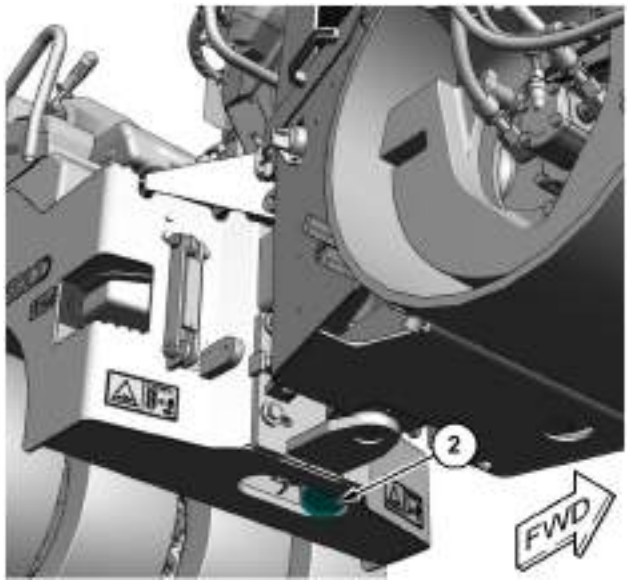


Illustration 170 g06677122

2. Open drain cap (2) to drain the water from the water pump.

3. Allow the water in the tank, lines, and the filter to drain.

4. When the tank is empty, turn on the water pump for 30 seconds to drain the water pump. Refer to “Operator Controls“.

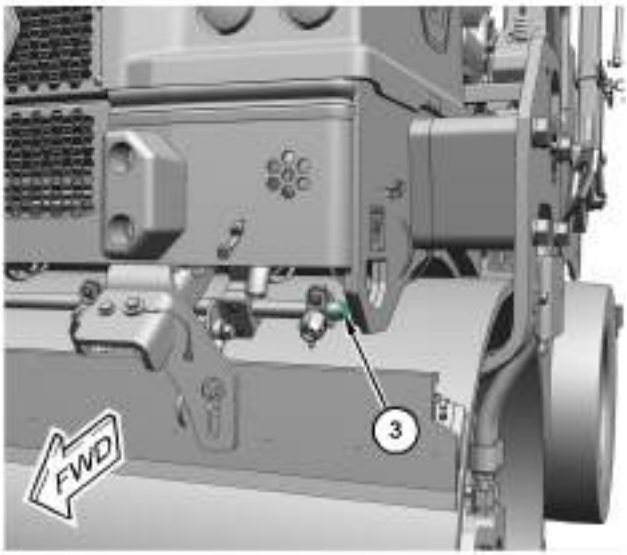


Illustration 171 g06677139

(3) Cap

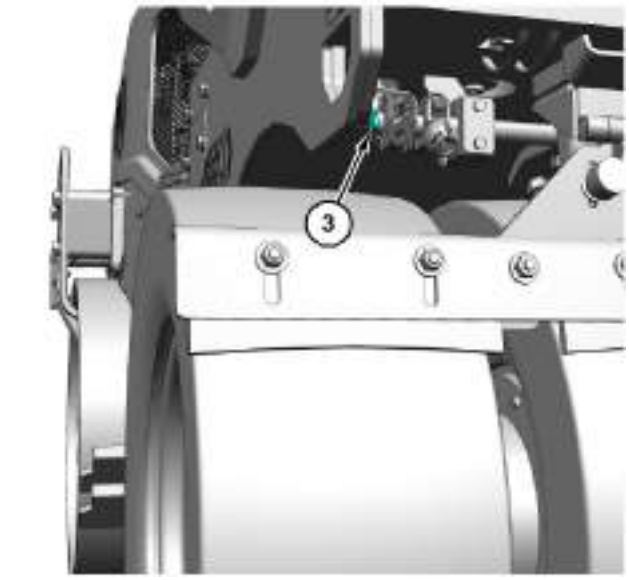


Illustration 172 g06677153

Rear of the machine

(3) Cap

5. Remove caps (3) that are at the ends of the front and rear spray bars, to drain the water from the spray bars.

6. Reinstall caps (3) at the ends of the front and rear spray bars.

7. Close drain cap (2).

8. Reinstall filler cap (1).

i08470702

Water Spray System Filter - Clean

SMCS Code: 5612-070-FI

WARNING

Block the machine in order to prevent unexpected movement of the machine. Failure to do so may result in personal injury or death.

Prepare the machine for maintenance. Refer to “Prepare the Machine for Maintenance“.

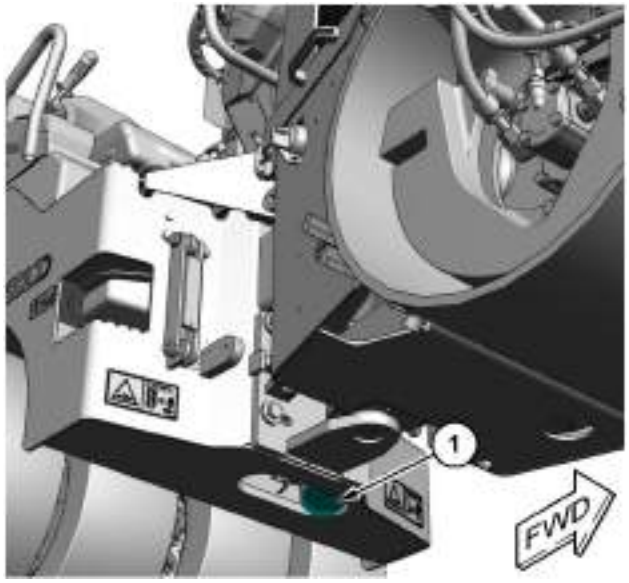


Illustration 173 g06677291

Right side view of the machine

(1) Cap

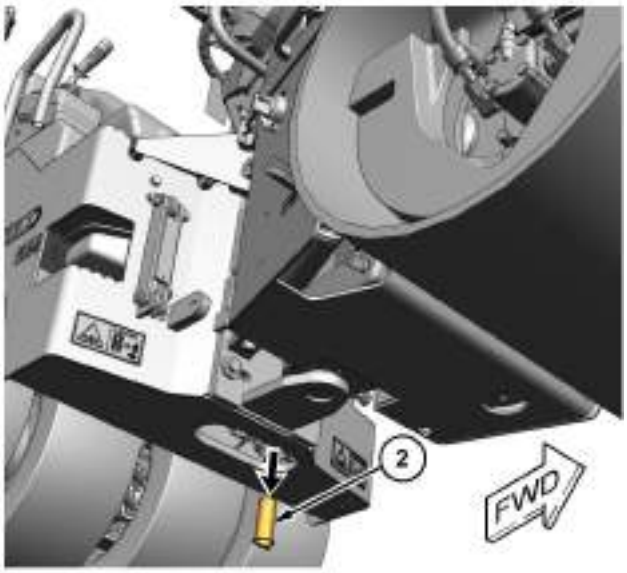


Illustration 174 g06677328

Right side view of the machine

(2) Strainer

Note: Be careful not to lose the spring that holds up the strainer into the tank opening.

1. Remove cap (1). Remove strainer (2) by pulling out from the tank opening in the direction shown in Illustration 174 .

2. Clean cap (1) with water or compressed air.

3. Clean strainer (2) with water or compressed air.

4. Install strainer (2).

5. Install cap (1).

i08468097

Water Tank Strainer - Clean and Inspect

SMCS Code: 5613-571-STR

Prepare the machine for maintenance. Refer to “Prepare the Machine for Maintenance“.

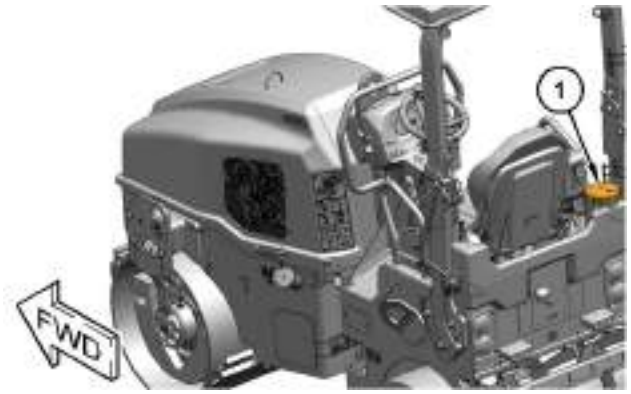


Illustration 175 g06675102

(1) Filler cap

1. Remove filler cap (1).

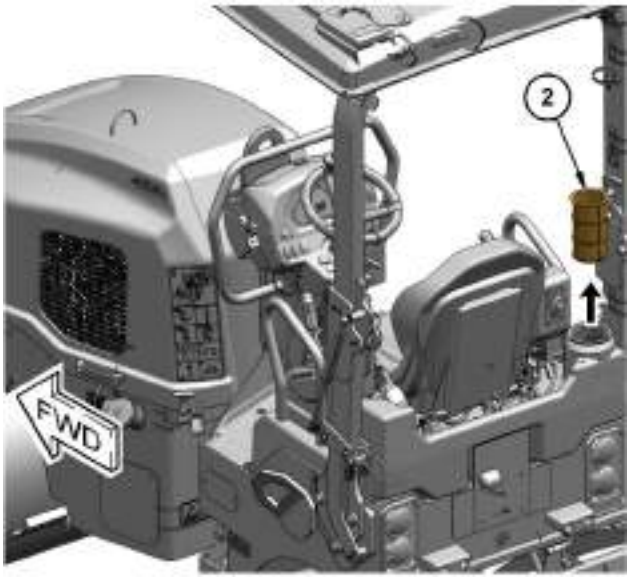


Illustration 176 g06675115

2. Remove strainer (2).

3. Clean filler cap (1) with clean water or compressed air.

4. Clean strainer (2) with clean water or compressed air.

5. Replace any components that are damaged.

6. Install strainer (2).

7. Fill the tank with clean water.

8. Install filler cap (1).

i08468056

Wheel Nuts - Tighten

SMCS Code: 4201-527-NT; 4210-527

S/N: 6421–Up

S/N: 2C71–Up

S/N: BT71–Up

S/N: XGC1–Up

Prepare the machine for maintenance. Refer to “Prepare the Machine for Maintenance“.



Illustration 177 g06675048

(1) Wheel nut

Tighten wheel nuts (1) to 200 ± 10 N·m (147 ± 7 lb ft).

Warranty Section

Warranty Information

i08769122

Emissions Warranty Information

SMCS Code: 1000

The certifying engine manufacturer warrants to the ultimate purchaser and each subsequent purchaser that:

1. New non-road diesel engines and stationary diesel engines less than 10 L per cylinder (including Tier 1 and Tier 2 marine engines < 37 kW, but excluding locomotive and other marine engines) operated and serviced in the United States and Canada, including all parts of their emission control systems (“emission related components”), are:

a. Designed, built, and equipped so as to conform, at the time of sale, with applicable emission standards prescribed by the United States Environmental Protection Agency (EPA) by way of regulation.

b. Free from defects in materials and workmanship in emission-related components that can cause the engine to fail to conform to applicable emission standards for the warranty period.

2. New non-road diesel engines (including Tier 1 and Tier 2 marine propulsion engines < 37 kW and Tier 1 through Tier 4 marine auxiliary engines < 37 kW, but excluding locomotive and other marine engines) operated and serviced in the state of California, including all parts of their emission control systems (“emission related components”), are:

a. Designed, built, and equipped so as to conform, at the time of sale, to all applicable regulations adopted by the California Air Resources Board (ARB).

b. Free from defects in materials and workmanship which cause the failure of an emission-related component to be identical in all material respects to the component as described in the engine manufacturer's application for certification for the warranty period.

3. New non-road diesel engines installed in construction machines conforming to the South Korean regulations for construction machines manufactured after January 1, 2015, and operated and serviced in South Korea, including all parts of their emission control systems (“emission related components”), are:

a. Designed, built, and equipped so as to conform, at the time of sale, with applicable emission standards prescribed in the Enforcement Rule of the Clean Air Conservation Act promulgated by South Korea MOE.

b. Free from defects in materials and workmanship in emission-related components that can cause the engine to fail to conform to applicable emission standards for the warranty period.

4. New China non-road 4 mobile diesel engines operated and serviced in China, including all parts of their emission control systems (“emission related components”), are:

a. Designed, built, and equipped so as to conform, at the time of manufacture, sale, and import with applicable emission standards in the promulgated by Enforcement Rule of the Clean Air Conservation Act Ministry of Ecology and Environment (MEE).

b. Free from defects in materials and workmanship in emission-related components that can cause the engine to fail to conform to applicable emission standards for the warranty period.

A detailed explanation of the Emission Control Warranty that is applicable to new non-road and stationary diesel engines, including the components covered and the warranty period, is found in the Emission Control Warranty statement available at the Cat Warranty website. Consult your authorized Cat dealer to determine if your engine is subject to an Emission Control Warranty, and to obtain a copy of the applicable warranty publication.

Reference Information Section

Reference Materials

i08292374

Reference Material

SMCS Code: 1000; 7000

Additional literature regarding your product may be purchased from your local Cat dealer or by visiting publications.cat.com. Use the product name, sales model, and serial number to obtain the correct information for your product.

publications.cat.com

i08292382

Decommissioning and Disposal

SMCS Code: 1000; 7000

When the product is removed from service, local regulations for the product decommissioning will vary. Disposal of the product will vary with local regulations.

Improperly disposing of waste can threaten the environment. Obey all local regulations for the decommissioning and disposal of materials.

Utilize appropriate personal protective equipment when decommissioning and disposing product.

Consult the nearest Cat dealer for additional information. Including information for component remanufacturing and recycling options.

Index

A

Access Doors and Covers 67
Additional Messages 11
  Data Privacy (2) 12
  Diesel Fuel Recommendations (1) 11
Additive Spray System - Drain 77
Additive Spray System - Prime 78

B

Backup Alarm 49
Backup Alarm - Test 79
Battery - Clean/Check 80
Battery - Recycle 81
Battery Disconnect Switch (If Equipped) 46
Battery or Battery Cable - Inspect/Replace 82
Before Operation 24, 37
Before Starting Engine 23
Belts - Inspect/Adjust/Replace 83
  Alternator Belt and Water Pump Belt 84
Braking System - Test 85
Burn Prevention 16
  Batteries 17
  Coolant 17
  Induction System 17
  Oils 17

C

Capacities (Refill) 72
Cooling System Coolant (ELC) - Change 86
Cooling System Coolant Extender (ELC) - Add 89
Cooling System Coolant Level - Check 90
Cooling System Coolant Sample (Level 1) - Obtain 92
Cooling System Coolant Sample (Level 2) - Obtain 94
Cooling System Pressure Cap - Clean/Replace 95
Cooling System Water Temperature Regulator - Replace 96
Crushing Prevention and Cutting Prevention 16

D

Daily Inspection 37
Declaration of Conformity (European Union) 35
Declaration of Conformity (Great Britain) 36
Decommissioning and Disposal 142
Drum Offset Control 51
Drum Scrapers - Inspect/Adjust/Replace 98
  Adjust Scrapers 99
  Inspect Scrapers 98
  Replace Cocoa Mat 100
  Replace Scrapers 99

E

Eccentric Weight Bearings - Inspect 100
Electrical Storm Injury Prevention 22
Emissions Certification Film 34
Emissions Warranty Information 141
Engine - Clean 100
  Aftertreatment 101
Engine Air Filter Primary Element - Clean/Replace 101
  Cleaning Primary Air Filter Elements 101
  Inspecting the Primary Air Filter Elements 102
Engine Air Filter Secondary Element - Replace 103
Engine and Machine Warm-Up 53
Engine Crankcase Breather - Replace 103
Engine Mounts - Inspect 104
Engine Oil and Filter - Change 107
Engine Oil Level - Check 105
Engine Oil Sample - Obtain 106
  Obtain the Sample and the Analysis 106
Engine Starting 23, 53
Engine Starting (Alternate Methods) 65
Engine Starting with Jump Start Cables 65
  Use of Jump Start Cables 65
Engine Stopping 27
Engine Valve Lash - Check 109
Engine Water Pump - Inspect 109
Equipment Lowering with Engine Stopped 28

F

Film (Product Identification) - Clean 109
  Cleaning of the Films 110
Fire Extinguisher Location 21
Fire Prevention and Explosion Prevention 17
  Battery and Battery Cables 19
  Ether 20
  Fire Extinguisher 20
  General 17

Lines, Tubes, and Hoses 20
Regeneration 17
Wiring 19
Fire Safety 21
Foreword 4
California Proposition 65 Warning 4
Certified Engine Maintenance 5
Literature Information 4
Machine Capacity 5
Maintenance 4
Operation 4
Product Identification Number 5
Safety 4
Fuel Injector - Test/Change 110
Removal and Installation of the Fuel Injection Nozzles 111
Fuel System - Prime 111
Mechanical Priming Pump 111
Fuel System Primary Filter - Replace 116
Fuel Filter with Canister 116
Fuel Tank Strainer - Clean 118
Fuel Tank Water and Sediment - Drain 118
Fuses - Replace 118
Fuse 119
Relay 120

G

General Hazard Information 12
Containing Fluid Spillage 14
Dispose of Waste Properly 16
Fluid Penetration 14
Inhalation 15
Pressurized Air and Water 13
Trapped Pressure 14
General Information 32

H

High Pressure Fuel Lines 22
Hydraulic System Oil - Change 121
Cat HYDO Advanced 10 Oil Change Interval 122
Procedure to Change the Hydraulic Oil 122
Hydraulic System Oil Filter - Replace 124
Hydraulic System Oil Level - Check 126
Hydraulic System Oil Sample - Obtain 128
Hydraulic Tank Breather - Replace 129
Hydraulic Tank Strainer - Clean 130

I

Identification Information 33
Important Safety Information 2
Isolation Mounts - Inspect 131

L

Leaving the Machine 56
Lifting and Tying Down the Machine 57
Lifting the Machine 59
Tying Down the Machine 60
Lubricant Viscosities (Fluids Recommendations) 68
Biodiesel 71
Coolant Information 71
Diesel Fuel Recommendations 71
Engine Oil 68
Fuel Additives 71
General Information for Lubricants 68
Hydraulic Systems 69
Selecting the Viscosity 68
Special Lubricants 70
Standard Factory Fill Fluids 72
Lubricant Viscosities and Refill Capacities 68

M

Machine Operation 39
Machine Storage and Specified Storage Period 56
Machine Storage 56
Specified Storage Period 56
Maintenance Access 67
Maintenance Interval Schedule 75
Every 10 Service Hours or Daily 75
Every 100 Service Hours 75
Every 1000 Service Hours 76
Every 12 000 Service Hours or 6 Years 76
Every 2000 Service Hours 76
Every 250 Service Hours 75
Every 3 Years 76
Every 3000 Service Hours 76
Every 50 Service Hours 75
Every 500 Service Hours 76
Every 6000 Service Hours or 3 Years 76
Every Year 76
Initial 50 Service Hours 75
Initial 500 Hours (for New Systems, Refilled Systems, and Converted Systems) 76
When Required 75
Maintenance Section 67

Maintenance Support 73
Monitoring System..... 47
Functional Test..... 47
Gauges and Indicators 47
Mounting and Dismounting 37
Alternate Exit 37
Machine Access System Specifications..... 37

N

Neutral Start Switch - Test..... 131

O

Oil Filter - Inspect 131
Inspect a Used Filter for Debris 131
Operation..... 24
Critical Failures..... 25
Limiting Conditions and Criteria 24
Machine Operating Temperature Range..... 24
Machine Operation 26
Operation Information 49
Operation Section..... 37
Operator Controls..... 40
12V Power Receptacle (4)..... 42
Beacon (If Equipped) (18) 46
Digital Display (19)..... 46
Emergency Stop Knob (6) 43
Engine Start Switch (15)..... 45
Front/Position Lights (If Equipped) (8)..... 44
Gauges and Indicators (11) 44
Hazard Lights (If Equipped) (10) 44
Horn (13)..... 44
Left Propel Control (5) (If Equipped)..... 43
Parking Brake (12)..... 44
Right Propel Control (2)..... 42
Steering Wheel (1)..... 41
Throttle Control (17)..... 46
Traction Control Switch (If Equipped) (3) 42
Turn Signals (If Equipped) (9)..... 44
Vibratory Mode (CB2.5 GCand CB2.7 GC) / Emulsion Spray (CC2.7 GC Only) (16)..... 45
Water Spray System (14) 44
Work Lights (7) 43
Operator Presence Switch - Test 132

P

Parking 27, 55
Parking Brake Manual Release..... 63
Manual Brake Release for CB2.5 GC, and CB2.7 GC..... 63
Manual Brake Release With Hand Pump for CC2.7 GC 63
Plate Locations and Film Locations 33
Eurasian Economic Union 34
Product Identification Number (PIN)..... 33
Regional Product Marking (If Equipped) 33
Sound Certification 34
Prepare the Machine for Maintenance..... 74
Maintenance with Electrical System Disabled 74
Maintenance with the Engine Running..... 74
Maintenance without the Engine Running... 74
Product Information Section..... 32

R

Radiator Core - Clean 132
Reference Information Section 142
Reference Material..... 142
Reference Materials 142
Rollover Protective Structure (ROPS) - Inspect 132
Rollover Protective Structure (ROPS) (Foldable) 50
Lower 51
Raise..... 50

S

S·O·S Information 72
Safety Messages..... 6
Batteries (3) 8
Crush Hazard (5) 9
Crush Hazard (6) 10
Do Not Operate (1) 7
Do Not Weld or Drill (7)..... 10
Hot Surface (4) 9
Seat Belt (2)..... 8
Start Up Instruction (8).....11
Safety Section 6
Seat 39
Operator Presence (If Equipped) 39
Seat Belt..... 40
Extension of the Seat Belt 40
Seat Belt Adjustment for Retractable Seat Belts 40
Seat Belt - Inspect 133
Seat Belt - Replace 133
Shipping the Machine..... 57
Slope Operation 27
Sound Information and Vibration Information..... 28

Sound Level Information 28
Sound Level Information for Machines Required by the Applicable Regional Regulations 28
Vibration Information Applicable to Regional Regulations 29
Specifications 32
Dimensions 32
Expected Life 32
Intended Use 32
Steering Cylinder Ends - Lubricate 134
Steering Frame Lock 38
Stopping the Engine 55
Stopping the Machine 55
Freezing Conditions 55
System Pressure Release 73
Coolant System 73
Engine Oil System 73
Fuel System 73
Hydraulic System 73

T

Table of Contents 3
Tire Inflation - Check 134
Tire Information 21
Tire Scraper - Inspect/Adjust/Replace 135
Adjust Scrapers 135
Inspect Scrapers 135
Replace Scrapers 136
Towing Information 62
Towing the Machine 62
Running Engine 62
Stopped Engine 62
Transportation Information 57

V

Visibility Information 24

W

Warranty Information 141
Warranty Section 141
Water and Additive Spray Nozzles - Clean ... 136
Water Spray System - Drain 137
Water Spray System Filter - Clean 138
Water Tank Strainer - Clean and Inspect 139
Welding on Machines and Engines with Electronic Controls 74
Wheel Nuts - Tighten 140

Product and Dealer Information

Note: For product identification plate locations, see the section “Product Identification Information” in the Operation and Maintenance Manual.

Delivery Date: _____

Product Information

Model: _____

Product Identification Number: _____

Engine Serial Number: _____

Transmission Serial Number: _____

Generator Serial Number: _____

Attachment Serial Numbers: _____

Attachment Information: _____

Customer Equipment Number: _____

Dealer Equipment Number: _____

Dealer Information

Name: _____ Branch: _____

Address: _____

_____

_____

	Dealer Contact	Phone Number	Hours
Sales:	_____	_____	_____
Parts:	_____	_____	_____
Service:	_____	_____	_____

M0130633
©2022 Caterpillar
All Rights Reserved

CAT, CATERPILLAR, LET'S DO THE WORK, their respective logos, "Caterpillar Corporate Yellow", the "Power Edge" and Cat "Modern Hex" trade dress as well as corporate and product identity used herein, are trademarks of Caterpillar and may not be used without permission.