SYMPTOM	CAUSE	REMEDY
Engine power output is low.	Operating engine at high altitude.	De-rate engine power output for altitudes above 10,000 feet.
	Air intake piping restricted.	Remove restrictions.
	Air cleaner element(s) dirty.	Clean or replace air cleaner element(s).
	Fuel suction line or filter restricted.	Check fuel line for restrictions. Replace fuel filter element(s).
	Fuel return system restricted.	Correct restricted fuel return system.
	Fuel quality poor.	Verify by operating with a known fuel quality.
	Fuel transfer pump malfunctioning.	Replace fuel transfer pump. Refer to Engine Operator's Manual.
	Throttle improperly adjusted.	Adjust throttle controls.
	Fuel injector malfunctioning.	Replace fuel injector. Refer to Engine Operator's Manual.
Broom doesn't move with engine running or moves in one direction only.	Park brake engaged.	Release park brake.
	Broom rotation control valve is bypassing oil at low pressure.	Repair or replace relief valve cartridge(s).
	Damaged hydrostatic pump.	Repair or replace hydrostatic pump.
	Damaged hydrostatic motor.	Repair or replace hydrostatic motor.
Broom stalls or lacks power.	Brush drive relief valve set too low or defective.	Adjust relief valve to 2500 PSI. Replace if defective.
	Sweeping with too much down pressure.	See Brush Down Pressure Control on **Page 4-14**.
	Ground speed too fast.	Pull back on joystick and increase engine RPMs to increase brush speed.
Steering is difficult.	Low hydraulic fluid level.	Add hydraulic oil.
	Hydraulic filters contain contamination.	Check filters for contamination and clean or replace.
	Hydraulic pump priority relief valve set incorrectly.	Check relief valve setting. It should be 1500 PSI. Adjust setting if necessary.
	Worn hydraulic pump.	Repair or replace.
	Worn steering orbital motor.	Repair or replace.
	Worn steering cylinder.	Repair or replace.
Alternator not charging.	Loose wiring or fault connection.	Repair or replace loose wiring or connector.
	Diode at alternator loose or faulty.	Tighten connection or replace diode.
	Alternator belt loose or broken.	Adjust or replace belt.
	Alternator malfunctioning.	Replace alternator.
	Circuit breaker tripped.	Reset circuit breaker.
Instrument gauges don't work.	Faulty gauge or sender.	Replace gauge or sender.
	Alternator not charging.	Repair wiring or replace alternator.
	Faulty wiring.	Replace wiring or connector.

SYMPTOM	CAUSE	REMEDY
Hydraulic system overheats.	Low hydraulic oil level.	Refill with hydraulic fluid.
	Defective temperature gauge or sender giving wrong temperature reading.	Replace gauge or sender.
	Brush drive relief valve set too low or defective.	Adjust relief valve to 2500 PSI. Replace if defective.
	Excessive ambient air temperature and high-duty cycle.	Operate broom at slower ground speed and maximum engine RPMs during hot weather.
	Plugged fins on fluid cooler.	Clean fins and correct any other problems with cooling air flow.
	Hydrostatic pump bypass valve defective or open.	Repair or replace. If valve is open, turn valve clockwise until seated and torque to 9.5 - 14 N•m (7-10 ft lb). DO NOT over torque as this will damage valve.
	Worn hydrostatic pump.	Repair or replace.
Engine oil pressure is low.	Electrical power not being supplied to gauge.	Check fuse.
	Incorrect oil level. Too high or too low.	Check for leaks. Add or drain engine oil. Check dipstick calibration.
	Oil filter plugged.	Change oil filter.
	Oil diluted with fuel.	Replace fuel injector, fuel transfer pump and injection pump.
	Oil diluted with coolant.	See your authorized Rosco/LeeBoy dealer.
	Incorrect oil specifications.	Change oil.
	Oil pressure sender or gauge malfunctioning.	Replace oil pressure sender or gauge.
Engine coolant temperature above normal.	Radiator find damaged or obstructed.	Inspect radiator fins. Clean, repair or replace.
	Collapsed or restricted radiator hose.	Inspect hoses. Replace if needed.
	Loose fan drive belt.	Check belt tension and tighten or replace as needed.
	Cooling fan shroud damaged or missing.	Inspect shroud. Repair or replace.
	Incorrect or malfunctioning radiator cap.	Check radiator cap and replace if needed.
	Temperature gauge or sender malfunctioning.	Repair or replace.
	Thermostat stuck in closed position.	Test thermostat. Replace if necessary.
	Dirt, scale or rust in the cooling system.	Clean cooling system.

Section 6
SCHEMATICS

	Page
Main Wiring Schematic (1 of 5)	6-3
Main Wiring Schematic (2 of 5)	6-5
Main Wiring Schematic (3 of 5)	6-7
Main Wiring Schematic (4 of 5)	6-9
Main Wiring Schematic (5 of 5)	6-11
Main Wiring Harness (1 of 2)	6-13
Main Wiring Harness (2 of 2)	6-15
Cab Harness (1 of 2)	6-17
Cab Harness (2 of 2)	6-19
Controls Console (1 of 2)	6-21
Controls Console (2 of 2)	6-23
Beacon Harness	6-25
Oil Cooler Schematic/Harness	6-27
Option - Windshield Washer Pump Harness	6-29
Option - Spray Pump Harness	6-31
Option - Curb Brush Harness	6-33
Option - Snow Plow Harness	6-35
Option - FNR Pedal Main Harness (1 of 2)	6-37
Option - FNR Pedal Main Harness (2 of 2)	6-39
Option - FNR Pedal Broom Controls	6-41
Option - FNR Pedal Control Console (1 of 2)	6-43
Option - FNR Pedal Control Console (2 of 2)	6-45
Hydraulic System - Standard (1 of 5)	6-47
Hydraulic System - Snow Plow Option (2 of 5)	6-49
Hydraulic System - Curb Brush Option (3 of 5)	6-51
Hydraulic System - Curb Brush & Snow Plow Option (4 of 5)	6-53
Hydraulic System - FNR Pedal Option (5 of 5)	6-55

NOTES

MAIN WIRING SCHEMATIC (1 OF 5)

Schematic #1016958

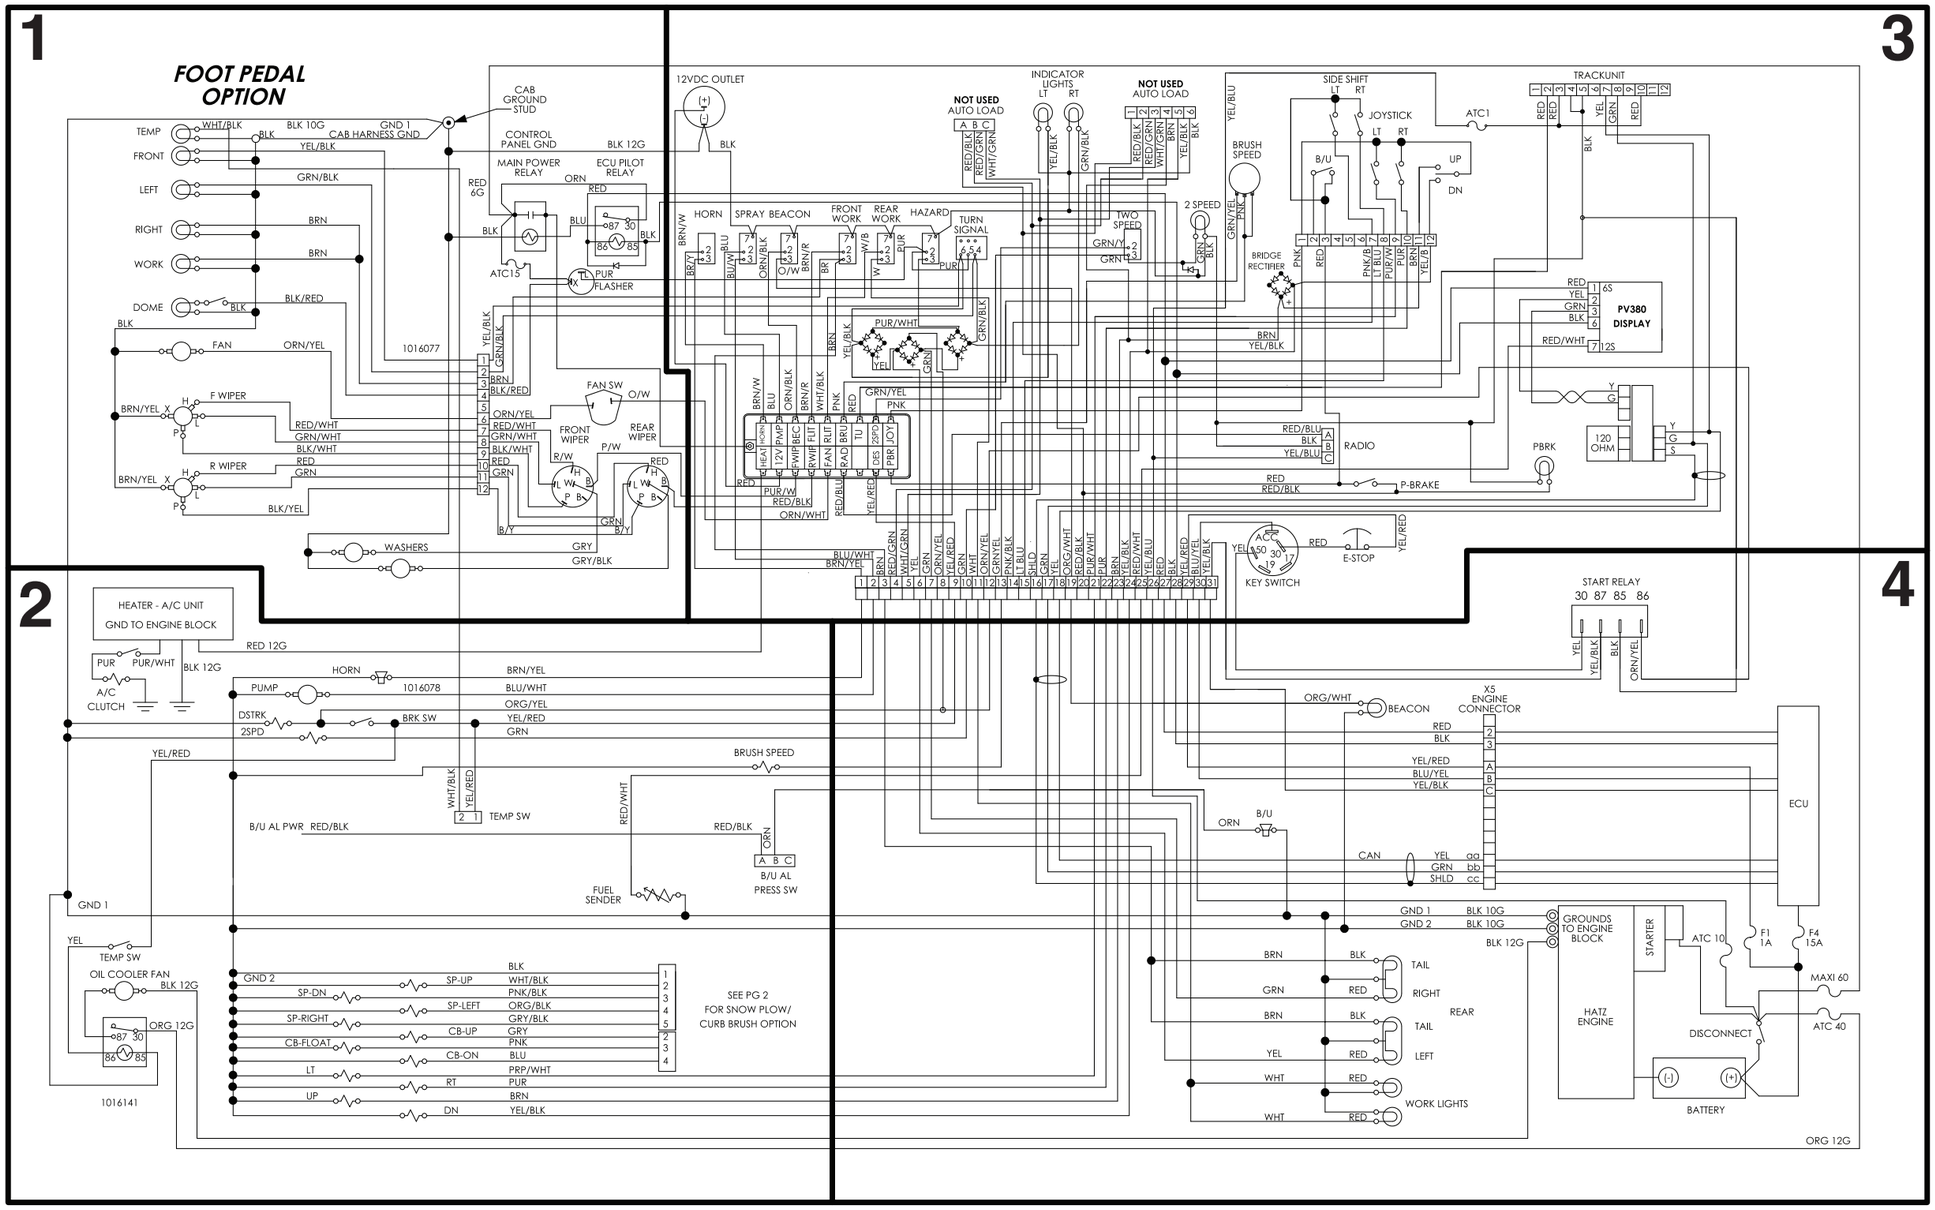


Figure 6-1. Main Wiring Schematic (1 of 5)

NOTES

MAIN WIRING SCHEMATIC (2 OF 5)

Schematic #1016958

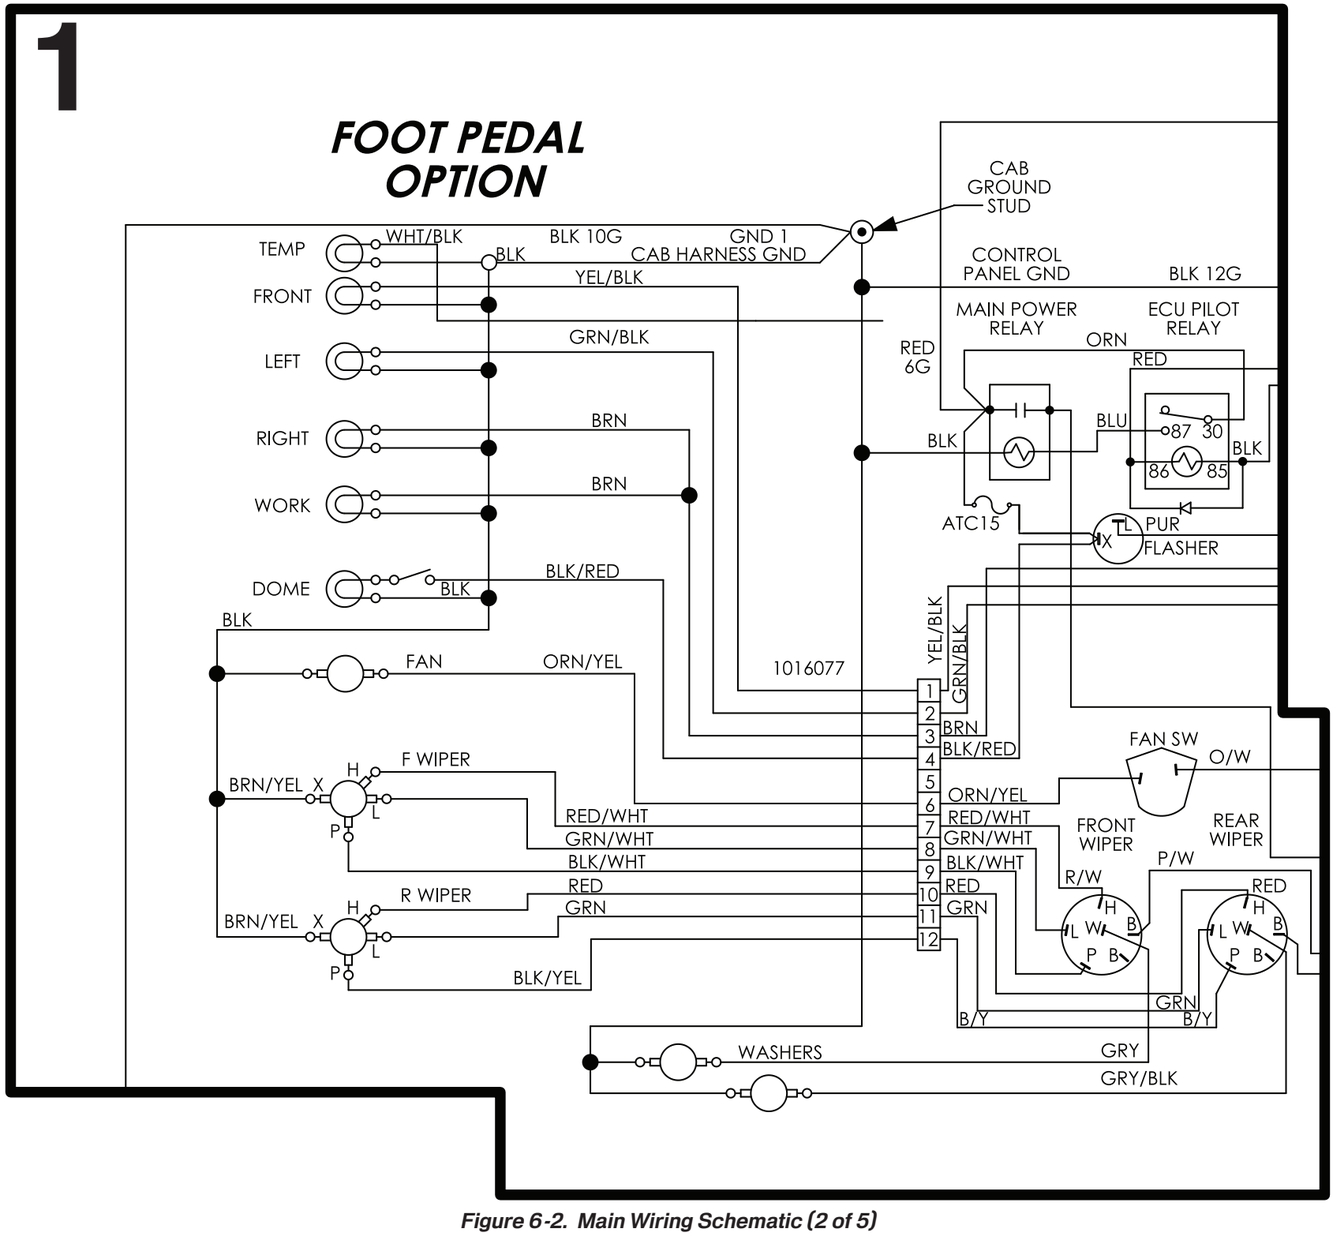


Figure 6-2. Main Wiring Schematic (2 of 5)

NOTES

MAIN WIRING SCHEMATIC (3 OF 5)

Schematic #1016958

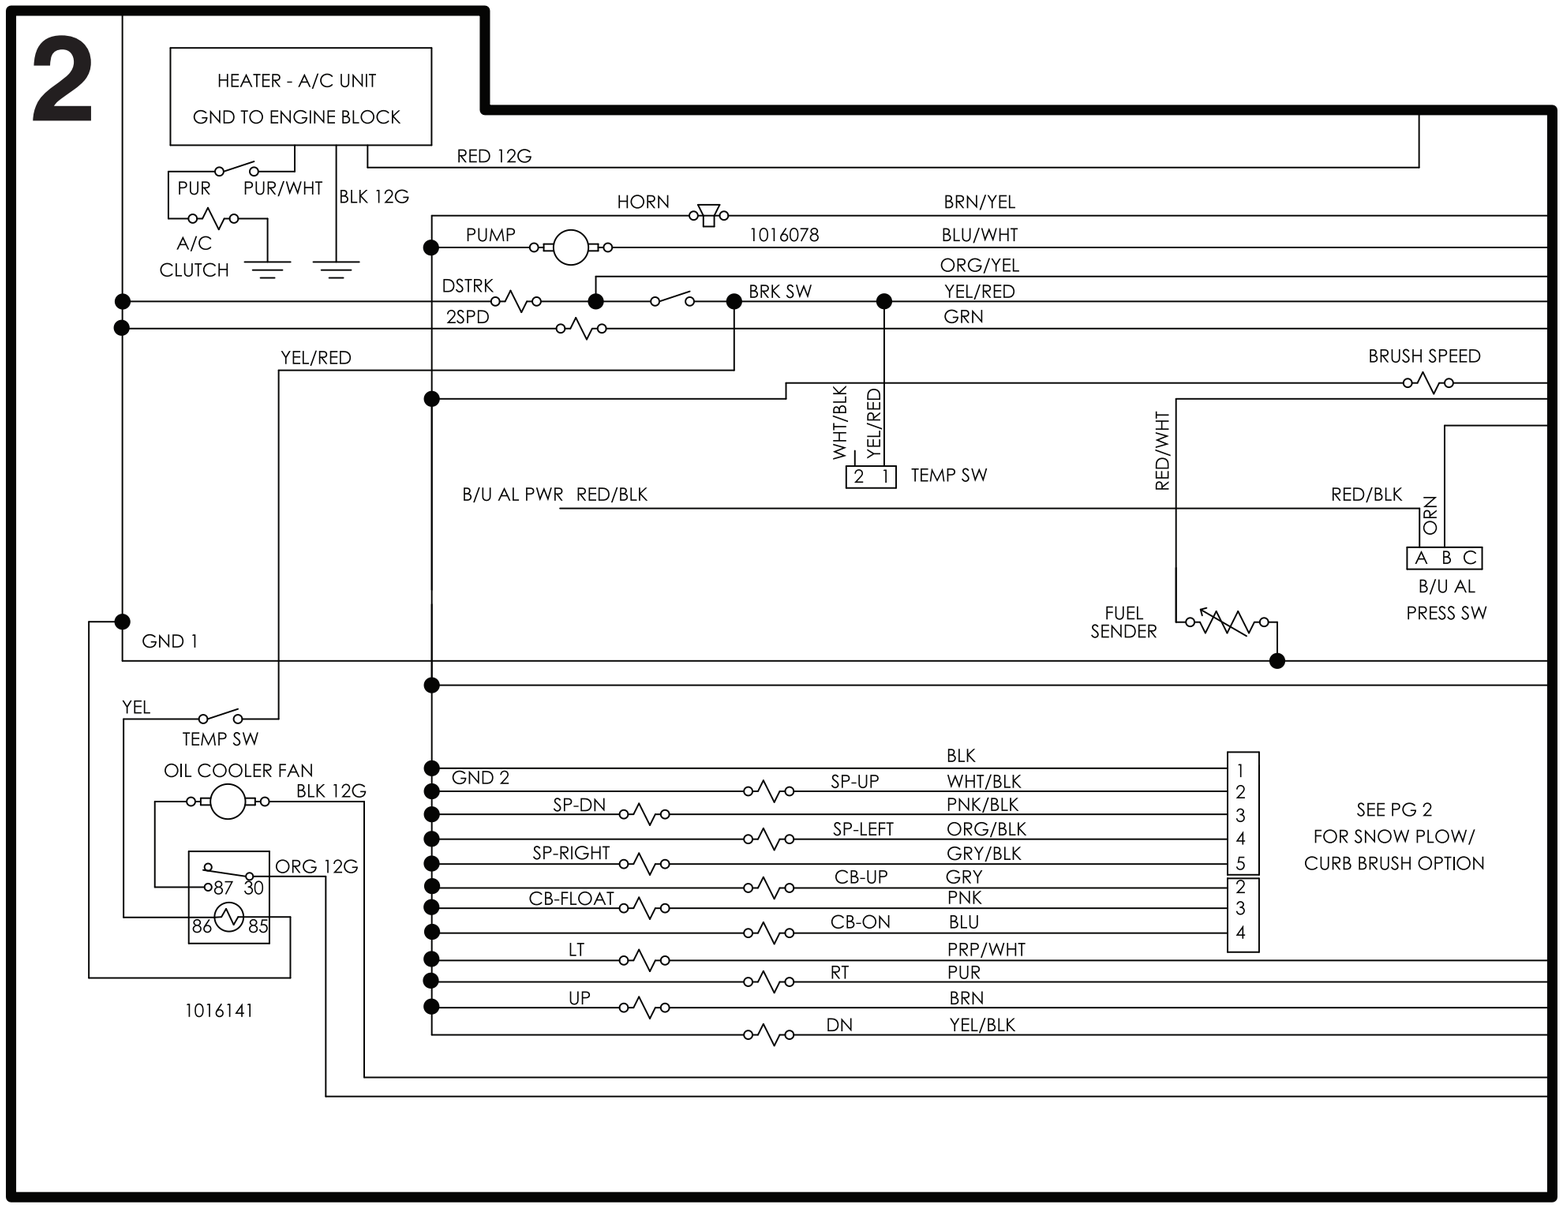


Figure 6-3. Main Wiring Schematic (3 of 5)

NOTES

MAIN WIRING SCHEMATIC (4 OF 5)

Schematic #1016958

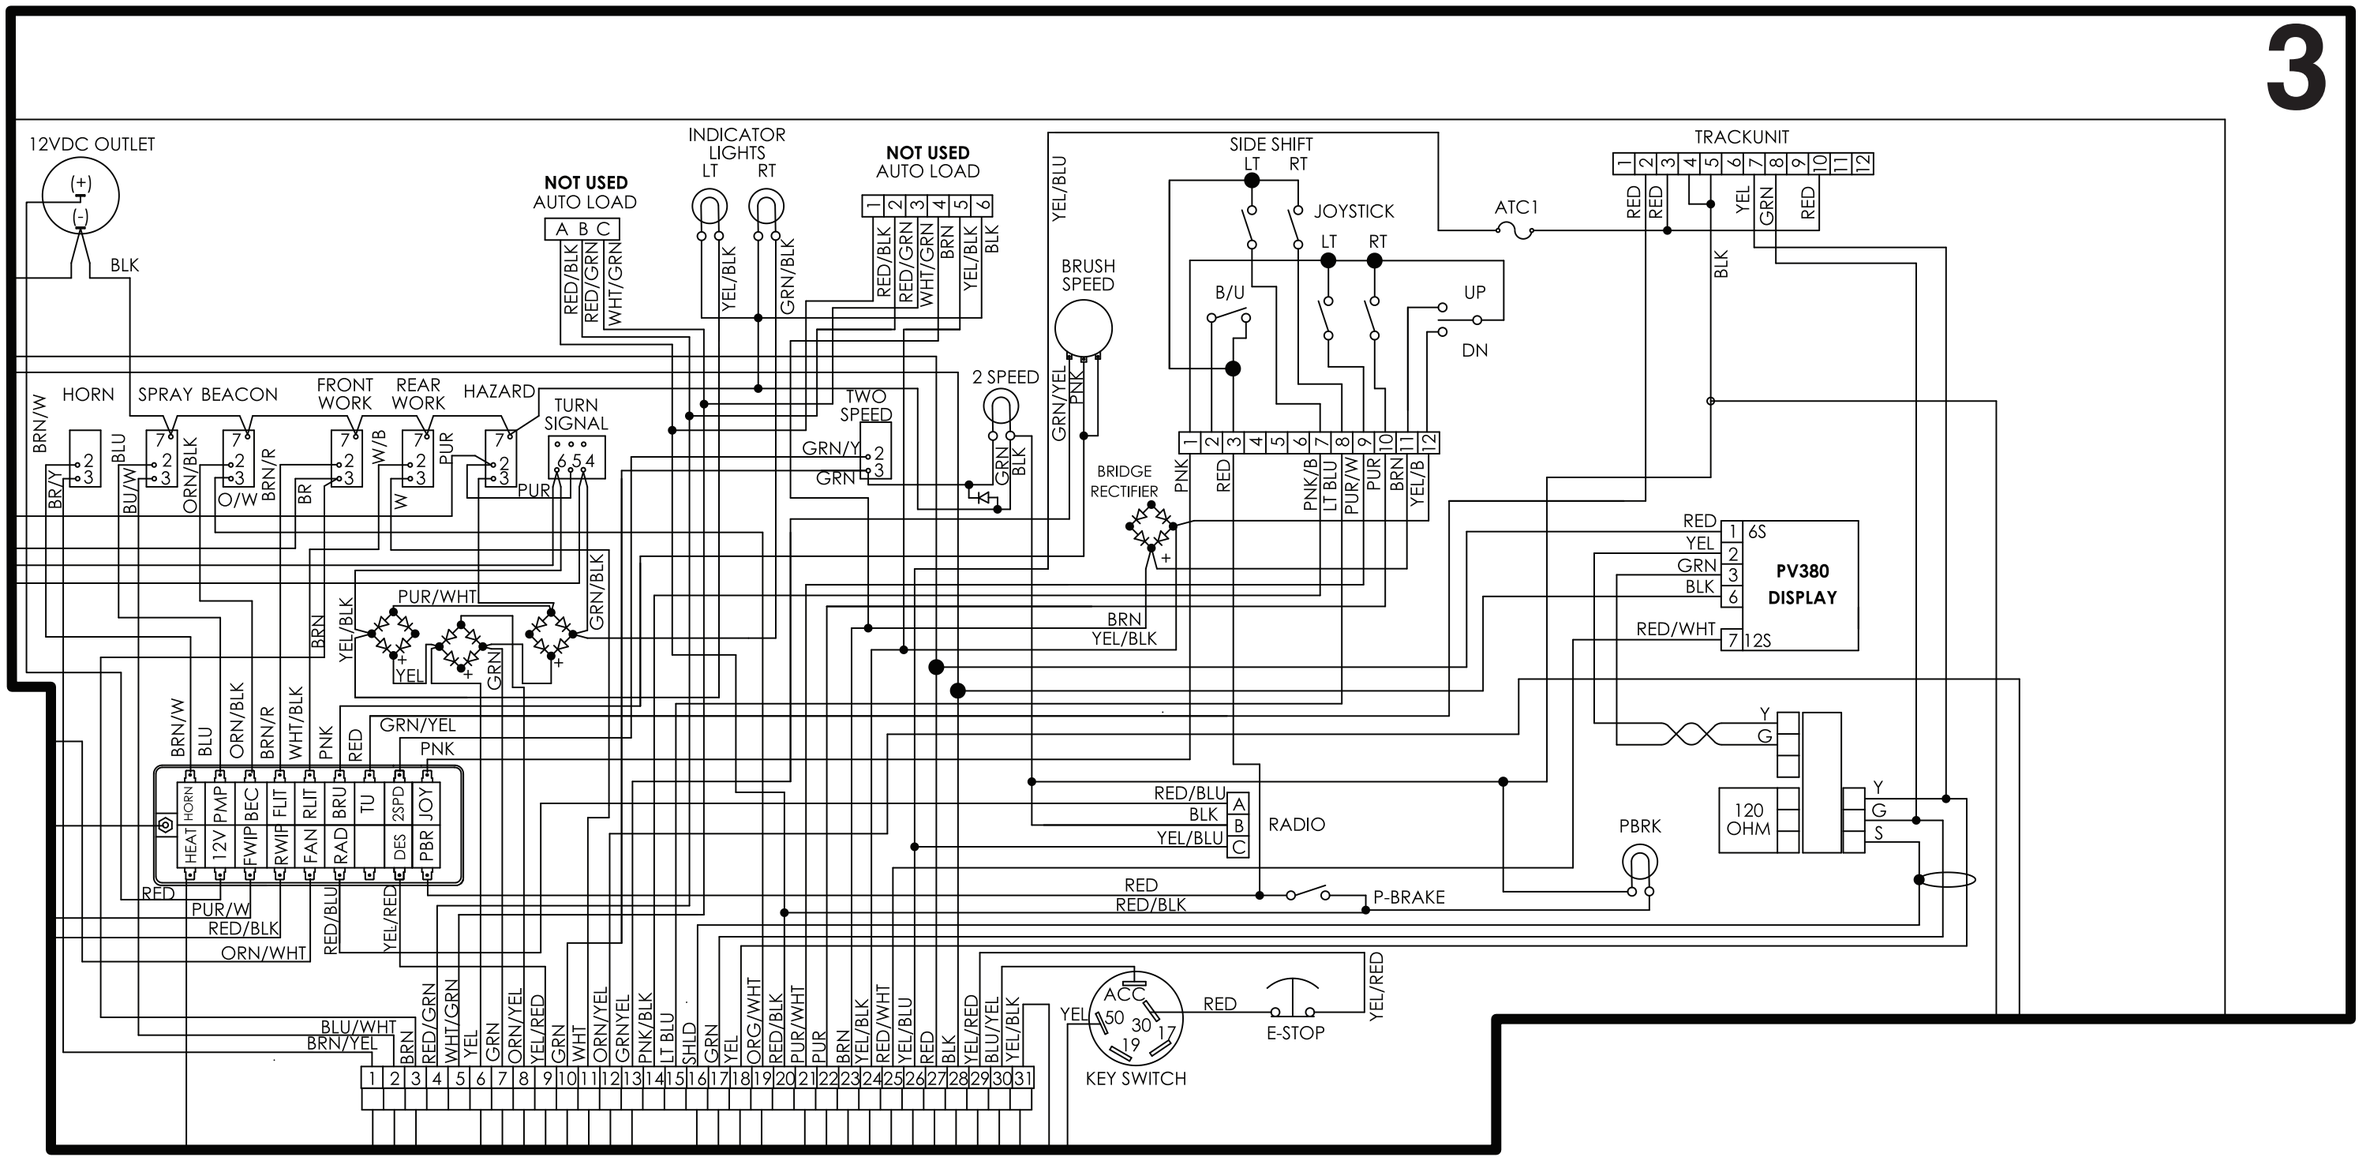


Figure 6-4. Main Wiring Schematic (4 of 5)

NOTES

MAIN WIRING SCHEMATIC (5 OF 5)

Schematic #1016958

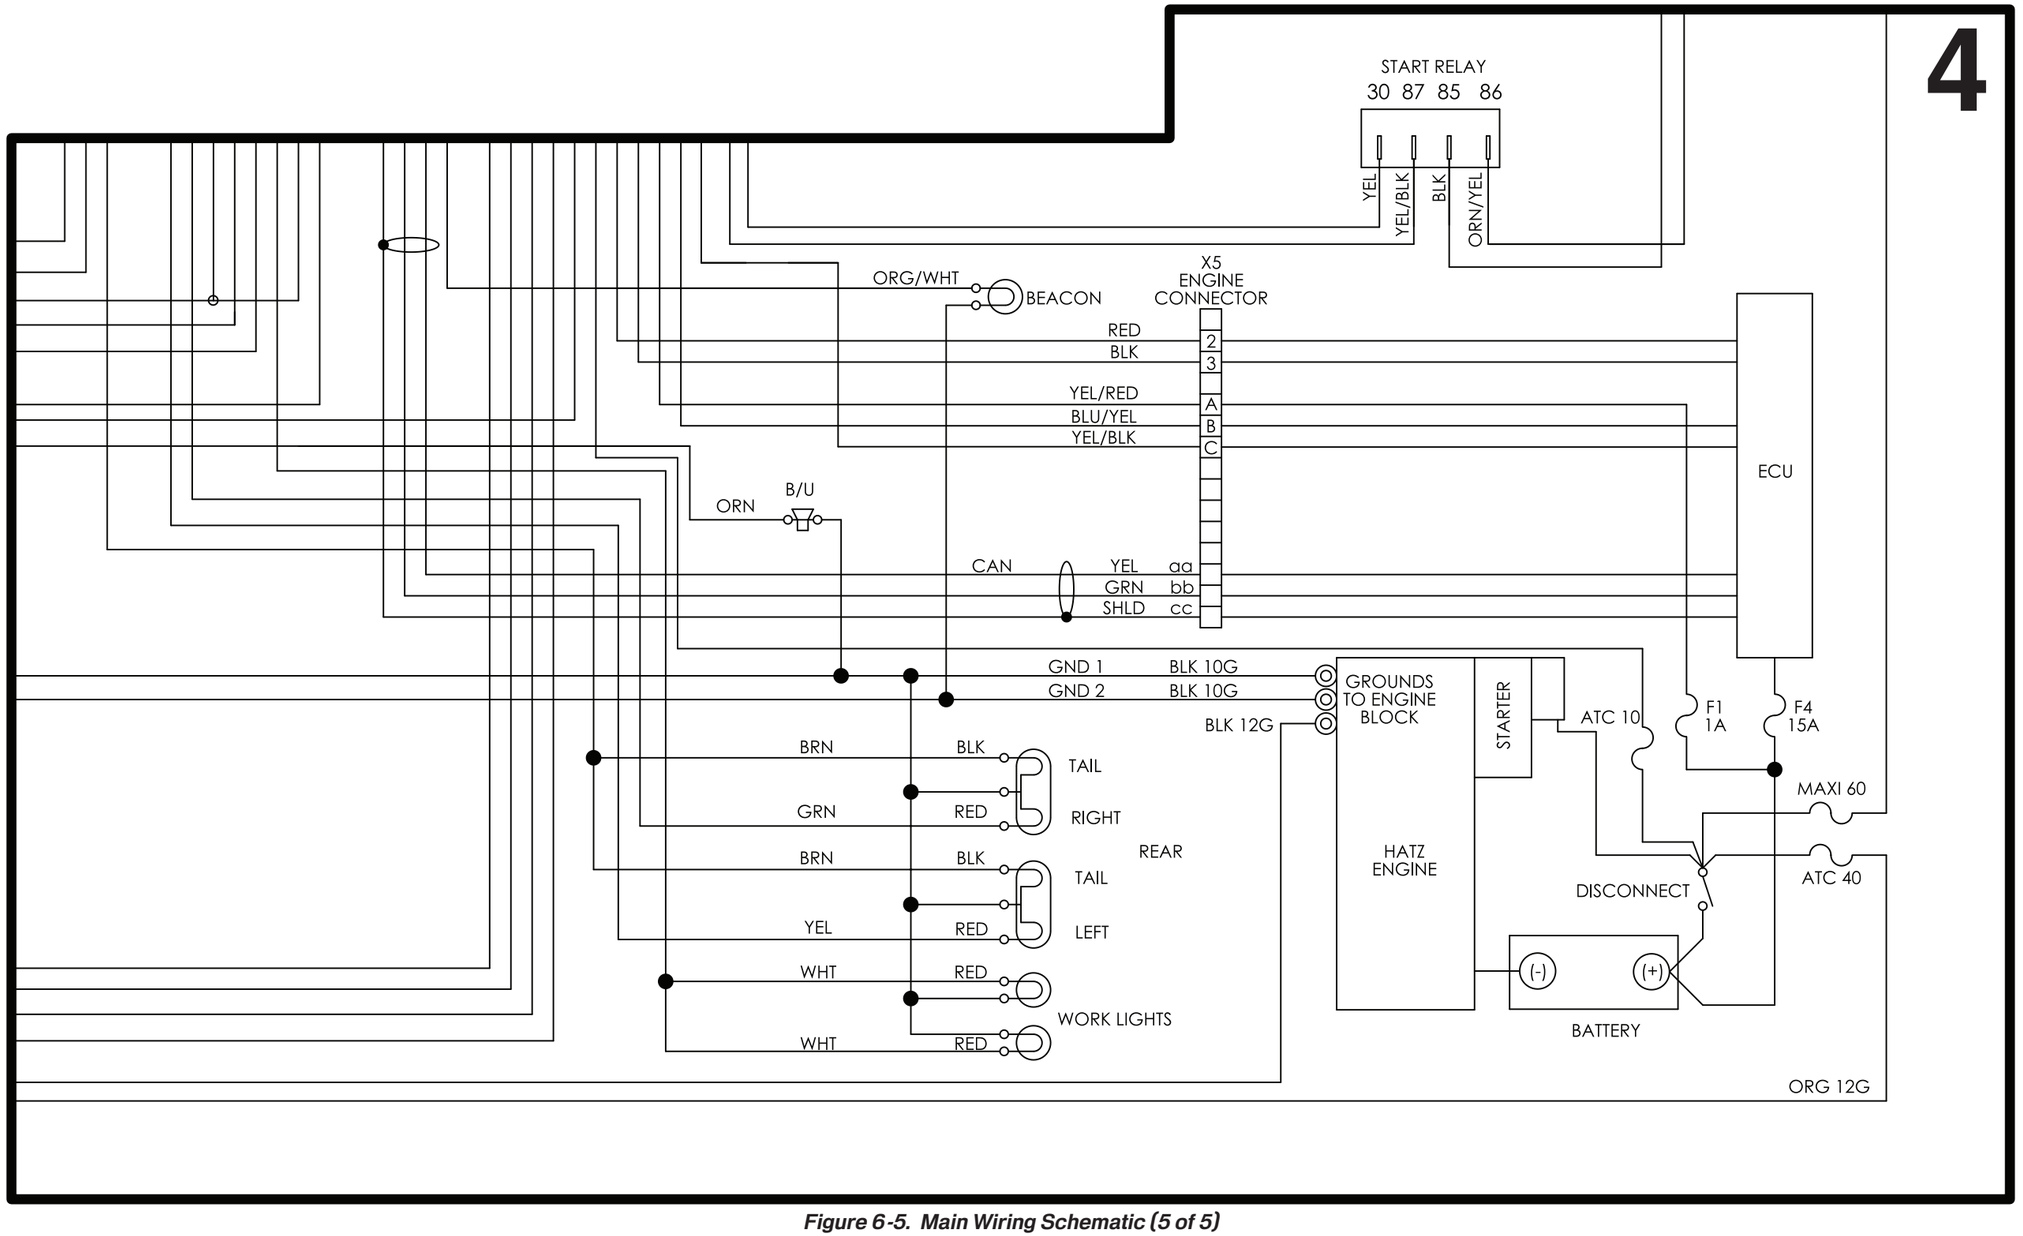


Figure 6-5. Main Wiring Schematic (5 of 5)

NOTES

MAIN WIRING HARNESS (1 OF 2)

Schematic #1022386

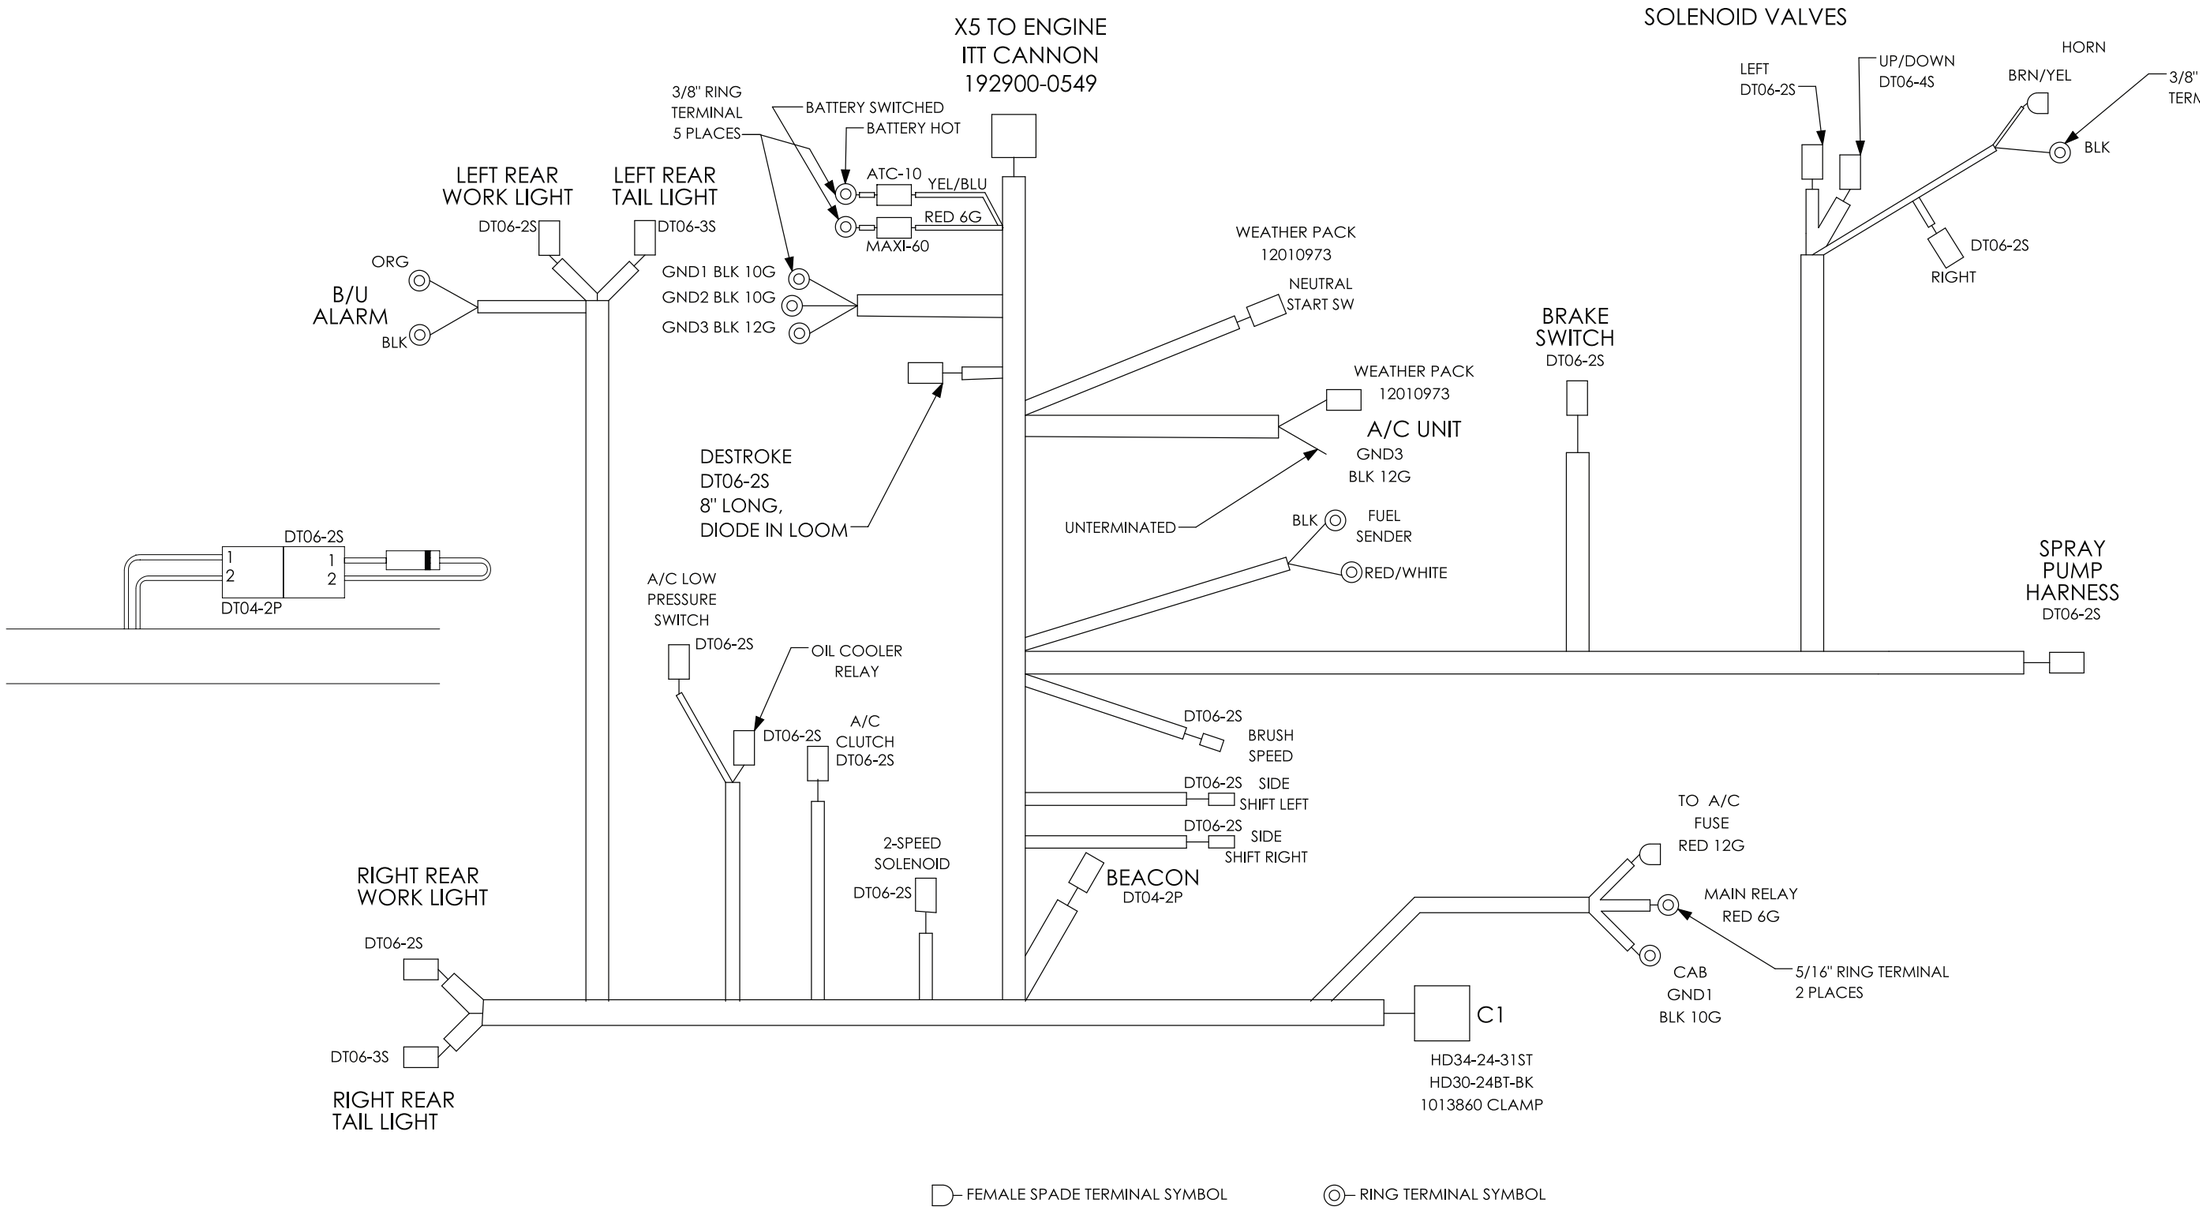


Figure 6-6. Main Wiring Harness (1 of 2)

NOTES

MAIN WIRING HARNESS (2 OF 2)

Schematic #1022386

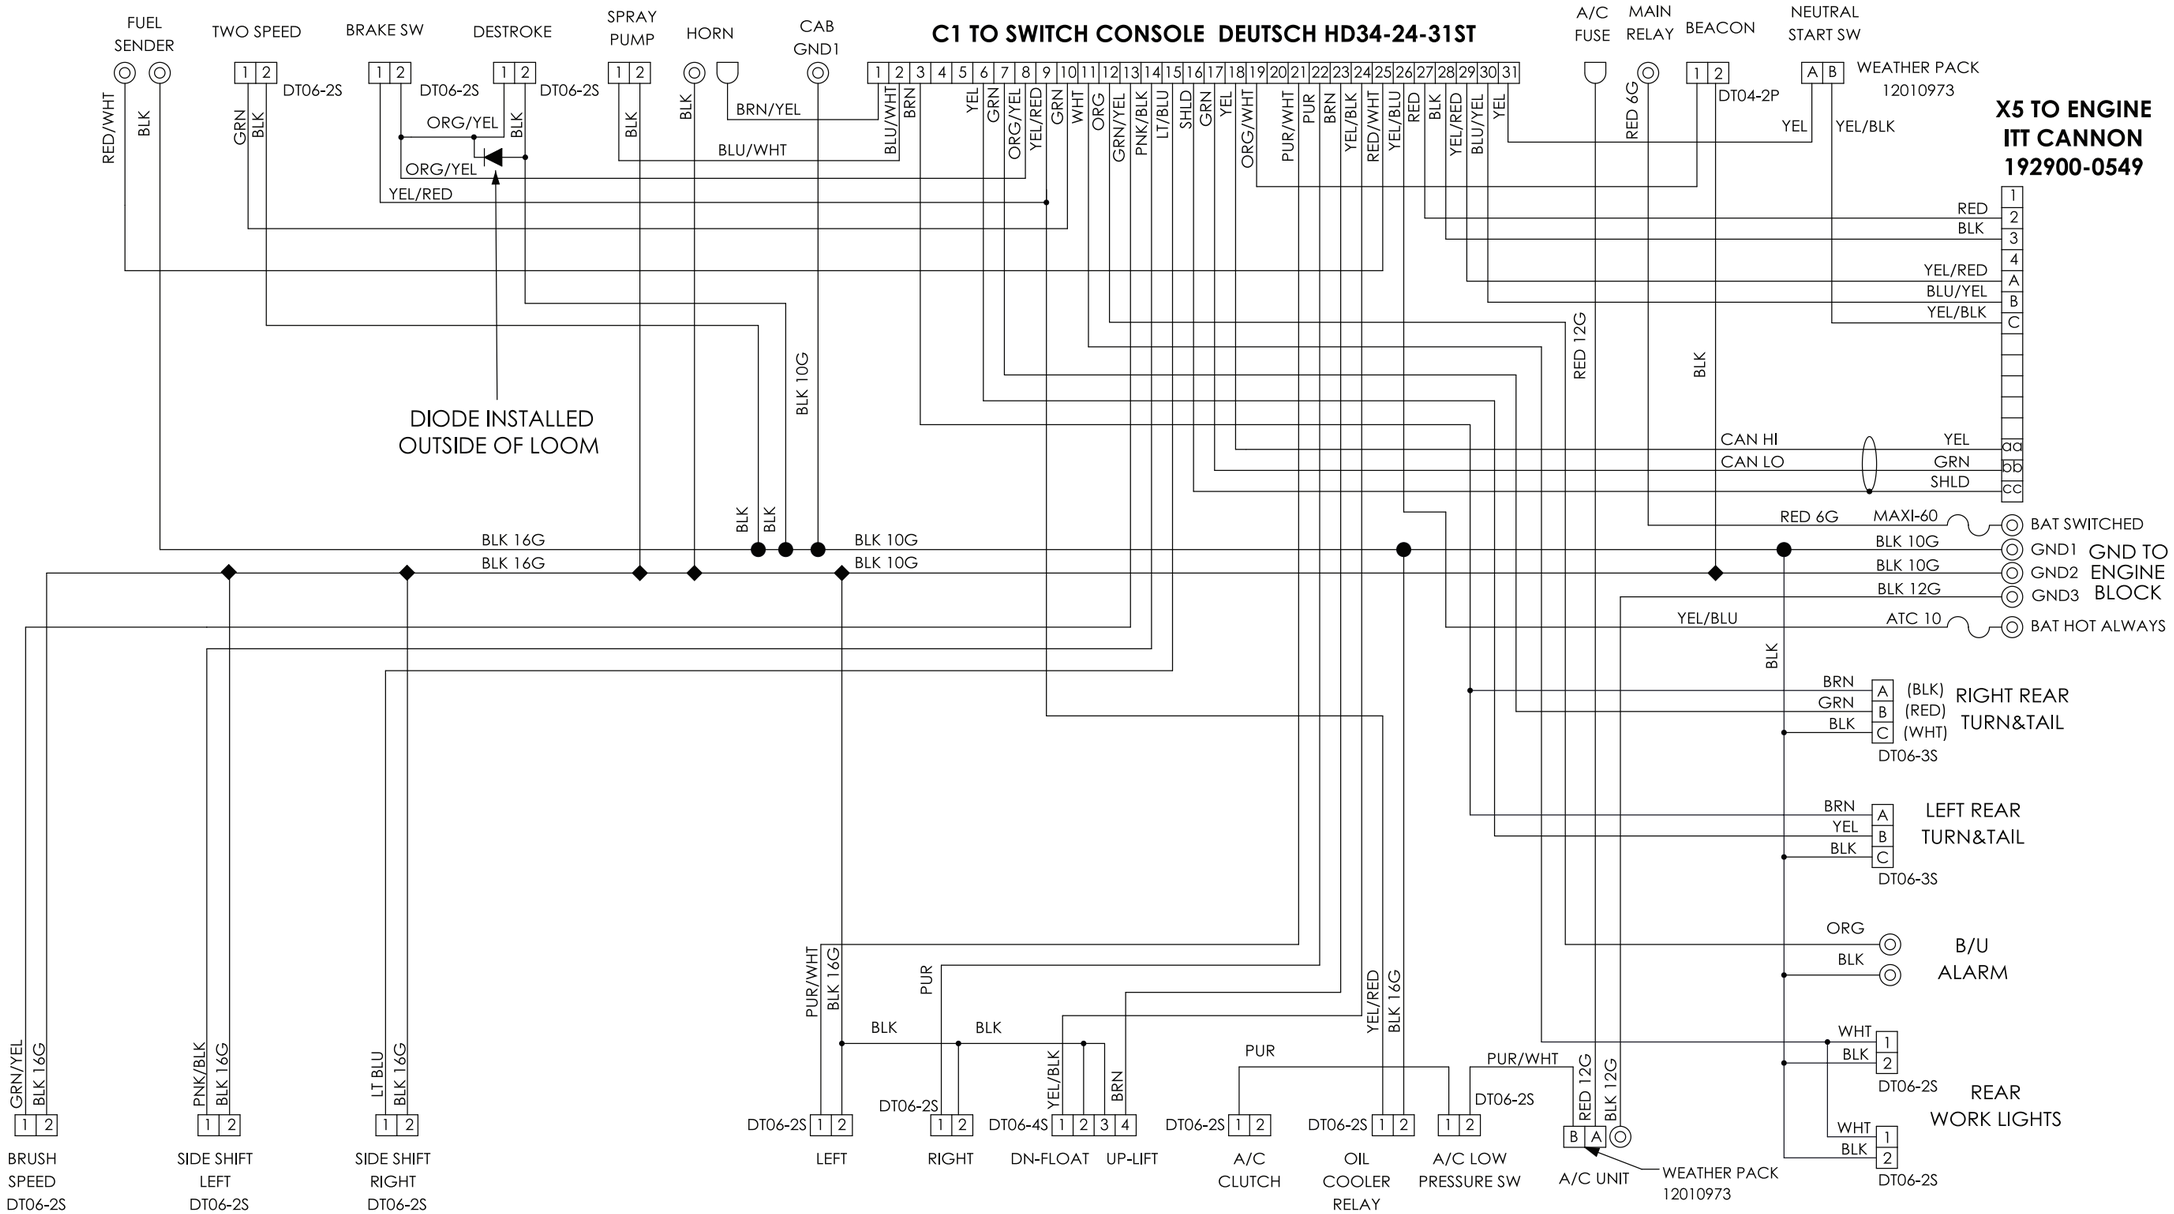


Figure 6-7. Main Wiring Harness (2 of 2)

NOTES

CAB HARNESS (1 OF 2)

Schematic #1016077

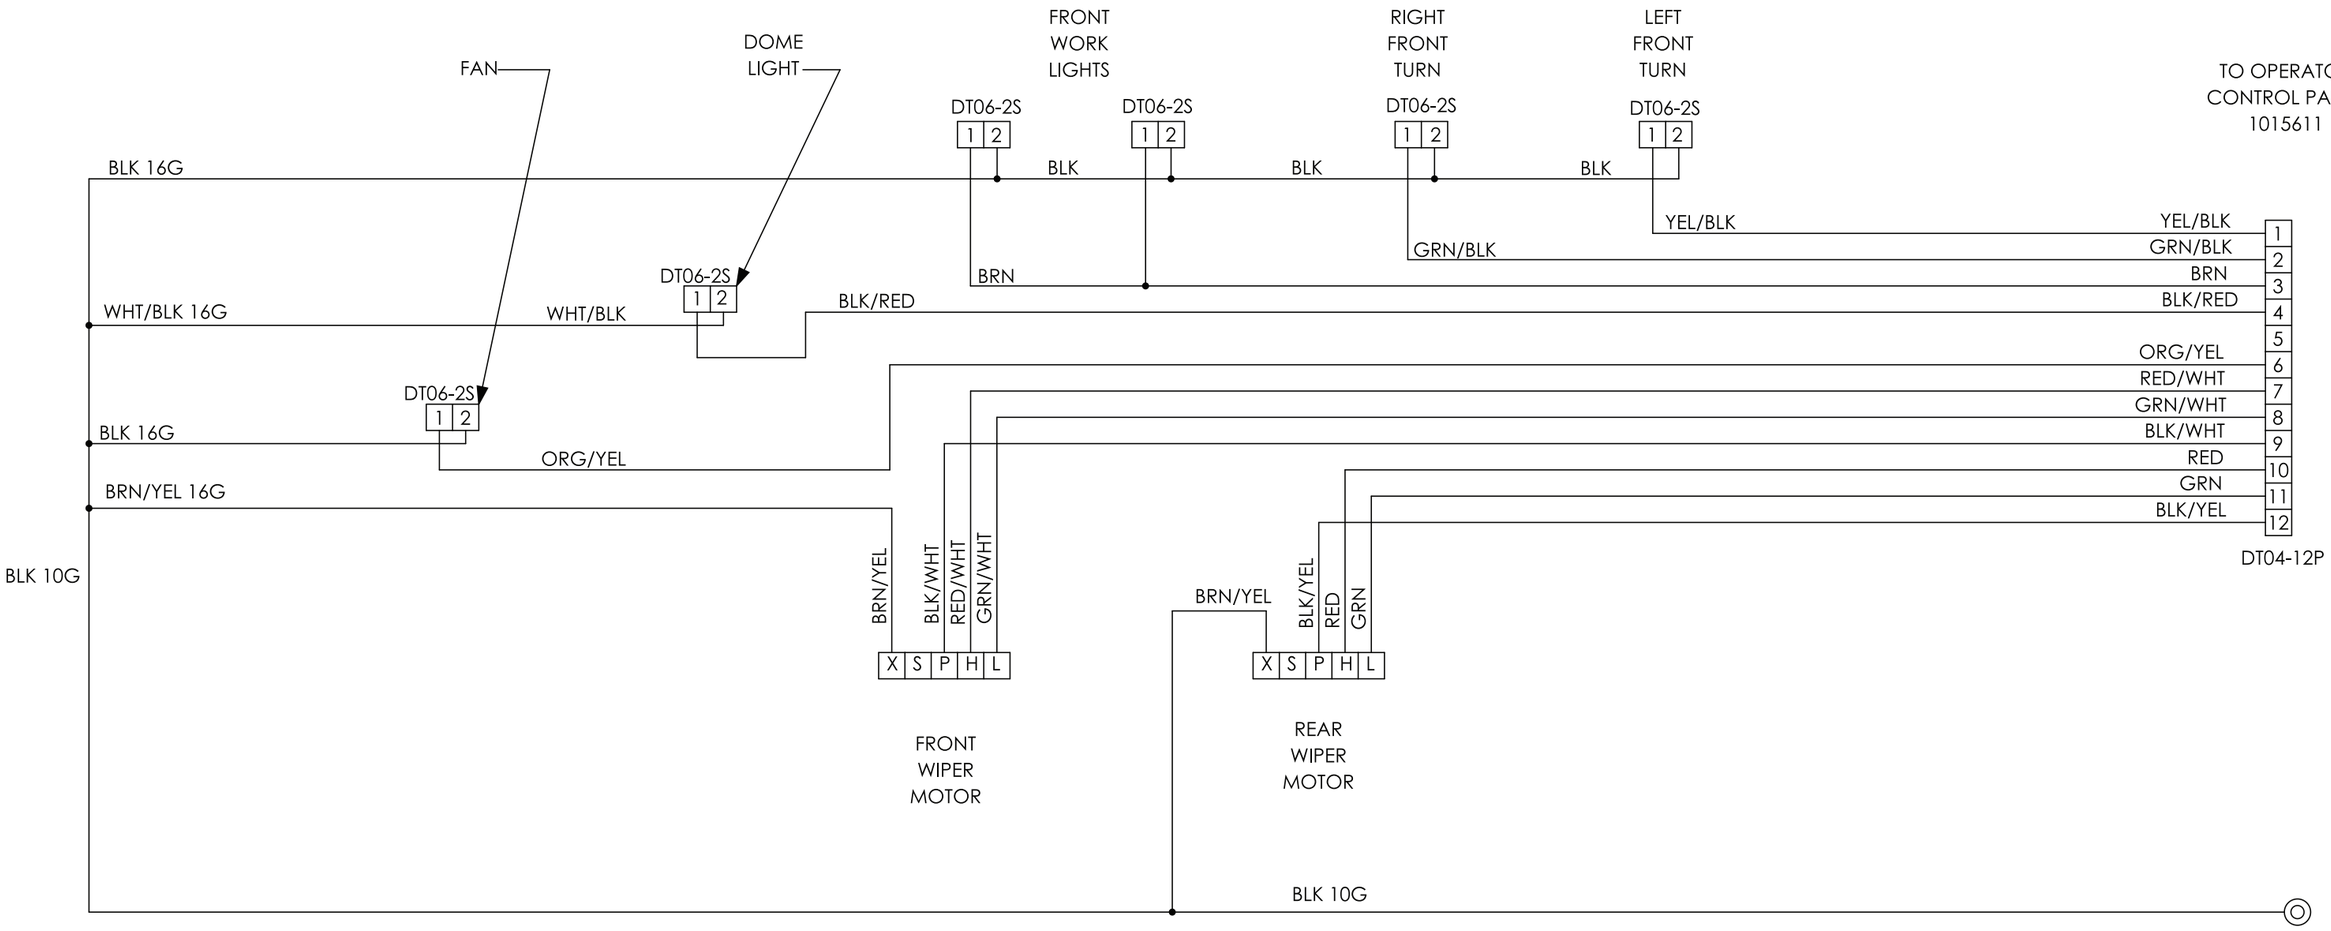


Figure 6-8. Cab Harness (1 of 2)

NOTES

CAB HARNESS (2 OF 2)

Schematic #1016077

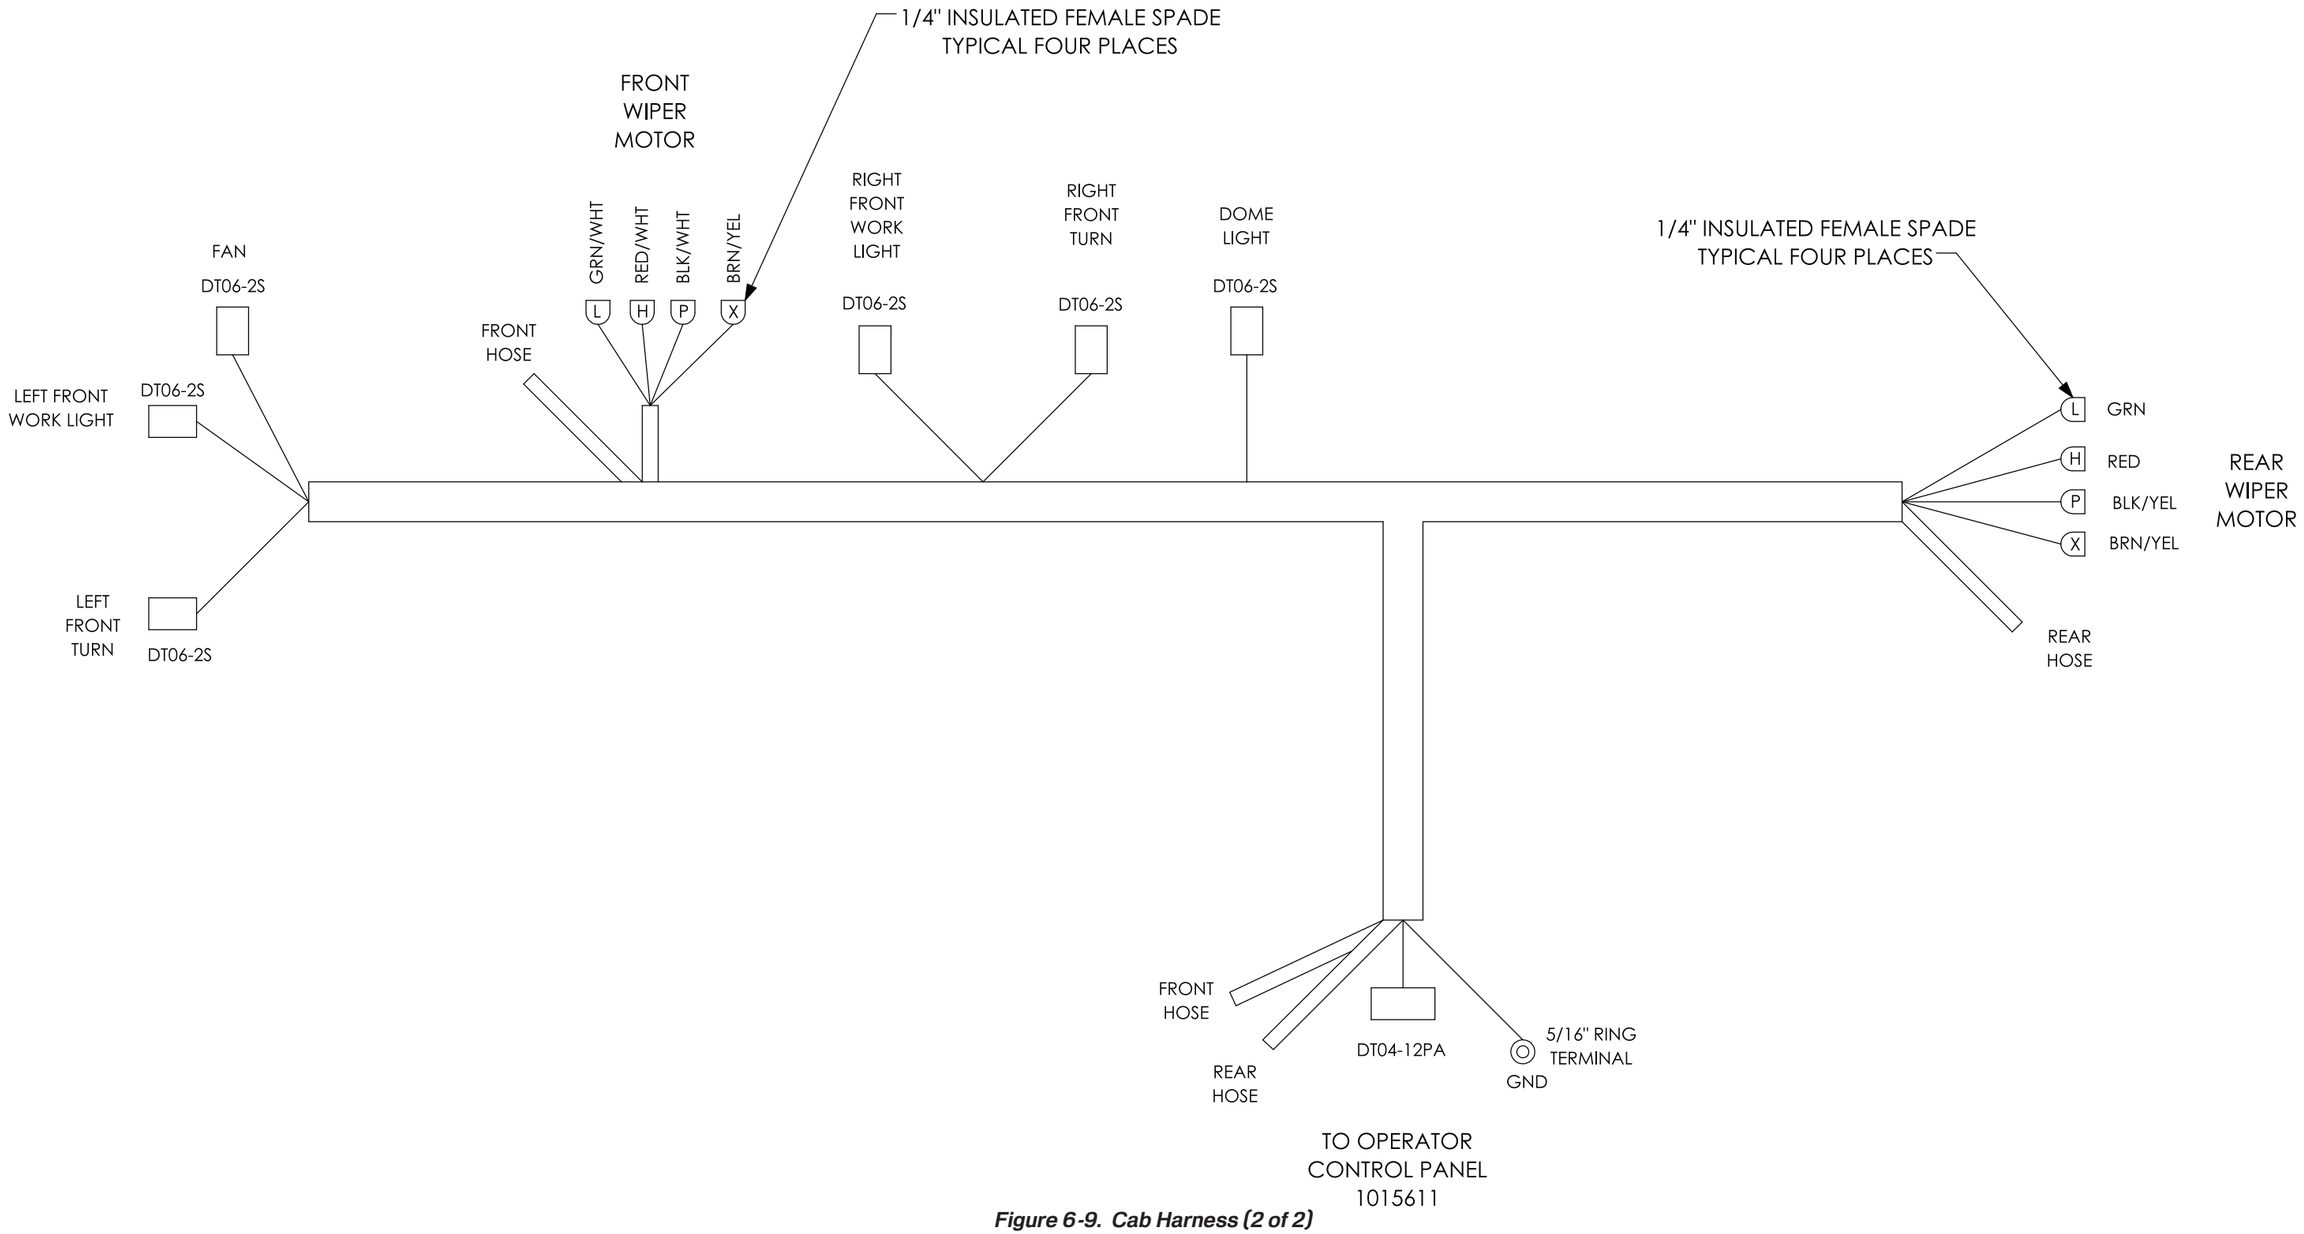


Figure 6-9. Cab Harness (2 of 2)

NOTES

CONTROLS CONSOLE (1 OF 2)

Schematic #1021630

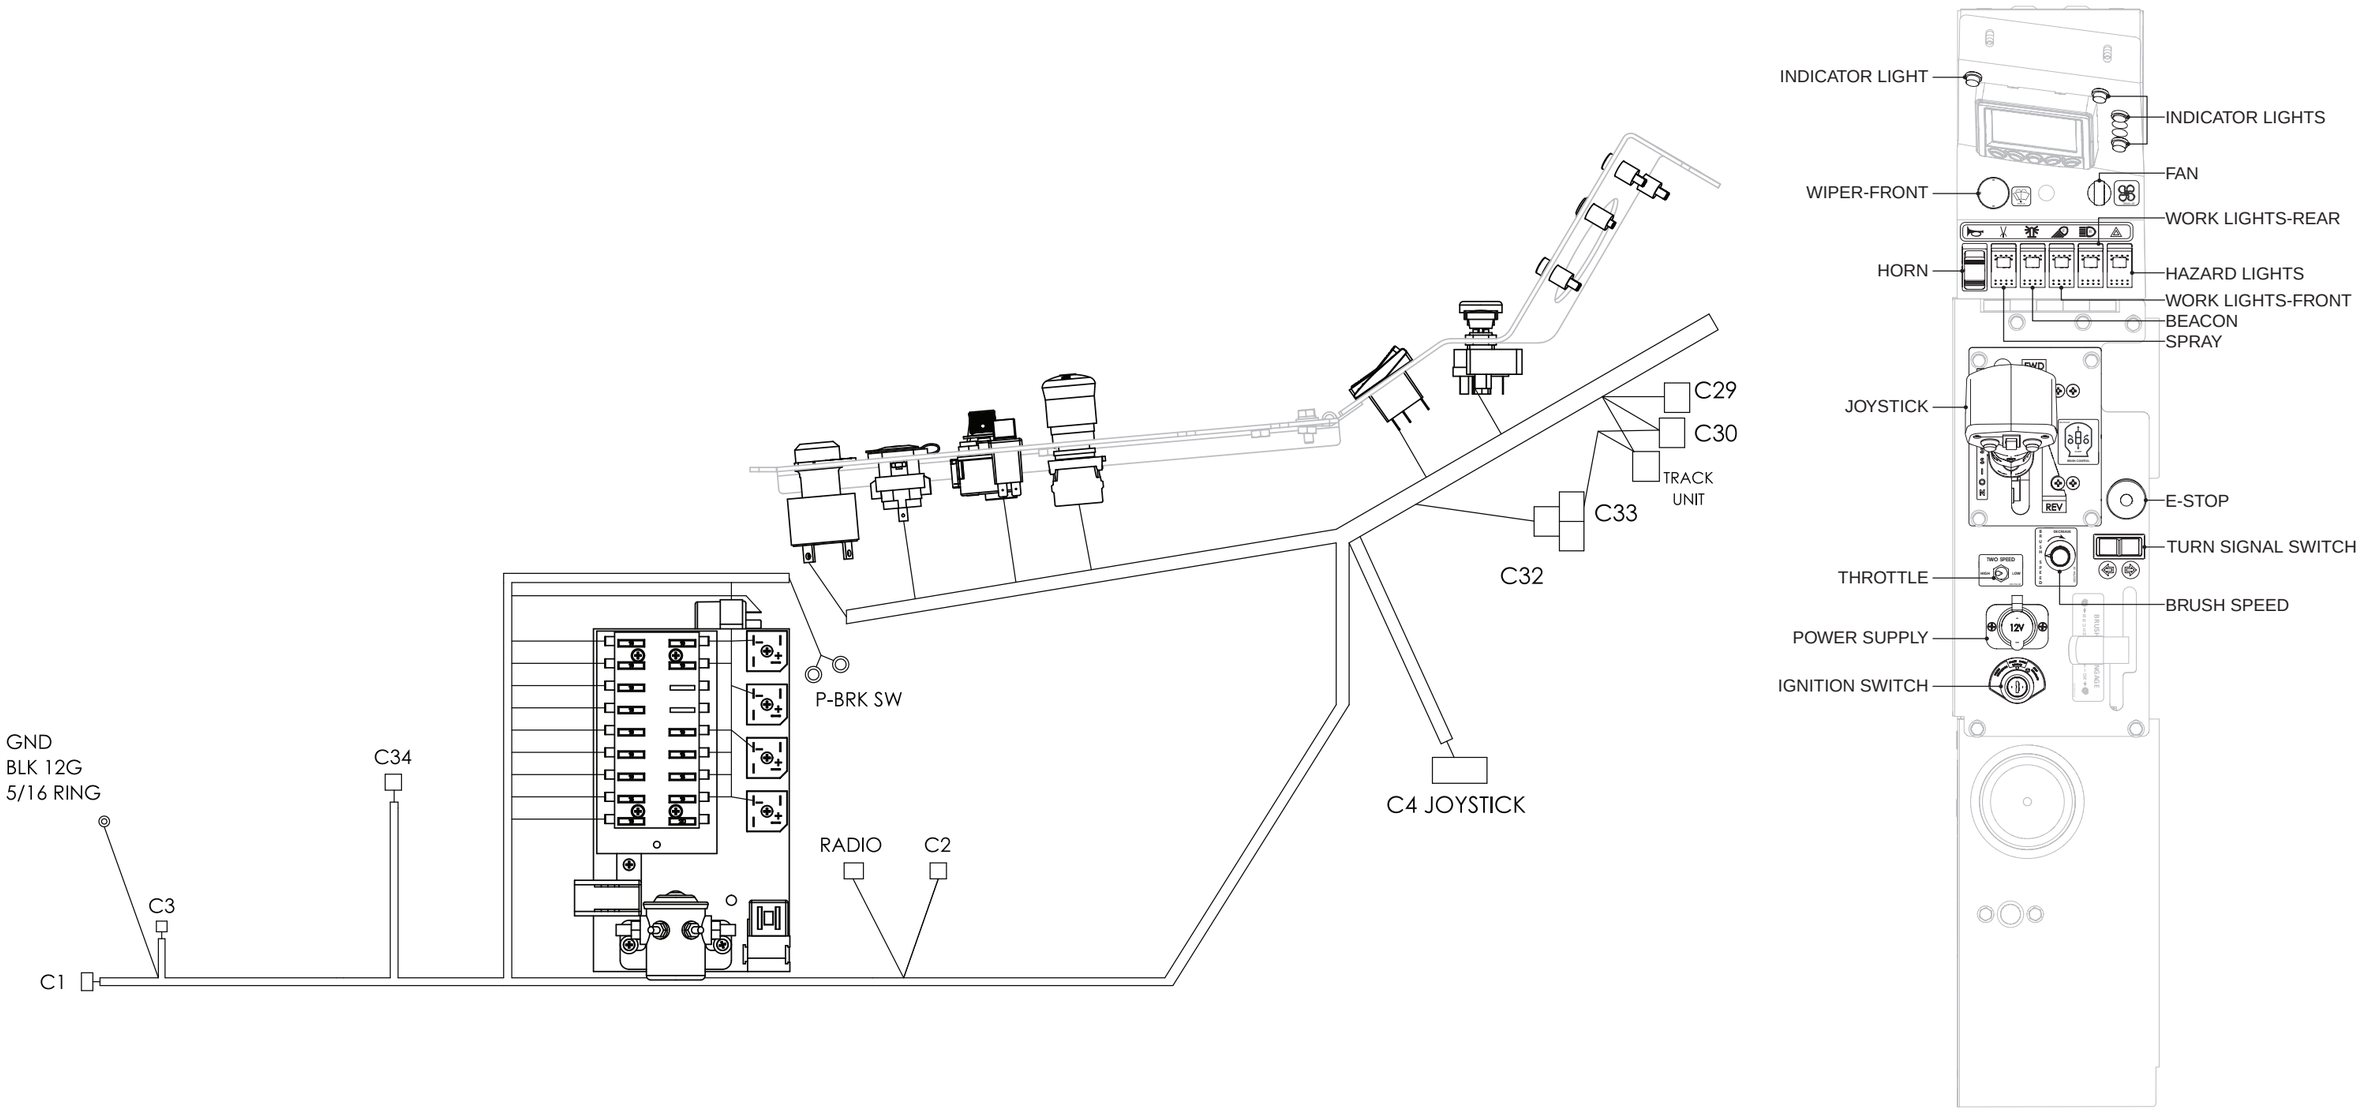


Figure 6-10. Controls Console (1 of 2)

NOTES

CONTROLS CONSOLE (2 OF 2)

Schematic #1021630

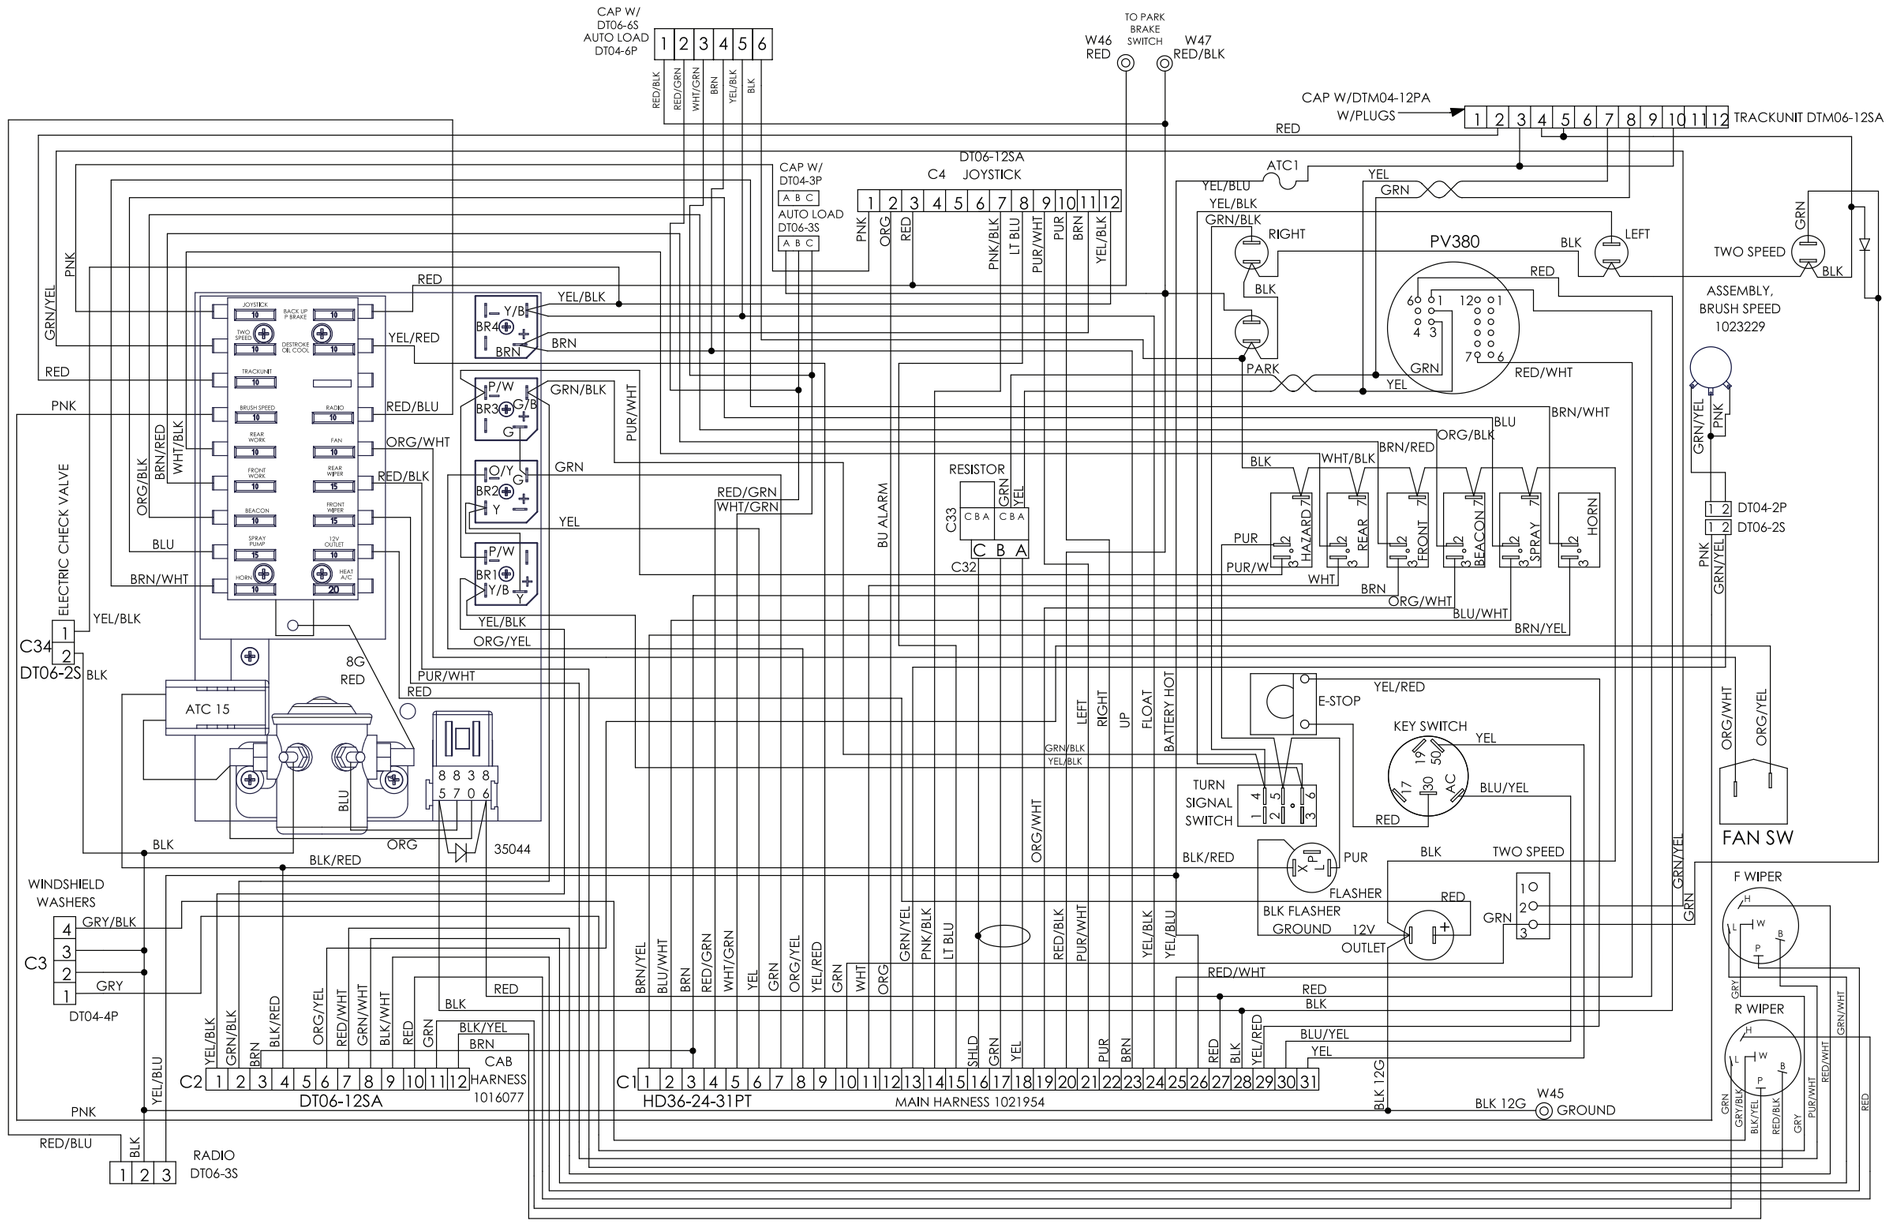


Figure 6-11. Controls Console (2 of 2)