LEEBOY
FAYAT GROUP

Safety and Operations Manual



LEEBOY MODEL 8680 COMMERCIAL PAVER

Manual No. 1033428-SOP

**This manual applies to
Serial Number 365152
and above.**

Thank you for purchasing the LeeBoy 8680 Commercial Paver. We wish you many years of safe and efficient operation of your machine.

READ THIS MANUAL PRIOR TO OPERATING the unit. This is an important part of the machine and should be kept in the dedicated storage container at all times. Though you may be familiar with similar equipment, you MUST read and understand this manual before operating this machine to help prevent injury or damage to the unit. If this manual becomes lost or damaged, contact your authorized LeeBoy Dealer immediately to order a replacement (see **Contact Information** in **Section 2**).

This manual is intended as a guide for the safe and efficient use for proper operation and maintenance of the machine. This manual contains information that was available at the time of printing and are subject to change without notice.

Use this manual along with all related supplemental books, engine and transmission manuals included with your machine. Related Service Bulletins should be reviewed to provide information regarding some of the recent changes. Contact your authorized LeeBoy dealer for the latest available information.

SAFETY 1
Contains general and specific safety guidelines for product and safety label locations.

SPECIFICATIONS 2
Contains warranty, contact information, machine specification tables, and machine dimensions.

COMPONENTS 3
Contains overview of major component locations and functions.

OPERATION 4
Contains instructions for safe operation and information for optional equipment.

MAINTENANCE 5
Contains routine maintenance procedures, mechanical adjustments, component replacement and troubleshooting charts.

LeeBoy is proud to be ISO 9001 certified. The International Standards Organization (ISO) establishes guidelines to ensure that products and services are safe, reliable, and of good quality. ISO certifies companies who demonstrate compliance with all aspects of product safety, customer satisfaction, efficiency, environmental stewardship and social responsibility. Our teams work hard to deliver quality industrial machines that exceed customer expectations and we strive for continuous improvement in everything we do. The LeeBoy family of companies is committed to total quality management with a strong focus on meeting customer needs.

LeeBoy is also proud to be an accredited ANAB manufacturer, which is a certification process comprised of quality standards established by the American National Standards Institute (ANSI) and the American Society for Quality (ASQ). The ANSI-ASQ National Accreditation Board plays an important role in ensuring the safety and quality of goods and services, along with protecting the environment.

Disclaimer

All information, illustrations and specifications in this manual are based on the latest information available at the time of publishing. The illustrations used in this manual are intended as representative reference views only. Moreover, because of our continuous product improvement policy, we may modify information, illustrations and/or specifications to explain and/or exemplify a product, service or maintenance improvement. We reserve the right to make any change at any time without notice.

Title 40, Code of Federal Regulations (CFR) 1068

This product meets certified-emission requirements set by the EPA (Environmental Protection Agency), governed by Title 40 CFR 1068, which specifies actions that are prohibited by law and lists civil penalties for noncompliance. As part of those regulations, modification or rendering inoperative any emission-related component can subject you to government penalties (and void your warranty). Tampering with emission controls is in violation of federal law, and can result in monetary penalties for each day an engine or piece of equipment is operated in violation.

Please be aware that you are responsible for maintaining the machine and the certified emission engine installation. Failure to comply to comply could result in penalties as listed above and void the warranty on this engine and this machine.

For more information, visit: https://www.epa.gov/laws-regulations/regulations

California Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Battery posts, terminals and other related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and other reproductive harm. Wash hands after handling.

2026 LeeBoy

LeeBoy reserves all copyright and other rights in this manual and its content. No part of this manual may be reproduced or used in any way without the written permission of LeeBoy, except as necessary to operate LeeBoy equipment.

TABLE OF CONTENTS

	Page
Safety	**1-1**
Safety Precautions	1-4
Machine Precautions	1-7
Hot Material Precautions	1-7
Hydraulic Systems Precautions	1-7
Refueling Precautions	1-8
Battery Precautions	1-8
Starting and Stopping Precautions	1-8
Parking Precautions	1-8
Operating Precautions	1-8
Poor Visibility	1-9
Storage Precautions	1-9
Maintenance Precautions	1-9
Safety Decals	1-10
Safety Decal Locations	1-10
Safety Decal Locations	1-11
Safety Decals Care	1-12
Decal Application	1-12
Information and Specifications	**2-1**
Two Year Limited Warranty	2-2
Contact Information	2-3
Specification Charts	2-4
Torque Specifications	2-9
Standard Inch Fasteners	2-9
Metric Fasteners	2-10
Hydraulic Fittings	2-10
Determining Proper Torque	2-11

Table of Contents

Component Location 3-1

Components Overview 3-3

Operator Platforms 3-4

High-Speed Rubber Tracks 3-4

Hydraulic System 3-4

Electrical System 3-4

Engine 3-5

Screed 3-5

Augers 3-6

Hopper and Conveyors 3-6

Machine Overview 3-7

Main Control Panel Overview 3-8

Control Panel with Steering Wheel Option 3-10

Upper Left Keypad 3-12

Lower Left Keypad 3-14

Upper Right Keypad 3-16

Lower Right Keypad 3-18

Junction Box Controls 3-20

Screed Controls 3-21

LEFT Screed Control Box - Left Keypad 3-22

LEFT Screed Control Box - Right Keypad 3-24

RIGHT Screed Control Box - Left Keypad 3-26

RIGHT Screed Control Box - Right Keypad 3-28

LB5 Electric Heat Controls 3-30

LB7 Electric Heat Controls [Option] 3-32

Operation 4-1

Receiving the Machine 4-3

Initial and Daily Inspection 4-3

Hopper Lock Valves 4-4

Operator Platform Features 4-5

Lockable Vandalism Covers 4-5

Seat Adjustment and Operator Platform Pivot 4-5

Start-Up Procedure 4-6

Diesel Exhaust Fluid (DEF) 4-7

Main Control Panel Keypad Functions 4-8

Upper Left Keypad 4-9

Upper Right Keypad 4-12
Lower Left Keypad 4-15
Lower Right Keypad 4-16
Screed Control Box 4-18
Left Keypad and Control Buttons 4-18
DPF Regeneration (REGEN) 4-23
DM430 Digital Display 4-23
Engine Screen 4-24
DM430 Engine Icons 4-25
Pave Screen 4-33
Pave Function Fault Codes 4-37
Operator Settings Screen 4-39
Motor Settings Screen 4-40
DPF and Regeneration 4-41
Parked Regeneration 4-44
Plus +1® Controllers 4-45
Driving the 8680 Paver 4-45
Steering and Speed Control 4-46
Paver Operation 4-48
Spray Down 4-48
Hopper Wings 4-50
Conveyors 4-51
Augers and Sonic Auger Sensor 4-53
Under Auger Material Cut-Offs 4-54
Heating the Screed, Extensions and End Gates 4-55
LB5 and LB7 Screeds 4-56
Horizontal Depth Screws 4-58
Hydraulic Tow Point Cylinders and Grade/Slope 4-59
Slope/Berm 4-60
Basic Paving 4-62
Setting the Crown 4-63
Mat Texture Adjustment 4-64
Unloading and Loading 4-64
Unloading 4-65
Loading 4-65
Towing 4-65

Optional Components 4-66
LB7 Screed 4-66
Umbrella Option 4-66
Screed Extension Vibration 4-66
Screed Central-Point Lube System. 4-66
Single Point Conveyor Lube Kit. 4-66
Steel Poly Tracks 4-66
Steering Knob 4-66
Steering Wheel 4-67
20-Foot Paving Kit 4-67
Berm Extensions. 4-67
High-Lift End Gate 4-67
Extendable Push Roller 4-67
Truck Hitch 4-68
Topcon® Sonic and Dual Grade Control 4-68
Track Plows 4-69
Slope Meter 4-70
Balloon Light. 4-71
Magnetic Cup Holder 4-71
Maintenance 5-1
Maintenance Schedule. 5-5
Accessing Components 5-6
Raise and Lower Engine Hood 5-6
Routine Maintenance. 5-7
Prepare Paver for Maintenance 5-7
Every 10 Hours or Daily Routine Maintenance 5-7
Every 50 Hours or Weekly Routine Maintenance 5-8
Every 100 Hours or Monthly Maintenance 5-8
Every 250 Hours or Quarterly Routine Maintenance 5-8
Every 500 Hours or Semi-Annual Routine Maintenance 5-8
Every 1000 Hours or Annual Routine Maintenance 5-8
Every 1500 Hours 5-8
Every 3000 Hours 5-8
Lubrication. 5-9
Lubrication Points Chart 5-9
Torque Hub Lubrication 5-13

Maintenance Adjustments 5-14
Conveyor Flight Chains 5-14
Conveyor Drive Chains. 5-15
Auger Drive Chain 5-15
Engine Maintenance 5-16
Check Engine Lubrication Oil 5-17
Change Engine Oil and Filter 5-17
Change Air Filter 5-18
Engine Drive Belt 5-19
Change Oil Separator Element 5-19
Selective Catalytic Reduction (SCR) 5-20
DEF (Diesel Exhaust Fluid) 5-20
DEF Storage 5-21
DPF Service 5-21
Cooling System 5-22
Replace Radiator Hoses 5-22
Fuel System 5-23
Fuel Tank 5-23
Change Fuel Filter 5-23
Fuel Water Separator 5-24
Hydraulic System 5-24
Check Hydraulic Oil 5-24
Change Hydraulic Oil and Filters 5-25
Electrical System. 5-26
Battery Servicing. 5-26
Alternator 5-27
Adjust Generator Belt 5-27
Fuse Panel. 5-28
Electric Heat Control Box. 5-28
Heating Elements 5-30
Element Resistance Testing 5-30
Generator Speed Check 5-31
Generator Voltage Testing 5-31
Dielectric Grease 5-32
Drive System 5-33
High-Speed Rubber Tracks 5-34

Table of Contents

Track Tension Cylinder 5-35
Oscillating Bogies 5-35
Front Idler 5-36
Two-Speed Hydraulic Motors 5-36
Planetary Torque Hub 5-37
Replacement Procedures 5-38
Hydraulic Pump/Motor Start-Up 5-39
Rear Conveyor Shaft, Bearings and Sprockets 5-40
Conveyor Drive Motors. 5-41
Front Hopper Wing Cylinders 5-42
Rear Hopper Wing Cylinders 5-42
Auger Motors 5-43
Auger End Mounts 5-44
Auger Inner Bearings 5-44
Main Screed Wear Plate 5-45
Screed Extension Heat Box 5-47
Winterizing for Storage 5-49
Troubleshooting 5-50
Hydraulic Pressure 5-50
Track Tension Pressure Relief 5-50
Spray Down Pump 5-51
Conveyor Chain Tension Slack Adjustment 5-52
Troubleshooting Chart 5-53
Display Diagnostic Trouble Code (DTC) Chart 5-57

Section 1

SAFETY

Page

Safety 1-1

Safety Precautions 1-4

Machine Precautions. 1-7

Hot Material Precautions 1-7

Hydraulic Systems Precautions 1-7

Refueling Precautions 1-8

Battery Precautions 1-8

Starting and Stopping Precautions 1-8

Parking Precautions 1-8

Operating Precautions 1-8

Poor Visibility 1-9

Storage Precautions 1-9

Maintenance Precautions 1-9

Safety Decals 1-10

Safety Decal Locations 1-10

Safety Decal Locations 1-11

Safety Decals Care 1-12

Decal Application 1-12

NOTES

This manual provides important information to familiarize you with safe operating and maintenance procedures. Even though you may be familiar with similar equipment, read and understand this manual before operating the LeeBoy Model 8680 Commercial Paver and follow its instructions when operating the machine.

Safety is everyone's business and our top concern. Knowing the guidelines covered in this section will help ensure your safety, the safety of those around you, as well as proper paver operation.

Keep safety labels in good condition. If safety labels become missing or damaged, replace them with new matching labels. Replacement safety labels are available from your LeeBoy authorized dealer (see contact information in **Section 2**).

You can find more information about occupational health and safety in the paving industry on the internet. A few resources are listed below:

www.osha.gov

cdc.gov

www.asphaltpavement.org

www.safety.fhwa.dot.gov/

LOOK FOR THESE SYMBOLS THROUGHOUT THIS MANUAL. THESE ITEMS ARE EXTREMELY IMPORTANT FOR THE SAFETY OF YOU AND YOUR COWORKERS. READ AND UNDERSTAND THOROUGHLY. HEED THE WARNINGS AND FOLLOW THE INSTRUCTIONS.

⚠ DANGER Indicates a hazardous situation which, if not avoided, *will* result in death or serious injury.

⚠ WARNING Indicates a hazardous situation which, if not avoided, *could* result in death or serious injury.

⚠ CAUTION Indicates a hazardous situation which, if not avoided, *could* result in minor or moderate injury.

NOTICE **Indicates a situation which can cause damage to the equipment, personal property and/or the environment, or cause the machine to operate improperly.**

NOTE: Indicates a procedure, practice or condition that should be followed in order for the machine or component to function in the manner intended.

SAFETY PRECAUTIONS

⚠ CAUTION

The safety messages that follow have CAUTION level hazards.



Pre-Operation Hazard

Read and understand this Operation Manual before operating or servicing the engine to ensure that safe operating practices and maintenance procedures are followed.

- Never permit anyone to service or operate the machine without proper training.
- Safety signs and labels are additional reminders for safe operating and maintenance techniques.
- Contact LeeBoy or an authorized LeeBoy dealer for additional training.
- Make sure you are aware of all laws and regulations that are in effect for the location in which the paver is operated.
- Make sure you have all necessary licenses to operate the paver.
- Never operate a unit in need of repair.
- Ensure all covers are installed.

Poor Lighting Hazard

The work area must be well lit to ensure safe and proper operation.

- Ensure that the work area is adequately illuminated.
- Always install wire cages on portable safety lights.

Tool Hazard



Always use tools appropriate for the task at hand and use the correct size tool for loosening or tightening LeeBoy machine parts.

⚠ DANGER

The safety messages that follow have DANGER level hazards.

Power Lines Hazard

If your machine comes into contact with electric power lines, observe the following:

- Stay in the operators seat.
- Warn other workers to stay away and do not touch any control or any part of the machine.
- If contact can be broken, drive the machine away from the danger zone.
- If contact cannot be broken, stay in the operators seat until told that power is off.
- Failure to observe these directions could result in electrocution or death.

Electrocution Hazard

Disconnect the battery before welding anywhere on the machine.

Suffocation Hazard



Carbon monoxide poisoning is a serious condition that occurs as a result of improper ventilation.

- Never operate the internal combustion engine on this machine in an enclosed area with poor ventilation. Ensure proper ventilation to reduce risk of carbon monoxide poisoning or death.

Exhaust Hazard



All internal combustion engines create carbon monoxide gas during operation and special precautions are required to avoid carbon monoxide poisoning:

- Never block windows, vents or other means of ventilation.
- Always ensure that all connections are tightened to specifications after repair is made to the exhaust system.

⚠ WARNING

The safety messages that follow have WARNING level hazards.

Crush Hazard

Keep bystanders away from work area before and during operation.

Modification Hazard

Never modify the LeeBoy machine without the written consent of LeeBoy. Any modification can affect the safe operation of the paver and may cause personal injury or death.

Exposure Hazard



Operators of the paver must be aware of their work environment and the equipment needed to work safely.

- Always wear personal protective equipment, including appropriate clothing, gloves, work shoes, and protection for eyes and ears, as required by the task at hand.

Explosion Hazard



While the engine is running or the battery is charging, hydrogen gas is being produced and can be easily ignited. Keep the area around the battery well-ventilated and keep sparks, open flame, and any other form of ignition out of the area.

- Always disconnect the negative (-) battery cable before servicing the paver.
- Do not start the engine by shorting the starter circuit or any other starting method not stated in this manual. Only use the starting procedure as described in this manual to start the engine.
- Never charge a frozen battery. Always slowly warm the battery to room temperature before charging.

Fire and Explosion Hazard

- Diesel fuel is flammable and explosive under certain conditions.
- Never use a shop rag to catch fuel.
- Wipe up all spills immediately.
- Never refuel with the engine running.
- Store any containers containing fuel in a well-ventilated area, away from any combustibles or sources of ignition.

Fire Hazard



When operating machinery there is a risk for fire. Always have appropriate safety equipment available.

- Keep a charged fire extinguisher within reach when working in an environment where a fire may occur.
- Have all fire extinguishers checked periodically for proper operation and/or readiness.
- Always read and follow safety-related precautions found on containers of hazardous substances like parts cleaners, primers, sealants and sealant removers.
- Undersized wiring systems can cause electrical fires.

Entanglement/Sever Hazard



Verify there are no people, obstacles or other equipment near the machine before starting the engine. Sound the horn as a warning before starting the engine.



If the engine must be serviced while it is operating, remove all jewelry and tie back long hair before operating or servicing the machine.

- Keep hands, other body parts, and clothing away from moving/rotating parts.
- Always stop the engine before beginning service. Before maintenance, remove negative battery cable from battery post to ensure vehicle is not operated during maintenance.
- Verify that all guards and covers are properly attached before starting the engine. Do not start the engine if any guards or covers are not properly installed on the paver.

- If you must run the engine during maintenance procedures, make sure you have a helper to keep bystanders clear of the paver and make observations of moving parts as requested by the operator.
- Always turn the start switch to the OFF position after operation is complete and remove the key from the switch. Keep the key in your possession when the paver is not operating.
- Attach a “Do Not Operate” tag near the key switch while performing maintenance on the equipment.
- Never operate the engine while wearing a headset to listen to a radio or music because it will be difficult to hear the warning signals.
- Always start the engine and operate the controls while seated in the operators seat.

Alcohol and Drug Hazard



Never operate the machine while under the influence of alcohol, drugs, or when ill.

Piercing Hazard



High-pressure hydraulic fluid or fuel can penetrate your skin and result in serious injury. Avoid skin contact with high-pressure hydraulic fluid or diesel fuel spray caused by a hydraulic or fuel system leak such as a broken hydraulic hose, fuel injection or high-pressure, common-rail engine line.

If you are exposed to high-pressure hydraulic fluid or fuel spray, obtain prompt medical treatment.

- Never check for a hydraulic fluid or fuel leak with your hands. Always use a piece of wood or cardboard. Have your authorized LeeBoy dealer or distributor repair the damaged parts.

Flying Object Hazard



Always wear eye protection when cleaning the machine with compressed air or high-pressure water.

Dust, flying debris, compressed air, pressurized water or steam may cause eye injury.

Coolant Hazard



Coolant must be handled properly to ensure operator safety.

- Wear eye protection and rubber gloves when handling engine coolant.
- If contact with the eyes occurs, flush eyes with clean water for 15 minutes.
- If contact with skin occurs, wash immediately with soap and clean water.

Burn Hazard



Some of the machine’s surfaces become very hot during operation and shortly after shutdown.

- Keep hands and other body parts away from hot machine surfaces.
- Handle hot components with heat-resistant gloves.

NOTICE

The safety messages that follow have NOTICE level hazards.

- Any part that is found defective as a result of inspection or any part whose measured value does not satisfy the standard or limit must be replaced.
- Always tighten components to the specified torque. Loose parts can cause damage to the machine or cause it to operate improperly.
- Only use replacement parts approved by LeeBoy. Other replacement parts may affect warranty coverage.



Follow the guidelines of the EPA or other governmental agencies for the proper disposal of hazardous materials such as oils, diesel fuel, coolant, etc. Consult the local authorities or reclamation facility.

- Dispose of hazardous materials in accordance with all applicable laws and regulations. Never dispose of hazardous materials by dumping them into a sewer, on the ground, or into groundwater or waterways.
- Clean all accumulated dirt and debris away from the body of the paver and its components before you inspect the paver or perform preventive maintenance procedures or repairs. Operating a paver with accumulated dirt and debris will cause premature wear of paver components. Accumulated dirt and debris also hinders effective paver inspection.
- Retrieve any tools or parts that may have dropped inside of the paver to avoid improper paver operation.
- If any alert indicator illuminates during paver operation, stop the engine immediately. Determine the cause and repair the problem before continuing to operate the paver.

MACHINE PRECAUTIONS

Hot Material Precautions

- Wear protective gear for face, hands, feet, and body when operating the paver.
- Allow machine to cool before repairing or maintaining working components.
- If hot asphalt touches skin, flush area immediately with cold water. DO NOT apply ice to the affected area. DO NOT ATTEMPT TO REMOVE ASPHALT CEMENT with products containing solvents or ammonia. Natural separation will occur in about 48 to 72 hours. Get medical attention as soon as possible.
- DO NOT remove radiator cap, drain plugs, service grease fittings, or pressure taps while engine is hot. Add coolant to the radiator and perform other services only when the engine is stopped and fully cooled.

Hydraulic Systems Precautions

- Ensure all components are in good working condition. Replace any worn, cut, abraded, flattened or crimped hoses and metal lines.
- DO NOT attempt makeshift repairs using tape, clamps or cements. The hydraulic system operates under extremely high pressure and such repairs could cause serious injury.
- Wear proper hand and eye protection when checking for a high pressure leak. Use a piece of wood or cardboard as a back stop to isolate and identify leaks.

⚠WARNING Hydraulic oil under pressure can cause serious personal injury. Check for oil leaks with a piece of cardboard. DO NOT expose hands to possible high-pressure oil. Turn off engine before attempting to tighten oil lines and fittings.

- Escaping pressurized hydraulic fluid has force sufficient to penetrate the skin, which could cause serious personal injury. Ensure all pressure is relieved before disconnecting line, hoses or valves.
- If injury from concentrated high pressure steam or hydraulic fluid occurs, seek medical attention immediately. Injuries resulting from hydraulic fluid penetrating the skin's surface can result in serious infections or toxic reactions.

Refueling Precautions

- Do NOT overfill the fuel tank as overflow creates a fire hazard when spilled on hot components.
- DO NOT smoke when refueling and never refuel when the engine is running. Fuel is highly flammable and should be handled with care. Death or serious injury can occur due to explosion and/or fire.
- DO NOT fill tank to capacity. Allow room for expansion to reduce the risk of fuel expanding and spilling from the tank.
- Tighten fuel cap securely. Should fuel cap be lost, replace it with an original manufacturer's approved cap. Pressurization of the tank may result from use of non-approved cap.
- Prevent fires by keeping the machine clean of accumulated debris, grease, and spilled fuel.
- Use ultra-low sulfur diesel fuel (ULSD) only.

Battery Precautions

- Keep all sparks and flames away from batteries, as gas given off by electrolytes is explosive.
- Acid propelled by an explosion can cause blindness if it comes in contact with eyes. Always wear safety glasses when working near batteries.
- If you come in contact with battery electrolyte solution, wash off immediately. Chemicals can cause burns.
- Always disconnect the battery ground cable before working on the electrical system to avoid injury from spark or short circuit. Electrical shock and burns can occur.
- To avoid electrolyte loss, DO NOT tip batteries more than 45 degrees.

Starting and Stopping Precautions

- Check all around the paver to make sure there are no people working on the machine or in the path of the machine before starting. DO NOT start until area is clear. Death or serious injury can occur to bystanders from being crushed under a moving machine.
- Check brakes, steering and other control devices in accordance with instructions before starting. Be sure both steering levers (joysticks) are in neutral with the neutral lock engaged.
- DO NOT bypass the paver neutral-start system.
- Be aware of job site conditions and terrain. Adjust your speed if operating in rough or hilly conditions.

⚠WARNING **DO NOT operate the engine in an enclosed area without proper ventilation. Exhaust gasses are odorless and deadly.**

Parking Precautions

- Park paver on level ground whenever possible, set steering levers in neutral and lock. Apply the parking brake. Park the paver with wheels securely blocked on grades.
- Remove ignition key when leaving paver parked or unattended.

Operating Precautions

- Always comply with local regulations regarding moving equipment on public roads and highways.
- Know and use the hand signals required for a particular job. Know who has the responsibility for signaling.
- Make sure that all lights and reflectors comply with state and local regulations. Make sure that they are clean, in good working order, and can be seen clearly by all traffic.
- DO NOT stand between the equipment and the truck while the truck is being backed to the paver. Death or serious injury can result from being crushed between the two machines.
- DO NOT ride on attachments.
- Check all gauges and warning instruments for proper operation. If malfunctions are found, shut down the machine and report the problem for resolution. If the failure causes loss of steering control, loss of brake control, or loss of engine power, stop paver motion as quickly as possible. Apply parking brake (if equipped). Keep the machine securely parked until the failure is corrected or the machine can be safely towed.
- Drive the machine with care. Make sure speed is compatible with conditions. Use caution on rough ground, slopes, and while turning.
- Be alert for hazards and obstructions such as ditches, trees, cliffs, overhead power lines, and areas where there is danger of a slide.

- Be aware of and understand the job site traffic flow patterns.
- Obey flagmen, road signs, and signals.
- Watch for bystanders. Never allow anyone near the machine during operation. Never allow anyone to reach into the machine during use.
- Operator must know how to use signaling devices when driving the paver. Operator must also understand which circumstances require use of each signal. Use tail lights, slow moving vehicle signs, and warning beacon as needed when traveling on public roads. It is recommended that you provide an escort on the road.
- DO NOT tow the paver, except to remove from road or to load on trailer.
- The machine is shipped with two seats, one for the left side operation and one for the right side operation. It is recommended that you operate the paver from the seats. If for any reason the seats are removed, care must be taken to operate from a position with stable footing and use of the grab handles provided.
- When moving the machine, adjust speed and direction of travel for the terrain and ground conditions present. Always consider adjusting travel speed to match ground conditions.

Poor Visibility

Increasingly, asphalt maintenance equipment is used during less than ideal lighting conditions such as fog and smog or at night. These conditions present safety hazards for workers, bystanders and passing traffic.

⚠WARNING **When operating under restricted light conditions, equip the machine with special lighting to prevent serious injury.**

While the machine is equipped with a beacon and a work light, contact your authorized LeeBoy dealer for additional lighting packages if working under these conditions.

Use reflective tape on the sides of machines when working at night. Ensure all workers wear reflective safety vests. Use impact barriers (movable or stationary) to protect workers and direct the traffic flow safely away from the work site.

Storage Precautions

- Store paver in an area away from human activity.
- DO NOT permit children to play on or around the stored machine. Serious injury or death can occur from improper/unauthorized use of the machine.
- Make sure the unit is stored on a surface that is firm, level, and free of debris.
- Store the machine inside a building or cover securely with a weatherproof tarpaulin.

Maintenance Precautions


- DO NOT attempt repairs unless trained to do so. Refer to manuals and experienced repair personnel for help.
- Before working on the machine, securely block the machine and any components that may fall. Block any working components to prevent unexpected movement while repairs are being made.
- Always wear safety glasses and other required safety equipment when servicing or making repairs.
- Disconnect battery before working on the electrical system.
- Avoid lubrication or mechanical adjustments while the paver is in motion or while engine is operating.
- If lubrication or mechanical adjustment is necessary, use extreme caution and complete the following steps:
  1. Place all four joysticks in NEUTRAL (center position) on both control panels. This engages the brake.
  2. Lower screed to the ground.
  3. Shut off engine.
- Never make repairs on pressurized components such as fluid lines, the gas system, or mechanical items until the pressure has been relieved.
- When servicing or replacing hardened pins, use a brass drift or other suitable material between the hammer and pin.
- Keep brake and steering systems in good operating condition.

SAFETY DECALS

If your machine is repainted, it is extremely important that you replace all the CAUTION, WARNING and DANGER safety decals as shown in the following graphics. For additional help, refer to the parts listing in **Section 7** and contact your authorized LeeBoy dealer to order a replacement kit.

NOTE: It is the responsibility of the owner and operator to make sure that all safety labels are readable and located on the paver as designated by LeeBoy.

Safety Decal Locations

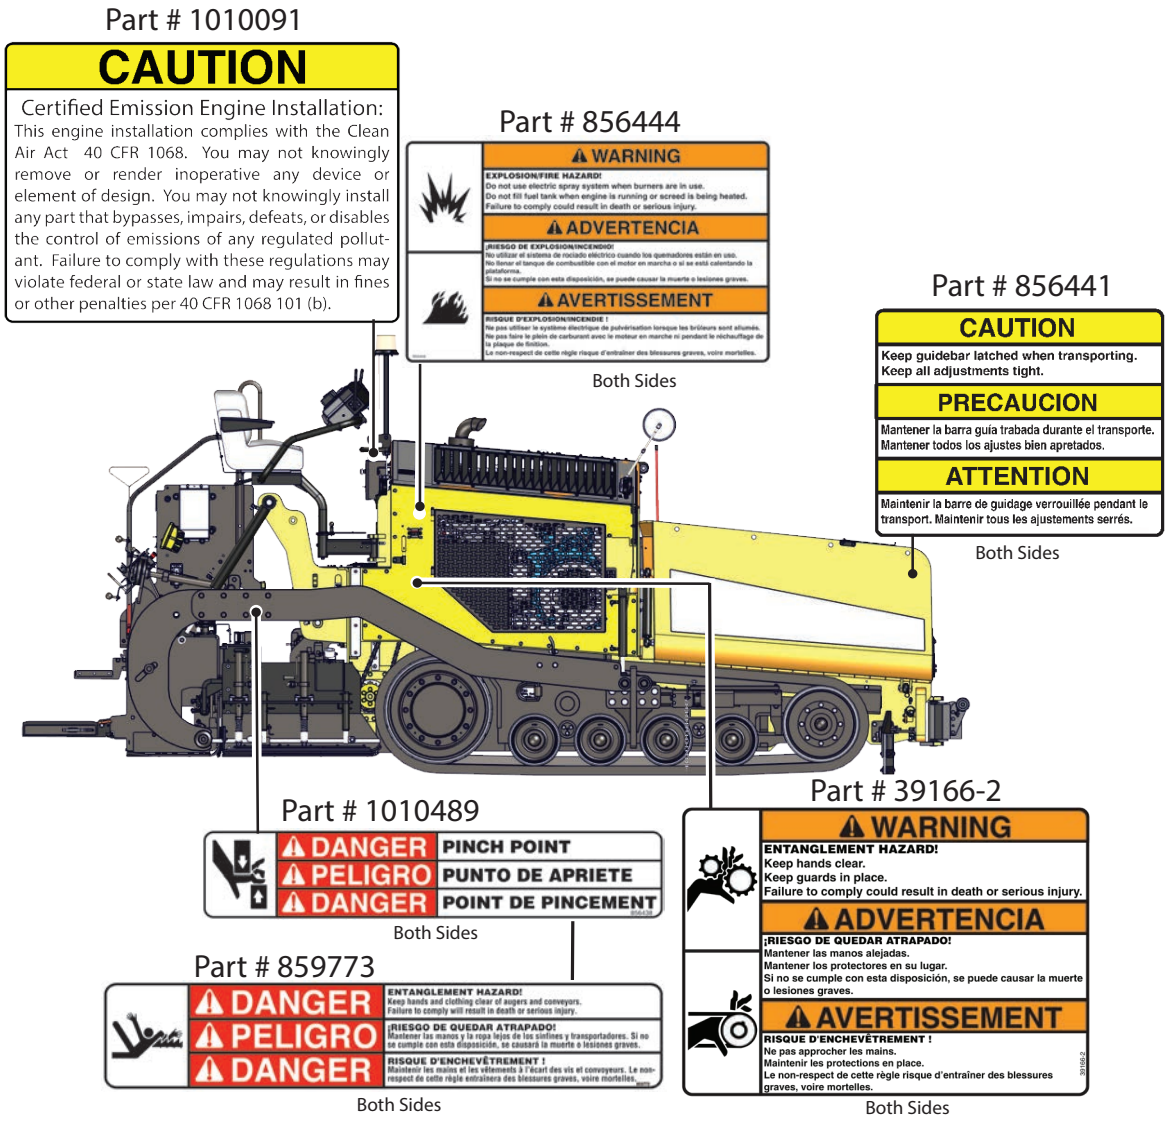

1

Safety Decal Locations

Part # 1005474

DANGER

OPERATION HAZARD!
Never leave operator station unattended with machine in gear, in operation, and/or in motion.

Failure to comply will result in death or serious injury.

1005474

Part # 856639

WARNING

Do not operate or tow unit before reading operators manual.
Failure to comply could result in death or serious injury.

ADVERTENCIA

No usar ni remolcar la máquina sin antes haber leído el manual del operador.

Si no se cumple con esta disposición, se puede causar la muerte o lesiones graves.

AVERTISSEMENT

Ne pas faire fonctionner ni remorquer la machine avant de lire le manuel d'opérations.

Le non-respect de cette règle risque d'entraîner des blessures graves, voire mortelles.

856639

Part # 856437

DANGER

PINCH POINT

PELIGRO

PUNTO DE APRIETE

DANGER

POINT DE PINCEMENT

Both Sides

Part # 859764

CAUTION

Side wing transport lock

859764

Both Sides

Part # 856482

CAUTION

Flight screw handle must be in locked position when raising screed.
Damage may occur to hand, seat or screw if not locked.
Always remove hand when raising screed.

PRECAUCION


La manija del tornillo de recorrido debe estar en la posición trabada al elevar la plataforma. Se pueden sufrir lesiones en la mano, o dañar el asiento o tornillo si no está trabada. Siempre quitar las manos al elevar la plataforma.

ATTENTION

La poignée de vis d'ailette doit être en position verrouillée lors du levage de la plaque de finition. Une blessure à la main risque de se produire et le siège ou la vis d'être endommagé(e) si elle n'est pas verrouillée. Toujours enlever la main lors du levage de la plaque de finition.

856482

Both Sides

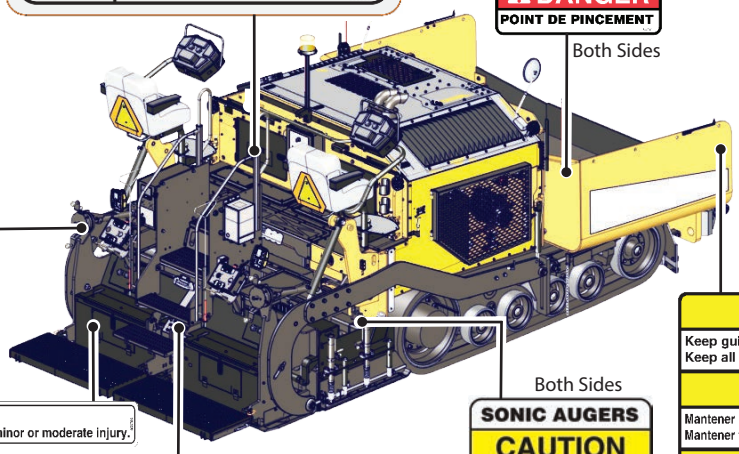

Part # 859789

CAUTION WATCH YOUR STEP!
Failure to comply may result in minor or moderate injury.

Part # 856483

CAUTION	PRECAUCION	ATTENTION
Loosen bolts at center & right side of slope bar when adjusting crown or valley. Retighten when desired crown or valley is acheived.	Aflojar los pernos del costado cuando se ajusta la corona o valle. Volver a apretar después de haber alcanzado la corona deseada.	Desserrer les boulons sur le côté, lors du réglage du bombement et du creux. Le resserrer une fois le bombement désiré obtenu (couronne +).

856483 REV 2

Part # 856484

CAUTION		PRECAUCION		ATTENTION	
VALLEY ↕ CROWN	CROWN AND VALLEY ADJUSTMENT 1. Loosen bolt at slotted end of vibrator plate (N/A 8515 & 8616). 2. Loosen bolt at right end of third step or stepster. 3. Turn crown handle down for crown and up for valley. 4. Once you have correct adjustment tighten 1 and 2 back. Note: Ratchet wrench in tool box to loosen bolts	VALLE ↕ CORONA	AJUSTE DE CORONA Y VALLE 1. Soltar el perno en el extremo ranurado de la placa del vibrador (N/A 8515 & 8616). 2. Aflojar el perno del extremo derecho del tercer escalón o barra de pendiente. 3. Girar la manija hacia abajo para los bacheo, y hacia arriba para los hoyos. 4. Una vez que se tiene el ajuste correcto, apretar 1 y 2 nuevamente. Nota: Usar la llave de trinquete que se encuentra en la caja de herramientas para soltar los pernos	CREUX ↕ BOMBEMENT	RÉGLAGE DE BOMBEMENT ET DE CREUX (couronne + et -) 1. Desserrer le boulon à l'extrémité fendue du plateau du vibrateur (N/A 8515 & 8616). 2. Desserrer le boulon à l'extrémité droite du troisième gradin ou de la barre d'inclinaison. 3. Tourner la manette de bombement vers le bas pour le bombement (couronne +) et vers le haut pour le creux (couronne -). 4. Une fois le réglage correct obtenu, resserrer les boulons 1 et 2. Remarque : Utiliser la clé dynamométrique qui se trouve dans la boîte à outils pour desserrer les boulons

Both Sides

SONIC AUGERS

CAUTION

Ensure cord points toward front.

Part # 859801

Part # 856441

CAUTION

Keep guidebar latched when transporting.
Keep all adjustments tight.

PRECAUCION

Mantener la barra guía trabada durante el transporte.
Mantener todos los ajustes bien apretados.

ATTENTION

Maintenir la barre de guidage verrouillée pendant le transport. Maintenir tous les ajustements serrés.

Both Sides

Safety Decals Care

1. Keep safety decals and signs clean and legible at all times.
2. Be familiar with the content and position of each safety decal. Decals include important information.
3. Replace decals and signs that are missing or become impossible to read.
4. When replacing parts that display a safety decal, ensure that the new part is fitted with a decal as well.
5. Obtain replacement safety decals or signs from your authorized dealer.

Decal Application

Be sure that the installation area is clean and dry. Use hot, soapy water to clean the surface where the decal will be applied.

1. Thoroughly dry the surface.
2. Measure and fit decal before removing the paper backing.
3. For decals with no top protection paper, remove the smallest split-backed paper.
4. Align decal over the specified area and carefully press exposed portion into place.
5. Slowly remove the remaining backing and carefully smooth the remaining portion of the decal into place.
6. Small air pockets can be pierced with a pin and smoothed using a piece of the decal backing.

Section 2

INFORMATION AND SPECIFICATIONS

2

Page

Information and Specifications 2-1

Two Year Limited Warranty 2-2

Contact Information 2-3

Specification Charts 2-4

Torque Specifications 2-9

Standard Inch Fasteners 2-9

Metric Fasteners 2-10

Hydraulic Fittings 2-10

Determining Proper Torque 2-11



TWO YEAR LIMITED WARRANTY

Limited Warranty

If a manufacturing defect in factory supplied materials or factory workmanship is found and the authorized LeeBoy dealer ("Dealer") is notified during the warranty period, LeeBoy will be responsible for repairing or replacing any part or component of the unit or part that fails to conform to the warranty during the warranty period.

Terms and Conditions

The warranty applies for a period of two years (for unlimited hours of usage on the unit during the two years), beginning on the date that the Dealer from which the unit is purchased submits the warranty registration form to LeeBoy (typically on the date of purchase).

- The warranty is transferable.
- LeeBoy has the right to repair any component or part before replacing it with a new one.
- Replacement parts furnished by LeeBoy are covered for the remainder of the warranty period applicable to the unit or component in which such parts are installed.
- All new replacement parts purchased from a Dealer will carry a six (6) month warranty.

Exclusions and Limitations

LeeBoy has no obligation under this warranty for any defects or failures caused by:

- Misuse, misapplication, negligence, accident or failure to maintain or use in accordance with the most current operating instructions;
- Unauthorized alterations or modifications;
- Any replacement parts or attachments not manufactured by or expressly approved by LeeBoy;
- Failure to conduct normal maintenance and operating service, including without limitation, providing lubricants, coolant, fuel, tune-ups, inspections or adjustments; or
- Unreasonable delay, as determined by LeeBoy, in making the applicable units or parts available upon notification of a service notice ordered by LeeBoy.

LeeBoy is not responsible for any of the following:

- Defects or failures with respect to any engine or truck chassis;
- Defects or failures covered by a warranty provided by a third-party, including without limitation warranties with respect to engines or truck chassis;
- Costs related to travel time, mileage or overtime;
- Costs related to transporting the unit to and from the place at which warranty work is performed;
- Airfreight charges related to transporting repair parts to the place at which warranty work is performed;
- Used units or used parts of any kind;
- Repairs due to normal wear and tear, or brought about by abuse or lack of maintenance of the equipment, except for premature failures;
- Attachments not manufactured or installed by LeeBoy; or
- Miscellaneous charges.

Exclusion of Other Warranties/Limitation of Liability

OTHER THAN THE EXPRESS WARRANTY PROVIDED IN SECTION A. ABOVE, LEEBOY GIVES NO EXPRESS, STATUTORY, OR IMPLIED WARRANTY OR GUARANTEE AND HEREBY DISCLAIMS ALL SUCH WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, SUITABILITY, DURABILITY, CONDITION, QUALITY, OR FREEDOM FROM CLAIMS OF ANY PERSON BY WAY OF INTERFERENCE, INFRINGEMENT, OR THE LIKE.

IN NO EVENT OR UNDER ANY THEORY OF RECOVERY, WHETHER AS A RESULT OF BREACH OF CONTRACT OR WARRANTY, ALLEGED NEGLIGENCE, OR LIABILITY WITHOUT FAULT, SHALL LEEBOY BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE SALE, USE, OR LOSS OF USE OF ANY PRODUCT, INCLUDING WITHOUT LIMITATION LOST PROFITS OR REVENUES, COST OF CAPITAL, COST OF SUBSTITUTED EQUIPMENT, FACILITIES OR SERVICES, DOWNTIME COSTS, LABOR COSTS, OR DIMINUTION OF VALUE.

CONTACT INFORMATION

For information regarding parts and repairs about your LeeBoy product, contact your authorized LeeBoy dealer. If your dealer is unable to resolve the problem, contact LeeBoy directly.

Record dealer information in the space provided. For additional information about LeeBoy, please visit: www.leeboy.com.

Sales Representative: _____

Dealership Name: _____

Dealership Address: _____

Dealership Phone: _____

Record of Ownership

Please complete the following information for use if you need to contact LeeBoy for service, parts or literature.

Machine Model Number: _____

Product Serial Number: _____

Date of Purchase: _____

Nameplate

The nameplate contains the model and serial numbers used to identify the machine and its components for parts or service information. Refer to the Engine Operator's Manual for the location of the engine nameplate.

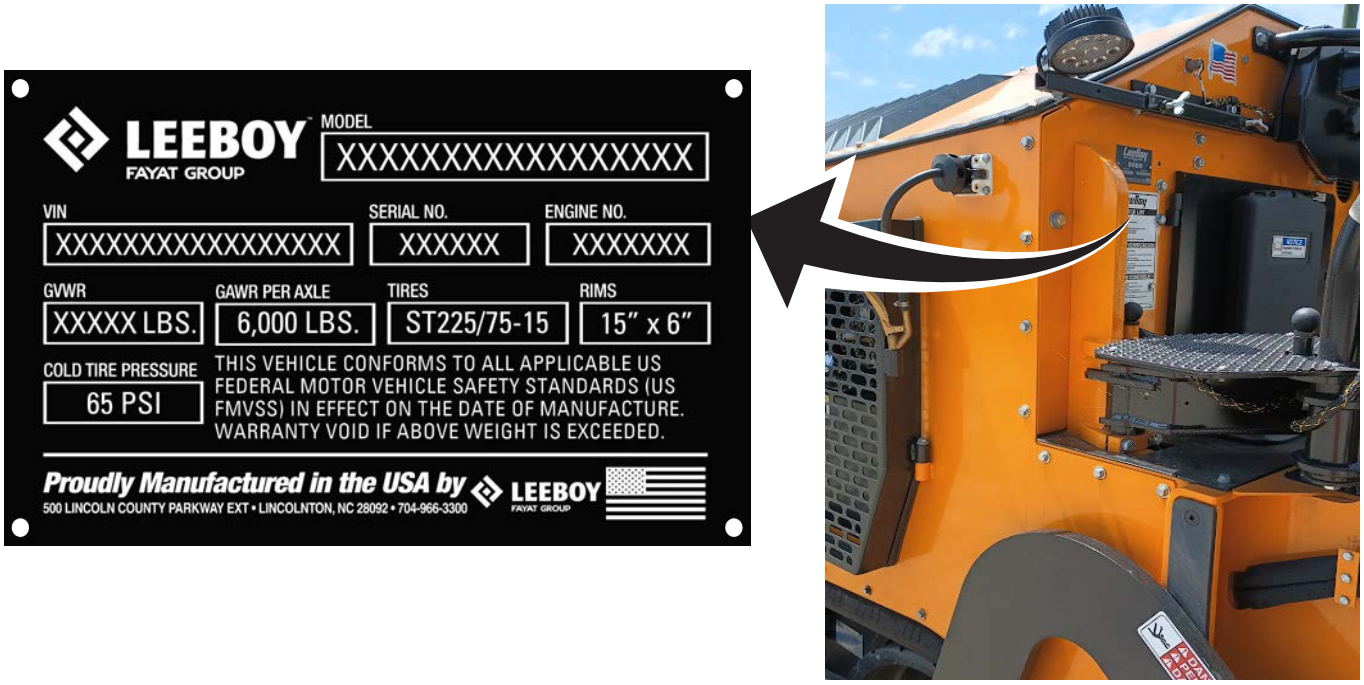


Figure 2-1. Nameplate Location