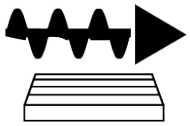
KEYPAD SYMBOL	CONTROL NAME	FUNCTION
	Conveyor RIGHT	Turns the RIGHT auger and conveyor on and off. The right LED light illuminates GREEN while auger/conveyor is ON; the left RED light illuminates when OFF, and BLUE if paver is paused while the right auger/conveyor are operating (or the material has shut off the sensor). Press the button once to turn ON the RIGHT auger and conveyor (AUTO mode). Press the button and hold for MANUAL override. Press button again to turn off the RIGHT auger and conveyor. **NOTE: Moving the joysticks into neutral pauses operation in AUTO mode.**
	LEFT Cut-Off CLOSED	Press and hold to close the LEFT Under Auger Material Cut-Off. When closed, the center LED light illuminates RED on both operator consoles and the LEFT screed control keypad. If paver is put into reverse, the cut-offs will automatically close and the center LED light illuminates RED if operating in AUTO mode.
	RIGHT Cut-Off CLOSED	Press and hold to close the RIGHT Under Auger Material Cut-Off. When closed, the center LED light illuminates RED on both operator consoles and the LEFT screed keypad. If paver is put into reverse, the cut-offs will automatically close and the center LED light illuminates RED if operating in AUTO mode.
	LEFT Cut-Off OPEN	Press and hold to open the LEFT Under Auger Material Cut-Off. All three LED lights illuminate GREEN on both operator consoles and the LEFT screed keypad while open.
	RIGHT Cut-Off OPEN	Press and hold to open the RIGHT Under Auger Material Cut-Off. All three LED lights illuminate GREEN on both operator consoles and the LEFT screed keypad while open.
	LEFT Extension EXTEND	Extends the LEFT screed extension. Press and hold button to extend the left screed extension to desired width. All three LED lights illuminate GREEN on both consoles and the LEFT screed keypad while engaged.
	LEFT Extension RETRACT	Retracts the LEFT screed extension. Press and hold button to retract the left screed extension to desired width. All three LED lights illuminate GREEN on both consoles and the LEFT screed keypad while engaged.

Upper Right Keypad

(Left Operator Platform Control Panel Shown)

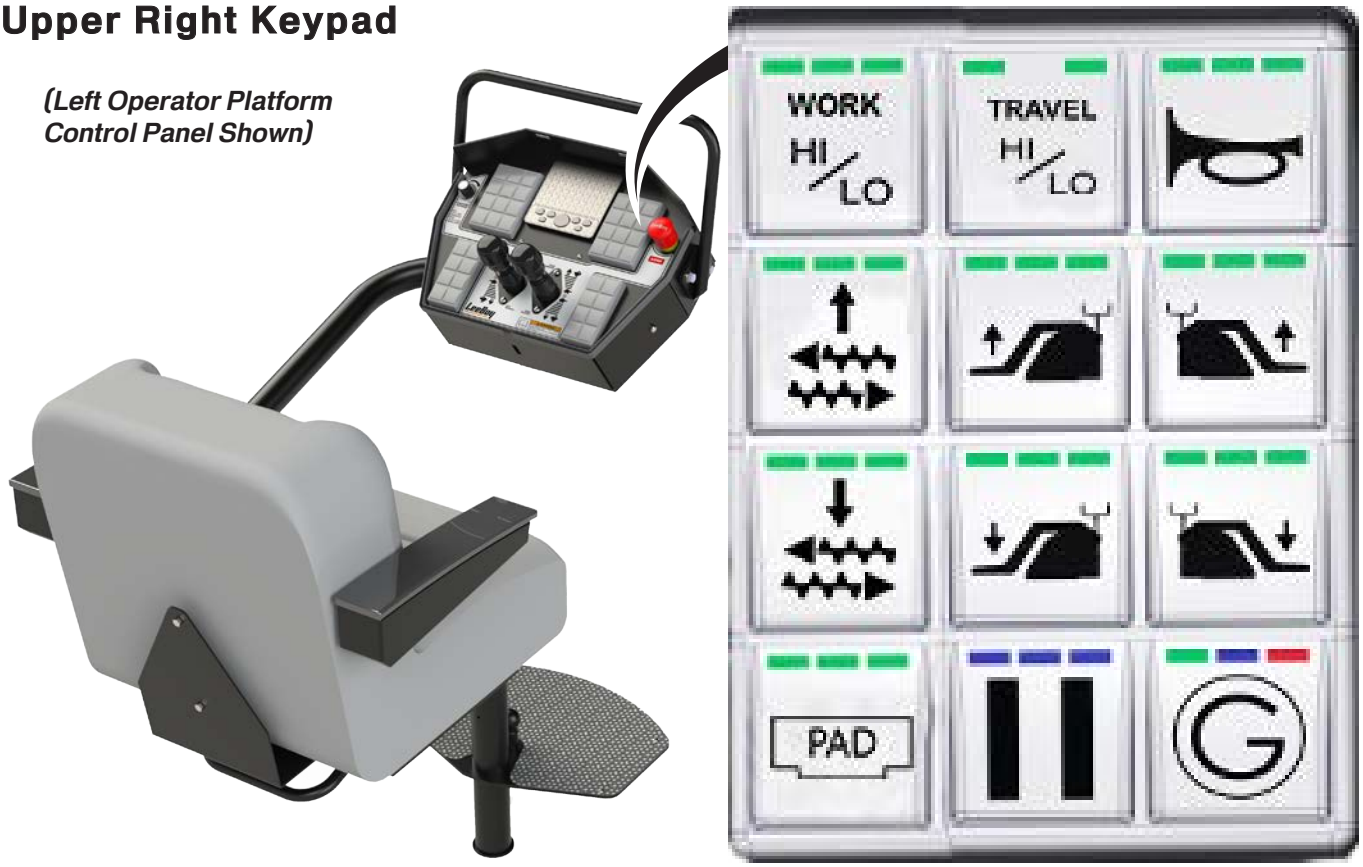
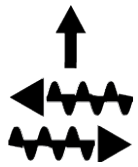
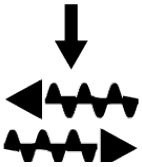


Figure 3-4. Control Panel - Upper Right Keypad

KEYPAD SYMBOL	CONTROL NAME	FUNCTION
WORK HI/LO	Work High/Low Speed	This button is used to change paver low and high speed in the working mode. The right LED light illuminates GREEN on both consoles at low speed. Press the button to shift to high work speed. The left LED light illuminates GREEN on both consoles at high speed. The work speed can be shifted between the two speeds as needed. **NOTE: Only pave in work speed.**
TRAVEL HI/LO	Travel High/Low Speed	This button is used to change paver low and high speed in travel mode. The right LED light illuminates GREEN on both consoles at low speed. Press the button to shift to high travel speed. The left LED light illuminates GREEN on both consoles at high speed. The work speed can be changed by stopping, then shifting, between the two speeds as needed. **NOTE: Only pave in work speed.**
	Horn	Pressing this button sounds the horn, and functions on both consoles along with the screed keypads. All three LED lights will illuminate GREEN when engaged.

KEYPAD SYMBOL	CONTROL NAME	FUNCTION
	Auger Lift	Raises the augers. • Press and hold button to raise both the left and right auger. • Releasing the button will hold the augers at that position. **NOTE: The Under Auger Material Cut-Offs will automatically open when raising the augers.**
	Auger Lower	Lowers the augers. • Press and hold button to lower both the left and right auger. • Releasing the button will hold the augers at that position.
	LEFT Tow UP	Sets the asphalt mat thicker and controls the hydraulic tow cylinders. Press and hold button to raise LEFT tow. All three LED lights illuminate GREEN while engaged on both consoles and the LEFT screed keypad. **NOTE: Does not function when the grade control is set to AUTO.**
	RIGHT Tow UP	Sets the asphalt mat thicker and controls the hydraulic tow cylinders. Press and hold button to raise RIGHT tow. All three LED lights illuminate GREEN while engaged on both consoles and the RIGHT screed keypad. **NOTE: Does not function when the grade control is set to AUTO.**
	LEFT Tow DOWN	Sets the asphalt mat thinner and controls the hydraulic tow cylinders. Press and hold button to lower LEFT tow. All three LED lights illuminate GREEN while engaged on both consoles and the LEFT screed keypad. **NOTE: Does not function when the grade control is set to AUTO.**
	RIGHT Tow DOWN	Sets the asphalt mat thinner and controls the hydraulic tow cylinders. Press and hold button to lower RIGHT tow. All three LED lights illuminate GREEN while engaged on both consoles and the RIGHT screed keypad. **NOTE: Does not function when the grade control is set to AUTO.**
	Pad Builder	Pressing this button turns on the augers and conveyors, along with opening the Under Auger Material Cut-Offs. • Press and hold this button to manually overide both conveyors.
	Pause	Pauses propel (travel), conveyors and augers functions. Press the button once to pause these functions. The three LED lights illuminate BLUE on both consoles. Pressing the button again resumes these functions. **NOTE: The engine idle will remain at high but automatically go into low idle if paused for a preset period of time (unless the generator is enabled.)**
	Generator	The generator can be activated in AUTO or MANUAL mode from the active or inactive console. The default is Auto. • Press the button once for AUTO operation (the temperature setting controls operation). The left LED lights illuminate GREEN. • Press the button again to turn off (the right LED light illuminates RED).



Lower Right Keypad

(Left Operator Platform Control Panel Shown)



Figure 3-5. Control Panel - Lower Right Keypad

KEYPAD SYMBOL	CONTROL NAME	FUNCTION
	Hopper Wing Select	Used to select the right, left or both hopper wings, and can be operated on both active and inactive consoles. Upon start-up, the operational mode is set by default to operating both hopper wings. The LED lights illuminate GREEN. • Pressing the button once enables operating only the LEFT hopper wing. The left LED light illuminates GREEN on both consoles. • Pressing the button again operates only the RIGHT hopper wing. The right LED light illuminates GREEN on both consoles. • Pressing the button again returns to the default operational control of both hopper wings.

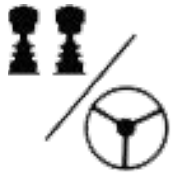KEYPAD SYMBOL	CONTROL NAME	FUNCTION
	Active/Inactive Console	Both consoles are inactive upon start-up. All four joysticks must be in the NEUTRAL position to activate either console. Press this button on the desired operator platform console once to activate its control panel console. The three LED lights will illuminate GREEN on the active console. **NOTE: All joysticks on both operator platform control panels *must* be in NEUTRAL to deactivate the console in use and activate the other console.** **NOTE: The opposite console can be activated by selecting multiple times.** **NOTE: If an active console becomes inactive while the paver is moving, the paver will automatically slow down to a stop and apply park brake.**
	Hopper Wing(s) OPEN	Opens the right, left or both hopper wings, depending upon hopper mode selected, and can be operated from active and inactive consoles. Press and hold the button to open the hopper wing(s). The center LED lights GREEN while engaged on both consoles.
	Screed Raise	Press and hold button to raise the screed. All three LED lights illuminate GREEN while engaged on both consoles. This function can only be operated from the active console.
	Hopper Wing(s) CLOSE	Closes the right, left or both hopper wings, depending upon hopper mode selected, and can be operated from active and inactive consoles. Press and hold the button to close the hopper wing(s). All three LED lights GREEN while engaged on both consoles.
	LEFT Screed Float	This button controls floating the screed, and can only be operated from the active console. Placing the joysticks on the active console into neutral moves into screed hold, and float resumes when joysticks are returned to the forward position. The center LED light illuminates GREEN when screed float is active, and BLUE when in screed hold, on both consoles.
	RIGHT Screed Extension RETRACT	Retracts the RIGHT screed extension. Press and hold button to retract the right screed extension to desired width. All three LED lights illuminate GREEN on both consoles and the RIGHT screed keypad while engaged.
	RIGHT Screed Extension EXTEND	Extends the RIGHT screed extension. Press and hold button to extend the right screed extension to desired width. All three LED lights illuminate GREEN on both consoles and the RIGHT screed keypad while engaged.

JUNCTION BOX CONTROLS

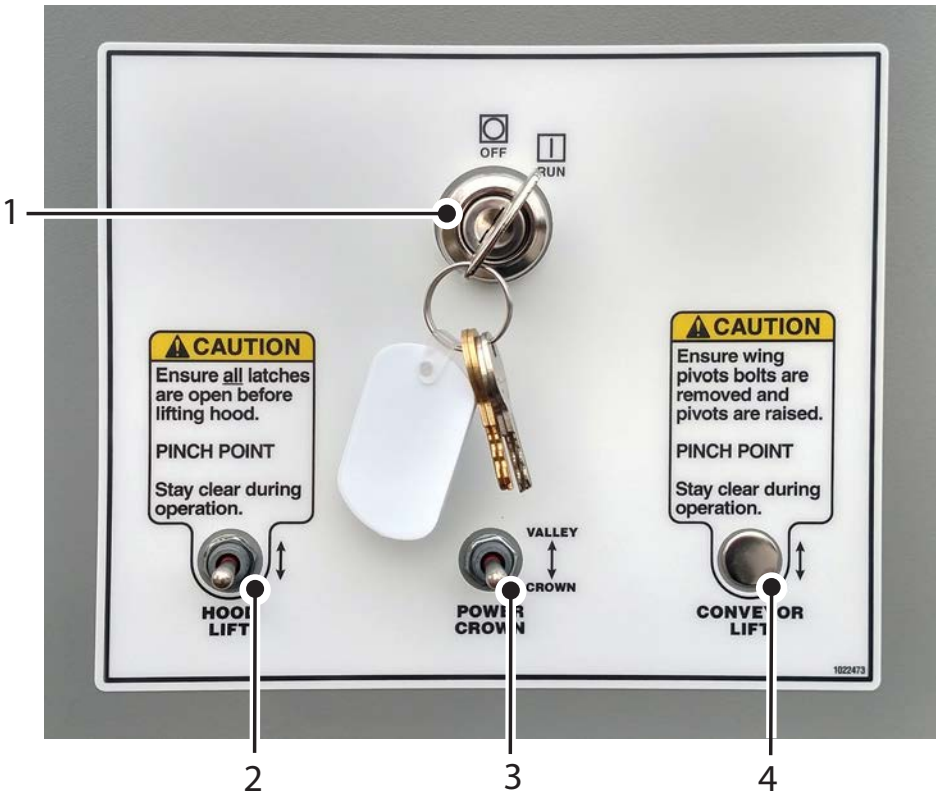


Figure 3-6. Junction Box Controls

ITEM NO.	CONTROL NAME	FUNCTION
1	Ignition	Insert key into the ignition switch and turn clockwise to the RUN position, press the Start/Stop button on the main control panel, and activate the desired control panel to start the paver. ***(Page 4-5)*** **NOTE: The engine will not start unless *both* joysticks on both operator platforms (4 total) are in the NEUTRAL position.**
2	Hood Lift Switch	Raises and lowers the engine hood. ***(Page 5-5)*** • Push switch UP and hold to raise the hood. • Press switch DOWN and hold to lower the hood. ⚠CAUTION **Ensure all hood latches (5) are unlatched before raising the hood. Ensure all latches are securely latched before operating.** ***(Page 5-6)***
3	Power Crown Switch (OPTION)	Automatically adjusts crown and valley. • Push switch UP for positive crown adjustment. • Push switch DOWN for negative valley adjustment. **NOTE: The switch does not function if not equipped with this option.**
4	Nonfunctional	Nonfunctional on this model.

SCREED CONTROLS

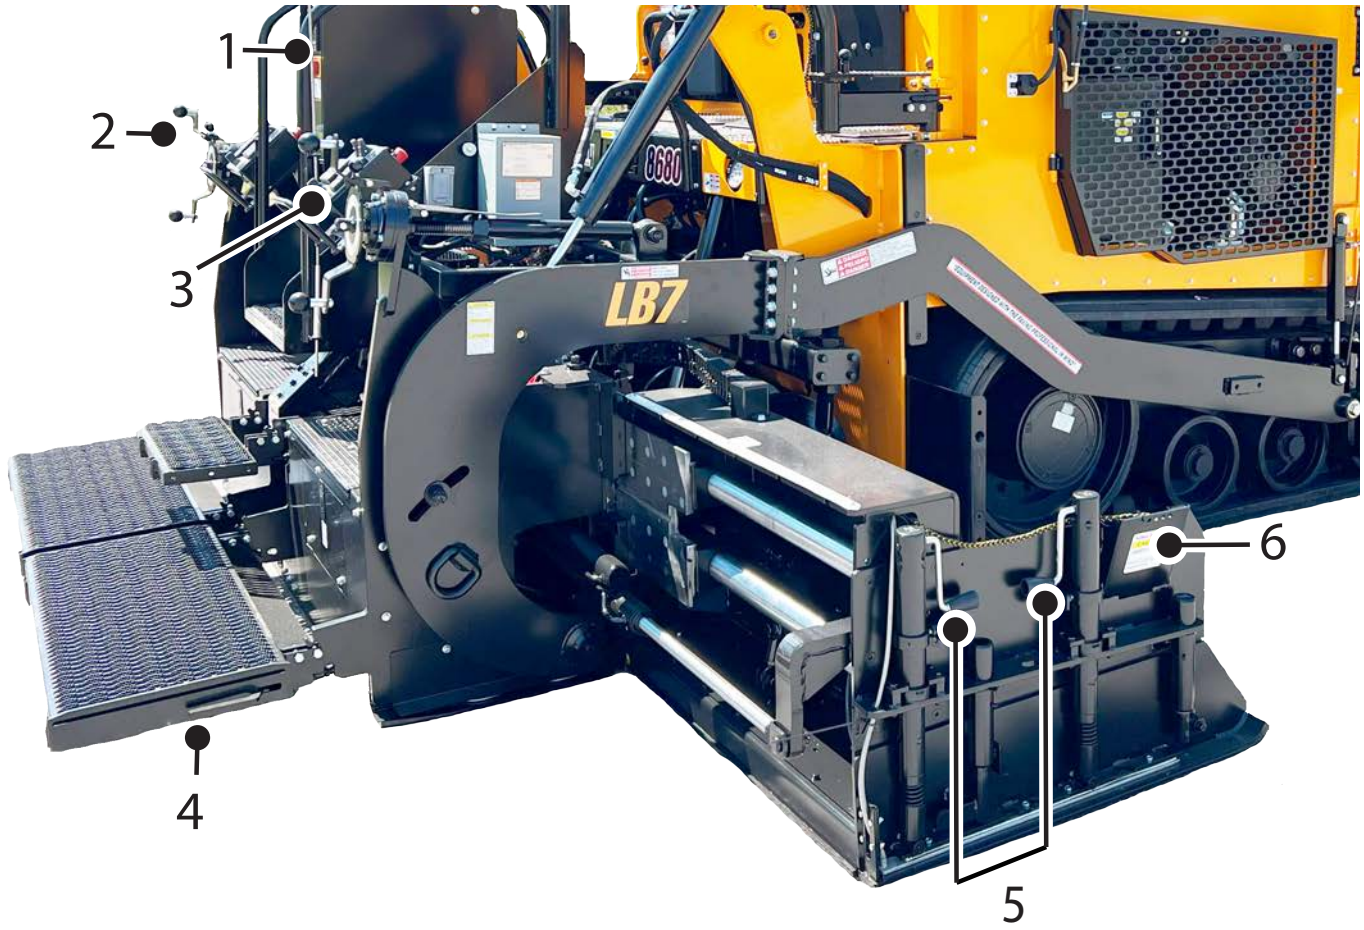


Figure 3-7. Screed Controls

ITEM NO.	CONTROL NAME	FUNCTION
1	Electric Heat Box	Control box for the electric screed heat and heated end gate.
2	Horizontal Depth Screw	Controls depth of the asphalt (one on each side).
3	Screed Control Panel	Located on each side of the screed. Features numerous paving controls.
4	Foldable Walkboard	Walkboard provides added convenience for screed operators. Can be folded up when not in use.
5	End Gate Adjusters	Raises, lowers and adjusts angle of end gates.
6	Sonic Auger Sensor Mount	Mount for the Sonic Auger Sensor, which senses and automatically gauges the amount of material in the extensions.

LEFT Screed Control Box - Left Keypad

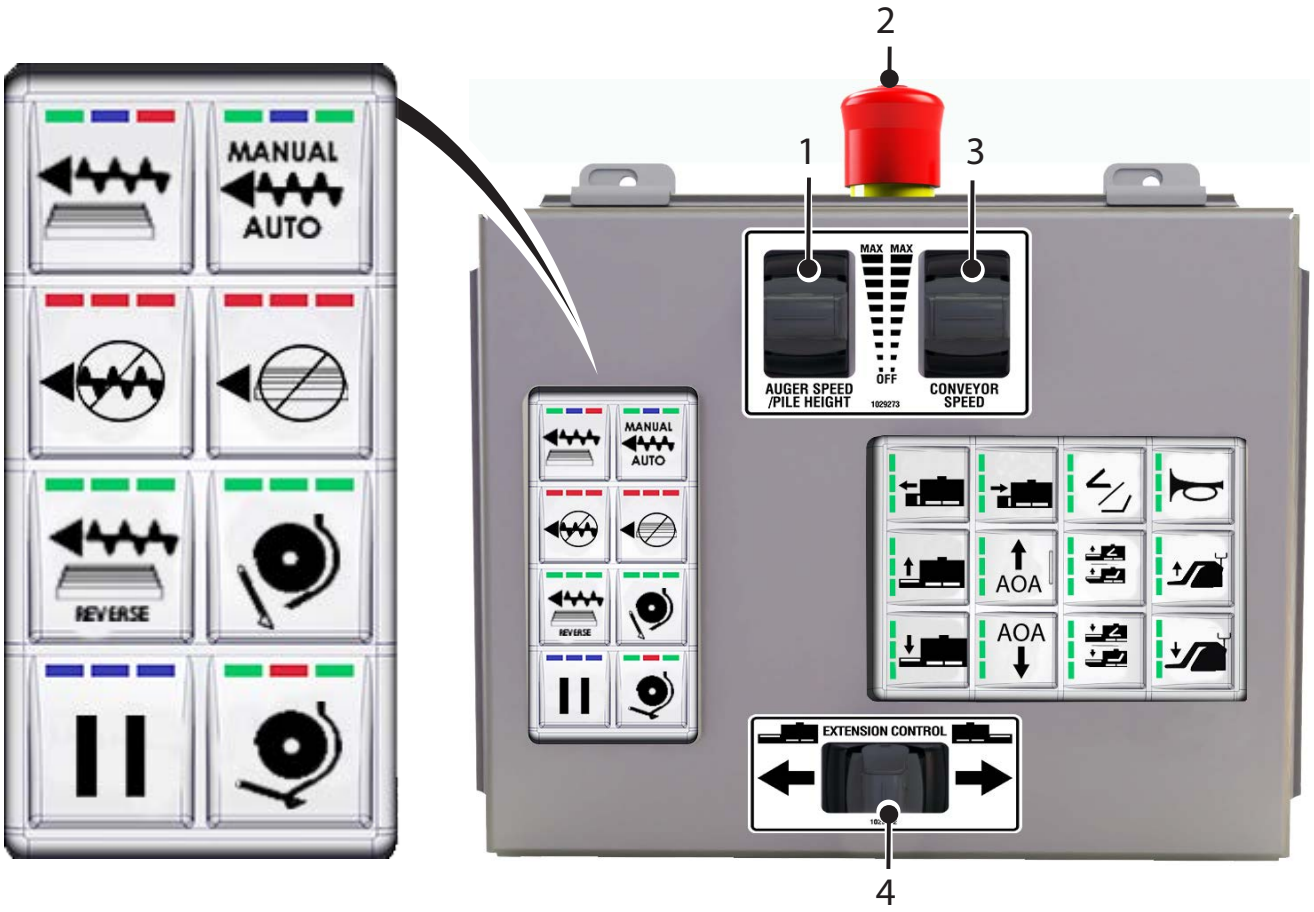
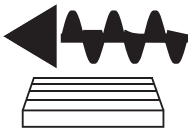
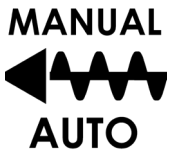
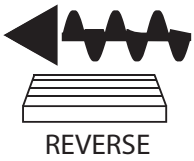


Figure 3-8. LEFT Screed Controls (Left Keypad)

KEYPAD SYMBOL	CONTROL NAME	FUNCTION
1	Auger Pile Speed	• Set switch up/down to increase/decrease the auger speed when auger is set to MANUAL mode. • Set switch up/down to increase/decrease the pile height when auger is set to AUTO mode.
2	Emergency Stop (E-Stop) Button	Immediately stops the paver engine and all electronic functions. Turn clockwise to release E-Stop button.
3	Conveyor Speed	Set switch up/down to increase/decrease the conveyor speed when operating in MANUAL mode.
4	Extension IN/OUT	• Push and hold this switch to extend (OUT) or retract (IN) the screed extension on the corresponding control box side of operation.

KEYPAD SYMBOL	CONTROL NAME	FUNCTION
	Auger/Conveyor ON/OFF	Press this button once to turn ON the auger and conveyor. • The left LED light illuminates GREEN when the auger and conveyor is on. • The default setting is AUTO mode, which is controlled by the Auger MANUAL/AUTO button. • Press the button again to turn OFF the auger and conveyor. • You can also use the auger OR conveyor bypass button to pause operation of either function separately.
	Auger MANUAL/ AUTO Select	This button only functions if the Auger/Conveyor ON/OFF button is turned ON. Independent right and left augers can be operated in MANUAL or AUTO (automatic) mode. AUTO mode is the default. • Press button twice to operate auger in MANUAL mode. The left LED light illuminates GREEN. In MANUAL mode, the operator controls auger speed using the auger pile speed switch above the keypad. • Press the button once to operate in AUTO mode. The right LED light illuminates GREEN. The center blue light illuminates when material reaches the set material height. In AUTO mode, the auger dial controls material height. **The auger sonic sensor must be connected to operate in AUTO mode.**
	Auger/Conveyor Reverse	Press the Auger/Conveyor Reverse button for reversing the direction of both functions to help clear material as needed. All three LED lights illuminate while the auger/conveyor reverse is active.
	LEFT Cut-Off OPEN	Press and hold to open the LEFT Under Auger Material Cut-Off. All three LED lights illuminate GREEN on both operator consoles and the LEFT screed keypad while open.
	Pause	Pauses propel (travel), conveyors and augers functions. Press the button once to pause these functions. The three LED lights illuminate blue. • Pressing the button again resumes these functions. **NOTE: The engine idle will remain at high but automatically go into low idle if paused for a preset period of time (unless the generator is enabled.)**
	LEFT Cut-Off CLOSED	Press and hold to close the LEFT Under Auger Material Cut-Off. When closed, the center LED light illuminates RED on both operator consoles and the LEFT screed control keypad. If paver is put into reverse, the cut-offs will automatically close and the center LED light illuminates RED when operating in AUTO mode.

LEFT Screed Control Box - Right Keypad

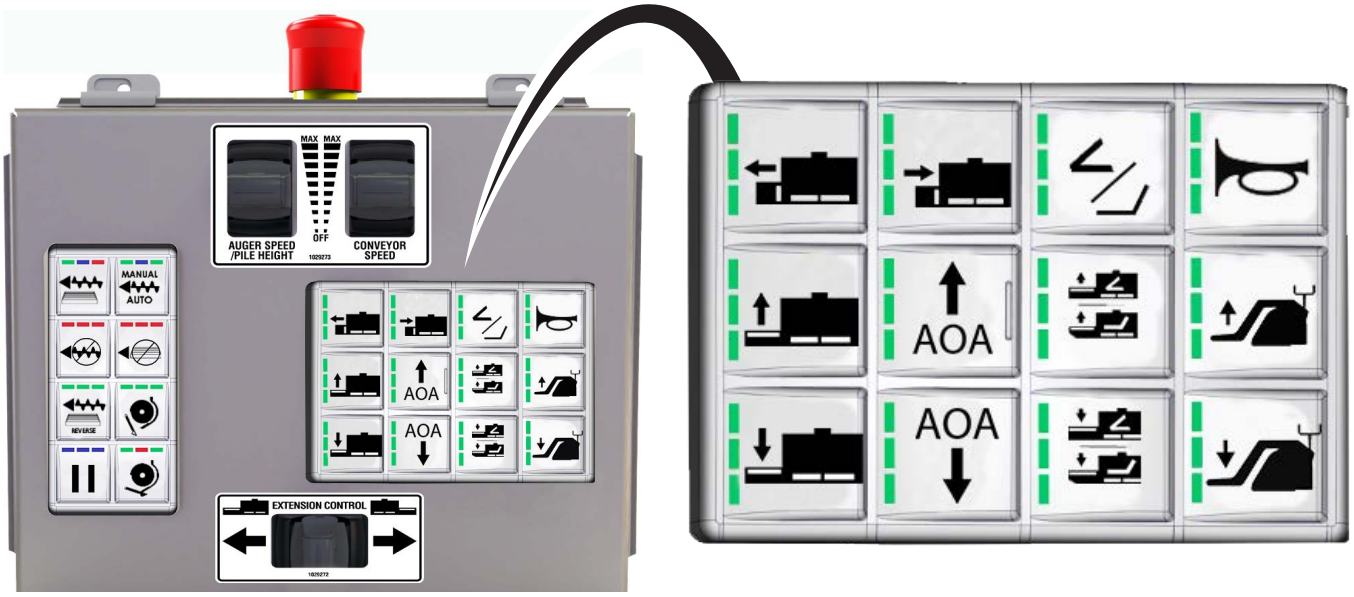
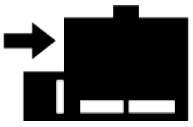
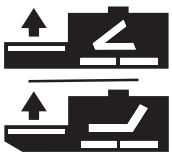
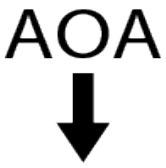
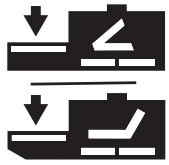


Figure 3-9. LEFT Screed Controls (Right Keypad)

KEYPAD SYMBOL	CONTROL NAME	FUNCTION
	Tunnel Extension OUT	The tunnel extension allows material to flow while paving at wide widths. Press and hold the button to extend the auger. The left LED light illuminates green in MANUAL mode.
	Tunnel Extension IN	The tunnel extension allows material to flow while paving at wide widths. Press and hold the button to retract the auger. The right LED light illuminates green in MANUAL mode.
	Slope/Berm SELECT	Use this button to select SLOPE or BERM mode. • The default is set to OFF. • Press the button once to select SLOPE. The LEFT LED light illuminates GREEN on the keypad (and both consoles) in this mode. • Push the button twice to select BERM mode. The right LED light illuminates GREEN in this mode.
	Horn	Pressing this button sounds the horn whether the console is active or not. All three LED lights will illuminate GREEN when engaged.
	Vertical Up	Automatically increase the screed extension vertical height by pressing and holding the vertical UP. All three LED lights illuminate while in operation.

KEYPAD SYMBOL	CONTROL NAME	FUNCTION
	AOA Up	Press and hold this button to make adjustments to the Angle-of-Attack (AOA). Adjust the mat texture using the Angle-of-Attack (AOA) adjuster to produce a smooth or coarse mat texture.
	Slope/Berm UP	Press and hold this button to enable the Slope or Berm UP function, depending upon which mode is selected on the Slope/Berm Select button. When activated by pressing the button, all three LED lights illuminate GREEN on both main consoles and the left or right screed control box (corresponding to the active console).
	Tow UP	Sets the asphalt mat thicker and controls the hydraulic tow cylinder. Press and hold button to raise LEFT tow. All three LED lights illuminate GREEN on the keypad (and both consoles) while engaged. **NOTE: Only functions with joysticks in neutral when the grade control is set to AUTO.**
	Vertical Down	Automatically decrease the screed extension vertical height by pressing and holding the vertical DOWN. All three LED lights illuminate while in operation.
	AOA Down	Press and hold this button to make adjustments to the Angle-of-Attack (AOA). Adjust the mat texture using the Angle-of-Attack (AOA) adjuster to produce a smooth or coarse mat texture.
	Slope Berm DOWN	Press and hold this button to enable the Slope or Berm DOWN function, depending upon which mode is selected on the Slope/Berm Select button. When activated by pressing the button, all three LED lights illuminate GREEN on both main consoles and the left or right screed control box (corresponding to the active console).
	Tow DOWN	Sets the asphalt mat thicker and controls the hydraulic tow cylinder. Press and hold button to lower LEFT tow. All three LED lights illuminate GREEN on the keypad (and both consoles) while engaged. **NOTE: Only functions with joysticks in neutral when the grade control is set to AUTO.**

RIGHT Screed Control Box - Left Keypad

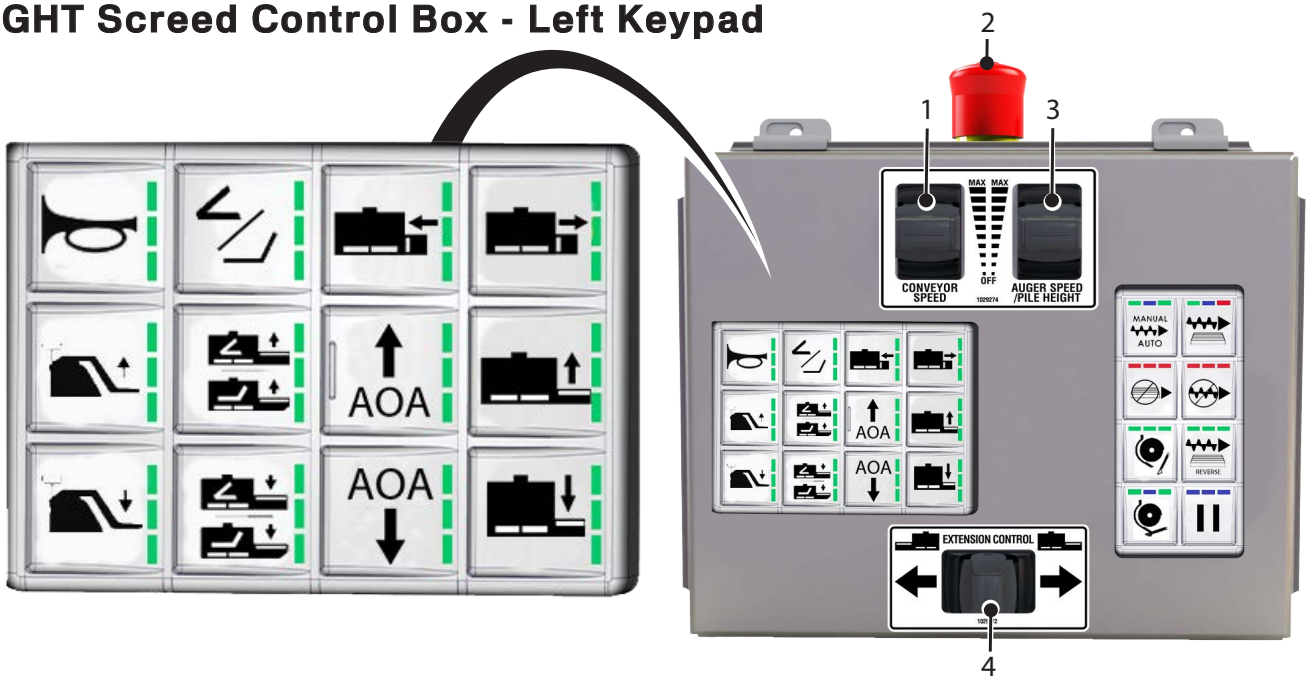
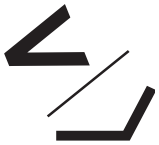

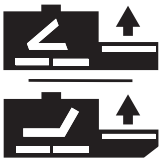
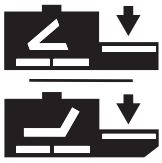
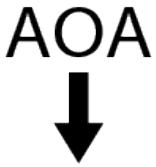


Figure 3-10. RIGHT Screed Controls (Left Keypad)

KEYPAD SYMBOL	CONTROL NAME	FUNCTION
1	Conveyor Speed	• Set this switch up/down to increase/decrease the conveyor speed when operating in MANUAL mode.
2	Emergency Stop (E-Stop) Button	Immediately stops the paver engine and all electronic functions. Turn clockwise to release E-Stop button.
3	Auger Pile Speed	• Set switch up/down to increase/decrease the auger speed when auger is set to MANUAL mode. • Set switch up/down to increase/decrease the pile height when auger is set to AUTO mode.
4	Extension IN/OUT	• Push and hold this switch to extend (OUT) or retract (IN) the screed extension on the corresponding control box side of operation.
	Horn	Pressing this button sounds the horn whether the console is active or not. All three LED lights will illuminate GREEN when engaged.
	Slope/Berm SELECT	Use this button to select SLOPE or BERM mode. • The default is set to OFF. • Press the button once to select SLOPE. The LEFT LED light illuminates GREEN on the keypad (and both consoles) in this mode. • Push the button twice to select BERM mode. The right LED light illuminates GREEN in this mode.
	Tunnel Extension IN	The tunnel extension allows material to flow while paving at wide widths. Press and hold the button to retract the auger. The left LED light illuminates green in MANUAL mode.

KEYPAD SYMBOL	CONTROL NAME	FUNCTION
	Tunnel Extension OUT	The tunnel extension allows material to flow while paving at wide widths. Press and hold the button to extend the auger. The right LED light illuminates green in MANUAL mode.
	Tow UP	Sets the asphalt mat thicker and controls the hydraulic tow cylinder. Press and hold button to raise RIGHT tow. All three LED lights illuminate GREEN on the keypad (and both consoles) while engaged. **NOTE: Only functions with joysticks in neutral when the grade control is set to AUTO.**
	Slope/Berm UP	Press and hold this button to enable the Slope or Berm UP function, depending upon which mode is selected on the Slope/Berm Select button. When activated by pressing the button, all three LED lights illuminate GREEN on both main consoles and the left or right screed control box (corresponding to the active console).
	AOA Up	Press and hold this button to make adjustments to the Angle-of-Attack (AOA). Adjust the mat texture using the Angle-of-Attack (AOA) adjuster to produce a smooth or coarse mat texture.
	Vertical UP	Automatically increase the screed extension vertical height by pressing and holding the vertical UP. All three LED lights illuminate while in operation.
	Tow DOWN	Sets the asphalt mat thicker and controls the hydraulic tow cylinder. Press and hold button to lower RIGHT tow. All three LED lights illuminate GREEN on the keypad (and both consoles) while engaged. **NOTE: Only functions with joysticks in neutral when the grade control is set to AUTO.**
	Slope Berm DOWN	Press and hold this button to enable the Slope or Berm DOWN function, depending upon which mode is selected on the Slope/Berm Select button. When activated by pressing the button, all three LED lights illuminate GREEN on both main consoles and the left or right screed control box (corresponding to the active console).
	AOA Down	Press and hold this button to make adjustments to the Angle-of-Attack (AOA). Adjust the mat texture using the Angle-of-Attack (AOA) adjuster to produce a smooth or coarse mat texture.
	Vertical Down	Automatically decrease the screed extension vertical height by pressing and holding the vertical DOWN. All three LED lights illuminate while in operation.

RIGHT Screed Control Box - Right Keypad

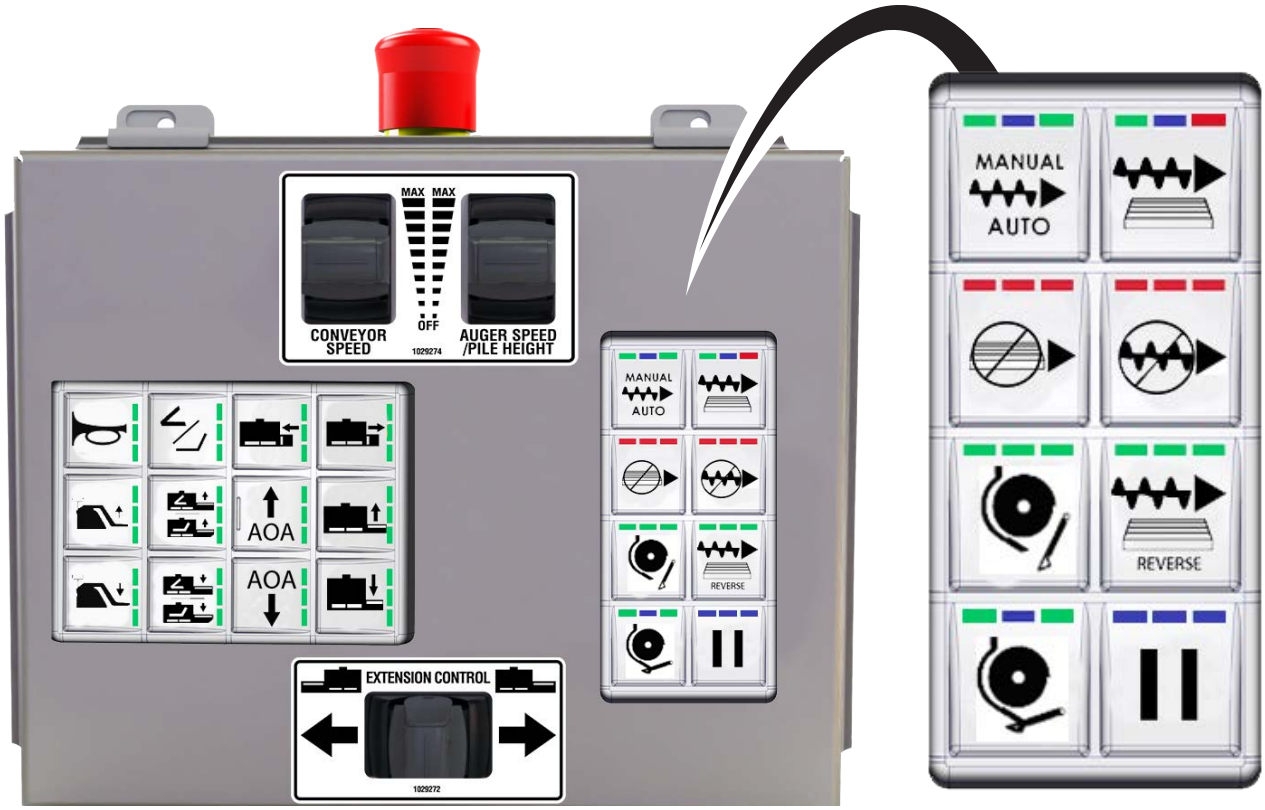
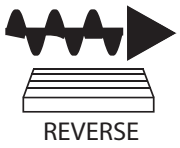


Figure 3-11. RIGHT Screed Controls (Right Keypad)

KEYPAD SYMBOL	CONTROL NAME	FUNCTION
MANUAL / AUTO	Auger MANUAL/ AUTO Select	This button only functions if the Auger/Conveyor ON/OFF button is turned ON. Independent right and left augers can be operated in MANUAL or AUTO (automatic) mode. AUTO mode is the default. • Press button twice to operate auger in MANUAL mode. The left LED light illuminates GREEN. In MANUAL mode, the operator controls auger speed using the auger pile speed switch above the keypad. • Press the button once to operate in AUTO mode. The right LED light illuminates GREEN. The center blue light illuminates when material reaches the set material height. In AUTO mode, the auger dial controls material height. **The auger sonic sensor must be connected to operate in AUTO mode.**
	Auger/Conveyor ON/OFF	Press this button once to turn ON the auger and conveyor. • The left LED light illuminates GREEN when the auger and conveyor is on. • The default setting is AUTO mode, which is controlled by the Auger MANUAL/AUTO button. • Press the button again to turn OFF the auger and conveyor. • You can also use the auger OR conveyor bypass button to pause operation of either function separately.

KEYPAD SYMBOL	CONTROL NAME	FUNCTION
	Auger/Conveyor Reverse	Press the Auger/Conveyor Reverse button for reversing the direction of both functions to help clear material as needed. All three LED lights illuminate while the auger/conveyor reverse is active.
	RIGHT Cut-Off OPEN	Press and hold to open the LEFT Under Auger Material Cut-Off. All three LED lights illuminate GREEN on both operator consoles and the LEFT screed keypad while open.
	Pause	Pauses propel (travel), conveyors and augers functions. Press the button once to pause these functions. The three LED lights illuminate blue. • Pressing the button again resumes these functions. **NOTE: The engine idle will remain at high but automatically go into low idle if paused for a preset period of time (unless the generator is enabled.)**
	RIGHT Cut-Off CLOSED	Press and hold to close the LEFT Under Auger Material Cut-Off. When closed, the center LED light illuminates RED on both operator consoles and the LEFT screed control keypad. If paver is put into reverse, the cut-offs will automatically close and the center LED light illuminates RED in AUTO mode.

LB5 Electric Heat Controls

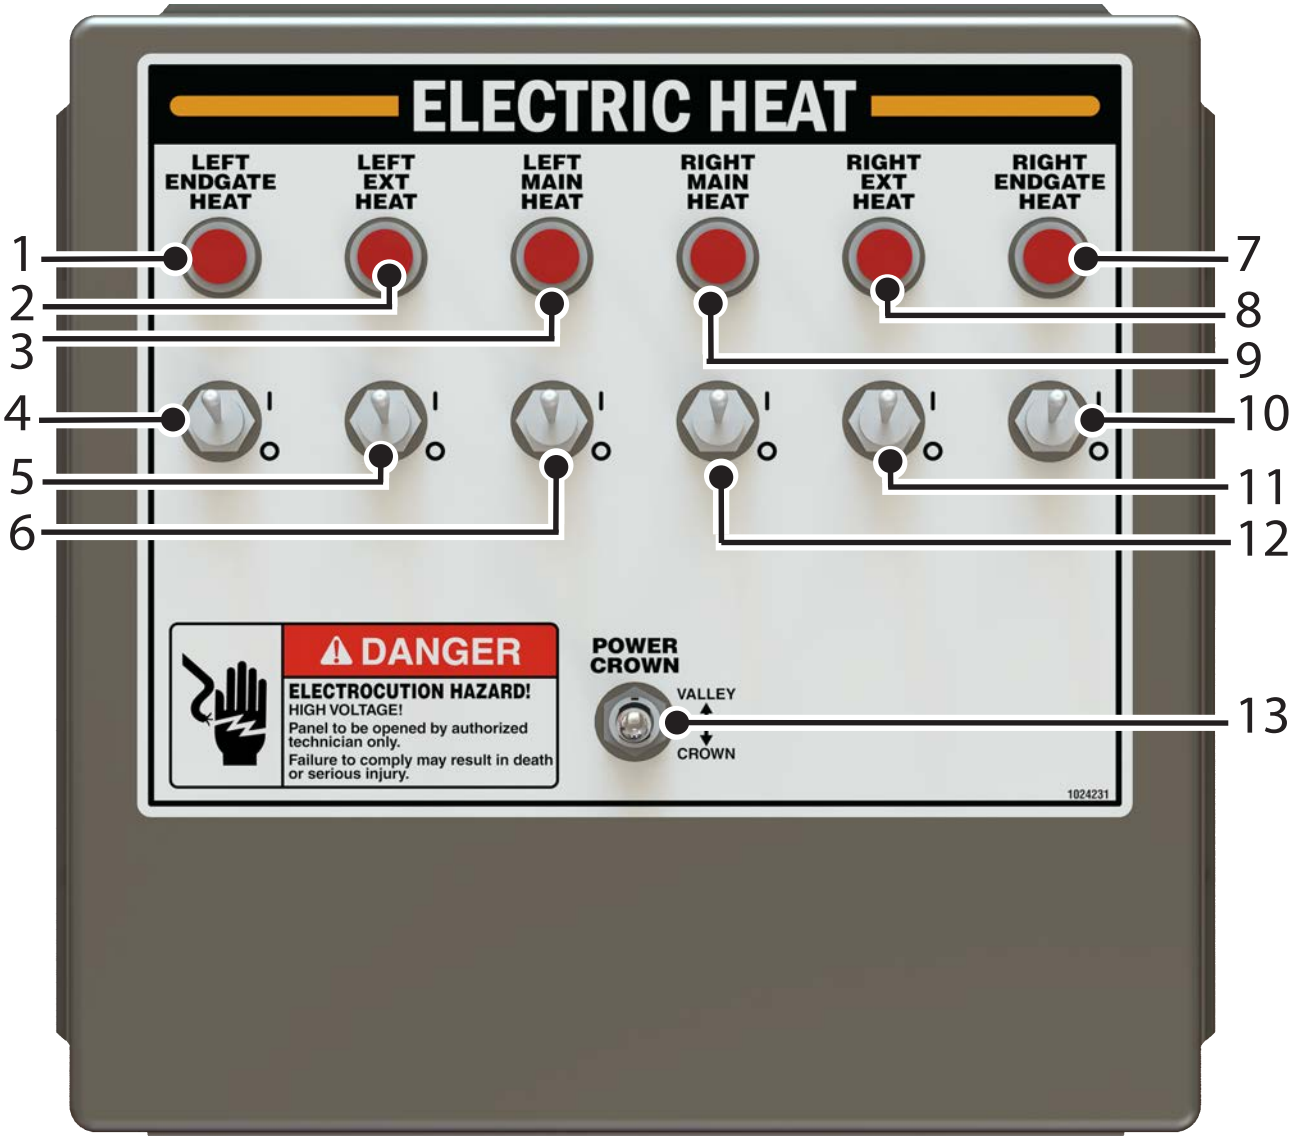


Figure 3-12. Electric Heat Controls

ITEM NO.	CONTROL NAME	FUNCTION
1	Left End Gate Heat ON Light	Illuminates when the LEFT end gate heat switch is ON to notify operator that the left end gate heating is engaged.
2	Left Screed Extension Heat ON Light	Illuminates and stays on as long as the screed extension heating elements are heating the screed plates.
3	Left Main Screed Heat Light	Illuminates and stays on as long as the main screed heating elements are heating the screed plates.
4	Right End Gate Heat ON Light	Illuminates when the RIGHT end gate switch is turned ON to notify operator that the right end gate heat is engaged.

ITEM NO.	CONTROL NAME	FUNCTION
5	Right End Gate ON/OFF Switch	Turns the RIGHT End Gate electric heat system on and off. • Push switch UP to turn ON the end gate heat. P • Push switch DOWN to turn OFF.
6	Right End Gate Heat ON Light	Illuminates when the RIGHT end gate switch is turned ON to notify operator that the right end gate heat is engaged.
7	Left End Gate ON/OFF Switch	Turns the LEFT end gate electric heat system on and off. • Push switch UP to turn ON the end gate heat. • Push switch DOWN to turn OFF.
8	Left Screed Extension ON/OFF Switch	Turns the LEFT screed extension heat system on and off. • Push switch UP to turn ON the left screed extension heat. • Push switch DOWN to turn OFF.
9	Left Main Screed ON/ OFF Switch	Turns the LEFT main screed heat system on and off. • Push switch UP to turn ON the left main screed heat. • Push switch DOWN to turn OFF.
10	Right Main Screed ON/ OFF Switch	Turns the RIGHT main screed heat system on and off. • Push switch UP to turn ON the right main screed heat. • Push switch DOWN to turn OFF.
11	Right Screed Extension ON/OFF Switch	Turns the RIGHT screed extension heat system on and off. • Push switch UP to turn ON the right screed extension heat. • Push switch DOWN to turn OFF.
12	Left End Gate ON/OFF Switch	Turns the RIGHT screed extension heat system on and off. • Push switch UP to turn ON the right screed extension heat. • Push switch DOWN to turn OFF.
13	Power Crown Switch [Option]	Use this switch to increase/decrease crown and valley. • Push and hold switch UP to increase valley. • Push and hold switch DOWN to increase crown.

LB7 Electric Heat Controls [Option]

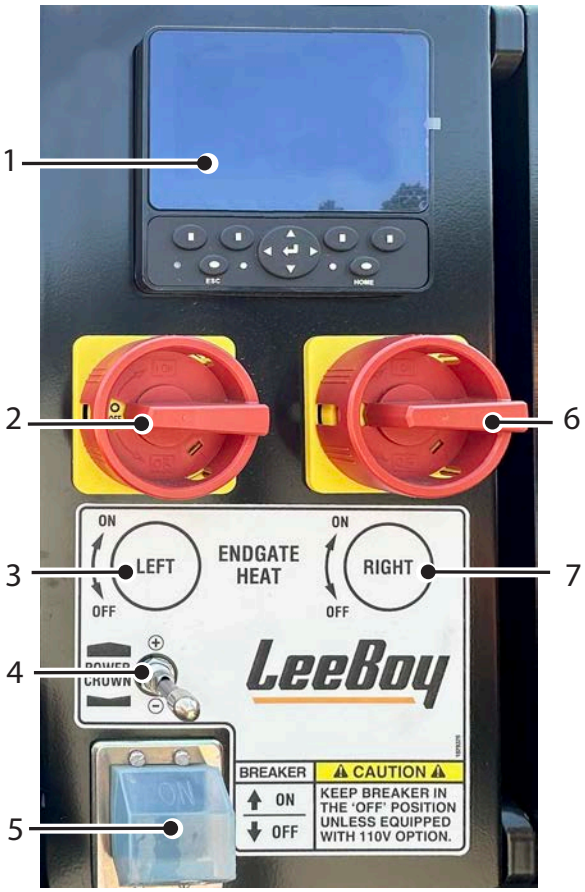


Figure 3-13. Electric Heat Controls

ITEM NO.	CONTROL NAME	FUNCTION
1	Heat Box Digital Controls	Use the digital display to set the screed heat temperature and other screed heat functions.
2	LEFT Screed Heat Dial	• Turn dial clockwise to turn ON the LEFT screed heat system. • Turn dial counterclock-wise to turn OFF the LEFT screed heat system.
3	LEFT End Gate ON/ OFF Switch [Option]	Turns the LEFT End Gate electric heat system on and off. • Push switch UP to turn ON the end gate heat. • Push switch DOWN to turn OFF.
4	Power Crown Switch [Option]	Use this switch to increase/ decrease crown and valley. • Push and hold switch UP to increase valley. • Push and hold switch DOWN to increase crown.
5	Breaker Switch	Circuits are protected from damage by overloads or short circuits. If the system detects an abnormal condition, it “breaks” the current flow to prevent overheating, equipment damage, and potential fire hazards.
6	RIGHT Screed Heat Dial	• Turn dial clockwise to turn ON the RIGHT screed heat system. • Turn dial counterclockwise to turn OFF the RIGHT screed heat system.
7	Right End Gate ON/ OFF Switch [Option]	Turns the RIGHT End Gate electric heat system on and off. • Push switch UP to turn ON the end gate heat. P • Push switch DOWN to turn OFF.

Section 4
OPERATION

Page

Operation 4-1
- Receiving the Machine 4-3
  - Initial and Daily Inspection 4-3
  - Hopper Lock Valves 4-4
- Operator Platform Features 4-5
  - Lockable Vandalism Covers 4-5
  - Seat Adjustment and Operator Platform Pivot. 4-5
- Start-Up Procedure 4-6
- Diesel Exhaust Fluid (DEF) 4-7
- Main Control Panel Keypad Functions 4-8
  - Upper Left Keypad 4-9
  - Upper Right Keypad 4-12
  - Lower Left Keypad 4-15
  - Lower Right Keypad 4-16
- Screed Control Box 4-18
  - Left Keypad and Control Buttons 4-18
- DPF Regeneration (REGEN) 4-23
- DM430 Digital Display 4-23
  - Engine Screen 4-24
  - DM430 Engine Icons 4-25
  - Pave Screen 4-33
  - Pave Function Fault Codes 4-37
  - Operator Settings Screen 4-39
  - Motor Settings Screen 4-40
  - DPF and Regeneration 4-41
  - Parked Regeneration 4-44
- Plus +1® Controllers 4-45
- Driving the 8680 Paver 4-45
  - Steering and Speed Control 4-46

Paver Operation 4-48
Spray Down 4-48
Hopper Wings 4-50
Conveyors 4-51
Augers and Sonic Auger Sensor 4-53
Under Auger Material Cut-Offs 4-54
Heating the Screed, Extensions and End Gates 4-55
LB5 and LB7 Screeds 4-56
Horizontal Depth Screws 4-58
Hydraulic Tow Point Cylinders and Grade/Slope 4-59
Slope/Berm 4-60
Basic Paving 4-62
Setting the Crown 4-63
Mat Texture Adjustment 4-64
Unloading and Loading 4-64
Unloading 4-65
Loading 4-65
Towing 4-65
Optional Components 4-66
LB7 Screed 4-66
Umbrella Option 4-66
Screed Extension Vibration 4-66
Screed Central-Point Lube System 4-66
Single Point Conveyor Lube Kit 4-66
Steel Poly Tracks 4-66
Steering Knob 4-66
Steering Wheel 4-67
20-Foot Paving Kit 4-67
Berm Extensions 4-67
High-Lift End Gate 4-67
Extendable Push Roller 4-67
Truck Hitch 4-68
Topcon® Sonic and Dual Grade Control 4-68
Track Plows 4-69
Slope Meter 4-70
Balloon Light 4-71
Magnetic Cup Holder 4-71

RECEIVING THE MACHINE

The LeeBoy 8680 Commercial Paver is the most dependable and productive commercial asphalt paver on the market. Featuring the new LB5 screed (or optional LB7 screed), this commercial paver is designed and built for producing superior mat quality in a variety of road and other pavement construction projects.

Its heavy-duty, rubber tracks provide a smooth ride, better traction, and higher speed while paving. Independent hopper wings in its 15-ton hopper with wide conveyors, height-adjustable and reversible augers that can work independently, hydraulic tow point cylinders and Under Auger Material Cut-Offs that automatically close are just part of LeeBoy innovation and the 8680 paver's versatility.

Dual main operator control platforms with ergonomic control keypads swing out from either side of the paver, and its low-profile hood line gives operators unlimited visibility with no line-of-sight disruptions while paving. The controls are always directly in front of the operator as the entire platform can be adjusted to multiple height positions.

Electric dual vibrators mounted on the main screed frame increase paving material compaction. The screed extensions also include slope and berm capability. The screed control box features push-button keypads with every control a screed operator needs for commercial road construction jobs.

⚠CAUTION **Read this manual carefully before operating the machine. Only authorized personnel who are properly trained should operate the paver.**

Initial and Daily Inspection

Although the machine has been checked thoroughly by the manufacturer, road hazards or other factors during transport may result in damage. Inspect machine for any damage during transport. Contact your authorized dealer immediately if any damage has occurred. **(Table 4-1)**

The following inspection is essential and should be performed before the initial start-up and daily prior to operating. Visually inspect the unit to check its general condition and for familiarization. Continue with a check of the systems and components shown in **Table 4-1** below:

Table 4-1. Initial Inspection

INSPECT	PROCEDURE
Engine Oil Level	Maintain oil level between ADD and FULL marks on dipstick.
DEF Tank Level	Check DEF tank level. Refill daily.
Fuel Tank Level	Check for adequate fuel supply. Fill if needed. Always fill tank at end of the day to prevent condensation in the tank.
Hydraulic Oil Level	Check the hydraulic tank for oil level and hoses for leaks.
Radiator	Check coolant level. Add more if needed.
Battery	Ensure all cables are tight and clean. Check for corrosion on the battery terminals.
Air Cleaner	Check the air filter element and hose connections. Air cleaner has both a primary and secondary filter.
Drain Plugs	Make sure plugs are inserted and tight.
Engine Belt	Check for proper belt tension.
Generator Belt	Check for proper belt tension.
Grease Fittings	Ensure fittings are greased and in good working order.

Screed Locks

This machine is provided with screed lock mechanisms as added safety and stability during transport. A screed lock knob is located on each side of the screed on the paver frame. **(Figure 4-1)**

- Pull the knob outward to release the screed lock.
- Push the knob in and down to lock the screed in place.

⚠CAUTION Ensure locks are in the unlocked position before raising or lowering the screed.

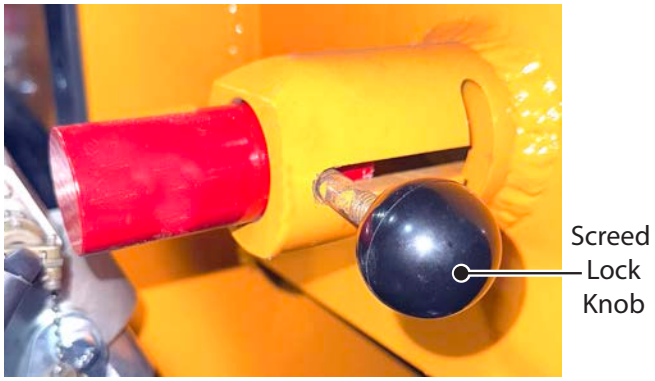


Figure 4-1. Screed Lock (Left Side Shown)

Hopper Lock Valves

The hopper cylinder valves can be used to lock the hopper wings when they are open or closed. **(Figure 4-2)** Be sure to unlock the hopper valves before operation!

- Turn the valve counterclockwise to unlock the hopper wings.
- Turn the valve clockwise to lock the hopper wings.

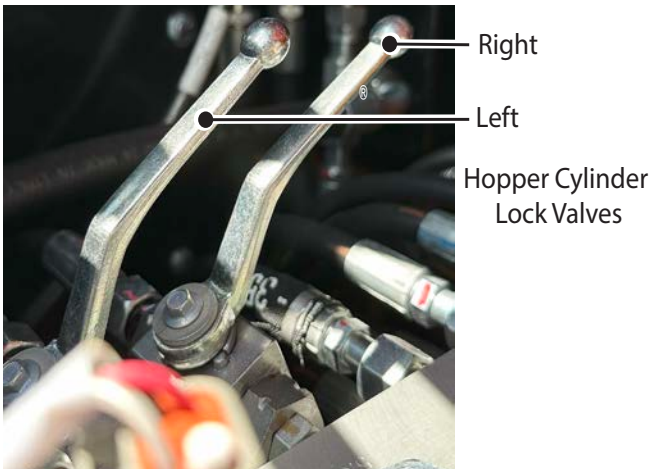


Figure 4-2. Hopper Cylinder Lock Valve

⚠CAUTION Ensure the hopper cylinder is unlocked before extending or retracting the hopper wings.

OPERATOR PLATFORM FEATURES



Figure 4-3. Control Panel Vandalism Cover

Lockable Vandalism Covers

The 8680 paver features a heavy-duty vandalism cover for both protecting the control panel keypads and switches along with security when the paver is not in use. **(Figure 4-3)** The cover has hooking tabs at the top, with lock slots on the bottom. Simply remove the lock and lift up from the bottom to remove. Align the top tabs to close and reinstall lock to reattach.

After removing the vandalism lock cover(s), attach it to the paver frame using the locking knobs as shown in **Figure 4-3.**

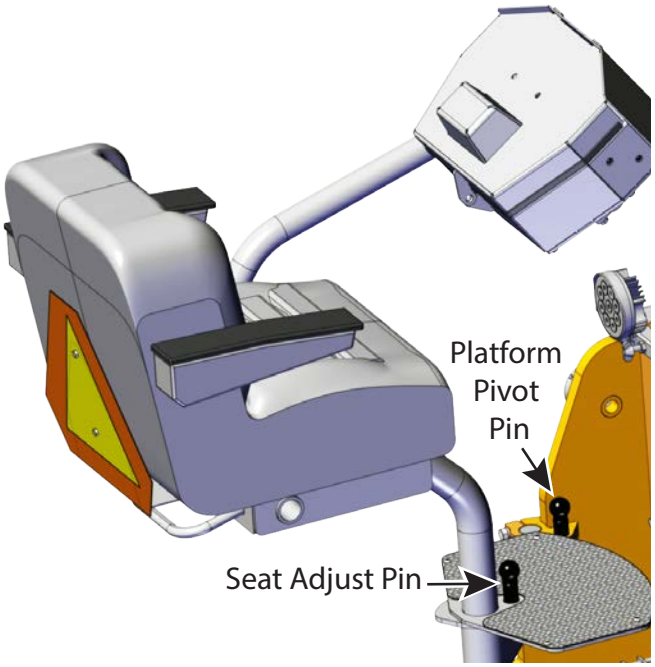


Figure 4-4. Seat Adjust and Platform Pivot Pins

Seat Adjustment and Operator Platform Pivot

You can adjust the operator seat position and swing out the entire operator platform for better visibility and comfort. **(Figure 4-4)**

There are multiple positions for the operator seats. Simply pull the seat adjust pin toward the seat to swivel the seat.

Use the platform pivot pin to swing out the operator platform to the side. Pull the platform pivot pin to move the platform to the desired position.

Ensure the platform locks into place in the desired position. It is recommended that you stand beside the paver to make these adjustments.

⚠CAUTION Verify the seat and platform are locked into position BEFORE operating the paver.

START-UP PROCEDURE

⚠ DANGER DO NOT leave the operator station unattended while the paver is in gear or in motion. Operator must return joysticks to the neutral position and press the Activate Console button to deactivate the console before leaving the operator platform.

⚠ CAUTION Verify there are no people, obstacles or other equipment in the machine's path before starting the engine.

NOTICE **Using starting additives, such as ether, is not recommended as severe engine damage can occur.**

The ignition switch is located on the junction box. **(Figure 4-5)**



Figure 4-5. *Ignition Switch on Junction Box*

When the key is turned on, the DM430 digital display controller on both operator control panels automatically come on, with an LED status light illuminating amber to indicate the system is in the "Wait to Start" mode. **The engine will not start unless both joysticks on both operator platforms (4 total) are in the NEUTRAL position**. The "Wait to Start" light will illuminate amber if one or more joysticks are not in neutral, and turn to amber when the joystick(s) has been moved into the neutral position. The amber light will turn off once the paver is ready to start, ***provided all four joysticks are in neutral.***

NOTE: An icon displaying a pair of joysticks will illuminate in red on the DM430 digital controller when a joystick(s) is out of neutral.

To start the engine:

1. Insert key into the ignition and turn clockwise to the RUN position.
2. With ignition key in the RUN position and all four joysticks in neutral, press the Start/Stop button on the main control panel. **(Figures 4-6 and 4-7 on *Page 4-8*)**
   - The center light illuminates amber during the "Wait to Start" stage.
   - The left LED lights illuminate GREEN on both consoles when the engine is running.

NOTICE **DO NOT hold the starter longer than 10 - 15 seconds. If the engine does not start, allow the starter to cool two or three minutes.**



Figure 4-6. Start-Stop and Activate Console Keypad Buttons (Left Panel Shown)

3. You must activate the control console for desired driving side by pressing the Activate Console button on the lower right keypad. **(Figures 4-6 and 4-7 on *Page 4-8)*** The three LED lights illuminate green when a console is activate.
4. Allow the engine to warm before moving paver for more efficient operation. In cold weather, allow the hydraulic oil to warm to 60°F before moving.

The engine's low idle is set at 1300 RPMs, with a maximum engine speed of 2200 RPMs. The engine will remain at the operator-set RPMs after the joysticks initially leave the neutral position. If the engine is at low idle and the operator engages either of the following functions, the engine will automatically idle up to the preset RPMs:

- Generator: 1800 RPMs
- Auger: 1800 RPMs
- Conveyor: 1800 RPMs

Once the joysticks return to the neutral position, the engine will idle slow down to 1300 RPMs after eight (8) seconds, provided the generator, auger or conveyor functions are not engaged.

NOTE: The engine speed may be manually increased to a maximum of 2200 RPMs if desired.

Stopping the Engine

1. Move joysticks to the NEUTRAL position.
2. Press the Idle button on the engine screen on the digital display.
3. Press the Start/Stop button. The right LED light illuminates RED to indicate engine shutdown.
4. Turn ignition key counterclockwise to the OFF position and remove key.

NOTE: If for any reason the engine does not shut down when key is turned off, push in the red E-Stop button on the upper right side of the control panel.

DIESEL EXHAUST FLUID (DEF)

DEF is a mixture of pure urea and de-ionized water that is injected into the exhaust stream by the SCR system. DEF is a vital element in engine operation and performance. It is ***extremely*** important to keep the DEF tank filled, and DEF fluid stored properly, to prevent costly repair. ***(See Page 5-20 for detailed information.)*** The DEF tank is located inside the right engine access panel. Keeping the DEF tank full on a daily basis will prevent costly repairs and operational down time.

DEF Purge: The SCR system will automatically purge DEF after shutting down the engine. You will hear the pumping noise as the system circulates DEF to cool the DEF injector, then the pump reverses to return DEF back to the tank. **Always allow this purging process to finish** to prevent damage to the injector and other SCR components.

⚠CAUTION **NEVER disconnect battery until the purge cycle has completed to prevent serious damage to components in the SCR system.**

If the DEF tank level runs low (below 15 percent) during operation, DEF warning messages will appear on the DM430 digital display screens (described in detail beginning on ***Page 4-42).*** If the level drops to 5 percent (empty), urgent warning messages pop up. Engine torque will be reduced 50 percent and engine speed will be reduced 40 percent after 45 minutes.

If the operator continues to ignore the warning and the DEF tank is still not refilled, another urgent warning message pops up. At this point, there will be no available torque--the engine will only idle.

In either of these conditions, refilling the DEF tank will restore engine performance.

If the DEF tank level has fallen to 0 percent, there is no ability for DEF injection into the exhaust system (nor can the system perform the parked regeneration process described on ***Pages 4-42 to 4-43.*** **The DEF injector may now be damaged and require replacement from your authorized dealer.**

DEF Thaw Control Mode: Sensors on the DEF tank also detect the ambient air temperature within seconds of starting the engine. If the DEF is frozen, the SCR system automatically starts the Thaw Control Mode and turns on the DEF pump, tank and tube heaters. Engine maximum torque may be limited to protect the DEF injector.