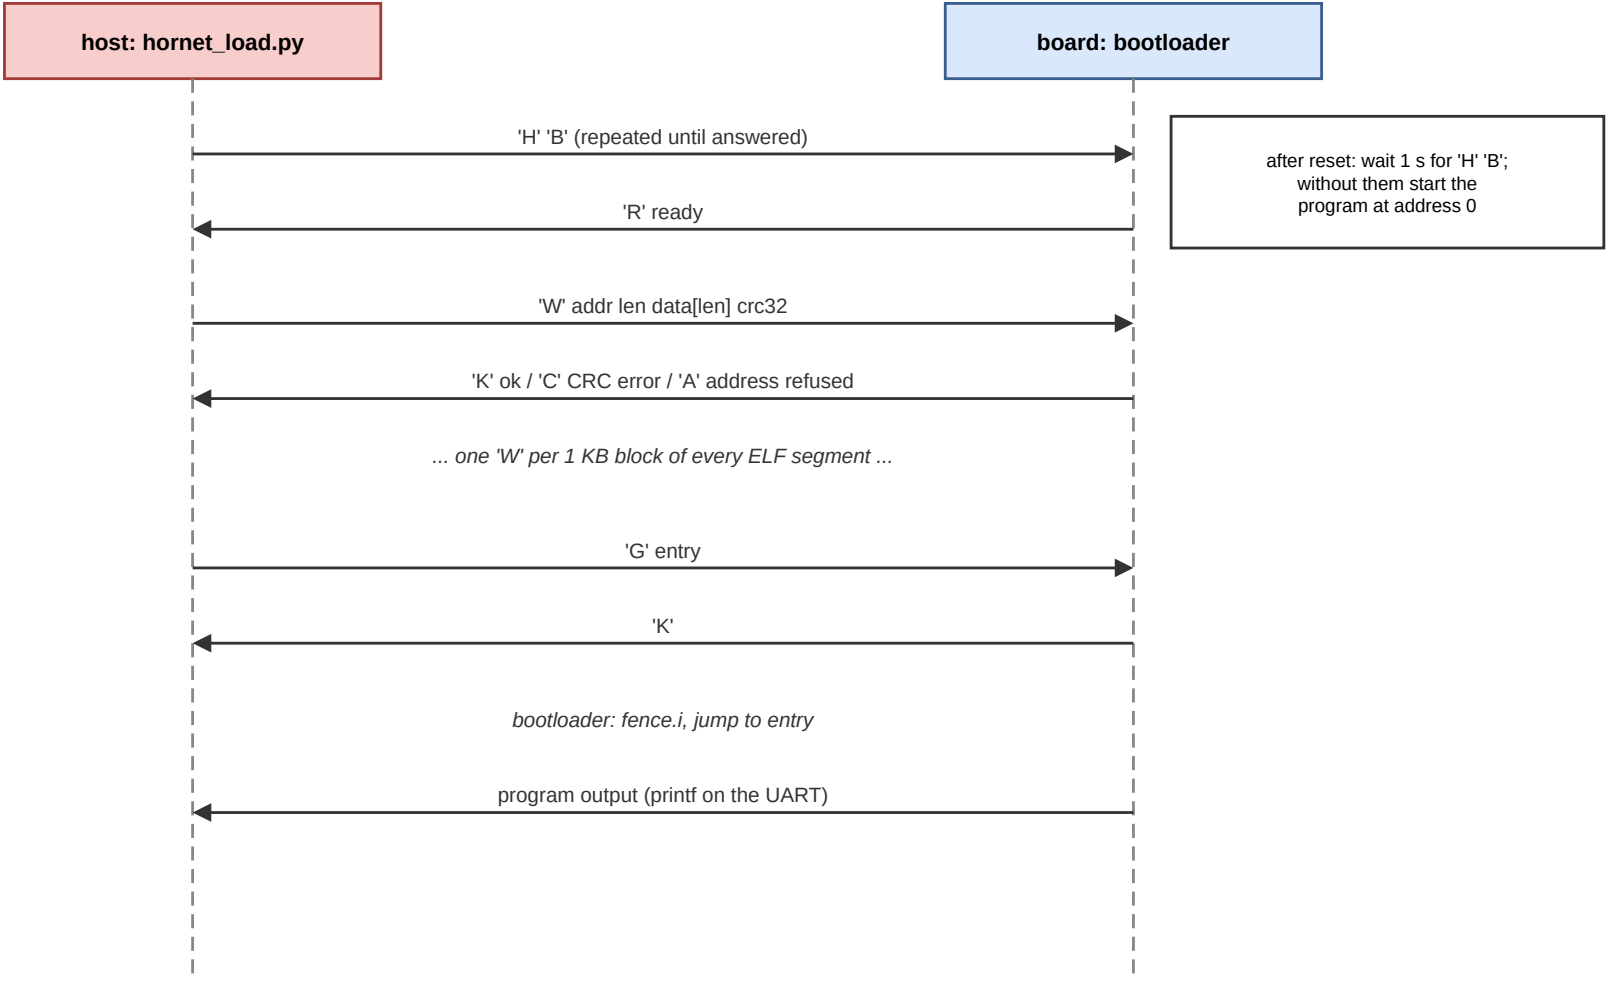
host: hornet_load.py
board: bootloader
'H' 'B' (repeated until answered)
after reset: wait 1 s for 'H' 'B';
without them start the
program at address 0
'R' ready
'W' addr len data[len] crc32
'K' ok / 'C' CRC error / 'A' address refused
... one 'W' per 1 KB block of every ELF segment ...
'G' entry
'K'
bootloader: fence.i, jump to entry
program output (printf on the UART)