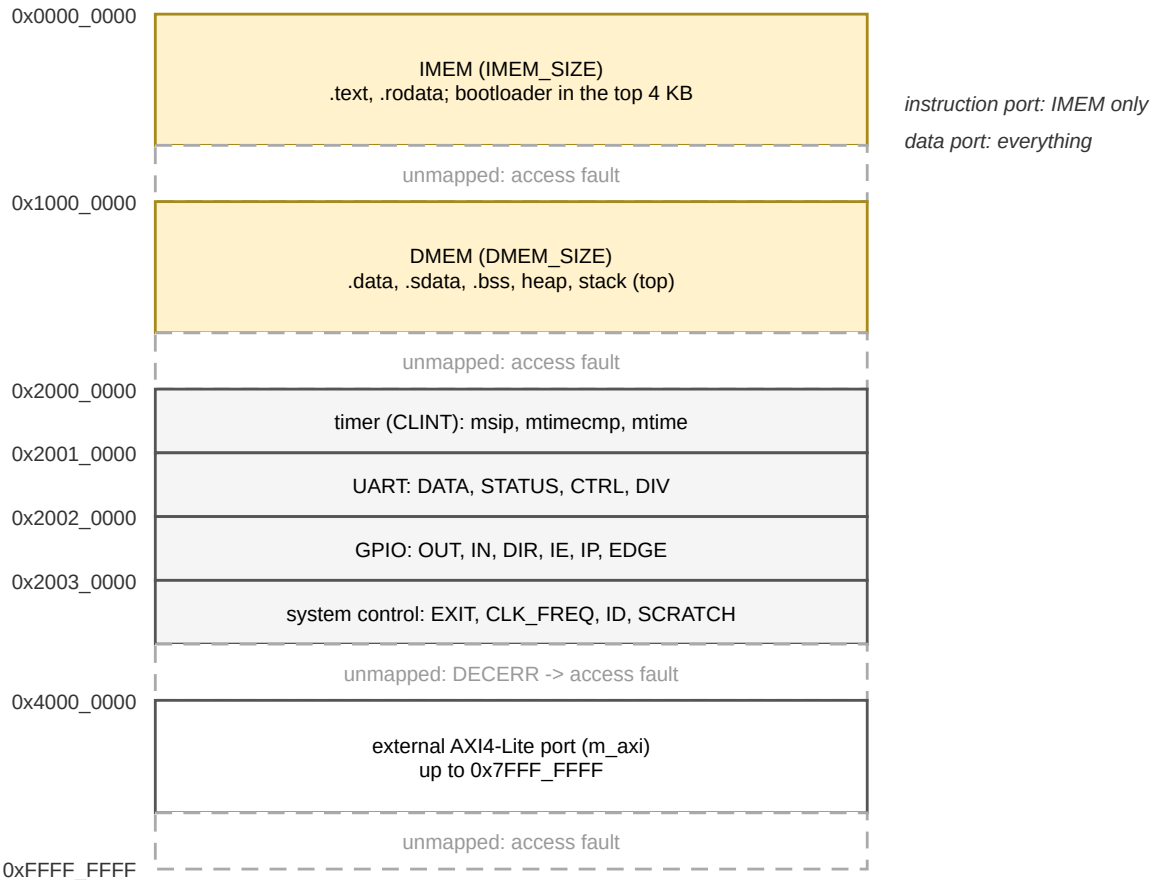
0x0000_0000
IMEM (IMEM_SIZE)
.text, .rodata; bootloader in the top 4 KB
unmapped: access fault
0x1000_0000
DMEM (DMEM_SIZE)
.data, .sdata, .bss, heap, stack (top)
unmapped: access fault
0x2000_0000
timer (CLINT): msip, mtimecmp, mtime
0x2001_0000
UART: DATA, STATUS, CTRL, DIV
0x2002_0000
GPIO: OUT, IN, DIR, IE, IP, EDGE
0x2003_0000
system control: EXIT, CLK_FREQ, ID, SCRATCH
unmapped: DECERR -> access fault
0x4000_0000
external AXI4-Lite port (m_axi)
up to 0x7FFF_FFFF
unmapped: access fault
0xFFFF_FFFF
instruction port: IMEM only
data port: everything