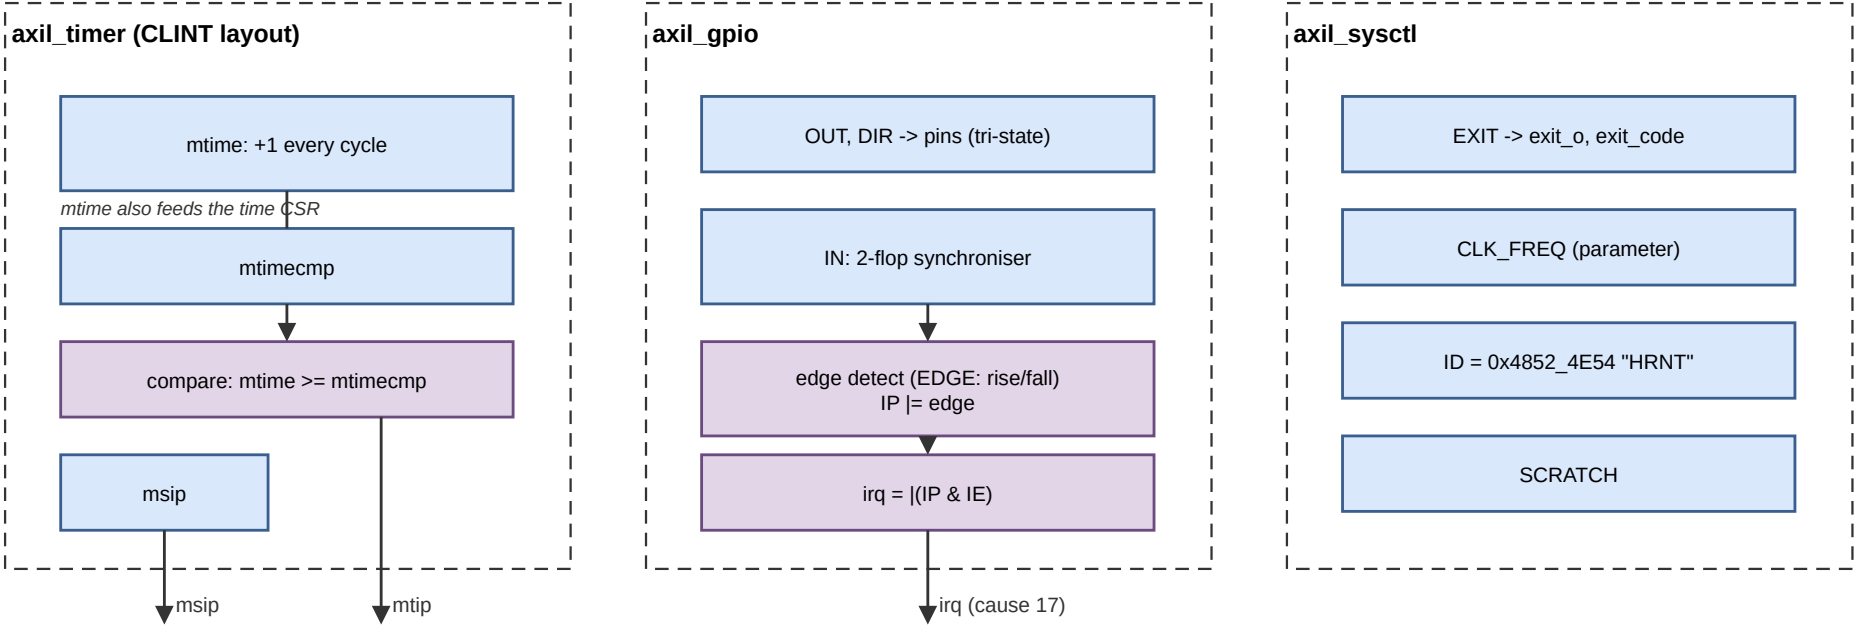
axil_timer (CLINT layout)
mtime: +1 every cycle
mtime also feeds the time CSR
mtimecmp
compare: mtime >= mtimecmp
msip
msip
mtip
axil_gpio
OUT, DIR -> pins (tri-state)
IN: 2-flop synchroniser
edge detect (EDGE: rise/fall)
IP |= edge
irq = |(IP & IE)
irq (cause 17)
axil_sysctl
EXIT -> exit_o, exit_code
CLK_FREQ (parameter)
ID = 0x4852_4E54 "HRNT"
SCRATCH