

# X2LEDBAR




QUICK START GUIDE


#### **IMPORTANT**

- ▶ The X2 LED Bar functions in combination with the following:
  X2 RaceLink Club or X2 RaceLink Pro
- When using the X2 RaceLink Club a valid Tracking license should be activated on your X2 Direct Power Transponder

#### WHAT'S IN THE BOX?

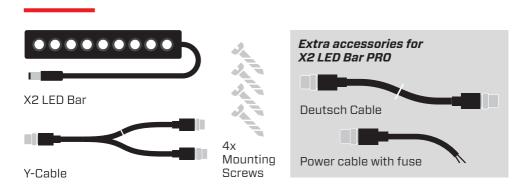

# **MOUNTING ON YOUR DASHBOARD**

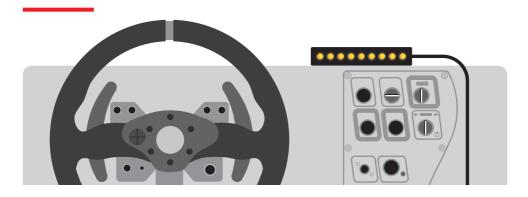


IN CASE YOU ENCOUNTER ANY ISSUES, PLEASE CONTACT YOUR LOCAL OFFICE MYLAPS EMEA Office Haarlem, The Netherlands

- **431 (0)23 760 0100**


MYLAPS Americas Office Atlanta, USA

- +1 678 816 4000

### SETUP FOR X2 RACELINK CLUB

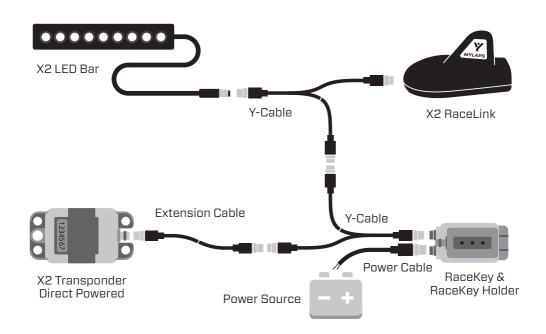

# SETUP FOR X2 RACELINK PRO

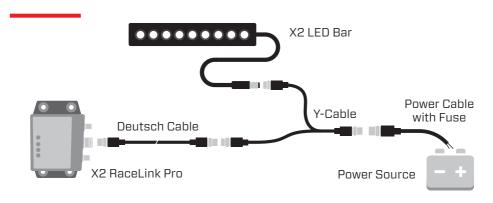

MYLAPS Japan Office

Tokyo, Japan

+81 3 6418 8209

info.japan@mylaps.com

MYLAPS APAC Office

Sydney, Australia

+61 2 9533 1100

■ info.asia.pacific@mylaps.com

MYLAPS Asia Office


Selangor, Malaysia

**4** +60 3 5613 1235

info.asia@mylaps.com

# **FLAGS SHOWN**

- LED Bar power on sequence: 1 second blink white
- Change of flag: 5 seconds blink flag color, then half brightness solid flag color



# **SPECIFICATIONS**

DIMENSIONS	92X19X18 MM / 3.6X0.75X0.71 IN
WEIGHT	APPROX. 75GR / 0.17LB
HOUSING	WATER AND SHOCK PROOF
OPERATING TEMPERATURE	-20 TO +50 °C / -4 TO 155 °F
CAN BUS	CAN 2.0A COMPLIANT
BAUD RATE	1 MBIT/S
TERMINATION RESISTOR	NONE
CONNECTION	PIGTAIL 220 MM / 8.7 IN , 4 PIN M8 CONNECTOR
INPUT VOLTAGE	8-17VDC
POWER CONSUMPTION	MAX. 3.5W (ALL WHITE)
LED	9X RGB

#### MYLAPS.COM