


SKR PRO V1.2 Wiring Diagram

- SPI Header
- Power Expansion Header
- UART Header
- I2C Header
- BLTouch Header
- ICSP(SWD) Header
- EXTENSION-2 Header
- USB HOST Selection Block
- EXTENSION-1 Header
- Power Selection Block
- Stepper Motor Driver Sockets
- UART and SPI Headers for Stepper Motor Drivers
- BOOT Header

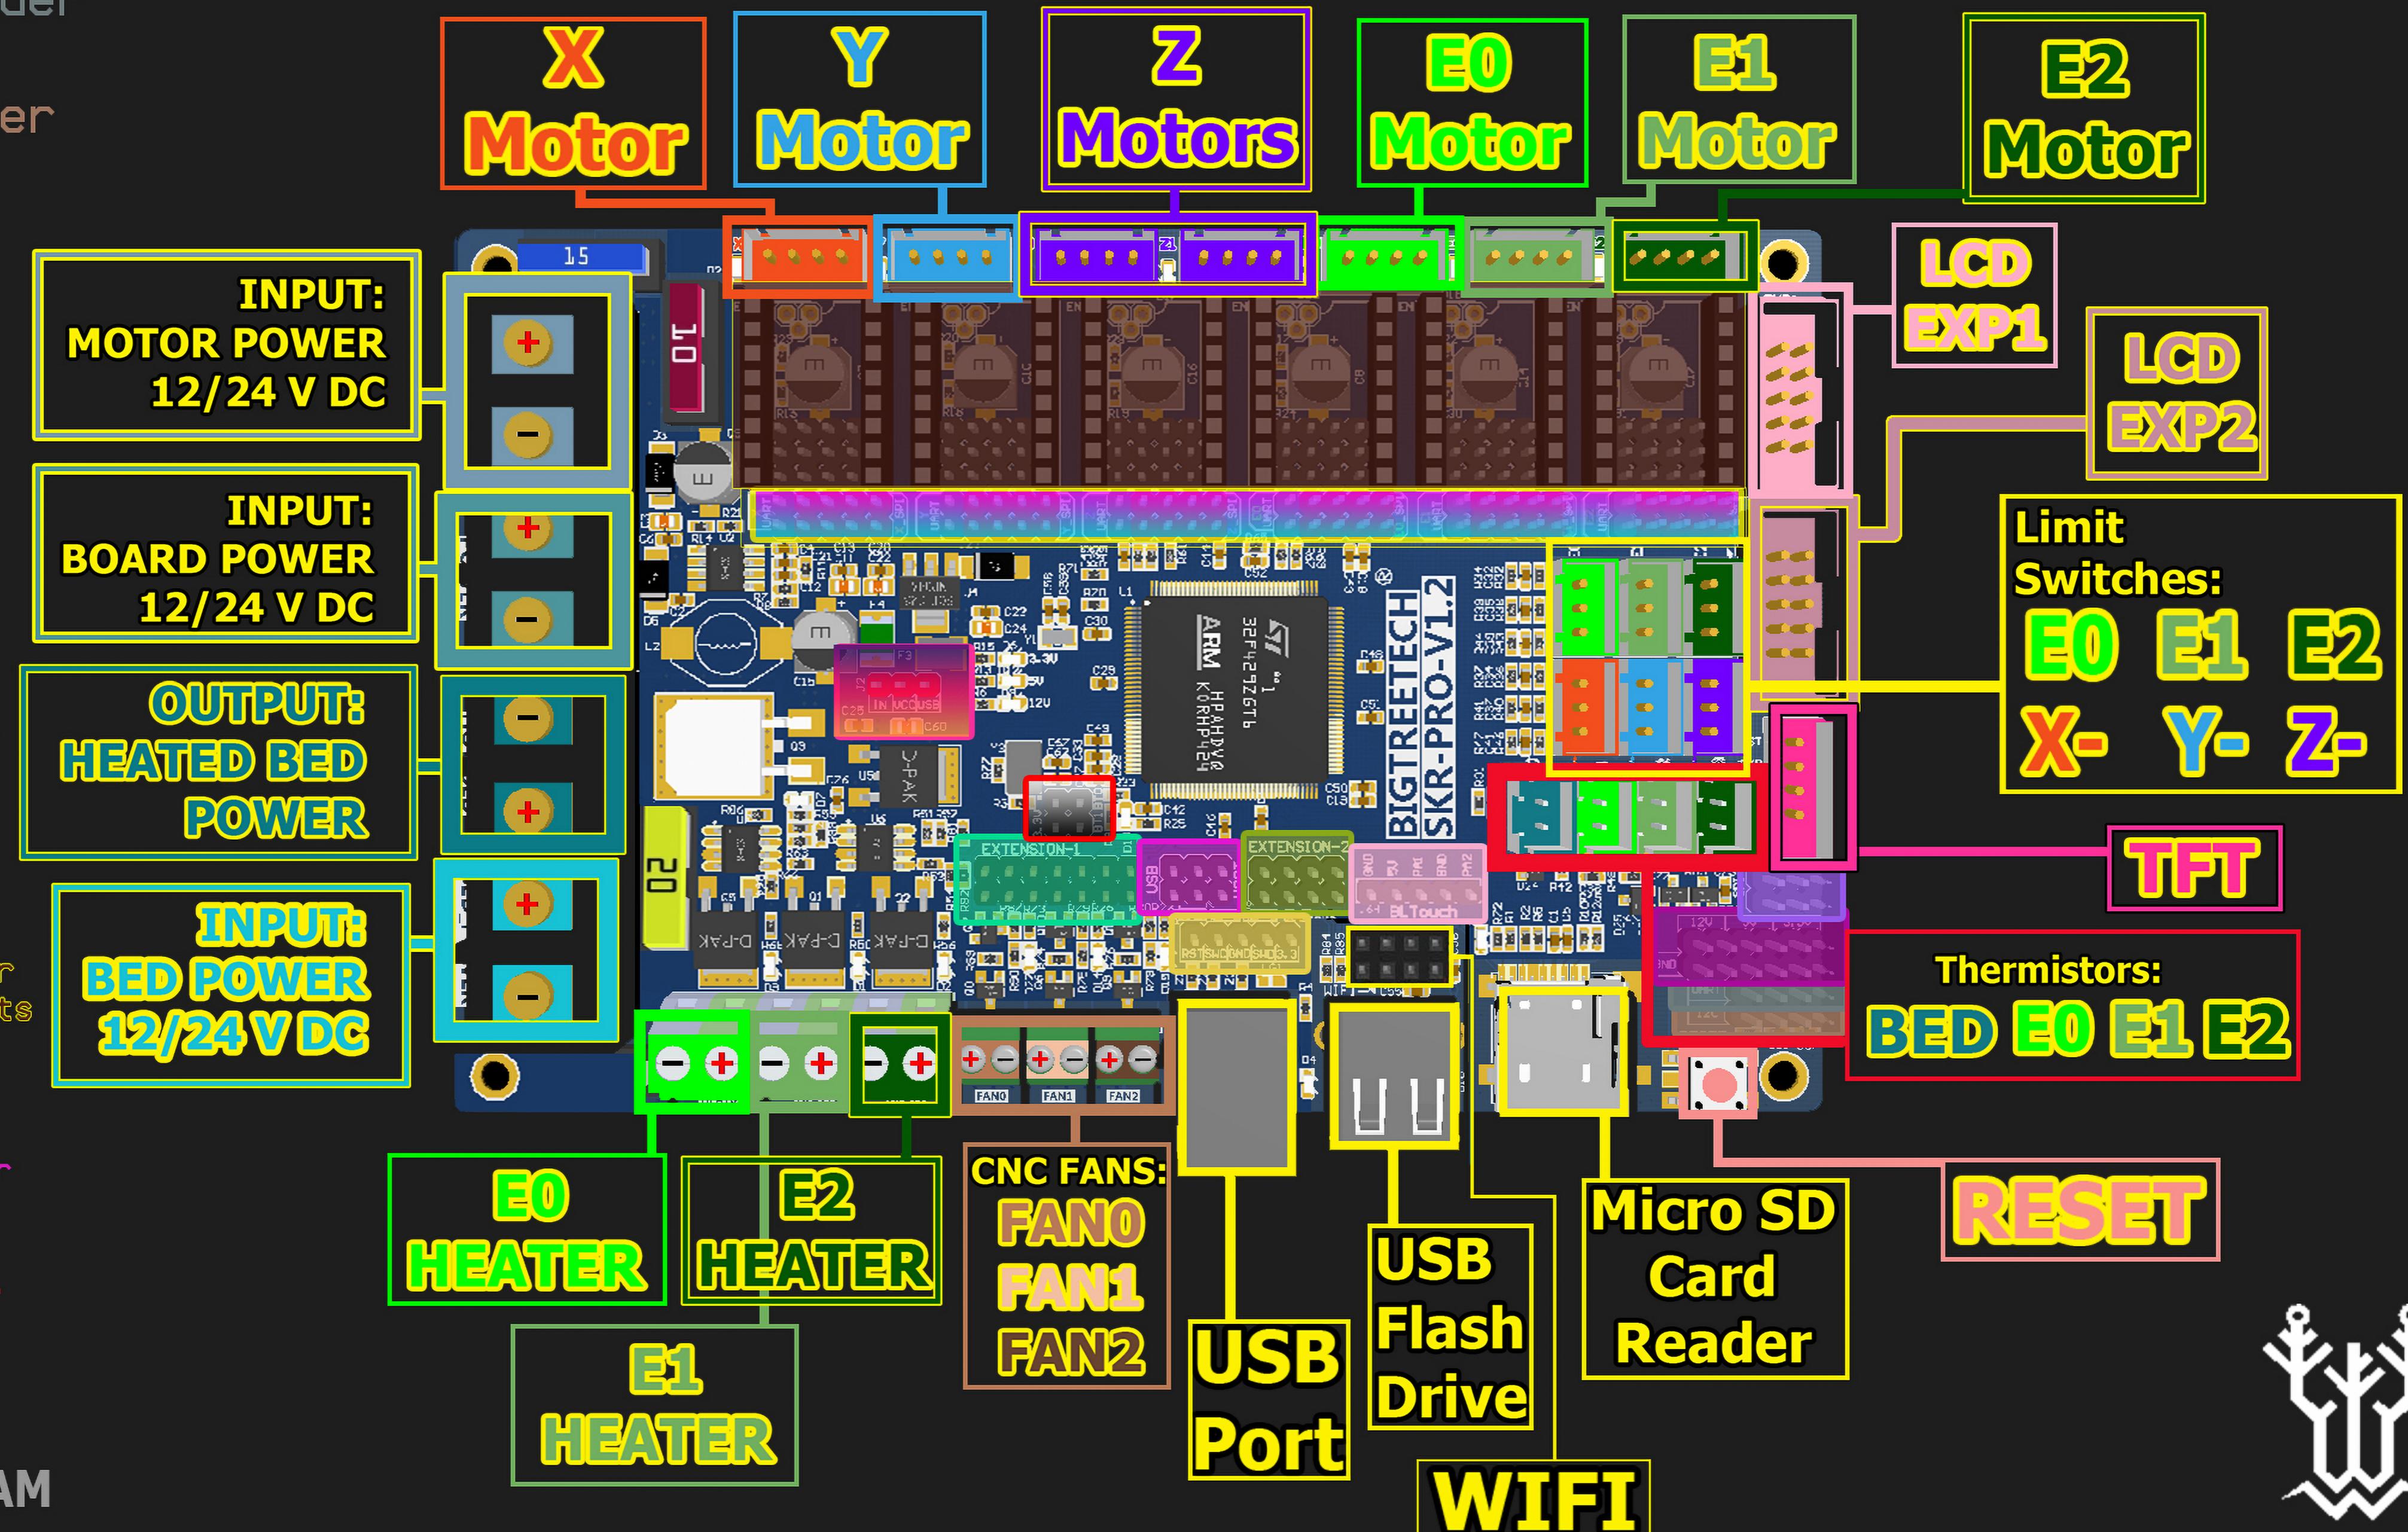

REDESIGNED
WIRING DIAGRAM
SKR PRO V1.2
BY GadgetAngel