

Swaging Setup Instructions

1. Preparation & Safety Measures

Before initiating the setup process, ensure the last pipe has moved out of the Swaging area, including the Swaging Machine and Swaging VDI. Follow these steps carefully to maintain safety and efficiency:

1. Switch to Manual Mode

- On the in-line control panel, change the switch from **AUTO** to **MANUAL** for **Zone 1.3** and **Zone 1S**.
- Engage the **black Emergency Stop (E-Stop)** for both **Zone 1.3** and **Zone 1S**.

Auto



Manual



Engage the **black Emergency Stop (E-Stop)**. Zone1.3 and Zone 1S



2. Adjust Swaging Machine Settings

- On the touchscreen panel, navigate to **Zone 1S SWAGE → SWAGING CYCLE RESET**.
- Select the appropriate settings as indicated in the system interface.
- Unlock the door by pressing **T.LOCK.03** on the touchscreen panel.
- Open the gate manually using the provided button.



SWAGING LOCAL CMD MANAGEMENT : LOCAL DECK MAIN DESK

LOCAL MANAGEMENT

CMD ENABLE CMD TNAI

SWAGING OPERATING CYCLES

CHANGE CLAMPS MODE

ON OFF

LOADED C

ON OFF

ROLLERWAY




CHANGE

PRESET DATA


CHANGE

PRESET IS TAKEN FROM L2


SWAGING RESET

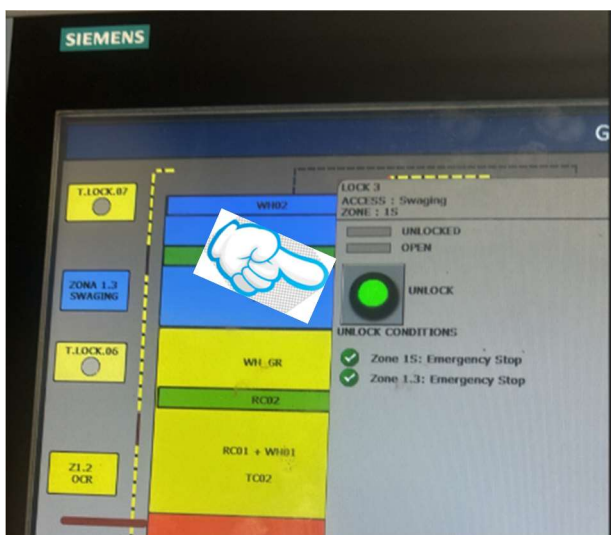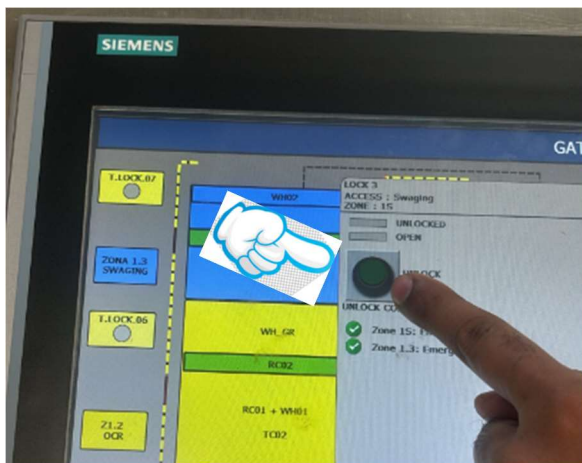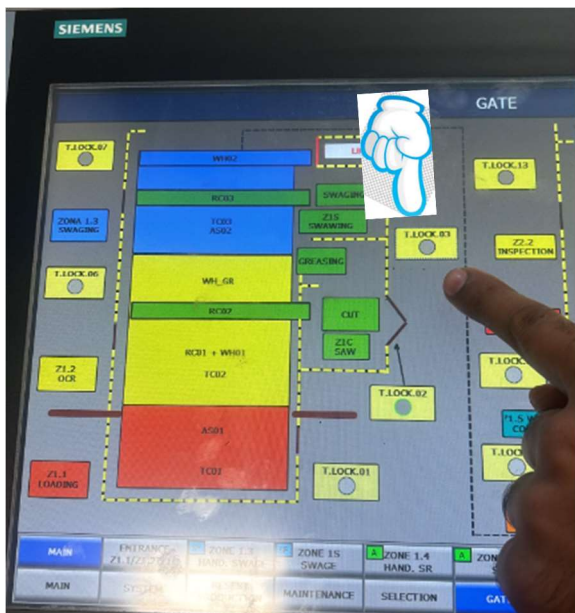

Open the gate manually using the provided button

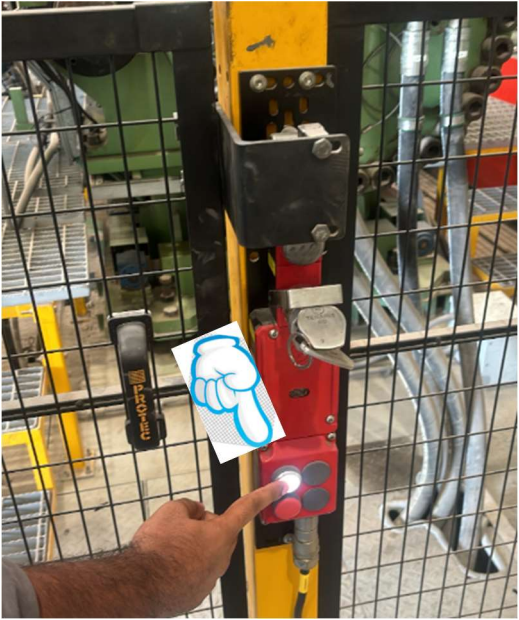

Turn the key and open the door

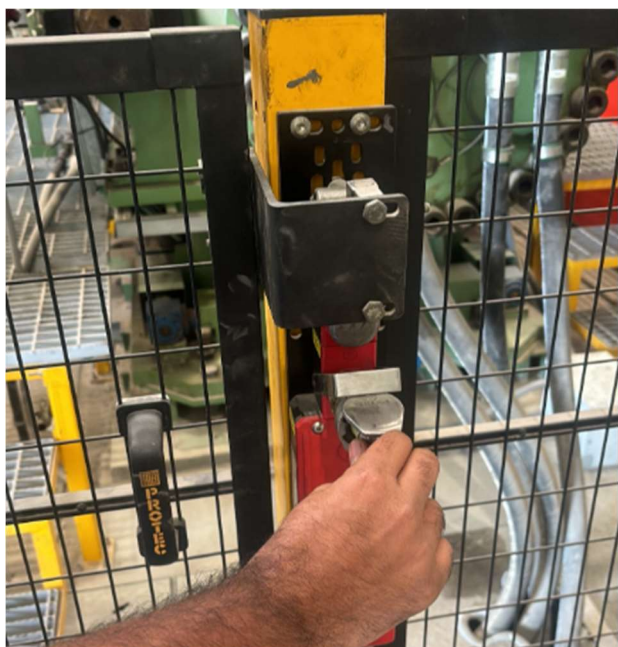

2. Swaging Die Replacement

- Use a crane and slings to safely lift and replace the swaging die.



- **Attach eye bolts with a secure fixing pin to lift the dies safely.**



Ensure all tools and accessories all in good condition to avoid any falling of tools



Avoid keeping direct contact when moving tools

3. Swaging Clamping Adjustment

Please clamp the cylinders to be able to pass the clamp support to back side of swaging machine.

1. Enable Local Control

- Set the switch to **Local Mode** (green indicator).



- Hold the **Enable** button while pressing **Start Pump** until the system is active.



2. Clamp the Cylinders

- Turn the switch left to engage the cylinder clamps.



- Once the cylinders are secured, release the **Enable** button.



- Lift the clamp support and move it to the back of the Swaging Machine.



Ensuring all lifting equipment are in good condition.



Maintain a safe distance when lifting tools to avoid falling materials.



Keep hands and feet clear when moving the tool and to avoid pinching injuries



Being cautious on stairs and watching your steps.



Locking out and tagging out the equipment to ensure safety.



Always maintain a safe distance from any suspended loads to prevent injuries from falling or swinging objects

Repeat the sequence with “Enable” button and open cylinders by turning switcher to the right.



Insert the clamp support to the swaging machine.



Once the clamp support is seated into position, please clamp cylinders by turning the switcher to the left.



Next screw the bolts from back side of clamp support and put fixer from front side of clamp support.



Put the pin to front fixer



Ensuring all lifting equipment are in good condition.



Maintain a safe distance when lifting tools to avoid falling materials.



Keep hands and feet clear when moving the tool and to avoid pinching injuries



Being cautious on stairs and watching your steps.



Locking out and tagging out the equipment to ensure safety.



Always maintain a safe distance from any suspended loads to prevent injuries from falling or swinging objects



Be cautious of pinch points while positioning or removing tools.

- Loosen and remove all four bolts using a **24mm socket key**.




- Open the cylinders and carefully detach the swaging clamp.





To pass the clamp support from the side of the swaging machine, please clamp the cylinders.

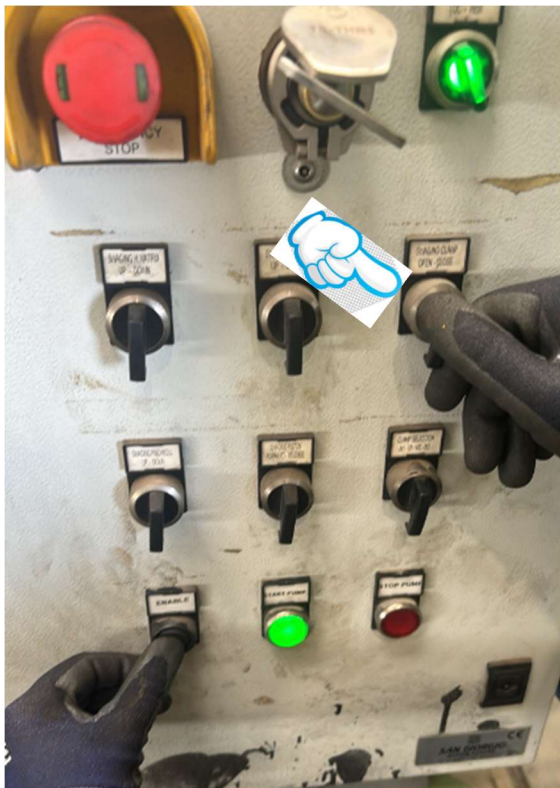

- Move the used clamp to the designated **yellow stand**.



Remove fixer and unscrew the bolts from clamp support.



Remove clamp support from swaging clamp



Put the clamp support to new swaging clamp.




Put fixer with pin and crew bolts from back of clamp support.




Move the lifted swaging clamp to the back side of the swaging machine.



- Open the cylinders and install the clamp onto the swaging machine.

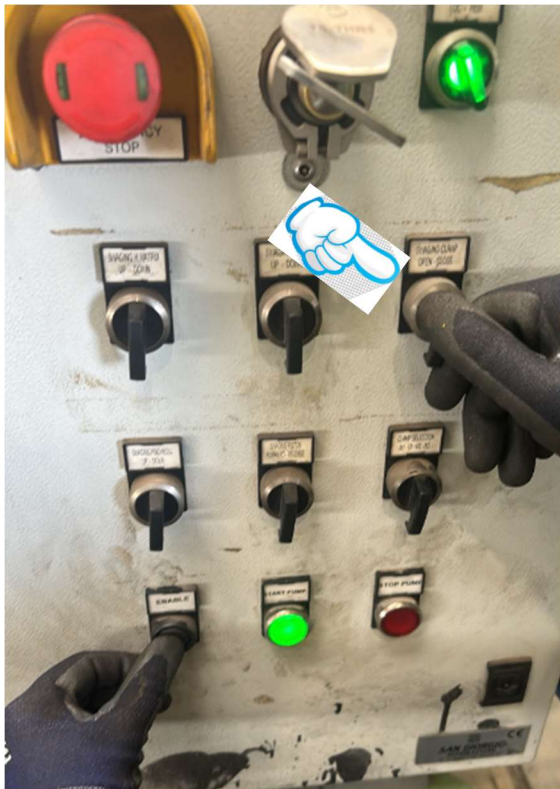

- Once properly seated, **re-clamp the cylinders.**

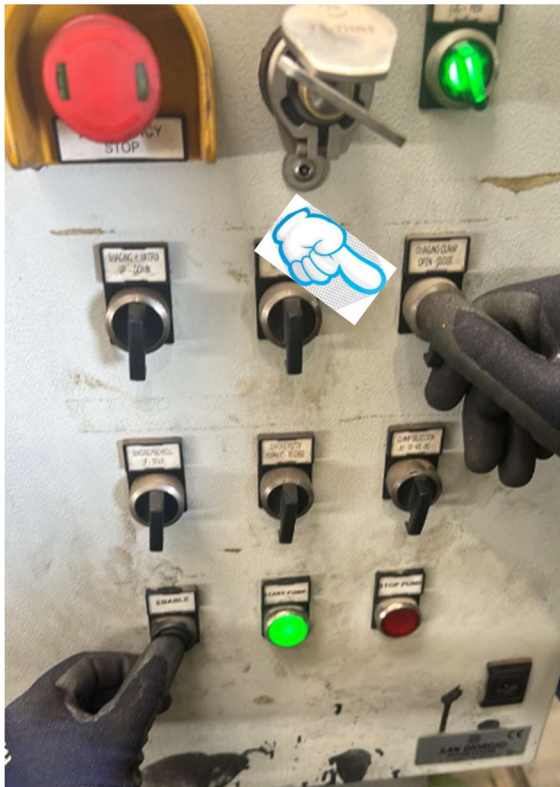

Once cylinders are clamped, please do following

Remove fixer and unscrew bolts from the back of clamp support.



Ensuring all lifting equipment are in good condition.



Maintain a safe distance when lifting tools to avoid falling materials.



Keep hands and feet clear when moving the tool and to avoid pinching injuries



Being cautious on stairs and watching your steps.



Locking out and tagging out the equipment to ensure safety.



Always maintain a safe distance from any suspended loads to prevent injuries from falling or swinging objects




Be cautious of pinch points while positioning or removing tools.


- Tighten all swaging clamp bolts securely.



Open cylinders and remove the clamp support.

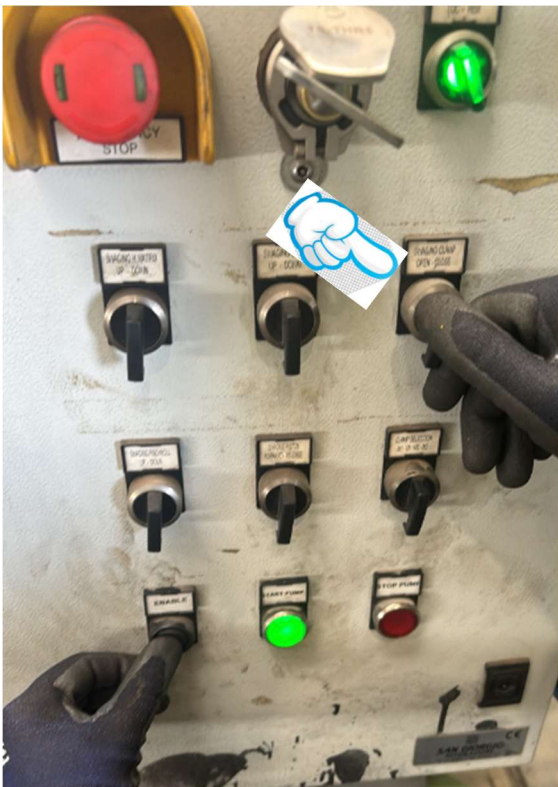

Clamp cylinders to pass the clamp support from side of swaging machine.

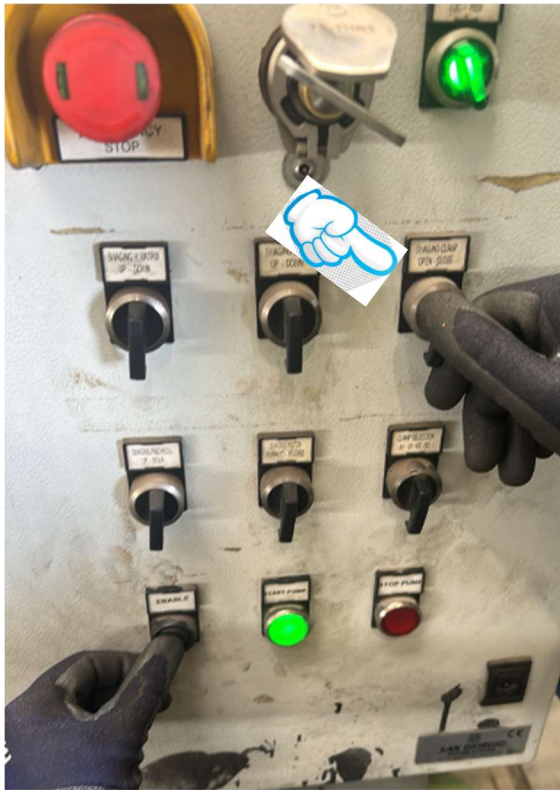

Maintain a safe distance when lifting tools to avoid falling materials.



Keep hands and feet clear when moving the tool and to avoid pinching injuries



Being cautious on stairs and watching your steps.



Always maintain a safe distance from any suspended loads to prevent injuries from falling or swinging objects



Be cautious of pinch points while positioning or removing tools.

Move out the clamp support and put it to stand.



3. Return to Auto Mode

Once the changes are made, take the following steps.

- Switch the **Local Control Station** setting to **Remote Mode (REM)**.



- Close the machine gate securely.




- On the touchscreen panel, navigate to **Zone 1S SWAGE** → **SWAGING CYCLE RESET**.

Go to **Zone 1S SWAGE** then **SWAGING CYCLE RESET**



Select as shown below

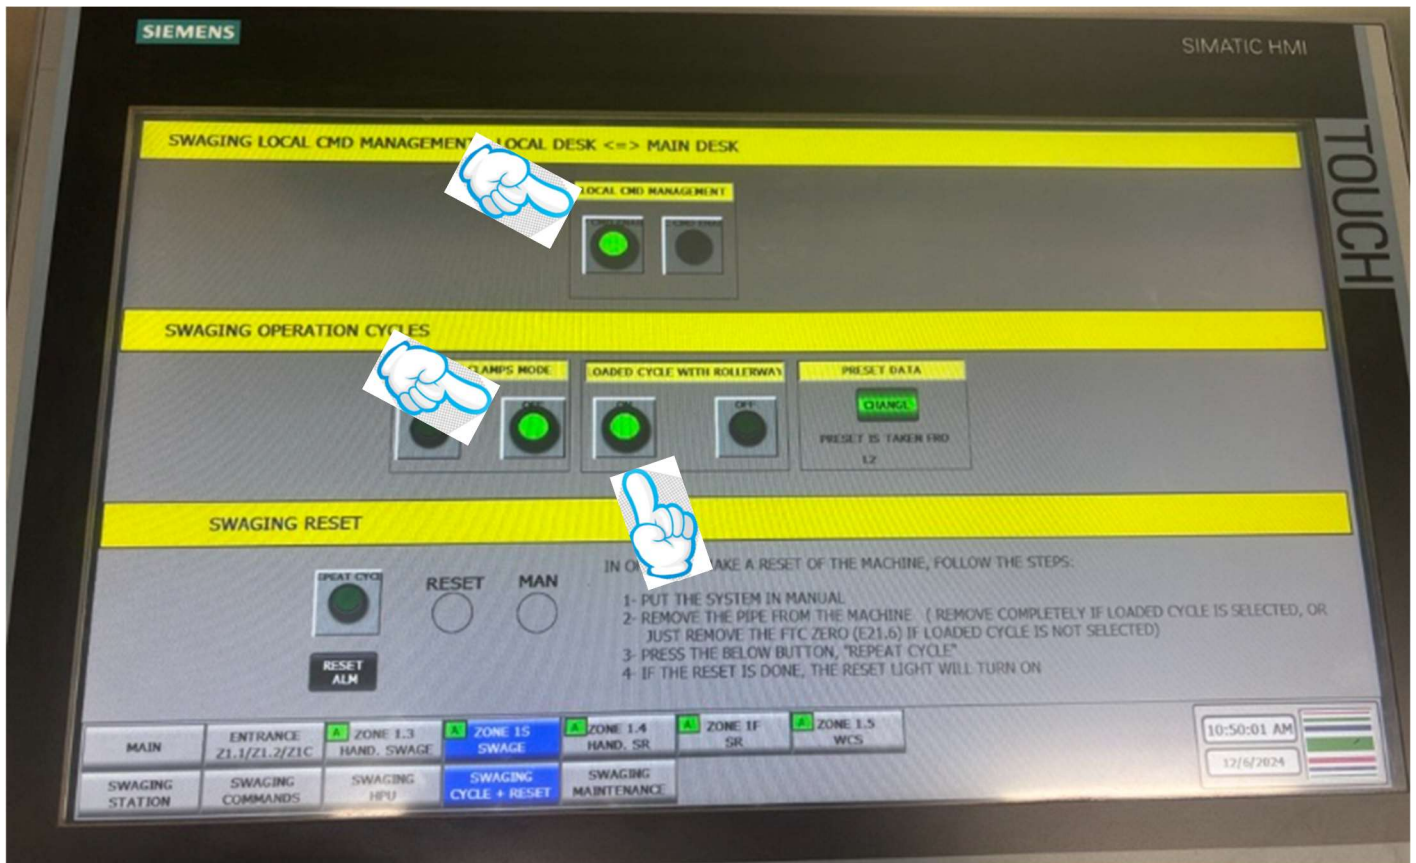

Pre-Start Checks

- Ensure **all Emergency Stop (E-Stop) buttons** are released.
- Confirm that the cylinders are **fully open** before starting.
- Update all **preset parameters** to match the correct specifications.

Safety Reminders

- ✓ Always inspect lifting tools and equipment before use.
- ✓ Maintain a **safe distance** from suspended loads to avoid injuries.
- ✓ Be cautious of **pinch points** when handling tools and positioning components.
- ✓ Follow **lockout/tagout procedures** to prevent accidental machine activation.

This structured approach ensures **operational efficiency, safety, and accuracy** while performing swaging setup.